


MP907 MOBILE DVD PLAYER USER'S MANUAL

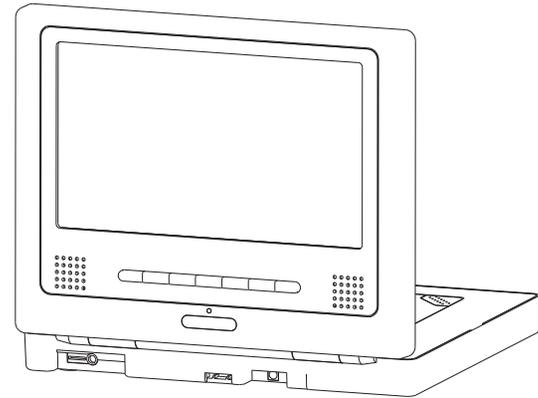

Precautions

Thank you for purchasing our mobile DVD player. Please read this manual carefully before operating and reserve it for future reference, it will be helpful to you if you encounter any operational problem.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. DANGEROUS HIGH VOLTAGES ARE PRESENT INSIDE THE ENCLOSURE. DO NOT OPEN THE CABINET; REFER SERVICING TO QUALIFIED PERSONNEL ONLY.

ATTENTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

LASER: This Digital Video Disc Receiver employs a Laser System. To ensure proper use of this product, please read this user's manual carefully and retain for future reference. Should the unit require maintenance, contact an authorized service location - see service procedure.

Use of controls, adjustments or the performance of procedures other than those specified may result in hazardous radiation exposure.

To prevent direct exposure to laser beam, do not try to open the enclosure. Visible and invisible laser radiation when open an interlocks defeated.
DO NOT STARE INTO BEAM

LASER

Type	Semiconductor laser GaAlAs
Wave length	650 nm/780nm
Output Power	5mW
Beam divergence	60 degree



Precautions

WARNING:

To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

CAUTION:

Use of controls or adjustments of performance of procedures those specified may result in hazardous radiation exposure.

CAUTION

RISK OF ELECTRIC SHOCK. DO NOT OPEN

To reduce the risk of electric shock, do not remove cover (or back).
No user serviceable parts inside. Refer servicing to qualified service personnel.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert user to the presence of uninsulated "dangerous voltage" within the product enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instruction in the literature accompanying the appliance.



CAUTION:
INVISIBLE LASER RADIATION WHEN OPEN
AVOID DIRECT EXPOSURE TO LASER BEAM

Precautions

FCC NOTICE: This equipment has been tested and found to comply with the limits for a Class B digital device. Pursuant with the FCC Rules, Part15. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

FCC CAUTION: To assure continued compliance, (example-use only shielded interface cables when connecting to computer or peripheral devices). Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Table of Contents

INTRODUCTION		CONNECTING THE PLAYER TO OTHER COMPONENTS	
PRECAUTIONS	1	Connecting to a TV	18
TABLE OF CONTENTS	4	Connecting to second screen	19
CAUTION ON USING THIS PLAYER	6	Connection to Game Station	21
PRECAUTIONS FOR BATTERY PACK OPERATION	8	How to use the wireless headset	21
Operation of the battery pack	8	USING THE BATTERY	22
Storage	8	Recharging the battery pack	22
Service life and disposal	8	Notes for recharging	23
TYPES OF DISCS PLAYABLE ON THIS PLAYER	9	Attaching the battery pack and player	23
Marks indicated on DVDs	9	Detaching the battery pack from the player	24
Discs structure	10	BASIC OPERATIONS	
BEFORE USING		TURNING ON THE POWER	25
CHECKING THE ACCESSORIES	11	PLAYBACK FUNCTIONS	26
REMOTE CONTROL AND PLAYBACK PREPARATIONS	12	Loading discs	26
Notes on using the remote control	12	Playing discs	27
Replacing the battery	12	If a menu screen appears	27
Remote control operation range	13	Stopping the disc	28
SCREEN AND SYSTEM PANEL CONTROL		Pausing the disc	28
Liquid crystal display	14	Scanning forward and backward	29
Player's front panel control	14	Returning to the previous chapter or track of DVDs, Video CD and CDs	29
Remote control & its frequently used buttons	16	Moving ahead to the next chapter or track of DVDs, Video CD and CDs	29
BATTERY PACK	17	Removing discs	29
		TURNING OFF THE POWER	30
		SETTING FOR CONNECTING TO TV	30

Table of Contents

ADVANCED OPERATIONS

LANGUAGE AND SUBTITLE SETUP	31
Setting the on-screen display language	31
Setting the subtitle language	31
Setting the audio language	31
ADVANCED FUNCTIONS	32
Searching for a specific scene	32
Setting the parental lock level	32
CAUTIONS	33
Handling, storing and cleaning discs	34
Ways of enjoying the player	34
TROUBLE SHOOTING	36

Cautions on Using this Player

Do not move the player during playback

During playback, the disc spins at high speed, so do not lift or move the player. Doing so may damage the disc.

When transporting the player

Be sure to remove the disc when transporting the player. Also turn off the power, then unplug the power cord once the power indicator (red) is off.

Placing of installation

Select a stable place near the TV or stereo system to which you are going to connect the player.

Do not place the player on top of a TV or color monitor. Install the player away from cassette decks or other devices which are easily affected by magnetic forces.

Do not place objects on top of the player

Turn off the power when not using the player

Depending on the TV reception conditions, strips may appear on the screen when both TV and player's power are on.

This is not a malfunction of the player or the TV. If this should happen, turn off the player's power. Noise may also be generated in the sound of a radio when the player's power is on.

Special note regarding use of player in vehicles

- We strongly advise against the driver using the player while driving. Most countries and states have laws which prohibit or severely restrict the use of the player in vehicles while driving.
- Do not leave the player or battery pack in places where the temperature is extremely low (about -10 or lower) or extremely high (about 60 or higher), such as inside the passenger cabin or trunk in midsummer. Doing so may warp the outer case or reduce the performance or quality of the battery pack.

When carrying on planes

Read the airline company's rules.

When carrying in hospitals

Read the hospital's rules.

Cautions on Using this Player

Cleaning the player

Normally clean the player using a soft, dry cloth. For tough dirt, apply some neutral detergent diluted in 5 to 6 parts water to a soft cloth, wring out thoroughly, wipe off the dirt, then wipe off the player with a dry cloth. Note that alcohol, thinner, benzene, insecticides, etc., may cause the print or coating to peel off. Also avoid leaving rubber or plastic products in contact with the player for long periods of time, as this may damage the cabinet. When using chemically treated cloth, read the cloth's instructions carefully. Always unplug the power cord from the power outlet before cleaning the player.

To clean dirt off the liquid crystal display, wipe the display gently with a soft, dry cloth (such as an eyeglass cleaning cloth). Note that leaving water droplets on the display for long period of time may result in discoloration or stains. For tough dirt, use a commercially available liquid crystal display cleaner.

Copyrights

Unauthorized duplication, broadcast, public performance or rental of discs is prohibited by law.

Precautions for Battery Pack Operation

Operation of the battery pack

- Charge the battery pack fully before using it for the first time.
- When the surrounding temperature is high, the battery pack may sometimes be unusable due to activation of protection circuitry.
- When the mobile DVD player is powered from the battery pack and if the player has not been operated for about 10 minutes with the power switch on, the player will turn off automatically (Auto power off). The battery pack becomes hot after use and the mobile DVD player also becomes hot during use. This is not malfunction.
- When the battery pack is not to be used for a long period, be sure to remove it from the mobile DVD player. If the battery pack is left attached, continual flow of weak current renders it over discharged and eventually becomes unusable even when you try to charge it later.
- If the mobile DVD player is switched on while the battery pack is not fully charged, the operation may sometimes be unstable. Be sure to charge the battery pack fully before use.

Storage

- The battery pack should be stored under a surrounding temperature between 15°C and 25°C. Avoid storing it under extremely low temperature and high humidity or in a place subject to soot, etc.
- When the battery pack is stored for a long period, at least once a year it is recommended to discharge it fully on the mobile DVD player, recharge it fully and store it again.

Service life and disposal

- When the charging time or available operation time becomes extremely short, the battery may be reaching the end of its life. The battery pack can be used for about 300 cycles of recharging and operations.
- To dispose of a used battery pack, wrap a piece of tape around the terminal section and treat it in compliance with your local regulations.

Type of discs Playable on this Player

- The discs listed on the table below can be played on this player without an adapter.
- The marks shown on the table below are indicated on the disc's label, package or jacket.

Types of playable discs and their marks	Diameter/playable sides	Playback time
	DVD Video 12 cm/single-sided	(MPEG2 format) 133 minutes (4.7 GB)
	12cm/double-sided	242 minutes (8.5 GB)
	8 cm/single-sided	266 minutes (9.4 GB)
	8 cm/double-sided	484 minutes (17 GB)
	CD 12cm/single-sided	74 minutes
	CD 8cm/single-sided	20 minutes

Marks indicated on DVDs

DVD discs or packages include the marks shown below. These marks indicate the type of video or audio signals recorded on the disc and the functions that can be used.

Mark	Meaning
	Indicates the number of audio tracks.
	Indicates the number of angles.
	Indicates the selectable picture aspect ratio.
	Indicates the playable region number.


Type of discs Playable on this Player

Disc structure

CDs are divided in units called tracks. (Generally one track corresponds to one song. Tracks are sometimes further divided into indexes.)






DVDs are divided in units called titles, which are further divided in chapters. They also include menu screens that do not belong to any title. With movies, normally one movie corresponds to one title. On karaoke discs, one song corresponds to one title. However, some discs are not divided in this way, so be careful when using the search and programming functions.

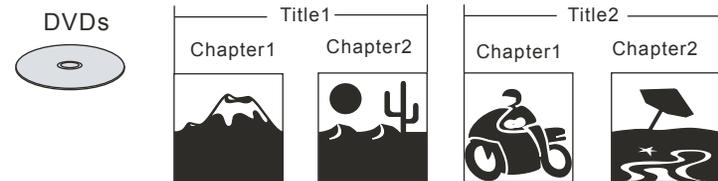

Checking the Accessories

After unpacking the player, check that all the accessories listed below are included.

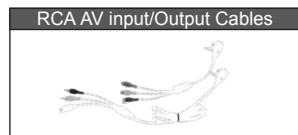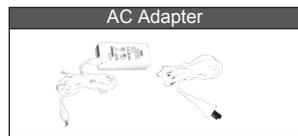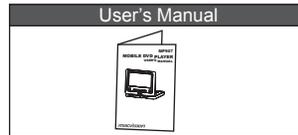


Remote Control and Playback Preparations

Notes on using the remote control


- Do not drop or step on the remote control. Doing so may cause damage.
- Note that it may not be possible to operate the remote control if there are obstacles in between.
- Do not expose the remote sensor to strong light. Doing so may cause player malfunction.
- Use the remote control within the specified operating range.

Replacing the battery


1. Insert your fingernails into A and B on the diagram below, press A in the direction of the arrow 1, then pull out the battery holder in arrow 2 direction.

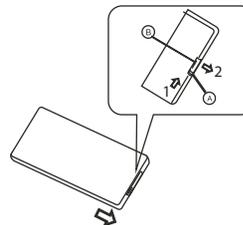

 2. Remove the old battery, then insert the new battery into the battery holder with the + side facing upwards.



3. Fit the battery holder back into place.

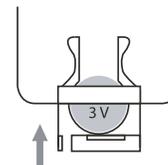


Note:

To prevent leakage of fluid from the lithium battery, remove the battery when not using the remote control for long period of time (one month or more). If the fluid should leak, carefully wipe any fluid out of the battery case, then insert a new lithium battery.

Remote Control and Playback Preparations

Remote control operating range

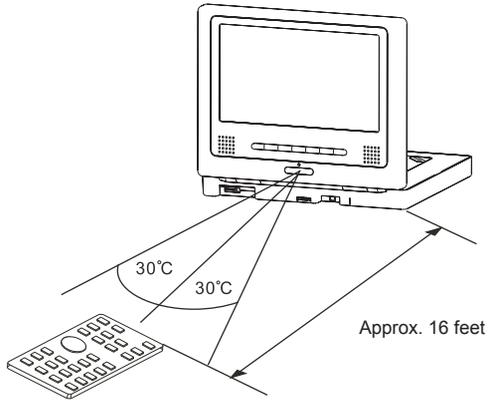

The remote control unit will operate within a distance of approximately 16 feet.


Notes:

Most of the player's operations can be performed from the remote control unit. Some operations, however, can only be performed from the player; especially Power on/off function  on main unit.

Screen and System Panel Control

Liquid crystal display

The mobile DVD player is equipped with a liquid crystal display.

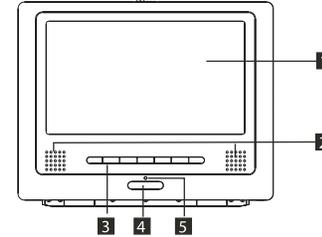

1. Liquid crystal display

2. Speakers

3. Control section (control buttons)

4. Remote sensor

The remote control signals are received here.

 
5. Power indicator

Off: No power connection.

Red: The power is set to the standby mode.

Green: Turn on the power using the ON button on the player or the power button on the remote control unit.

Player's front panel control



Screen and System Panel Control

1. PLAY/PAUSE & Power Button

Press PLAY/PAUSE button to play pictures or sound. When pressed in the play mode, the still frame (for pictures) or pause (for sound) mode is set. Press again to resume playback. Hold down this button for 2 seconds to turn on/off the power of the unit.

2. STOP Button

Press STOP button to stop play or sound

3. PREVIOUS/NEXT Buttons


Press PREVIOUS/NEXT buttons to scan forward or backward through pictures or sound, to search for the beginnings of tracks or chapters.

4. MODE Button

Press MODE to switch LCD mode: Brightness, Contrast ratio, Volume, Aspect ratio (4:3 / 16:9), Scan type (obverse/reverse), FM (Frequency selection), AV input (Select Game station input)

5. - / + Button

Press - / + buttons to make further setting under the mode selection

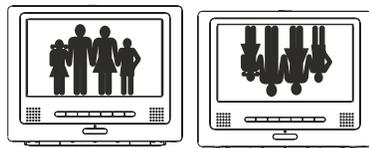


Normal

Reverse


Remote Control & its Frequently used Buttons

Remote control (frequently used buttons)

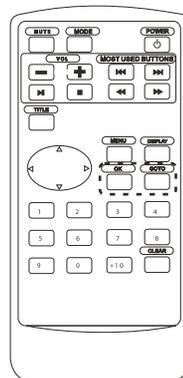

Button	Function
POWER	Standby button
MUTE	Mute sound
MODE	Function selecting button
VOL+, VOL-	Volume control OR mode select button
	To locate preceding/succeeding chapter or track
	Scan - Fast forward or fast
	To pause playback (step mode)
	To stop playback
TITLE	Locating a specific title chapter or track
	To move the cursor for selecting item
MENU	To display the DVD menu screen
OK	To confirm setting
Display	Checking the operational status
Goto	Playing from a desired location
0-9, +10	Number buttons
CLEAR	Clear the numbers inputted before

Battery Pack

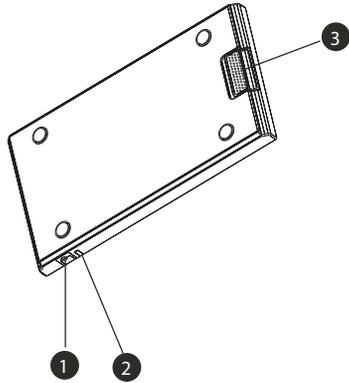

1. DC IN connector

Connect the power adapter to recharge.

2. Battery indicator LED

When the battery is not in used, LED is off
When the battery is under recharging, LED is red
When the LED becomes green, recharging is completed

3. Battery lock

Push to detach the battery pack

CAUTION


Do not short-circuit the terminals.

Connecting the player to Other Components

Before connecting


Turn off the power of the player and the components to be connected.

Connecting to a TV

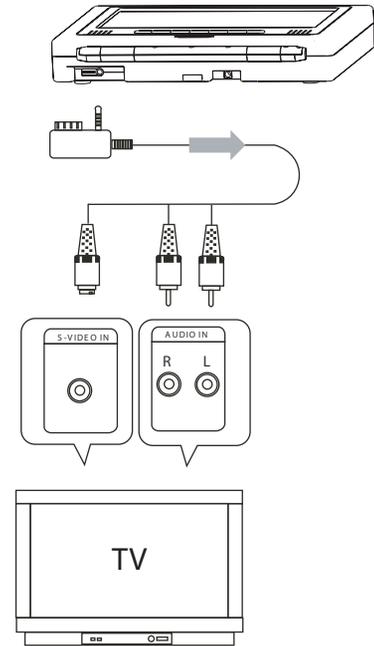


Connecting the player to Other Components

Connecting to Second Screen

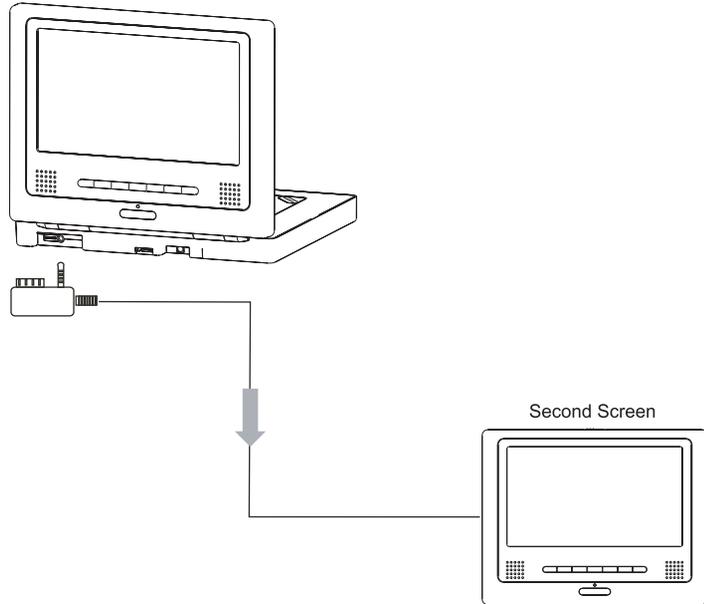

Connecting the player to Other Components


Connecting to Game Station

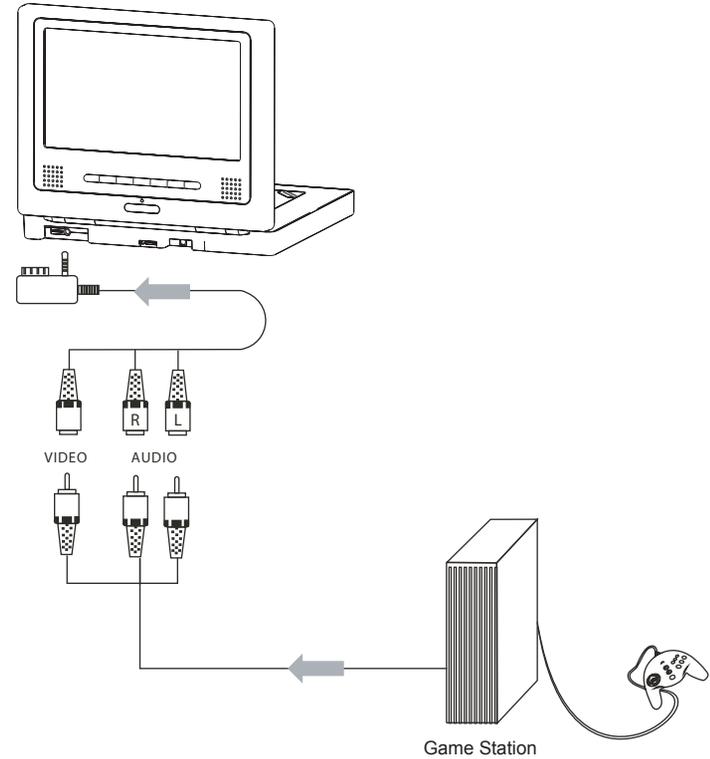

Connecting the Player to Other Components

How to use the wireless headset

1. Set mode button to FM.
2. Press - / + to select FM frequency.
3. Adjust tuning knob on wireless headset to the right frequency.

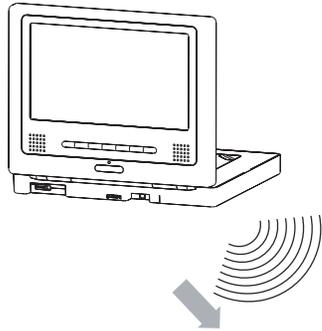


CAUTION: Switch off the volume switch of the wireless headset when you are not using it.



Using the Battery

Recharging the battery pack

Recharging the battery pack as described below:

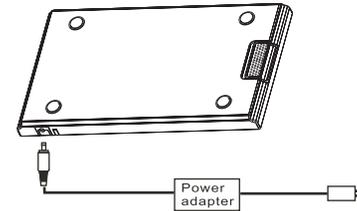

1. Connect the power cord to the battery pack.
2. Connect the adapter to the power outlet.
 - When recharging starts, the recharge lamp lights in red.
 - The recharge lamp lights in blue when recharging completes. Remove the battery pack and power cord.
 - Recharging usually takes about 4-5 hours.

The battery pack can be used for about 300 cycles of recharging and operations, though this is variable depending on the operation conditions.

Charge the battery pack fully before using it for the first time.

CAUTION

- Place the battery charger on a level, flat surface for recharging.
- Do not short-circuit the terminals of the battery charger.

Notes:

The battery charger is compatible with supply voltages between 100 and 240V AC and can be used universally. For overseas travel, an adapter may be needed to match the local outlet requirement (not supplied).

Using the Battery

Notes for recharging


- When the battery pack is hot, it may take longer than usual time for recharging or may sometimes be unable to be recharged. Wait for the battery pack to cool down before recharging.
- If the recharge lamp will not light, remove and fit the battery pack to the battery charger again.
- To protect the battery pack, do not recharge a fully charged battery pack repeatedly. Repeated overcharging may deteriorate the battery performance.
- The battery pack may become hot during recharging. This is not malfunction.
- When the battery pack is recharged in a hot environment, it may not recharge fully.
- The temperature during recharging affects the recharging efficiency. Recharging is most efficient between temperatures of 10°C and 30°C. Place the battery charger in a place within this temperature range whenever possible.

Attaching the battery pack and player

Attach the battery pack and player to the battery case as described below:


1. Align the guide hole on the rear of the player with the rear guide on the battery
2. Insert the battery pack to the unit and then slide to the A direction until a click is heard.
3. Now the player can be operated.

- When the battery pack is fully charged, the player can play DVDs for over 3 hours continuously.

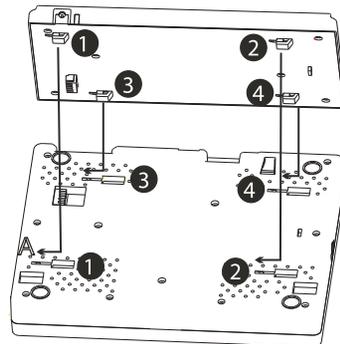

Using the Battery

- If the power is switched on while the battery pack is not fully charged, the player operation may sometimes become unstable. Be sure to charge the battery pack fully before use.
- Battery will be recharged slowly in AC power adapter operation mode. Battery also will be recharged while the player stand by, with AC power adapter connected.
- When the battery is connected, after power is turned on, the LED indicator on battery pack will show the battery state. While the battery is charging, the LED indicator shows RED color. While the charging is finished, the LED shows GREEN. While the battery has worked 3 hours, the LED shows flashing RED.

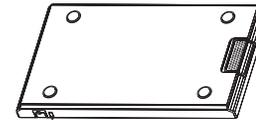


LED (red, green or flashing red)


Detaching the battery pack from the player

The battery case can be detached from the player as described below.

1. Set the power switch of the player to off.
2. Press **B** lightly to release the battery lock and simultaneously push **A** to remove the battery pack from the player

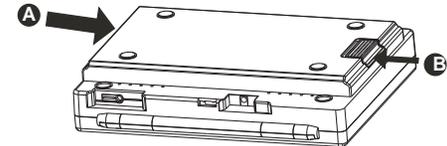


Turning On the Power

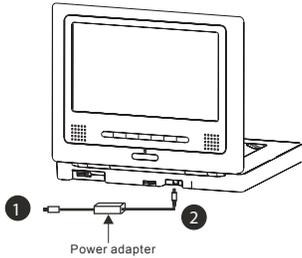

1. Connect the power plug **1** to a power outlet.
2. Connect the DC output plug **2** of the adapter to the DC input jack on the main unit.
3. Hold down the **C/3** button on the main unit for about 2 seconds.

- The power indicator turns on. The player can now be used.
- In the standby mode (when the power indicator is lit red), the power can also be turned on by pressing the power button **3** on the remote control unit.

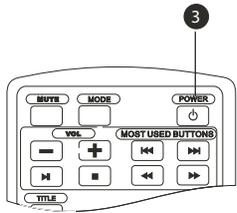


Hint:
The included AC adapter is compatible with voltages of 100 to 240V, so you can use it on trips overseas.


Note that you need a converter plug (available in stores suited for the region in which you are travelling).

Playback Functions

 Loading discs



1. Press button **A** to open the player case.

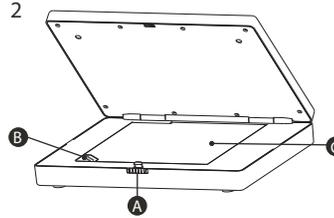


2. Press button **B** to release the disc cover lock, the disc cover **C** will eject up.

3. Set the disc in place and press down on the disc with your fingers near the center hole. A click is heard.

NOTE:

- Set the disc securely. Failure to set it securely could result in damage.
- Do not use cracked or warped discs. Doing so could result in damage.
- Set single-sided DVDs or CDs with the label (printed) side facing upwards. For double-sided DVDs, check the side carefully, then load the disc securely (until a click is heard)
- With CDs or one-sided DVDs, you do not have to worry about touching the label (printed) side of the disc with your fingers. Two-sided DVDs, however, have signals recorded on both sides, so be careful not to scratch them when removing them from the player.

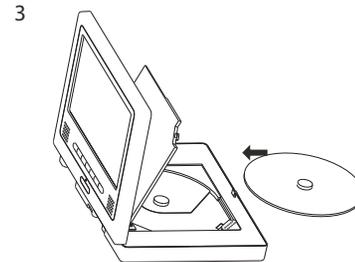


4. Press down disc cover **C** until a click is heard. Or further close the player case lock **A**, a click is also heard.

Playback Functions

Playing discs

1. Load the discs

- One of the following messages appears on the LCD: DVD, VCD, and CD.
- For some discs, playback start automatically when the tray is closed.
- When discs for which program memories are set, playback starts automatically in the programmed order.

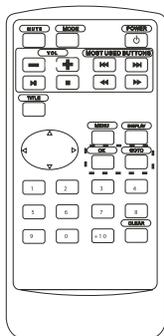

2. Press the play/pause button

- Playback starts
- For some discs, a menu screen appear. For video CDs, playing the disc according to the instructions on the disc's menu screens is called PBC (playback control).

Hint:

- For video CDs, it is also possible to play a disc without displaying the menu screen.
- For example, to play from track 1, press the 1 number button while in the stop mode

If a menu screen appears

For DVDs with menu screen or video CDs with playback control (PBC), a menu screen appears.

- DVD** Use the cursor buttons (   ) to select the item, then press the OK button.
To use the number buttons on the remote control unit to select the item, press the number buttons directly.

TITLE MENU
1. POP
2. JAZZ
3. COUNTRY
4. R&B
5. CLASSICAL

Example: For DVDs with menu screens.

Playback Functions

Video CD

Use the cursor buttons (   ) to select the item, then press the OK button. Or select by pressing the number buttons directly.

Example: For video CDs with playback control (PBC)

TITLE MENU
1. POP
2. JAZZ
3. COUNTRY
4. R&B
5. CLASSICAL

If the video CDs menu screen includes more than one page, use the previous and next button to switch between the pages.

To display the menu screen

The way in which the menu screen is displayed differs from disc to disc. Press the MENU, TITLE button during playback of DVDs, the RETURN button during PBC playback of video CDs. For details, refer to the documentation included with the disc.

Stopping the disc

Press the STOP button.

Resume function (DVDs and Video CDs)

Playback will be stopped when the STOP button is pressed, when the play button is pressed, playback starts from the position at which it was stopped. When the disc is removed or the STOP button is pressed again, the resume function is cancelled.

Hint:

For some discs, playback may not start from the position at which it was stopped. If the STOP button then the previous button is pressed while the resume function is on, playback starts from the beginning of the title.

Pausing the disc

Press the PLAY/PAUSE button.
Press the button again to resume playback

Playback Function

Scanning forward and backward

During playback, press the Forward or Backward button to:

- ◀◀ Reverse direction
- ▶▶ Forward direction

Returning to the previous chapter or track DVDs, Video CDs and CDs.

Press the Previous button ◀◀ during playback.

When pressed, playback returns to the beginning of the previous chapter or track.

Moving ahead to the next chapter or track DVDs, video CDs and CDs

Press the Next button ▶▶ during playback.

When pressed once, playback moves forward to the next chapter or track.

Removing discs

1. Press the STOP button
2. Press release lock of player
3. Press the disc cover release lock
4. Remove the disc

Note:

With CDs or one-sided DVDs, you do not have to worry about touching the label (printed) side or the disc with your fingers. Two-sided DVDs, however, have signals recorded on both sides, so be careful not to scratch them when removing them from the player.

Turning Off the Power

1. When the power is on, press  and hold down for about 2 seconds


The power indicator becomes red and the power is set to off

The power can also be set to standby mode by pressing the power button on the remote control.

2. Unplug the power cord from the power outlet.
3. Disconnect the AC adapter from the player's DC input jack.

Setting for connecting TV

When connecting the player to an external TV monitor, please make sure that (for better audio and visual performance) you can press MENU/SYSTEM SETUP/TV SYSTEM, then you can choose NTSC or PAL in below menu picture.

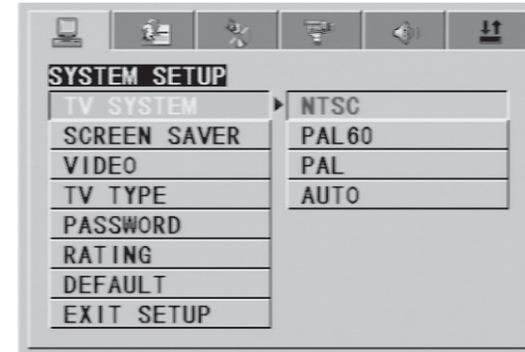

Various Language and Subtitle Settings

Please stop playback to display the setup screen.
In this section we use the setup screen to make the language and subtitle settings.
Press the SETUP button to display the setup screen when playback is stopped.

Setting the on-screen display language

Select the language to be used for the display when making the setup, etc. There is no need to make this setting if the OSD Language has already been set with the Setup Navigator.




Setting the subtitle language

Select the language to be used for the subtitles.
You can select a preferred subtitle from those included on the DVD Video disc.



Setting the audio language


Select the language to be used for the audio.
You can select a preferred audio from those included on the DVD Video disc.

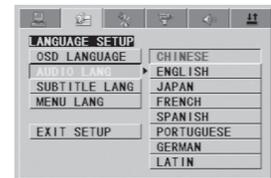

Advanced Functions


Searching for a specific scene

1. Press the GOTO button.
2. Press the number button to select specific time or title/chapter.
3. Press the PLAY (▶) or OK button. Playback starts from the specified chapter number.

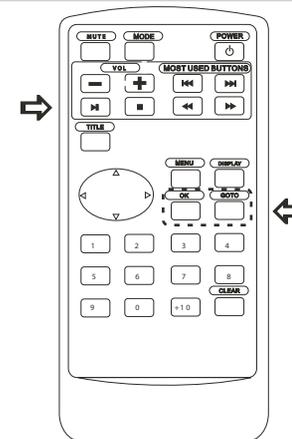

Setting the parental lock level

1. In STOP status, press the MENU button to get into the setup screen, use the cursor buttons to select Parental Lock.
2. You can input new password with number key (the pre-set password is 0000).
3. You can change rating with OK

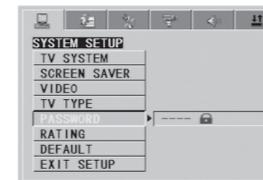

Cautions on Use

Handling, storing, and cleaning discs

Handling

When holding with both hands



When holding with one hand



- Do not use damaged (cracked or warped) discs.
- Do not scratch the signal surface or let it get dirty.
- Do not attach paper or seals to discs.
- The player may be damaged if there is any exposed glue, etc., on discs. Check carefully for any exposed glue before using such discs



Storing discs

- Always place discs in their case and store them vertically. Avoid storing discs in hot or humid places, places exposed to direct sunlight and places in which the temperature is extremely low.
- Read any cautions included with the disc carefully.

Cleaning discs

 
- Fingerprints or dust on discs may reduce sound or picture quality. Remove them by gently wiping the disc from the center toward the edges using a soft cloth.



- Do not use benzene, thinner or other volatile chemicals. Do not use record sprays or antistatic spray either.
- We recommend using the separately sold cleaning set to clean discs.
- For tough dirt, apply some water to a soft cloth, wring out thoroughly, wipe off the dirt, then wipe off the disc with a dry cloth.

Irregularly shaped discs

- Irregularly shaped discs (heart-shaped discs, hexagonal discs, etc.) cannot be played on this player. Doing so could damage the player. Never use such discs.




Caution on Use

Ways of enjoying the player

1. Viewing the player in hand




2. Viewing the player on table

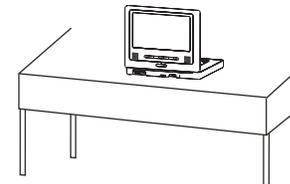


3. Viewing the player in car

- Tighten the belt **A** to tie the frame on the car seat.

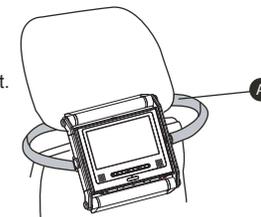


- Attaching the player onto the frame

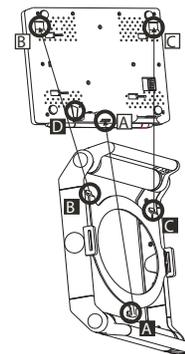

- Align **A** to **A**, **B** to **B**, **C** to **C**


- Slide the frame into the rear side of the player. A click will be heard when lock **D** springs up

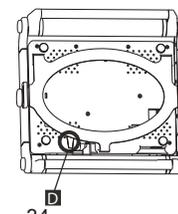

Cautions on Use

• Detaching the player down from the frame

While finger **1** pressing the lock **D**, then push the player up at **E** with thumb **2**, then the player will detach from the frame.

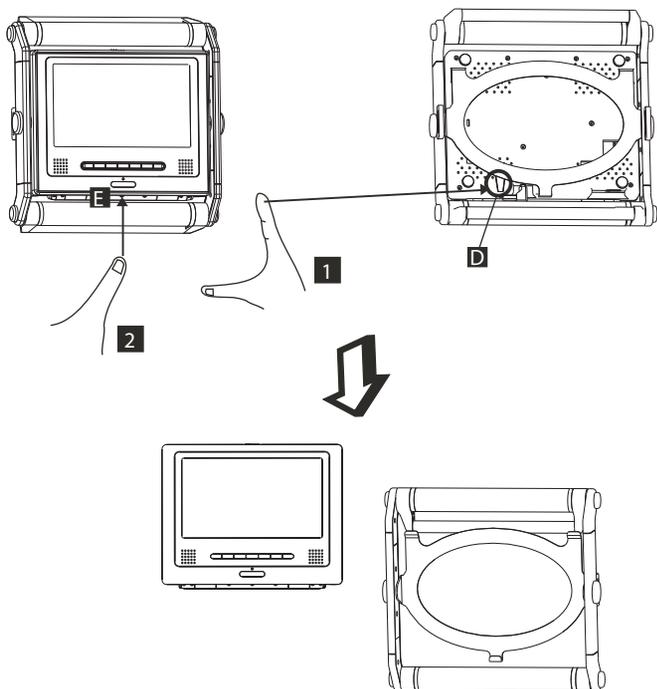

Trouble shooting

1. Player cannot be operated with remote control unit.

Remote control unit is too far from the main unit or at too strong an angle with respect to the remote sensor.

Remote control unit's battery is worn out.

2. TV or other device operates erroneously.

The player's remote control unit may cause some TVs with wireless remote control to operate erroneously.

3. No sound is produced from speakers or sound is distorted.

Disc is dirty.

Push mode is set.

Main unit volume is set to the minimum.

Wireless headset has been set.

4. Volume is different from DVDs and CDs.

This is due to the different recording methods.

5. No sound is produced or sound is distorted when connected to a TV, an amplifier, etc.

Connection cords are not securely plugged in or not connected.

Connection plugs or jacks are ditty.

Audio cables are not properly connected.

6. Player gets hot

This is normal.

Note:

The player may stop operating properly due to static electricity or other external influences. In this case, unplugging the power cord then plugging it back in will usually resolve the problem. If not, consult your nearest service center.

Liquid crystal display

With liquid crystal displays, a few picture elements may be black or shine a particular color. This is normal.