

Radio Shack

Sports AM/FM Radio

n **Extended Bass Boost**

n **10-Station Memory**

n **Earphone Jack**

Owner's Manual

Cat. No. 12-749

Important: You need a pair of headphones (available at your local Radio Shack store) to listen to your radio.

Listening Safely

Extended high-volume listening can lead to permanent hearing loss. To protect your hearing when using earphones, set the volume to the lowest setting before you begin listening, then adjust it to a comfortable level. Once you set the volume, do not increase it. Over time, your ears adapt to the volume level, so a volume level that does not cause discomfort might still damage your hearing.

Wearing earphones while driving a car or riding a bicycle can create a traffic hazard and is illegal in some areas.

FCC Statement

Your radio might cause TV or radio interference even when it is operating properly. To determine whether your radio is causing the interference, turn it off. If the interference goes away, your radio is causing it. Try to eliminate the interference by:

- Moving your radio from the receiver
- Contacting your local Radio Shack store for help

If you cannot eliminate the interference, the FCC requires that you stop using the radio.

Caring for Your Radio

To enjoy your radio for a long time:

- Handle it gently.
- Keep it away from dust, moisture, and temperature extremes.
- Clean it with a damp cloth. Do not use harsh chemicals.
- Do not take it apart. If something is wrong with the radio, take it to your local Radio Shack store for assistance.

RADIO SHACK LIMITED WARRANTY

This product is warranted against defects for 90 days from date of purchase from Radio Shack company-owned stores and authorized Radio Shack franchisees and dealers. Within this period, we will repair it without charge for parts and labor. Simply **bring your Radio Shack sales slip** as proof of purchase date to any Radio Shack store. Warranty does not cover transportation costs. Nor does it cover a product subjected to misuse or accidental damage.

EXCEPT AS PROVIDED HEREIN, RADIO SHACK MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. Some states do not permit limitation or exclusion of implied warranties; therefore, the aforesaid limitation(s) or exclusion(s) may not apply to the purchaser.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

We Service What We Sell 9/94

RADIO SHACK
A Division of Tandy Corporation
Fort Worth, Texas 76102

7A5

Printed in Hong Kong

INSTALLING BATTERIES

Use two AAA batteries (we recommend alkaline batteries, such as Cat. No. 23-555, not supplied).

Note: You must remove the belt clip before you remove the battery cover.

Caution: Match the batteries' polarity symbols (+ and -) with the polarity symbols marked inside the battery compartment.

USING THE RADIO

 jack — for connecting earphones with a 1/8-inch plug

TUNING — press to select your favorite station; press and hold to quickly scan the selected band.

1-5 and **+5** — press to select a stored station

E-BASS ON/OFF — set to **ON** to enhance the bass sound

STEREO/MONO — switch to **STEREO** for stereo sound or to **MONO** for monaural sound on FM stations

VOLUME — adjusts the volume (see "Listening Safely")

ON/OFF — turns the radio on and off

FM/AM — selects the band

MEM — use for storing stations



STORING STATIONS

1. Tune to the desired AM/FM station.
2. Press **MEM**.
3. While **MEMORY** flashes, press **1-5** to store the station.

Note: To store five more stations, press **+5** before pressing **1-5**.

SPECIFICATIONS

AM 530-1710 kHz

FM 87.5-108 MHz

Power Source 2 AAA Batteries
(Cat. No. 23-555)

Dimensions..... 4¹/₂ x 2¹¹/₁₆ x 1⁵/₁₆ In

Weight 4.23 Oz.

Accessory Belt Clip

© 1995 Tandy Corporation.
All Rights Reserved.

Radio Shack is a registered trademark used by Tandy Corporation.