# HANNSpree Quick Start Guide

## F629-10H1, F633-10H1, F637-10H1 9.6" Liquid Crystal Display TV

This guide is designed as a reference to help you start using your LCD TV quickly. Please refer to the User's Manual for more detailed installation and safety instructions.





Connect each colorcoded cable to the appropriate connector on your device.

color-coded (black

red, white, and yellow).

**AV** connectors

- 1. Connect the power cord to the power adapter as illustrated.
- 2. Plug the power adapter connector into the DC-IN input jack on the rear panel
- 3. Insert the three-pronged plug at the other end of the power cord into a

Images are for illustration only and may vary by model or region.

### Auto Channel Setup

Please follow the instructions by using the control panel.

1. Press the **MENU** button to enter the OSD menu.

2. Use the CH▼ button to select "TV".

3. Press the **VOL +** button to enter the TV setting.

4. Press the CH ▼ button until the "Auto Program" feature is selected.

5. Press the VOL + button to begin "Auto Program".

6. Your television will begin automatically memorizing the available channels.

## **Auto Program**



© Copyright 2005, Hannspree, Inc. All rights reserved.

4-IN-1 A/V jack

AV-in