Panasonic

Operating Instructions 42"/50" Class 720p Plasma HDTV (41.6/49.9 inches measured diagonally)

Manual de instrucciones

Televisión de alta definición de 720p y clase 42"/50" de Plasma

(41,6/49,9 pulgadas medidas diagonalmente)

Model No. Número de modelo **TC-P42C1**

TC-P50C1

Quick Start Guide

(See page 8-18)

Guía de inicio rápido

(vea la página 8-18)



- For assistance (U.S.A./Puerto Rico), please call: 1-877-95-VIERA (958-4372) or visit us at www.panasonic.com/contactinfo
- For assistance (Canada), please call: 1-866-330-0014 or visit us at www.vieraconcierge.ca
- Para solicitar ayuda (EE.UU./Puerto Rico), llame al: 1-877-95-VIERA (958-4372) ó visítenos en www.panasonic.com/contactinfo











English

Please read these instructions before operating your set and retain them for future reference. The images shown in this manual are for illustrative purposes only.

Español

Lea estas instrucciones antes de utilizar su televisor y guárdelas para consultarlas en el futuro. Las imágenes mostradas en este manual tienen solamente fines ilustrativos.



Turn your own living room into a movie theater! Experience an amazing level of multimedia excitement



DIGITAL TELEVISION TRANSITION NOTICE

This device contains a digital television tuner, so it should receive digital over the air TV programming, with a suitable antenna, after the end of full-power analog TV broadcasting in the United States (as required by law) on February 17, 2009. Some older television receivers, if they rely on a TV antenna, will need a TV Converter to receive over the air digital programming, but should continue to work as before for other purposes (e.g., for watching low-power TV stations still broadcasting in analog, watching pre-recorded movies, or playing video games). When a Converter is used with an older television receiver, a signal splitter might be necessary to continue to receive low-power analog broadcasts via an antenna. For more information, please see www.DTV.gov. For information on the TV Converter program, and on government coupons that may be used toward the purchase of one, see www.dtv2009.gov, or call the NTIA at 1-888-DTV-2009. Please check with your cable or satellite service provider if you have questions about your cable or satellite set-top box.



HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

VIECA LINK**

VIERA Link™ is a trademark of Panasonic Corporation.




SDHC Logo is a trademark.

HDAVI Control™ is a trademark of Panasonic Corporation.

Manufactured under license from Dolby Laboratories.
Dolby and the double-D symbol are trademarks of Dolby Laboratories.



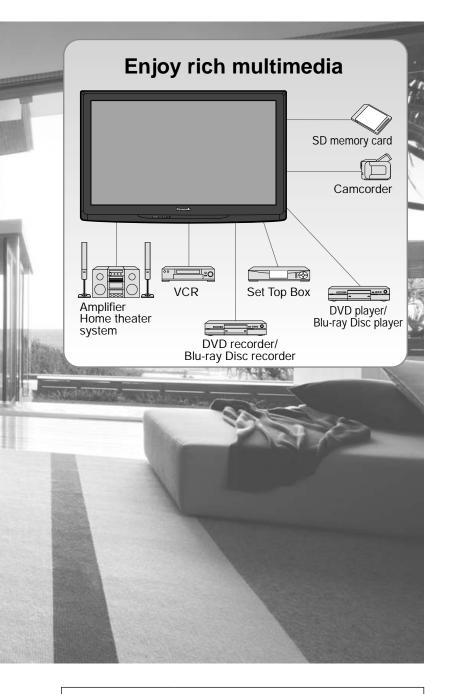



This product qualifies for ENERGY STAR in the "Home" setting and this is the setting in which energy savings will be achieved. Any modifications to the "Home" setting or other factory default settings could result in greater energy consumption beyond levels that meet ENERGY STAR qualifications.



Contents

Please read before using the unit	Please	read	before	using	the	unit
-----------------------------------	---------------	------	--------	-------	-----	------

Safety Precautions	4
Notes	7

Quick Start Guide

Accessories/Optional Accessory ····· 8
Basic Connection11
● Identifying Controls 15
● First Time Setup······ 16

Enjoy your TV! Basic Features

Watching TV	19
Using VIERA TOOLS	2
Viewing from an SD Card	22
Watching Videos and DVDs	24

Advanced Features

How to Use Menu Functions
(picture, sound quality, etc.) 26
■ VIERA Link™ "HDAVI Control™"
• Lock 36
Editing and Setting Channels 38
Closed Caption 40
• Input Labels 41
Using Timer42
Recommended AV Connections 43

FAQs, etc.

Ratings List for Lock
Technical Information 45
Care and Cleaning
• FAQ50
Specifications52
Limited Warranty
(for U.S.A. and Puerto Rico only) 53
 Customer Services Directory
(for U.S.A. and Puerto Rico) 54
Limited Warranty (for Canada) 55



Safety Precautions



CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN





The lightning flash with arrowhead within a triangle is intended to tell the user that parts inside the product are a risk of electric shock to persons.



The exclamation point within a triangle is intended to tell the user that important operating and servicing instructions are in the papers with the appliance.

WARNING: To reduce the risk of electric shock, do not remove cover or back. No user-serviceable parts inside. Refer servicing to qualified service personnel.

WARNING:

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. Do not place liquid containers (flower vase, cups, cosmetics, etc.) above the set (including on shelves above, etc.).

Important Safety Instructions

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

- 11) Only use attachments / accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart / apparatus combination to avoid injury from tip-over.



- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15) To prevent electric shock, ensure the grounding pin on the AC cord power plug is securely connected.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for an Other Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the Panasonic Service Center or an experienced radio/TV technician for help.

FCC Caution:

To assure continued compliance, follow the attached installation instructions and use only shielded interface cables when connecting to peripheral devices. Any changes or modifications not expressly approved by Panasonic Corp. of North America could void the user's authority to operate this device.

> Responsible Party: Panasonic Corporation of North America

> > One Panasonic Way, Secaucus, NJ 07094

Panasonic Consumer Electronics Company Contact Source:

1-877-95-VIERA (958-4372)

email: consumerproducts@panasonic.com

CANADIAN NOTICE:

For Model TC-P42C1, TC-P50C1

This Class B digital apparatus complies with Canadian ICES-003.

WARNING/CAUTION



the potential risk of suffocation.

Small parts can present choking hazard if accidentally swallowed.

Keep small parts away from young children.

Discard unneeded small parts and other objects, including packaging materials and plastic bags/sheets to prevent them from being played with by young children, creating

■ Set up

This Plasma TV may fall and can cause personal injury or even death if not installed correctly. To prevent personal injury or death, follow these warnings:

- Install the Plasma TV in accordance with the manufacturer's recommended pedestal or stand, corresponding hardware and installation instructions.
 This Plasma TV is for use only with the following optional accessories. Use with any other type of optional accessories may cause instability. The following accessories are manufactured by Panasonic Corporation.
 - Wall-hanging bracket (Angled) TY-WK4P1RW
- Be sure to ask a qualified technician to carry out the installation and set-up.

Two or more people are required to install or remove the television.

- Some wall mounts (wall-hanging brackets) are not designed to be mounted to walls with steel studs or old cinder block constructions.
 - Ask your dealer or licensed contractor to properly secure the wall-hanging bracket.
- Do not place the Plasma TV or its stand on a sloped or unstable surface.

The Plasma TV may fall or tip over.

- Do not support the Plasma TV on a non-specified pedestal.
- Do not place the Plasma TV on furniture that can easily be used as steps, such as a chest of drawers.
- Do not climb or allow children to climb on the Plasma TV
- Place or install the Plasma TV where it cannot be pushed, pulled over or knocked down.
- Route all cords and cables such that they cannot be tripped over or pulled by curious children.
- Do not place any objects on top of the Plasma TV.
 If water spills onto the Plasma TV or foreign objects get inside it, a short-circuit may occur which could result in fire or electric shock. If any foreign objects get inside the Plasma TV, please consult an Authorized Service Center.

■ AC Power Supply Cord

To prevent fire or electric shock:

- The Plasma TV is designed to operate on a 120 V AC, 60 Hz service. Insert the power cord plug as far as it will go into the wall socket.
 - If the plug is not fully inserted, heat may generate, which could cause a fire.
- The included power cord is for use with this unit only.
- Do not use any power cord other than that provided with this TV.
- Do not handle the power cord plug with wet hands.
- Do not do anything that might damage the power supply cord.

- When disconnecting the power supply cord, hold the plug, not the cord.
- Do not use the power supply cord if the plug or cord is damaged.

Replace the cord or contact your Authorized Service Center

Handling the power supply cord

- Insert the power plug fully into the socket outlet. (If the power plug is loose, it could generate heat and cause fire.)
- Ensure that the power plug is easily accessible.
- Ensure the earth pin on the power plug is securely connected to prevent electrical shock.
- An apparatus with CLASS I construction shall be connected to a power socket outlet with a protective earthing connection.
- Do not touch the power plug with a wet hand. (This may cause electrical shock.)
- Do not use any power cord other than that provided with this TV. (This may cause fire or electrical shock.)
- Do not damage the power cord. (A damaged cord may cause fire or electrical shock.)
 - Do not move the TV with the cord plugged in the socket outlet.
 - Do not place a heavy object on the cord or place the cord near a high-temperature object.
 - Do not twist the cord, bend it excessively, or stretch it.
 - Do not pull on the cord. Hold onto the power plug body when disconnecting cord.
 - Do not use a damaged power plug or socket outlet.

■ If Problems Occur During Use

- If a problem occurs (such as no picture or no sound), or if smoke or an abnormal odor is detected from the Plasma TV, unplug the power supply cord immediately. Continued use of the TV under these conditions might cause a fire or permanent damage to the TV. Have the TV evaluated by an Authorized Service Center. Servicing of the TV by unauthorized personnel is strongly discouraged due to its high voltage.
- If water or an object get inside the Plasma TV, if the Plasma TV is dropped, or if the enclosure becomes damaged, unplug the power supply cord immediately.
 A short-circuit may occur, which could cause a fire. Contact an Authorized Service Center for an evaluation.



- Do not cover the ventilation holes.
- Leave a space of 3 15/16" (10 cm) or more at the top, left and right, and 2 3/4" (7 cm) or more at the rear.
- When using the pedestal, keep the space between the bottom of the TV and the pedestal or stand surface clear from objects that may obstruct ventilation.

■ When Moving the Plasma TV

- Be sure to disconnect all cables before moving the Plasma TV.
 - Moving the TV with its cables attached might damage the cables which, in turn, can cause fire or electric shock
- To prevent an electric shock, disconnect the power plug from the wall outlet as a safety precaution before carrying out any cleaning.

Safety Precautions (Continued)

- Transport only in upright position
 Transporting the unit with its display panel facing upright or downward may cause damage to the internal circuitry.
- Using a dry cloth, clean any dust from the power supply cord and plug regularly.

Build-up of dust on the power cord plug can increase humidity, which might damage the insulation and cause a fire.

This Plasma TV radiates infrared rays;

therefore, it may affect other infrared communication equipment. Install your infrared sensor in a place away from direct or reflected light from your Plasma TV.

The TV will still consume some power as long as the power supply cord is connected to the wall outlet.

- Display panel is made of glass. Do not apply strong force or impact to the display panel.
 - This may cause damage resulting in injury.
- The TV is heavy. TV should be handled by 2 or more people. Support as shown to avoid injury by the TV tipping or falling.





▲WARNING

CEA CHILD SAFETY NOTICES: Flat panel displays are not always supported on the proper stands or installed according to the manufacturer's recommendations. Flat panel displays that are inappropriately situated on dressers, bookcases, shelves, desks, speakers, chests or carts may fall over and may cause personal injury or even death.

The consumer electronics industry (of which Panasonic is a member) is committed to making home entertainment enjoyable and safe. To prevent personal injury or death, be sure to follow the following safety guidelines:

TUNE INTO SAFETY:

- One size does NOT fit all. Follow the manufacturer's recommendations for the safe installation and use
 of your flat panel display.
- Carefully read and understand all enclosed instructions for proper use of this product.
- Don't allow children to climb on or play with furniture and television sets.
- Don't place flat panel displays on furniture that can easily be used as steps, such as a chest of drawers.
- Remember that children can become excited while watching a program, especially on "larger than life"
 flat panel displays. Care should be taken to install the display where it cannot be pushed, pulled over,
 or knocked down.
- Care should be taken to route all cords and cables connected to the flat panel display so that they
 cannot be pulled or grabbed by curious children.

WALL MOUNTING: IF YOU DECIDE TO WALL MOUNT YOUR FLAT PANEL DISPLAY, ALWAYS:

- Use a mount that has been recommended by the display manufacturer and/or listed by an independent laboratory (such as UL, CSA, ETL).
- Follow all instructions supplied by the display and wall mount manufacturers.
- If you have any doubts about your ability to safely install your flat panel display, contact your retailer about professional installation.
- Make sure the wall where you are mounting the display is appropriate. Some wall mounts are not
 designed to be mounted to walls with steel studs or old cinder block construction. If you are unsure,
 contact a professional installer.
- A minimum of two people are required for installation. Flat panel displays can be heavy.

Panasonic recommends that a qualified installer perform the wall-mount installation. See page 5.

Notes

■ Do not display a still picture for a long time

This causes the image to remain on the plasma screen ("Image retention"). This is not considered a malfunction and is not covered by the warranty.





To prevent "Image retention", the screen saver is automatically activated after a few minutes if no signals are sent or no operations are performed. (p. 51)

Typical still images

- Channel number and other logos
- Image displayed in 4:3 mode
- SD Card photo
 Video game
- Computer image

■ Set up

- Do not place the unit where it's exposed to sunlight or other bright light (including reflections).
- Use of some types of fluorescent lighting may reduce the remote control's transmission range.

Accessories/Optional Accessory

Accessories

Check you have all the items shown.

Accessories

- Remote Control
 Transmitter
 - N2QAYB000321
- ☐ Batteries for the Remote Control
 - Transmitter (2)


 AA Battery



☐ AC cord



- ☐ Pedestal
- TBLX0088 (TC-P42C1)
- TBLX0089 (TC-P50C1)

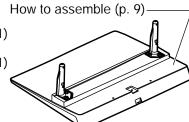

☐ Cleaning cloth



- ☐ Operating Instructions
- ☐ Quick Setup Guide

- ☐ Product Registration Card (U.S.A.)
- ☐ Customer Care Plan Card (U.S.A.)

Optional Accessory





- Wall-hanging bracket (angle)
- TY-WK4P1RW

Note

- In order to maintain the TV's performance and safety, be absolutely sure to ask your dealer or a licensed contractor to secure the wall-hanging brackets.
- Carefully read the instructions accompanying the plasma TV stand or pedestal, and be absolutely sure to take steps to prevent the TV from tipping over.
- Handle the TV carefully during installation since subjecting it to impact or other forces may cause its panel to crack.

Installing the remote's batteries

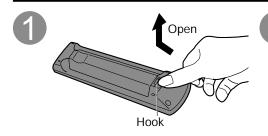

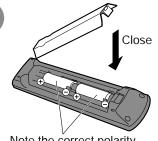

Note the correct polarity (+ or -).


Caution

- Incorrect installation may cause battery leakage and corrosion, resulting in damage to the remote control.
 - Do not mix old and new batteries.
 - Do not mix different battery types (such as alkaline and manganese batteries).
- Do not use rechargeable (Ni-Cd) batteries.
- Do not burn or break batteries.

Attaching the pedestal to TV


■Assembling the pedestal


- Fix securely with assembly screws (A). (Total 4 screws)
- Tighten screws firmly.

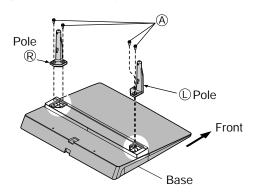

■Set-up

- Carry out work on a horizontal and level surface.
- Tighten screws firmly.

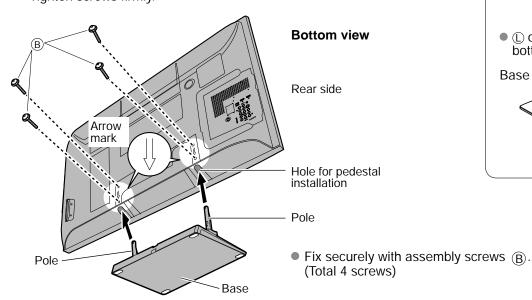

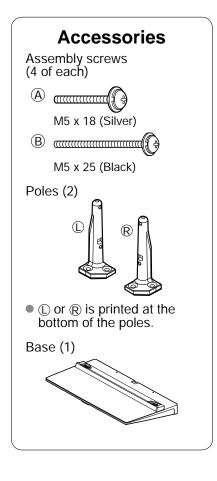

Warning

Do not disassemble or modify the pedestal.

Otherwise the TV may fall over and become damaged, and personal injury may result.

(Caution)

Do not use any other TV and displays.

Otherwise the TV may fall over and become damaged, and personal injury may result.


Do not use the pedestal if it becomes warped or physically damaged.


 If you use the pedestal when it is physically damaged, personal injury may result. Contact your nearest Panasonic Dealer immediately.

During set-up, make sure that all screws are securely tightened.

• If sufficient care is not taken to ensure screws are properly tightened during assembly, the pedestal will not be strong enough to support the TV, and it might fall over and become damaged, and personal injury may result.


Accessories/Optional Accessory (Continued)

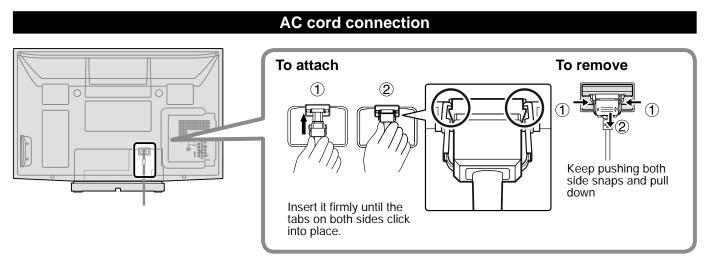

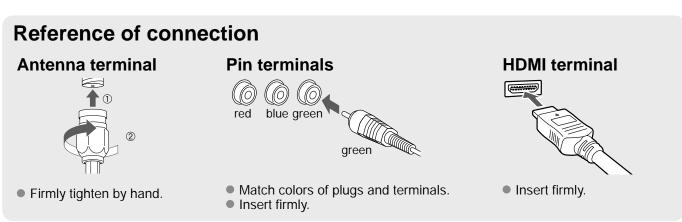


Basic Connection

 Example 1 Connecting Antenna (To watch TV)



VHF/UHF Antenna

- NTSC (National Television System Committee): Conventional broadcasting
- ATSC (Advanced Television Systems Committee):
 Digital TV Standards include digital high-definition television (HDTV), standard-definition television (SDTV), data broadcasting, multi-channel surround-sound audio and interactive television.

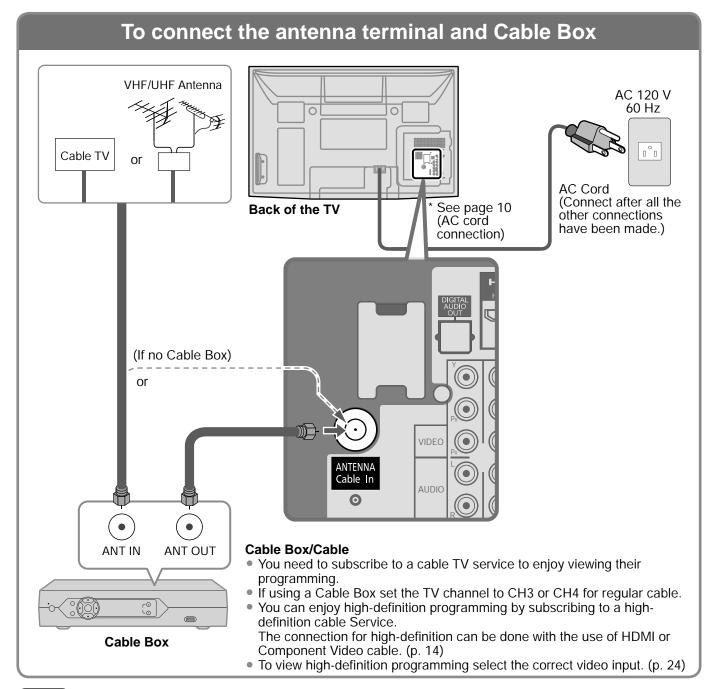

Note

- Not all cables and external equipment shown in this book are supplied with the TV.
- For more details on the external equipment's connections, please refer to the operating manuals for the equipment.
- When disconnecting the power cord, be absolutely sure to disconnect the power cord plug from the wall outlet first.
- For additional assistance, visit us at: www.panasonic.com www.panasonic.ca

Basic Connection (Continued)

Example 2 Connecting DVD recorder (VCR) (To record/playback)




DVD Recorder


If the source has a higher resolution signal (480p/720p/1080i/1080p), connection can be made with the use of a Component Video or HDMI cable. (p. 14)

VCR


Connection can be made with the use of an RF cable and Composite Video/S Video cable. (p. 14)

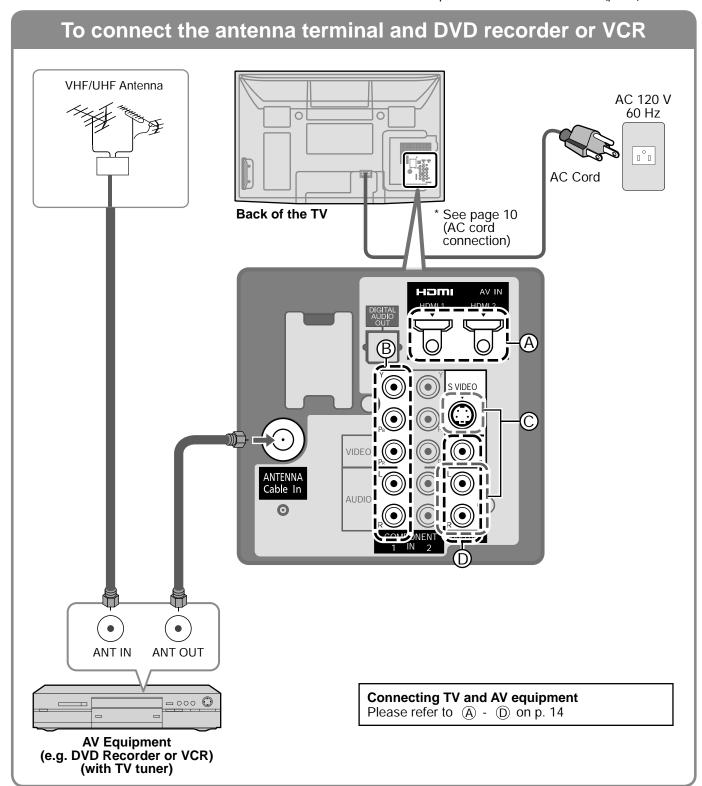

 Example 3 Connecting DVD recorder (VCR) and satellite receiver



You can enjoy high-definition programming by subscribing to high-definition satellite service. Connection can be done with the use of HDMI or Component Video cable. (p. 14)

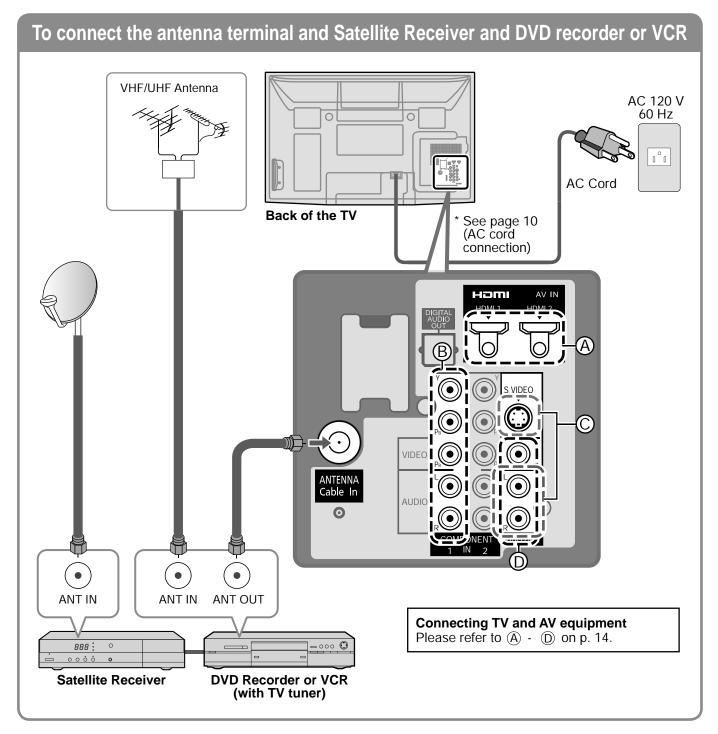



Note

• For details of external equipment connections, please refer to the operating manuals for the equipment.

Basic Connection (Continued)

AV cable connections

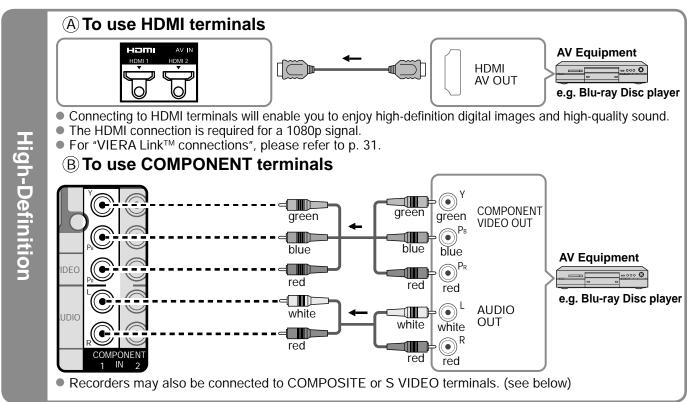


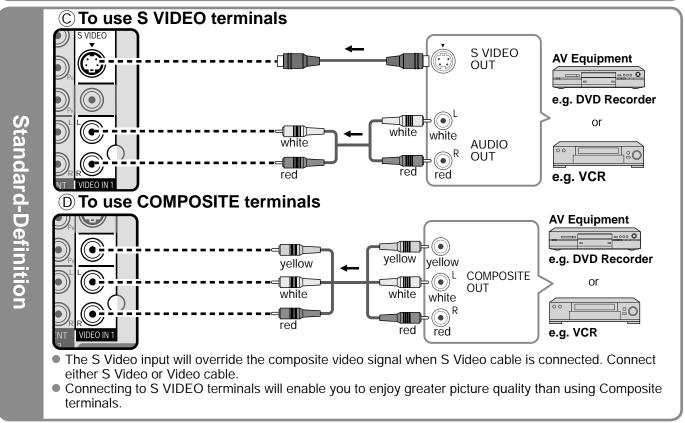


Note

- Some programs contain a copyright protection signal to prevent recording.
- When the copyright protection program is displayed, do not connect the other TV monitor through a VCR. Video signals fed through VCRs may be affected by copyright protection systems and the picture will be distorted on the other TV monitor.
- For more details on the external equipment's connections, please refer to the operating manuals for the equipment.

Identifying Controls

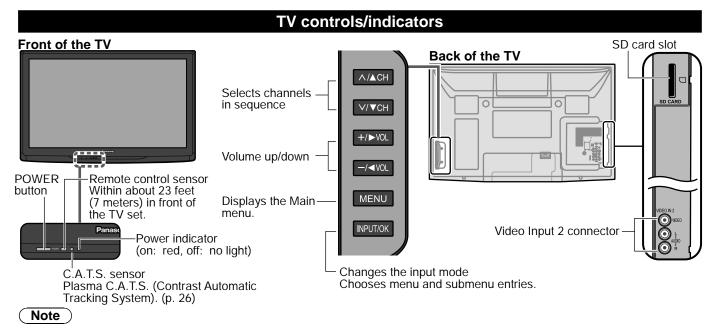


- The TV consumes a limited amount of power as long as the power cord is inserted into the wall outlet.
- Do not place any objects between the TV remote control sensor and remote control.

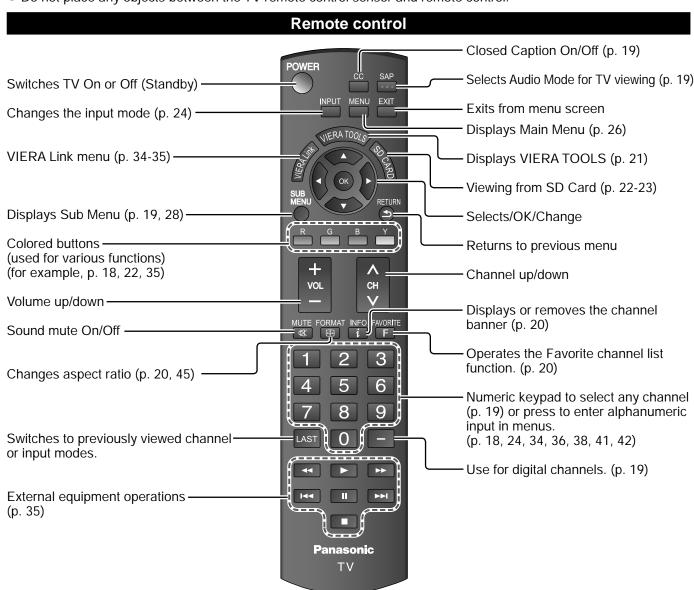

First Time Setup

"First time setup" is displayed only when the TV is turned on for the first time after the power cord is inserted into a wall outlet and when "Auto power on" (p. 28-29) is set to "No".

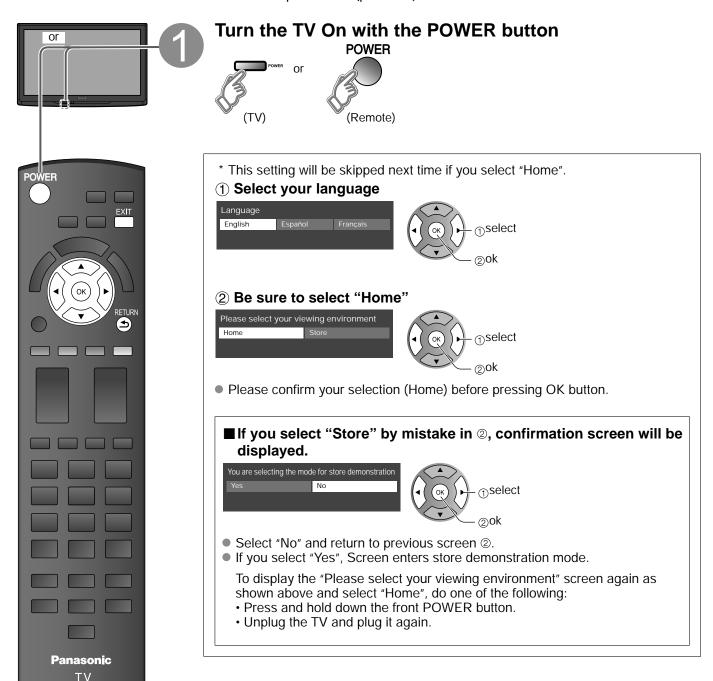

■ Press to exit from a menu screen

 
■ Press to return to the previous

 
EXIT

screen RETURN




Adjust the clock






Clock			
Year	4	2009	•
Month		1	
Day		7	
Hour		10 AM	
Minute		10	

 


Year: Select the year
Month: Select the month
Day: Select the day
Hour: Adjust the hour
Minute: Adjust the minute

Auto channel setup

  1) Select "ANT/Cable setup"





2 Select "ANT in"



ANT in

Cable: Cable TV
Antenna: Antenna
Not used: Skip TV tuning

⇒ go to 4

■ Press to exit from a menu screen



Note

 To change setting (Language/Clock/ Auto program/Input labels) later, go to Menu screen (p. 28)

3 Select "Auto program"

 


 
First Time Setup (Continued)



4 Select scanning mode (ALL channels/Analog only/Digital only)








Start scanning the channels


Available channels (analog/digital) are automatically set.

All channels: Scans digital and analog channels Analog only: Scans Analog channels only Digital only: Scans Digital channels only

 (5) Confirm registered channels




Press RETURN to quit

 



- If OK is not pressed after selecting "Apply", the channels will not be saved. The channel will be saved when no operation is performed for 60 seconds and the "Manual program" menu will also exit automatically.
- If you perform scanning more than twice, previously saved channels are erased.

  Set the Input labels





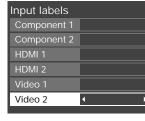



0





Switches Input mode alphabet to numeric

Label: [BLANK] SKIP/VCR/DVD/CABLE/SATELLITE/DVR/GAME/AUX/RECEIVER/ COMPUTER/Blu-ray/CAMERA/DVD REC/HOME THTR/MONITOR/MEDIA CTR/MEDIA EXT/OTHER

■ Press to exit from a menu screen

TV



Note)

About broadcasting systems

Analog (NTSC):

Conventional broadcasting


Digital (ATSC):

New programming that allows you to view more channels featuring high-quality video and sound

Watching TV

Connect the TV to a cable box/cable, set-top-box, satellite box or antenna cable (p. 11-14)

To watch TV and other functions

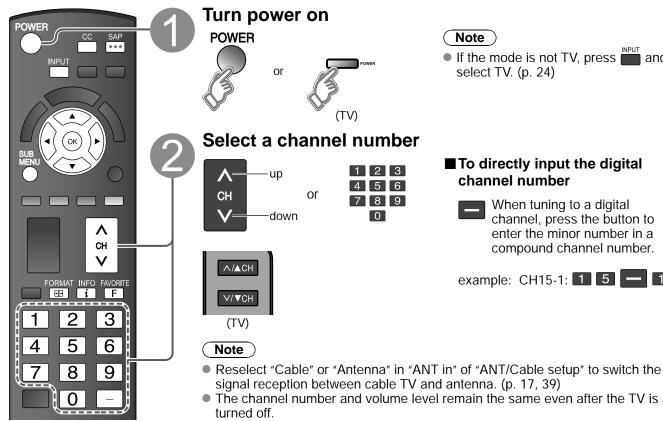


Note

• If the mode is not TV, press and select TV. (p. 24)

■ To directly input the digital channel number

When tuning to a digital channel, press the button to enter the minor number in a compound channel number.

 example: CH15-1: 1 5 - 1











■ Select Audio Mode for watching TV

Digital mode

Press SAP to select the next audio track (if available) when receiving a digital channel.

Audio track 1 of 2 (English)

Analog mode

Press SAP to select the desired audio mode.

• Each press of SAP will change the audio mode. (Stereo/SAP/Mono)

Closed Caption



 






Display the SUB MENU






■ Press SUB MENU to show sub menu screen. (p. 28) This menu consists of shortcuts to convenient functions.

Watching TV (Continued)

■ Other Useful Functions (Operate after 2)

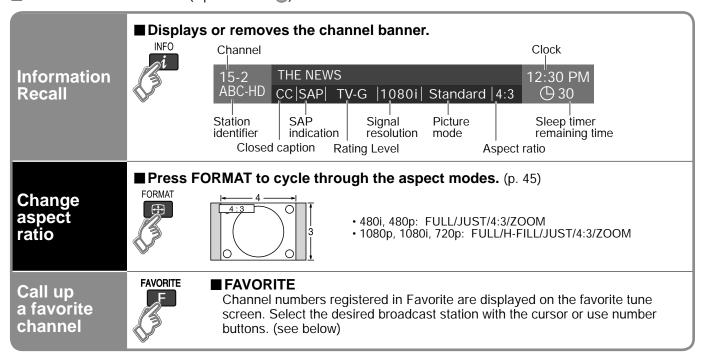

Favorite Feature

 
■Set Favorite Feature

1 Display the SUB MENU.




2 Select "Set favorite"







3 Set the displayed channel

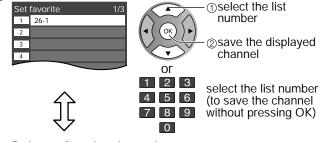

Delete a favorite channel

 

 


■Use Favorite Feature

1 Display "Favorite channels"



 
2 Select the channel







3 Set Favorite channel

 



■To change the page



Press repeatedly to change between pages (1/3, 2/3, 3/3 or exit)




Changes the page forward/backward

Using VIERA TOOLS

VIERA TOOLS are the easy way to access high use menu items. They are displayed as shortcut icons on the TV screen.

Unlike a conventional menu, you can enjoy using, playing or setting a function quickly.

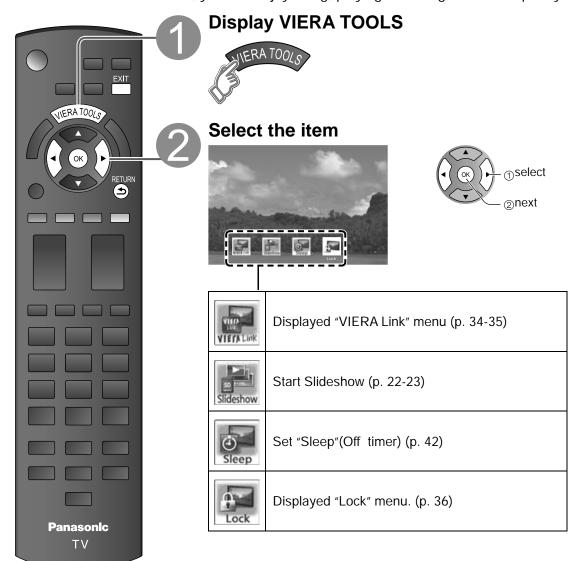

■ Press to exit from a menu screen



■ Press to return to the previous screen

RETURN



Viewing from an SD Card

You can view photos taken with a digital camera or digital video camera and saved on an SD card. (Media other than SD Cards may not be reproduced properly.)

Photo viewer



NERA TOOL

INFO i

 
Insert the SD card •

* This setting will be skipped next time unless you select "Set later".

Set "SD card setting" and select "Play SD card now" "SD card setting" will be displayed automatically each time an SD card is

inserted for the first time.





①select Slideshow: A Slideshow will start automatically next time. ©change Thumbnail: The Photo viewer menu will be

displayed automatically next time "SD card setting" menu will be

Set later: displayed repeatedly.


The data can be played manually.

■ Manual operation ("Play SD card automatically" is "Off") Display "Photo viewer" | Start Slideshow

 Thumbnail view







Select the data to be viewed







Selected picture information is displayed. Name: Image number or file name is displayed.

Date of recording is displayed. Date: Size: Display resolution is displayed.

 Total number of images



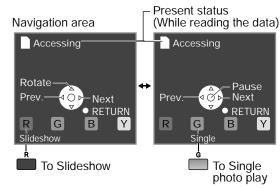

Note

View

Navigation area

Depending on the JPEG format, "Information" contents may not be displayed correctly. Refer to p. 46 (Data format for SD card browsing) for details.

■ Press to exit from a menu screen **EXIT**

Panasonic

 
T۷

■ Press to return to the previous screen RETURN






Displays one at a time



To display/hide Navigation area ⇒



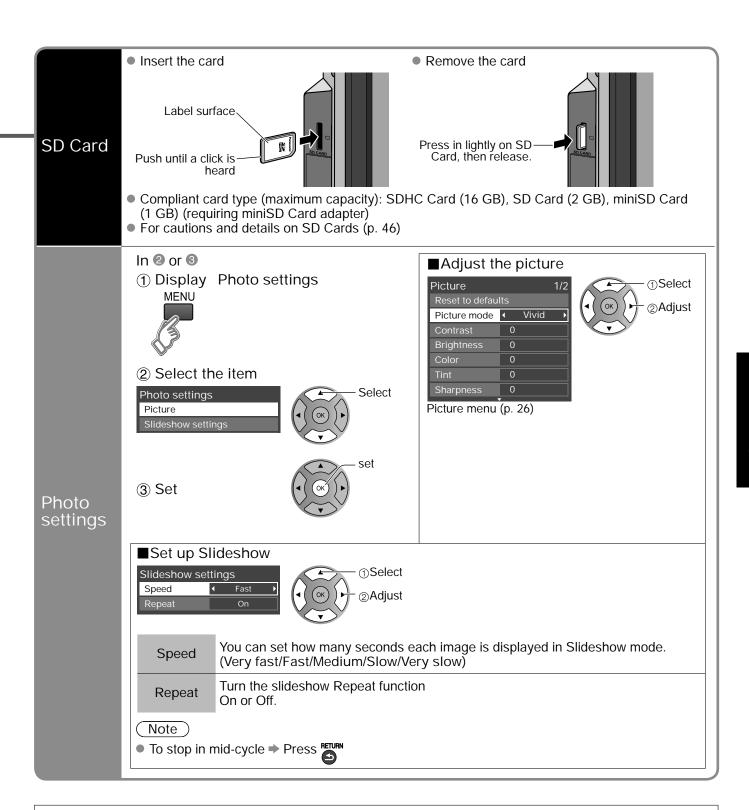

VIERA IMAGE VIEWER


The VIERA Image Viewer is a function that lets you easily view still and motion images on a VIERA television by simply inserting an SD card into the VIERA SD card slot.

Watching Videos and DVDs

If you have applicable equipment connected to the TV, you can watch videos and DVDs on the TV's screen.

Input Select


You can select the external equipment to access.

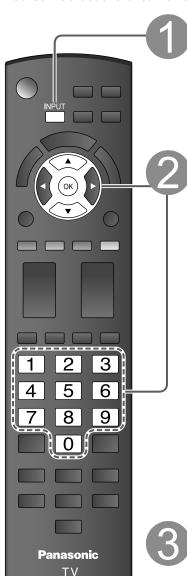

With the connected equipment turned On Display the Input select menu



Select the input mode

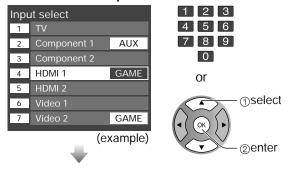

Terminal

Label

(example)

Press corresponding NUMBER button on the remote control to select the input of your choice.

Select the input of your choice, then press OK.

- During the selection, if no action is taken for several seconds, the "Input select" menu disappears.
- The terminal and label of the connected equipment are displayed.
 To label each of the inputs, please refer to p. 41.

Note

HDMI 1

- The input label will be displayed on "Input select" screen if Input label is set on p. 41.
- For side input terminals (Video 2), "GAME" input label is set as default.
- For more details for Input label, refer to p. 41.

Operate the connected equipment using the remote control supplied with the equipment

(Note)


• For details, see the manual of the connected equipment.





VIERA Link™ Setting

If you connect equipment that has the "HDAVI Control" function to a TV using an HDMI cable, you will find it easier to use. Please refer to p. 30-35. Before using these functions, you need to set "VIERA Link" setting to "On" as shown below.

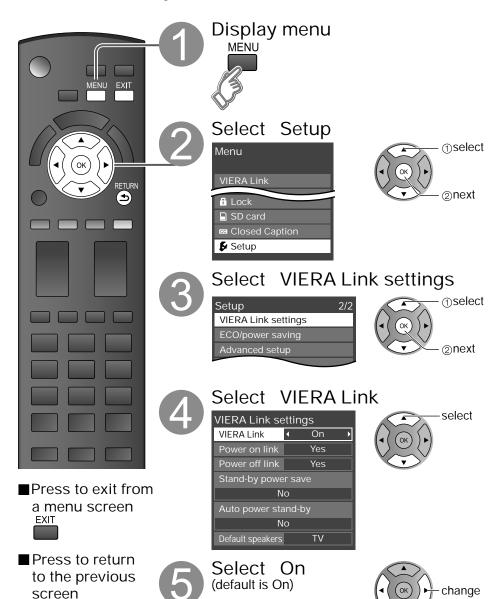

Now you can set each "VIERA Link" function according to your preference (p. 32-35).


Note

RETURN

- If no HDMI equipment is connected or standard HDMI equipment (non- "VIERA Link") is used, set it to "Off".
- For more details on the external equipment's connections, please refer to the operating manuals for the equipment.

How to Use Menu Functions

Various menus allow you to make settings for the picture, sound, and other functions so that you can enjoy watching TV best suited for you.

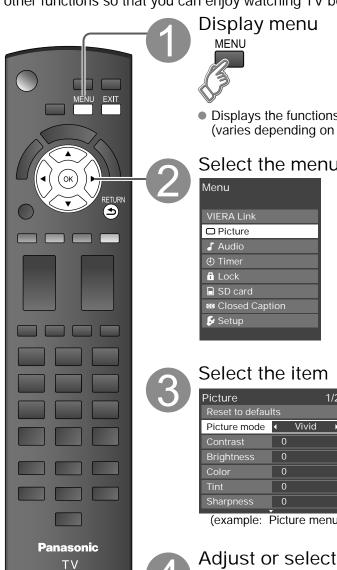



Display menu




Displays the functions that can be set (varies depending on the input signal)

 Select the menu

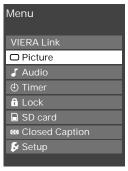



Select the item

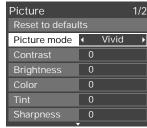




(example: Picture menu)

 ■ Press to exit from a menu screen







■ Press to return to the previous screen



(example: Picture menu)

■ Menu list


Manu		Itom	
Menu		Item	
VIERA Link		A Link control aker output	
	Reset to defaults		
	Pictu	ıre mode	
	Contrast Brightness Color Tint Sharpness		
	Color temp.		
77	C.A.	T.S.	
oictur	Vide	o NR	
ıre	Zoor	m adjustments	
	A	3D Y/C filter	
	Advanced picture	Color matrix	
	ed p	MPEG NR	
	ictu	Black level	
	e e	H size	
	Rese	et to defaults	
	Bass		
	Treble		
\triangleright	Balance		
udi	Ad	Surround	
O	dvanced audio	Volume leveler	
		TV speakers	
	audio	HDMI 1 in HDMI 2 in	
Timer	Slee	p Timer 1-5	
Lock			
SD card	SD c	ard	
Closed Caption	Clos	ed Caption	

Adjustments/Configurations (a	alternatives)	
[VIERA Link control] Selects equipment to access and operate. (Recorder/Home theater/Player [Speaker output] Selects an audio output. (Home theater/TV) (p. 34-35) VIERA Link menu is accessible directly by pressing the VIERA Link buttor		
Resets all picture adjustments to factory default settings except for "Advance	ed picture".	Reset to defaults
Basic picture mode (Vivid/Standard/Cinema/Custom) (p. 47)		Picture mode Vivid
Adjusts color, brightness, etc. for each picture mode to suit your taste • Display range Contrast/Brightness/Color/Sharpness: 0 - 100 Tint: -50 - +50	Contrast +20 Brightness 0 Color 0	Tint 0 Sharpness 0
Selects a choice of Cool(blue), Normal, or Warm(red) color. (Cool/Normal/V	Varm)	Color temp. Coo
Adjusts the brightness and gradation according to the ambient lighting condi	ition. (Off/On)	C.A.T.S. Off
Reduces noise, commonly called snow. Leave it off when receiving a strong	signal. (Off/On)	Video NR Off
Adjusts vertical alignment and size when aspect setting is "ZOOM" (p. 45)		Zoom adjustments
Minimizes noise and cross-color in the picture. (On/Off)		3D Y/C filter On
Selects image resolution of component-connected devices (HD/SD) SD: Standard Definition HD: High Definition Only 480p signal accepted; regular TV (NTSC) is not available.		Color matrix SD
Reduces noise of specific digital signals of DVD, STB, etc. (On/Off)		MPEG NR Off
Selects Dark or Light. Valid only for external input signals. (Dark/Light)		Black level Ligh
Adjust horizontal display range to reduce noise of both side edges of an ima Size 2: Adjust image size according to aspect mode for reducing noise. (p. 4	nge. (Size 1/Size 2) 48)	H size Size
Resets Bass, Treble and Balance adjustments to factory default settings.		Reset to defaults
Increases or decreases the bass response.		Bass 0
Increases or decreases the treble response.		Treble 0
Emphasizes the left / right speaker volume.		Balance 0
Enhances audio response when listening to stereo. (On/Off)		Surround Off
Minimizes volume disparity after switching to external inputs.		Volume leveler 0
Switch to "Off" when using external speakers (On/Off) "Surround" and "Volume leveler" do not work if "Off" is selected.		TV speakers On
The default setting is "Digital" for HDMI connection. (Digital input signal) Select audio input terminal when DVI cable is connected. (Analog audio input (Digital/Component 1/Component 2/Video 1/Video 2)	ut signal)	HDMI1 in Digit HDMI2 in Digit
The TV can automatically turn On/Off at the designated date and time (p. 42	2)	
Locks the channels and programs (p. 36)		
Displays SD card data (p. 22-23)		SD card
Displays subtitles (Closed Caption) (p. 40)		Closed Caption

[•] In AV mode, the Audio menu and Setup menu give fewer options.

How to Use Menu Functions

Various menus allow you to make settings for the picture, sound, and other functions so that you can enjoy watching TV best suited for you.

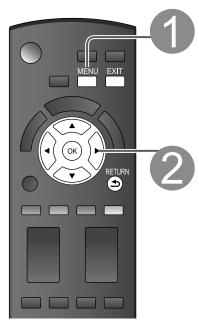


Display menu



 Displays the functions that can be set (varies depending on the input signal)

 Select Setup







■ Press to exit from a menu screen



 Select the item

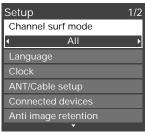




■ Press to return to the previous screen




Display Sub Menu



  Select the item





■ Menu list

Menu	u IISI	Item
	Char	nnel surf mode
	Lang	uage
	Cloc	k
		Cable setup
	Connected devices	Input labels
	Anti Image retention	Pixel orbiter
	age	Time (minutes)
	reter	4:3 side bars
	ntion	Scrolling bar
		VIERA Link
	VIE	Power on link
S	₹A L	Power off link
setup	VIERA Link settings	Stand-by power save
	ttings	Auto power stand-by
		Default speakers
	ECO/power	No signal for 10 minutes
	er saving	No activity for 3 hours
	Advan setu	Auto power on
	dvanced setup	Play SD card automatically
	Abou	ut
	Rese	t to defaults
■ Culo		uliet

■Sub menu list

- 545	mena nat	
Menu	Item	
SL	Channel surf mode	
Set JB N	Set favorite	
etup MENU	Edit CH caption	
	Signal meter	

(Continued)

Adjustments/Configurations (alternatives)	
Sets the mode to select the channel with Channel up/down button (All/Favorite/Digital only/Analog only) Favorite: Only channels registered as FAVORITE (p. 20)	Channel surf mode
Selects the screen menu language (p. 16)	Language
Adjusts the clock (p. 17)	Clock
Sets channels (p. 39)	ANT/Cable setup
Selects the terminal and label of the external equipment (p. 41)	
Prevents "Image retention" with Wobbling. (Automatic/Periodic) • Automatic: Shifts the display image automatically. • Periodic: Shifts the display image every (1/2/3/4) minutes according to what was set in the "Time (minutes)" menu.	Pixel orbiter Auto
Sets the time for "Pixel orbiter-Periodic" setting. (1/2/3/4)	Time (minutes)
Change the brightness of the side bar (Off/Dark/Mid/Bright) (4:3 mode only) The recommended setting is "Bright" to prevent panel "Image retention". (p. 48)	4:3 side bars Br
Press "OK" to start horizontal "Scrolling" on the screen (p. 48)	Scrolling bar
Controls equipment connected to HDMI terminals (p. 32) (On/Off) #Power off link", "Power on link", and "Default speakers" cannot be selected if "Off" is set.	VIERA Link
Sets "Power on link" of HDMI connection equipment (p. 32) (Yes/No)	Power on link
Sets "Power off link" of HDMI connection equipment (p. 32) (Yes/No)	Power off link
Set "Stand-by power save" of HDMI connection equipment. (p. 32) (No/Yes)	Stand-by power sa No
Set "Auto power stand-by" of HDMI connection equipment. (p. 32) (No/Yes (with reminder)/Yes (no reminder)	Auto power stand-l
Selects the default speakers (p. 32) (TV/Theater)	Default speakers
To conserve energy, the TV automatically turns off when NO SIGNAL and NO OPERATION is performed for more than 10 minutes. (Enable/Disable) Note Not in use when setting "Auto power on", "On/Off Timer", "Lock", "SD mode" or Digital channel. "No signal for 10 minutes was activated" will be displayed for about 10 seconds when the TV is turned on for the first time after turning the power off by "No signal for 10 minutes".	No signal for 10 mi
 The on-screen display will flash 3, 2 and 1 to indicate the last three (3) remaining minutes prior to the shut-off. To conserve energy, the TV automatically turns off when no operation of remote or side panel key continues for more than 3 hours. (Enable/Disable) Note Not in use when setting "Auto power on" or "On/Off Timer". "No activity for 3 hours was activated" will be displayed for about 10 seconds when the TV is turned on for the first time after turning the power off by "No activity for 3 hours". The on-screen display will flash 3, 2 and 1 to indicate the last three (3) remaining minutes prior to the shut-off. 	No activity for 3 ho Disable
Turns TV On automatically when the cable box or a connected device is turned On (No/Yes) The "Sleep" timer, "On / Off timer", and "First time setup" will not function if "Auto power on" is set. (p. 42)	Auto power on
Set "Thumbnail" or "Slideshow" to play back SD cards automatically. (Slideshow/Thumbnail/Set later/Off)	Play SD card automa Set later
Displays TV version and software license.	About
Performing Reset will clear all items set with Setup, such as channel settings. (p. 38)	Reset to defaults
Adjustments/Configurations (alternatives)	
Sets the mode to select the channel with Channel up/down button (All/Favorite/Digital only/Analog only)	
Sets favorite channels. (p. 20)	
Changes the station identifier. (p. 39)	

VIERA LinkTM HDAVI ControlTM

Simultaneously control all Panasonic "HDAVI Control" equipped components using one button on the TV remote. Enjoy additional HDMI Inter-Operability with Panasonic products which have the "HDAVI Control" function. This TV supports "HDAVI Control 4" function.

Connections to some equipment (DVD recorder DIGA, HD Camcorder, Player theater, RAM theater, Amplifier, etc.) with HDMI cables allow you to interface with them automatically.

Equipment with the "HDAVI Control" function enables the following operations:

Version	Operations	
HDAVI Control or later	 Automatic Input Switching (p. 33) Power on link (p. 33) Power off link (p. 33) Default speakers (p. 33) One-touch theater playback (p. 33) Speaker control (p. 35) 	
HDAVI Control 2 or later	 VIERA Link control only with the TV's remote control(P. 35) Auto power stand-by (for available equipment only) (p. 33) 	
HDAVI Control 3 or later	Providing the setting information (p. 33)Automatic lip-sync function (p. 33)	
HDAVI Control 4	Stand-by power save (with quick start mode) (p. 33)	

■ For the first time/When adding new equipment reconnecting equipment or changing the setup after the connection turn the equipment on and then switch the TV on. Set the input mode to HDMI1 or HDMI2 (p. 24) and make sure that the image is displayed correctly.

VIERA Link "HDAVI Control", based on the control functions provided by HDMI which is an industry standard known as HDMI CEC (Consumer Electronics Control), is a unique function that we have developed and added. As such, its operation with other manufacturers' equipment that supports HDMI CEC cannot be guaranteed. Please refer to the individual manuals for other manufacturers' equipment supporting the VIERA Link function.

■ HDMI cable

This function needs an HDMI compliant (fully wired) cable. Non-HDMI-compliant cables cannot be utilized. It is recommended that you use Panasonic's HDMI cable. Recommended part number: RP-CDHF15 (4.9 ft/1.5 m), RP-CDHG15 (4.9 ft/1.5 m), RP-CDHF30 (9.8 ft/3.0 m), RP-CDHG30 (9.8 ft/3.0 m), RP-CDHG50 (16.4 ft/5.0 m)

^{*} For more details on the external equipment's connections, please refer to the operating manuals for the equipment.

VIERA Link™ Connections

Follow the connection diagrams below for HDAVI control of a single piece of AV equipment such as a DVD recorder (DIGA), RAM theater, or Player theater system. Refer to page 32-35 for Setup Menu settings and additional control information.


Optional HDMI and/or optical cables are not included.

If connection (or setting) of equipment compatible with HDAVI control is changed, switch the power of this unit Off and On again while the power of all equipment is On (so that the unit can correctly recognize the connected equipment) and check that the DVD recorder (DIGA), RAM theater, and Player theater playback operate.

Note

- HDMI 1 is recommended.
 When connecting to HDMI 2, set the input mode to HDMI 2 (p. 24) initially before connecting to HDMI 2. After connection, confirm the HDMI control functions (p. 32-35).
- Connecting this unit to the DVD recorder (DIGA) RAM theater or Player theater
- For DVD recorder (DIGA): Connect with HDMI cable
- For RAM theater and Player theater:
 Connect with the HDMI and audio cables.

 If audio cable is not connected, you cannot listen to the TV program through the theater system.
- Connecting this unit to a DVD recorder (DIGA) and AV amp When using a "VIERA Link" audiovideo amplifier and a compatible DVD recorder (DIGA) use a daisy chain connection as shown below.

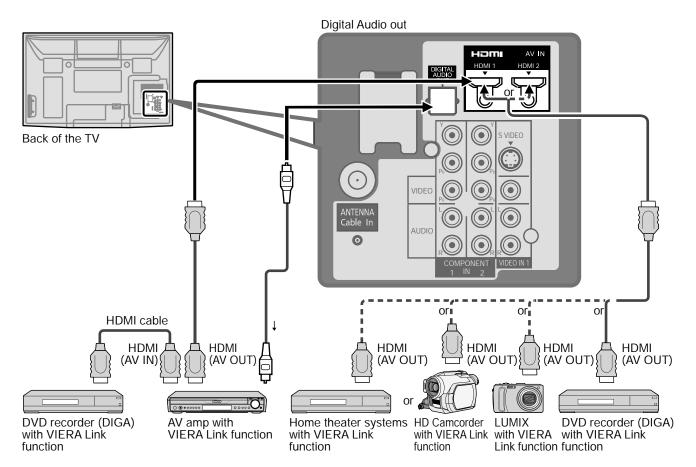

- One AV amp and one DVD recorder (DIGA) can be operated with this unit.
- Be sure to connect the AV amp between this unit and the DVD recorder (DIGA).
- Setting of this unit after connection
 After making connections as shown above, set "VIERA Link" (under "VIERA Link settings") to "On" using the Setup menu. (p. 25, 32-33).

Note

- Individual HDMI equipment may require additional menu settings specific to each model. Please refer to their respective operating instruction manuals.
- When audio from other equipment connected to this unit via HDMI is output using "DIGITAL AUDIO OUT" of this
 unit, the system switches to 2CH audio.
 (When connecting to an AV amp via HDMI, you can enjoy higher sound quality.)
- When confidently to an Avanta Danie, you can enjoy higher sound quality.)
- About HDMI cable for connecting Panasonic HD camcorder, read the manual of the equipment.

VIERA LinkTM HDAVI ControlTM

 


Display menu





Select Setup







Select VIERA Link settings

 

 


Select VIERA Link

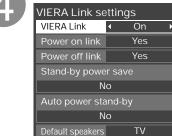

 


Select On (default is On)

 



■ Press to exit from a menu screen EXIT

■ Press to return to the previous screen RETURN

  
(




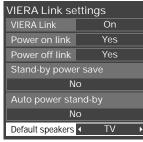



Set

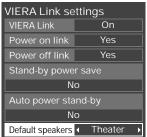

 

Automatic Input Switching

Power on link

Power off link

Stand-by power save (for HDAVI Control 4 (with quick start mode))

Auto power stand-by (for HDAVI Control 2 or later)

Default speakers

One-touch theater playback

Providing the setting information (for HDAVI Control 3 or

Automatic lipsync function (for HDAVI Control 3 or later)

(Continued)

At the start of the DIGA, Player theater, or RAM theater playback, the TV's input automatically switches to the input based on the playback equipment.

• For the RAM theater, the speakers automatically switch to the theater system.

If using the DIGA operation, the TV's input automatically switches to the DIGA and DIGA menu is displayed.

When "Yes" is selected (p. 29), TV is turned on automatically and switches to the appropriate HDMI input whenever VIERA Link compatible equipment is initially turned on and Play mode is selected.

When "Yes" is selected (p. 29) and the TV is turned off, all connected VIERA Link compatible equipment is also automatically turned off.

• DIGA (Panasonic DVD Recorder) will not turn off if it is still in rec mode.

Caution: The TV remains on even if the VIERA Link compatible equipment is turned off.

Condition

Power off link: Yes, Stand-by power save: Yes

The equipment has "HDAVI Control 4 (with quick start mode)" connected with HDMI cable.

When TV is turned off, all connected VIERA Link compatible equipment is moved to ECO standby mode* automatically under above conditions.

* Minimum power consumption of standby condition for the equipment.

Condition

Auto power stand-by: Yes,

The equipment has "HDAVI Control 2 or later" (for available equipment only) connected with HDMI cable.

[Examples of timing for operation]

- · When the input is switched from HDMI.
- When the "Speaker output" is changed from "Home theater" to "TV".

The connected VIERA Link compatible equipment will be turned off automatically when not in use.

"TV" is the default setting. To set the Home Theater system as default speakers, change the default speakers setting from "TV" to "Theater". Sound will be output from the Home Theater whenever the TV is powered on.

If the "ONE TOUCH PLAY" key is pressed on the remote control for Panasonic Home Theater system, the following sequence of operations is performed automatically.

- ① Home Theater power switches On, and playback begins.
- 2 TV power switches On, and the playback screen is displayed.
- 3 Audio is muted on the TV and switches to the theater system.

The following information about the TV settings can be transmitted to each piece of equipment (Recorder/Home theater/Player) that has "HDAVI Control 3 or later" function connected to a TV with HDMI cable.

Transmittable data	Recorder	Home theater	Player
① On Screen Display Language setting (English/Español/Français)	0	0	0
② Panel Aspect Ratio (16:9 fixed)	0	0	0
③ Closed caption information (Mode/CC type/Digital setting)	0		
Channel information (Input signal/Channel list/Caption information)	0		

Note

- There is a possibility that all the GUI language information might be set from equipment that has HDMI CEC function connected to TV with HDMI cable. Depending on operating conditions or the specification for each piece of equipment the setting may or may not be applied.
- For more details on the external equipment's operation, please refer to the operating manuals for the equipment.

[For Recorder]


• You cannot operate other functions while transmitting TV's information above except Power On/Off key operation. When you turn off this unit, the transmission will be interrupted (only when you are transmitting ④ Channel information).

Minimizes lip-sync delays between the picture and audio when you connect to a Panasonic theater system or Amplifier.

VIERA Link™ HDAVI Control™

You can enjoy more convenient operation with the "HDAVI Control" function in the "VIERA Link" menu.

For more details on the "HDAVI Control" function, refer to p. 30

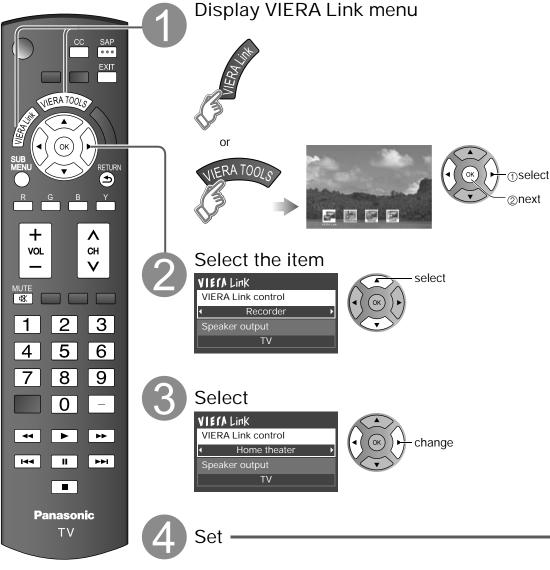

■ Press to exit from a menu screen

■ Press to return to the previous screen

RETURN



VIERA Link control only with the TV s remote control (for HDAVI Control 2 or later)

Speaker control

(Continued)

 
You can select Home theater or TV speakers for audio output.

Control theater speakers with the TV's remote control.

This function is available only when Panasonic Amplifier or Player theater is connected.

- ① Select Speaker output
- ② Select Home theater or TV





■Home theater: Adjustment for equipment

Volume up / down

 


- The sound of the TV is muted.
- When the equipment is turned off, the TV speakers take over.
- Selecting "Home theater" turns the equipment on automatically if it is in standby mode.
- ■TV: The TV speakers are on.

In the VIERA Link menu, you can select HDMI connected equipment and access it quickly. Continue using your TV's remote control to operate the equipment, pointing it at the TV.

- 1 Select VIERA Link control
- ② Select the equipment you want to access. (Recorder/Home theater/Player/Camcorder/LUMIX)





You can select available items only.

- If there is more than one equipment item, a number after the name indicates the number of items. (e.g. Recorder 1/Recorder 2/Recorder 3...)
- The number of equipment items that can be connected is three for recorders, and a total of three for Home theater/Player/Camcorder/LUMIX.

(Note)

- There is a limit to the number of HDMI connectors.
- ③ Operate the equipment with the TV s remote control pointing it at the TV.
- To operate the equipment, read the manual of the equipment.


■ Available TV s remote control buttons

Whether an operation is available differs depending on the connected equipment.

() (S) ()	Move the cursor/Select	>	Play
OK	Set/Access		Stop
RETURN	Return to previous menu	*	Reverse/Forward
SUB MENU	Display the functions menu on the equipment	 	Skip Reverse/Forward
R G B Y	Available when the purpose of the keys is displayed on screen	=	Pause
EXIT	Exit	CC	Closed Caption
А ОН V	Channel Up/Down	SAP	SAP (Select Audio Mode)
0 - 9	0-9		Select digital subchannel

Lock

You can lock specified channels or shows to prevent children from watching objectionable content.

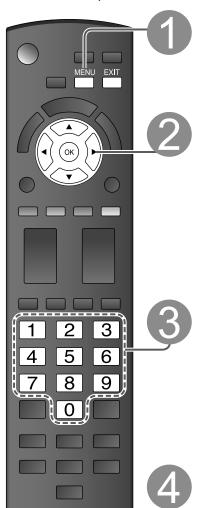


Display menu



 Select Lock





You will be asked to enter your password each time you display the Lock menu.

Input your 4-digit password

A 4-digit code must be entered to view a blocked program or change rating settings.

 


 


• If it is your first time entering the password, enter the password twice in order to register it.

Select the Lock mode







Off: Unlocks all the lock settings of "Channel", "Game" and "Program".

Locks all the inputs All: regardless of the lock settings of "Channel", "Game" and "Program".

Custom: Locks specified inputs of "Channel", "Game" and

"Program".

■ Press to exit from a menu screen EXIT

Panasonic

TV

 
Caution

Make a note of your password in case you forget it. (If you have forgotten your password, consult your local dealer.)



Select the item





"Channel", "Game" and "Program" are not accessible unless "Custom" is selected in "Mode".

Note


When you select a locked channel, a message will be displayed that allows you to view the channel if you input your password.



Set



■ To select the channel or the rating of the program to be locked

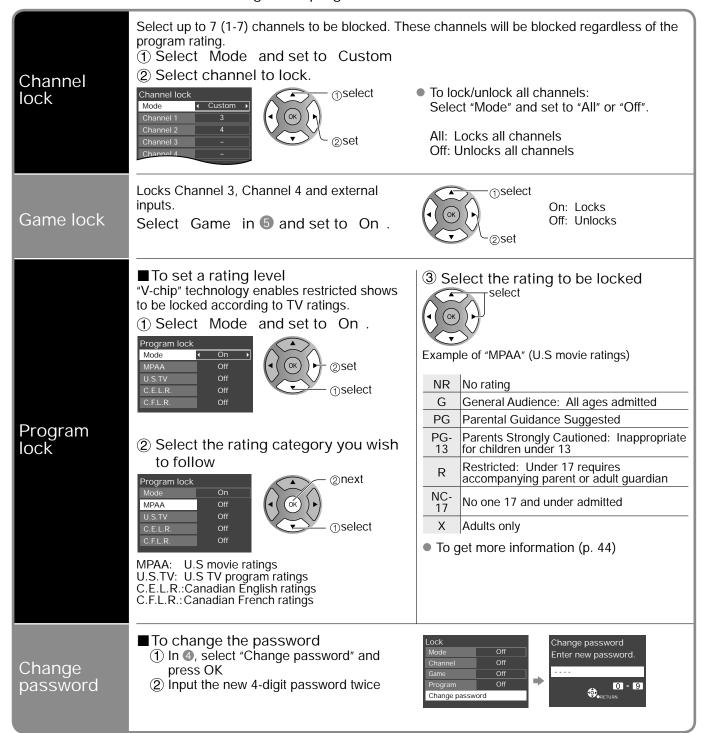


Note)

- This television is designed to support the "Downloadable U.S. Region Rating System" when available. (Available only in U.S.A.)
- The Off rating is independent of other ratings.
- When placing a lock on a specific-age-based-rating level, the Off rating and any other more restrictive ratings will also be blocked.

Editing and Setting Channels

The current channel settings can be changed according to your needs and reception conditions.

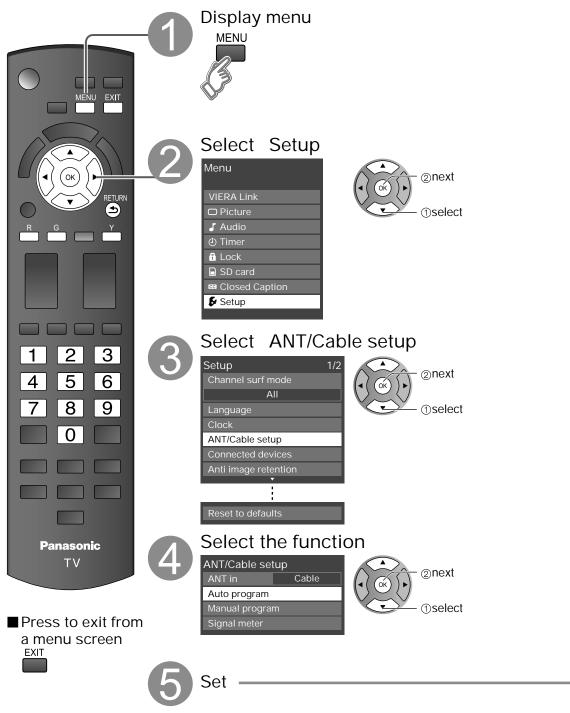

Auto program Set automatically

> Manual program

 
Set manually

 
■To reset the settings of setup menu

- ① Select "Reset to defaults" in Setup menu (③) and press OK
- ② Input your 4-digit password with number buttons
- Select "YES" on the confirmation screen and press OK


Signal meter Check signal strength Automatically searches and adds available channels to the memory.

- 1 Select ANT in
 - Select Cable or Antenna (p. 17). Or select "Not used" to skip TV tuning.
- 2 Select Auto program





3 Select a scanning mode (p. 18)

 

Settings are made automatically

 
- After the scanning is completed, select "Apply" (see below (5)).
- All previously saved channels are erased.

 
Use this procedure when changing the channel setup or changing the channel display.

Also, use this to add or skip channels from the channel list manually.


You can select a channel tuning mode (Digital only/ Analog only) in "Channel surf mode" (p. 29)

1 Select Edit






② Select the item to be edited

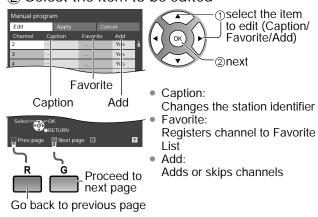





 


Caption

Select or edit the station identifier. (maximum 7 characters available)

 Favorite





Set favorite Select the number

 
Add

Press OK to select "Yes (add)" or "No (skip)"




(4) Move cursor to channel number






⑤ Select Apply



 


To cancel the Edit



 




 

 Check the signal strength if an interference is found or freezing occurs on a digital image.






If the signal is weak, check the antenna.
 If no problem is found, consult your local dealer.

el Note

- Not available if "Cable" is selected in "ANT in" (see above).
- Available only for digital antenna channels.

Closed Caption

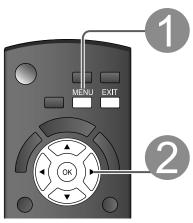


Display menu



 Select Closed Caption





■ Press to exit from a menu screen **EXIT**

Closed Caption

Display

Closed

 
Caption

The television includes a built-in decoder that is capable of providing a text display of the audio. The program being viewed must be transmitting Closed Caption (CC) information. (p. 45)

■ Select the item and set

The settings in "Analog" or "Digital"

depend on the broadcaster.



①select ②set

Select "On" (when not using, select Mode "Off").

(Choose the Closed Caption Analog service of Analog broadcasting.)

CC1-4: Information related to pictures (Appears at bottom of screen)

T1-4: Textual information

(Appears over entire screen)

(The Digital Closed Caption Digital menu lets you configure the way you choose to view the digital

 
captioning.)

Select the setting.

• "Primary", "Second.", "Service 3", "Service 4", "Service 5", "Service 6"

- To make more in-depth display settings in digital programs
 - ① Select "Digital setting" and press OK
 - 2 Select the item and set







- Size: Text size Font: Text font
- Style: Text style (Raised, Depressed, etc.)
- Foreground: Color of text Fore. opacity: Opacity of text
- Background: Color of text box
- Back. opacity: Opacity of text box
- Outline: Outline color of text
- (Identify the setting options on the screen.)

■ To reset the settings Select "Reset to defaults" and press OK



Input Labels

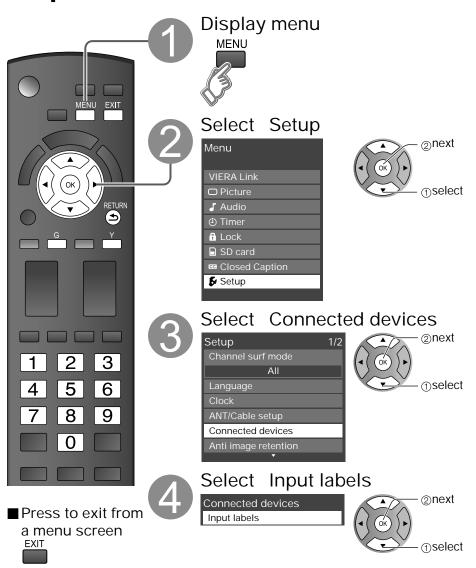


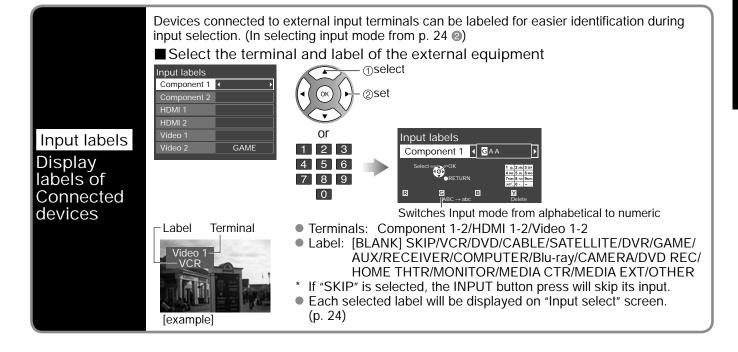

Using Timer

The TV can automatically turn On/Off at the designated date and time.


- The Clock must be set before On time/Off time settings. (p. 17)
- The "Sleep" timer and "On / Off timer" will not work if the "Auto power on" (p. 28) is set.

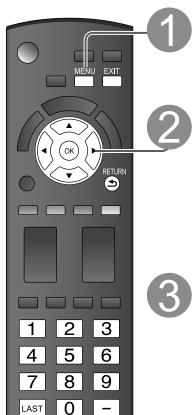


Display menu



 
Select Timer

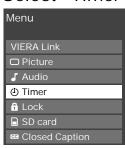



Select the timer to set



 



Turns Off automatically Turns On/Off automatically (5 timers can be set.)

■ Press to exit from a menu screen





■ To set Sleep (Off Timer) Set to shut the unit off after a pre-selected amount of time.





0/30/60/90 (minutes)

 
■ Press to return to the previous screen

> RETURN (\mathbf{D})

EXIT

Note

 
The TV automatically turns Off after 90 minutes when turned On by the Timer. This operation will be cancelled if the Off time is selected or if a key is pressed.













AM/PM

Clear Timer set | Timer setting (On/Off)

Inputs Select the inputs Channel Select the channel


Day Select the day

SUN/MON/TUE/WED/THU/FRI/SAT (displays the nearest future date) MON-FRI/SAT-SUN/DAILY/Every SUN/Every MON/ Every TUE/Every WED/Every THU/Every FRI/ Every SAT

On time The time to turn On Off time The time to turn Off

Recommended AV Connections

These diagrams show our recommendations or how to connect the TV unit to your various equipment. For other connections, consult the instructions for each piece of equipment and its specifications. For additional assistance, please visit our website at: www.panasonic.com

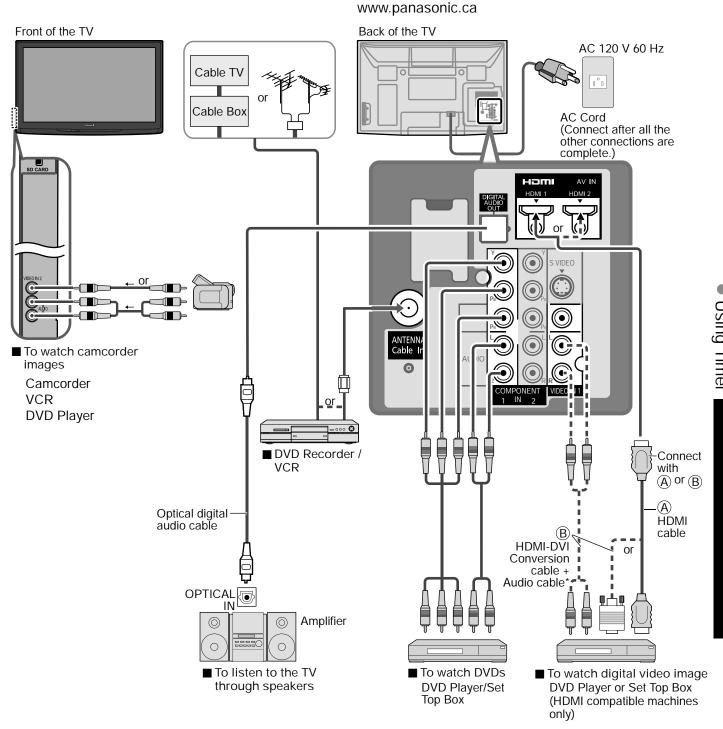

^{*} Please see p. 26-27 for setup when using an external analog audio cable with an HDMI to DVI cable.

Ratings List for Lock

"V-chip" technology enables you to lock channels or shows according to standard ratings set by the entertainment industry. (p. 37)

■ U.S. MOVIE RATINGS (MPAA)

NR	NO RATING (NOT RATED) AND NA (NOT APPLICABLE) PROGRAMS. Movie which has not been rated or where rating does not apply.
G	GENERAL AUDIENCES. All ages admitted.
PG	PARENTAL GUIDANCE SUGGESTED. Some material may not be suitable for children.
PG-13	PARENTS STRONGLY CAUTIONED. Some material may be inappropriate for children under 13.
R	RESTRICTED. Under 17 requires accompanying parent or adult guardian.
NC-17	NO ONE 17 AND UNDER ADMITTED.
Χ	ADULTS ONLY.

■ U.S. TV PROGRAMS RATINGS (U. S. TV)

Age-based Group	Age-based Ratings	Possible Content Selections	Description				
NR (Not Rated)	TV-NR	ViewableBlocked	Not Rated.				
	TV-Y	ViewableBlocked	All children. The themes and elements in this program are specifically designed for a very young audience, including children from ages 2-6.				
Youth	TV-Y7	FV BlockedViewableBlocked	Directed to older children. Themes and elements in this program may include mild physical or comedic violence, or may frighten children under the age of 7.				
	TV-G	ViewableBlocked	General audience. It contains little or no violence, no strong language, and little or no sexual dialogue or situations.				
	TV-PG	D,L,S,V (all selected)Any combination of D, L, S, V	Parental guidance suggested. The program may contain infrequent coarse language, limited violence, some suggestive sexual dialogue and situations.				
Guidance	TV-14	D,L,S,V (all selected)Any combination of D, L, S, V	Parents strongly cautioned. This program may contain sophisticated themes, sexual content, strong language and more intense violence.				
	TV-MA	L,S,V (all selected)Any combination of L, S, V	Mature audiences only. This program may contain mature themes, profane language, graphic violence, and explicit sexual content.				

FV: Fantasy/Cartoon Violence. V: Violence S: Sex L: Offensive Language D: Dialogue with sexual content.

■ CANADIAN ENGLISH RATINGS (C. E. L. R.)

E	Exempt - Exempt programming includes: news, sports, documentaries and other information programming, talk shows, music videos, and variety programming.
С	Programming intended for children under age 8. No offensive language, nudity or sexual content.
C8+	Programming generally considered acceptable for children 8 years and over. No profanity, nudity or sexual content.
G	General programming, suitable for all audiences.
PG	Parental Guidance suggested. Some material may not be suitable for children.
14+	Programming contains themes or content which may not be suitable for viewers under the age of 14. Parents are strongly cautioned to exercise discretion in permitting viewing by pre-teens and early teens.
18+	18+ years old. Programming restricted to adults. Contains constant violence or scenes of extreme violence.

■ CANADIAN FRENCH RATINGS (C. F. L. R.)

E	Exempt - Exempt programming.
G	General - Programming intended for audience of all ages. Contains no violence, or the violence content is minimal or is depicted appropriately.
8 ans+	8+ General - Not recommended for young children. Programming intended for a broad audience but contains light or occasional violence. Adult supervision recommended.
13 ans+	Programming may not be suitable for children under the age of 13 - Contains either a few violent scenes or one or more sufficiently violent scenes to affect them. Adult supervision strongly suggested.
16 ans+	Programming may not be suitable for children under the age of 16 - Contains frequent scenes of violence or intense violence.
18 ans+	Programming restricted to adults. Contains constant violence or scenes of extreme violence.

(Caution)

- The V-Chip system that is used in this set is capable of blocking "NR" programs (non rated, not applicable and none) as per FCC Rules Section15.120(e)(2). If the option of blocking "NR" programs is chosen "unexpected and possibly confusing results may occur, and you may not receive emergency bulletins or any of the following types of programming:"
 - Emergency Bulletins (Such as EAS messages, weather warnings and others)
 - · Locally originated programming · News · Political · Public Service Announcements · Religious · Sports · Weather

 
Technical Information

 
Closed Caption (CC)

- For viewing the CC of digital broadcasting, set the aspect to FULL (If viewing with H-FILL, JUST, ZOOM or 4:3; characters might be cut off).
- The CC can be displayed on the TV if the receiver (such as a set-top box or satellite receiver) has the CC set On using the Component or HDMI connection to the TV.
- If the CC is set to On on both the receiver and TV when the signal is 480i (except for the HDMI connection), the CC may overlap on the TV.
- If a digital program is being output in analog format, the CC data will also be output in analog format.
- If the recorder or output monitor is connected to the TV, the CC needs to be set up on the recorder or output monitor.


Aspect Ratio (FORMAT)

Press the FORMAT button to cycle through the aspect modes. This lets you choose the aspect depending on the format of the received signal and your preference. (p. 20)






 Enlarges the 4:3 image horizontally to the screen's side edges. (Recommended for anamorphic picture)




Stretches to justify the 4:3 image to the four corners of the screen.

 
(Recommended for normal TV broadcast)



 Enlarges the 4:3 image horizontally to the screen's side edges. The side edges of the image are cut off.



 (Note that "Image retention" of the side bar may occur from displaying it for a long time.)



Enlarges the 4:3 image to the entire screen. (Recommended for Letter Box)

- (Note
- 480i (4:3), 480i (16:9), 480p (4:3), 480p (16:9): FULL, JUST, 4:3 or ZOOM
- 1080p / 1080i / 720p:
 FULL, H-FILL, JUST, 4:3 or ZOOM

Zoom adjustments

Vertical image position and size can be adjusted in "ZOOM".

- ① Select "Zoom adjustments" on the "Picture" menu. (p. 26-27)
- 2 V-position: Vertical position adjustment
- ③ V-size: Vertical size adjustment













To reset the aspect ratio



Technical Information

Data format for SD Card browsing

Photo: Still images recorded with digital still cameras compatible with JPEG files of DCF* and EXIF**

standards

Data format: Baseline JPEG (Sub-sampling: 4:4:4, 4:2:2 or 4:2:0)

Max. number of files: 9,999

Image resolution: 160 x 120 to 10,000,000

* DCF (Design rule for camera file system): A Japan Electronics and Information Technology Industries Association's standard


** EXIF (Exchangeable Image File Format)

[Caution]

- A JPEG image modified with a PC may not be displayed.
- Partly degraded files might be displayed at a reduced resolution.

Note

 Folder structure viewed in PC



- The folder and file names may be different depending on the digital camera used.
- For the suitable SD Memory Cards, please confirm the latest information on the following website. http://panasonic.jp/support/global/cs (This site is in English only)

Cautions in handling SD Card:

- Do not remove the card while the unit is accessing data (this can damage card or unit).
- Do not touch the terminals on the back of the card.
- Do not subject the card to high pressure or impact.
- Insert the card in the correct direction (otherwise, card may be damaged).
- Electrical interference, static electricity or erroneous operation may damage the data or card.
- Back up the recorded data at regular intervals in case of deteriorated or damaged data or erratic operation of the unit.
 (Panasonic is not liable for any deterioration or damage of recorded data.)

SD Card warning messages Message Meaning The card is not inserted. No photos The card has no data or this type of data is not supported. Cannot read file The file is broken or unreadable. The TV does not support the format.

(Continued)

VIERA Link™ HDAVI Control™

HDMI connections to some Panasonic equipment allow you to interface automatically. (p. 30)

- This function may not work normally depending on the equipment condition.
- The equipment can be operated by other remote controls with this function on even if TV is in Standby mode.
- Image or sound may not be available for the first few seconds when the playback starts.
- Image or sound may not be available for the first few seconds when Input mode is switched.
- Volume function will be displayed when adjusting the volume of the equipment.
- If you connect the same kind of equipment at once (for example: one DIGA to HDMI 1 / another DIGA to HDMI 2), VIERA Link™ is available for the terminal with the smaller number.
- If you connect equipment that has "HDAVI Control 2 or later" function to the TV with HDMI cable, the sound from DIGITAL AUDIO OUT terminal can be output as multi channel surround.
- "HDAVI Control 4" is the newest standard (current as of December, 2008) for the HDAVI Control compatible equipment.
 This standard is compatible with the conventional HDAVI equipment.

HDMI connection

HDMI (high-definition multimedia interface) allows you to enjoy high-definition digital images and high-quality sound by connecting the TV unit and the devices.

HDMI-compatible equipment (*1) with an HDMI or DVI output terminal, such as a set-top box or a DVD player, can be connected to the HDMI connector using an HDMI compliant (fully wired) cable.

- HDMI is the world's first complete digital consumer AV interface complying with a non-compression standard.
- If the external equipment has only a DVI output, connect to the HDMI terminal via a DVI to HDMI adapter cable (*2).
- When the DVI to HDMI adapter cable is used, connect the audio cable to the audio input terminal.
- Audio settings can be made on the "HDMI 1 in" or "HDMI 2 in" menu screen. (p. 26)
 Applicable audio signal sampling frequencies (L.PCM): 48 kHz, 44.1 kHz, 32 kHz

(*1): The HDMI logo is displayed on an HDMI-compliant device. (*2): Enquire at your local digital equipment retailer shop.

Caution)

- Use with a PC is not assumed.
- All signals are reformatted before being displayed on the screen.
- If the connected device has an aspect adjustment function, set the aspect ratio to "16:9".
- These HDMI connectors are "type A".
- These HDMI connectors are compatible with HDCP (High-Bandwidth Digital Content Protection) copyright protection.
- A device having no digital output terminal may be connected to the input terminal of either "COMPONENT", "S VIDEO", or "VIDEO" to receive analog signals.
- The HDMI input terminal can be used with only the following image signals: 480i, 480p, 720p, 1080i and 1080p. Match the output setting of the digital device.
- For details of the applicable HDMI signals, see below.

DIGITAL AUDIO OUT terminals

You can enjoy your home theater by connecting a Dolby Digital (5.1 channel) decoder and "Multi Channel" amplifier to the DIGITAL AUDIO OUT terminals.

Caution)

- Depending on your DVD player and DVD-Audio software the copyright protection function may operate and disable optical output.
- When an ATSC channel is selected, the output from the DIGITAL AUDIO OUT jack will be Dolby Digital. When an NTSC channel is selected, the output will be PCM.

Picture mode

• Vivid: Provides enhanced picture contrast and sharpness for viewing in a well-lit room.

Standard: Recommended for normal viewing conditions with subdued room lighting.Cinema: For watching movies in a darkened room. It provides a soft, film-like picture.


Custom (Photo): Customizes each item according to your taste.

Photo is displayed in JPEG menu.

Technical Information (Continued)

H size

 Aspect Ratio: 4:3




 The width will be decreased on both sides to reduce noise.

 Aspect Ratio: FULL/JUST(H-FILL/ZOOM)







 The width will be increased on both sides to reduce noise.

 
See pages 26-27 for more information

4:3 side bars

Do not display a picture in 4:3 mode for an extended period, as this can cause "Image retention" to remain on either or both sides of the display field. To reduce the risk of such "Image retention", change the brightness of the side bars.

See pages 28-29 for more information

 The side bar may flash (alternate black/white) depending on the picture. Using Cinema mode will reduce such flashing (See below).



Scrolling bar

Scrolling bar: To prevent "Image retention", scrolls white vertical bar from left to right on a black screen.

- Press any key except the POWER key to return to previous screen.
- You will return to the previous screen if no key operation has been performed for 15 minutes.
 See pages 28-29 for more information





Input signals that can be displayed

* Mark: Applicable input signal for Component (Y, PB, PR) and HDMI

	horizontal frequency (kHz)	vertical frequency (Hz)	COMPONENT	HDMI
525 (480) / 60i	15.73	59.94	*	*
525 (480) /60p	31.47	59.94	*	*
750 (720) /60p	45.00	59.94	*	*
1,125 (1,080) /60i	33.75	59.94	*	*
1,125 (1,080)/60p	67.43	59.94		*
1,125 (1,080)/60p	67.50	60.00		*
1,125(1,080)/24p	26.97	23.98		*
1,125(1,080)/24p	27.00	24.00		*

Note

- Signals other than those shown above may not be displayed properly.
- The above signals are reformatted for optimal viewing on your display.

Care and Cleaning

First unplug the Power cord plug from the wall outlet.

Display panel

Wipe the panel surface gently using only a cleaning cloth or a soft, lint-free cloth.

- If the surface is particularly dirty, soak a soft, lint-free cloth in diluted mild liquid dish soap (1 part mild liquid dish soap diluted by 100 times the amount of water) and then wring the cloth to remove excess liquid. Use this cloth to wipe the surface of the display panel, then wipe it evenly with a dry cloth of the same type until the surface is dry.
- Do not scratch or hit the surface of the panel with fingernails or other hard objects. Furthermore, avoid contact with volatile substances such as insect sprays, solvents, and thinner; otherwise, the quality of the surface may be adversely affected.

Cabinet

If the cabinet becomes dirty, wipe it with a soft, dry cloth.

- If the cabinet is particularly dirty, soak the cloth in a weak mild liquid dish soap and then wring the cloth dry. Use this cloth to wipe the cabinet and then wipe it dry with a dry cloth.
- Do not allow any mild liquid dish soap to come into direct contact with the surface of the Plasma TV.
 If water droplets get inside the unit, operating problems may result.
- Avoid contact with volatile substances such as insect sprays, solvents, and thinner; otherwise, the quality of the cabinet surface
 may be adversely affected or the coating may peel off. Furthermore, do not leave it for long periods in contact with articles made
 from rubber or PVC.

Pedestal

- Cleaning Wipe the surfaces with a soft, dry cloth. If the unit is particularly dirty, clean it using a cloth soaked with water to which a small amount of mild liquid dish soap has been added and then wipe with a dry cloth. Do not use products such as solvents, thinner, or household wax for cleaning, as they can damage the surface coating. (If using a chemically-treated cloth, follow the instructions supplied with the cloth.)
- Do not attach sticky tape or labels, as they can make the surface of the pedestal dirty. Do not allow long-term contact with rubber, vinyl products, or the like. (Doing so will cause deterioration.)

FA

Before requesting service or assistance, please follow these simple guides to resolve the problem. If the problem still persists, please contact your local Panasonic dealer or Panasonic Service Center for assistance. For details (p. 54, 55)

For additional assistance, please contact us via the website at: www.panasonic.com/contactinfo

www.panasonic.ca

White spots or shadow images (noise)





 Check the position, direction, and connection of the antenna.


Interference or frozen digital channels (intermittent sound)



- Change the direction of antenna for digital channels.
- Check "Signal meter" (p. 39).
 If the signal is weak, check the antenna and consult your local dealer.

The remote control does not work

- Are the batteries installed correctly? (p. 8)
- Are the batteries new?

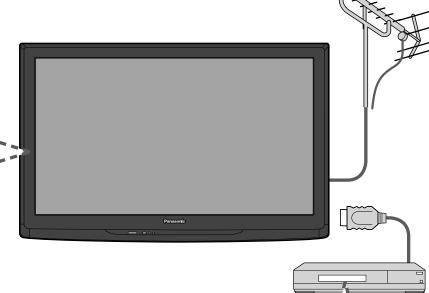



Pictures from external equipment are distorted when the unit is connected via HDMI

- Is the HDMI cable connected properly? (p. 31, 43)
- Turn Off the TV unit and equipment, then turn them On again.
- Check an input signal from the equipment. (p. 48)
- Use equipment compliant with EIA/CEA-861/861B.

When the channel is changed on an STB that is connected with HDMI HDMI may be displayed on the top left of the screen

This is not a malfunction.

Recording does not start immediately

 Check the settings of the recorder. For details, read the manual of the recorder.

s any butto

Problem

Press any button to return moves on the screen

Some spots remain bright or dark

Chaotic image noisy

No image can be displayed

Only spots are displayed instead of images

Neither image nor sound is produced

Black Box appears

No sound is produced

Sound is unusual

Unknown sound heard


- 1- Sounds from TV cabinet
- 2- Whirring sound
- 3- Tick/Click sound
- 4- Buzzing sound

Actions

- The function to prevent "Image retention" is activated. (Not a faulty symptom)
 - The screen saver is activated if the TV unit is not operated for a certain time in SD mode.
 - "Image retention" (p. 7)
- The Plasma panel is made up of a few million pixels and is produced with advanced technology through an intricate process. Sometimes a few pixels may be bright or dark. These pixels do not indicate a defective panel and will have no impact on the performance of the TV.
- Check nearby electrical products (car, motorcycle, fluorescent lamp).
- Check Picture menu (p. 26)
- Check the cable connections. (p. 11-14)
- Check that the correct input has been selected. (p. 24)
- Check the channel settings. (p. 38)
- Check the antenna cables.
- Is the AC power cord plugged into the outlet?
- Is the TV unit turned On?
- Check Picture menu (p. 26) and volume.
- Check the AV cable connections. (p. 11-14)
- Check that the correct input has been selected. (p. 24)
- Change settings of Closed Caption (CC). (p. 40)
- Are the speakers' cables connected correctly? (p. 43)
- Is "Sound Mute" active? (p. 15)
- Is the volume set to the minimum?
- Is "TV speakers" set to "Off"? (p. 26)
- Change "SAP" settings. (p. 19)
- Check "HDMI 1 in" or "HDMI 2 in" settings. (p. 26)
- Set "SAP" setting to "Stereo" or "Mono".
- Check the HDMI device connected to the unit.
- Set the audio setting of the HDMI device to "Linear PCM".
- If digital sound connection has a problem, select analog sound connection.
- 1- Changes in the temperature and humidity of the room may cause the TV's cabinet to expand or contract and produce metallic sounds. This is not a sign of faulty operation or a malfunction.
- 2- The TV may have a cooling fan that makes a soft whir. This is not a sign of faulty operation or a malfunction.
- 3- When the TV is powered on, an electrical component in the TV activates producing a tick/click sound. This is not a sign of faulty operation or a malfunction.
- 4- Electrical circuits are active while the TV set is on. This is not a sign of faulty operation or a malfunction.

Specifications

		TC-P42C1	TC-P50C1						
	er Source	AC 120 V, 60 Hz							
Power Consu	Maximum	283 W	387 W						
Power Consumption	Standby condition	0.3 W	0.3 W						
	Drive method	AC type							
Plasma panel	Aspect Ratio	16:9							
la D	Visible screen size	42 " class (41.6 inches measured diagonally)	50 " class (49.9 inches measured diagonally)						
Display	(W × H × Diagonal) (No. of pixels)	36.2 " × 20.4 " × 41.6 " (921 mm × 518 mm × 1,057 mm)	43.5 " × 24.4 " × 49.9 " (1,106 mm × 622 mm × 1,269 mm)						
	(No. or pixolo)	786,432 (1,024 (W) × 768 (H)) [3,072 × 768 dots]	1,049,088 (1,366 (W) × 768 (H)) [4,098 × 768 dots]						
Sound									
Char (Digi	nnel Capability ital/Analog)	VHF/ UHF: 2 - 69, CATV: 1 - 135							
Opei	rating Conditions	Temperature: 32 °F – 104 °F (0 °C – 40 °C) Humidity: 20 % – 80 % RH (non-condensing)							
C	VIDEO IN 1	VIDEO: RCA PIN Type × 1 1.0 V [p-s-vide] S-VIDEO: Mini DIN 4-pin Y: 1.0 V AUDIO L-R: RCA PIN Type × 2 0.5 V [rm]	$(p-p)(75 \Omega)$ C: 0.286 V [p-p] (75 Ω)						
onnec	VIDEO IN 2	VIDEO: RCA PIN Type × 1 1.0 V [p- AUDIO L-R: RCA PIN Type × 2 0.5 V [rm	p] (75 Ω) ns]						
Connection Terminals	COMPONENT IN 1-2	$\begin{array}{lll} \text{Y:} & 1.0 \text{ V [p-p] (including synchro} \\ \text{PB, PR:} & \pm 0.35 \text{ V [p-p]} \\ \text{AUDIO L-R:} & \text{RCA PIN Type} \times 2 & 0.5 \text{ V [rm]} \end{array}$							
minal	HDMI 1-2	TYPE A Connector × 2 This TV supports "HDAVI Control 4" function.							
S	Card slot	SD CARD slot × 1							
	DIGITAL AUDIO OUT	PCM / Dolby Digital, Fiber Optic							
FEATURES		3D Y/C FILTER CLOSED CAPTION V-Chip Photo Viewer HDAVI Control 4							
Dimensions (W×H×D)	Including pedestal	40.6 " × 28.0 " × 12.9 " (1,029 mm × 709 mm × 327 mm)	48.0 " × 32.4 " × 15.3 " (1,218 mm × 822 mm × 387 mm)						
sions 1 × D)	TV Set only	40.6 " × 26.1 " × 3.8 " (4.2 ") (1,029 mm × 661 mm × 94 mm (106 mm))	48.0 " × 30.3 " × 3.8 " (4.2 ") (1,218 mm × 769 mm × 94 mm (106 mm))						
Mass	Including pedestal	61.8 lb. (28.0 kg)	79.4 lb. (36.0 kg)						
SS	TV Set only	57.4 lb. (26.0 kg)	75.0 lb. (34.0 kg)						

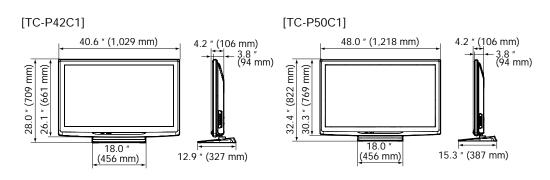

Note

[•] Design and Specifications are subject to change without notice. Mass and Dimensions shown are approximate.

Limited Warranty (for U.S.A. and Puerto Rico only)

PANASONIC CONSUMER ELECTRONICS COMPANY DIVISION OF PANASONIC CORPORATION OF NORTH AMERICA One Panasonic Way Secaucus New ersey 07094

Panasonic Plasma Television Limited Warranty

Limited Warranty Coverage

If your product does not work properly because of a defect in materials or workmanship, Panasonic Consumer Electronics Company (referred to as "the warrantor") will, for the length of the period indicated on the chart below, which starts with the date of original purchase ("Limited Warranty period"), at its option either (a) repair your product with new or refurbished parts, or (b) replace it with a new or a refurbished product. The decision to repair or replace will be made by the warrantor.

PLASMA TV CATEGORIES	PARTS	LABOR	SERVICE
Up to 37' (diagonal)	1 (ONE) YEAR	1 (ONE) YEAR	Carry-In
42" (diagonal) and larger	I (ONE) YEAR	I (ONE) YEAR	On-Site

During the "Labor" Limited Warranty period there will be no charge for labor. During the "Parts" Limited Warranty period, there will be no charge for parts.

You must carry-in your product or arrange for on-site service during the Limited Warranty period. If non-rechargeable batteries are included, they are not warranted. This Limited Warranty only applies to products purchased and serviced in the United States or Puerto Rico. This Limited Warranty is extended only to the original purchaser and only covers product purchased as new. A purchase receipt or other proof of the original purchase date is required for Limited Warranty service.

On-Site or Carry-in Service

For On-Site or Carry-In Service in the United States and Puerto Rico call 1-877-95-VIERA (1-877-958-4372).

On-site service where applicable requires clear, complete and easy access to the product by the authorized servicer and does not include removal or re-installation of an installed product. It is possible that certain on-site repairs will not be completed on-site, but will require that the product or parts of the product, at the servicer's discretion be removed for shop diagnosis and/or repair and then returned.

Limited Warranty Limits And Exclusions

This Limited Warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage, nor does it cover markings or retained images on the glass panel resulting from viewing fixed images (including, among other things, non-expanded standard 4:3 pictures on wide screen TV's, or onscreen data in a stationary and fixed location). The Limited Warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accidents, misuse, abuse, neglect, bug infestation, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, or commercial use (such as in a hotel, office, restaurant, or other business), rental use of the product, service by anyone other than a Factory Service Center or other Authorized Servicer, or damage that is attributable to acts of God.

THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER LIMITED WARRANTY COVERAGE. THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSE UENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF THIS LIMITED WARRANTY. (As examples, this excludes damages for lost time, cost of having someone remove or re-install an installed unit if applicable, or travel to and from the servicer. The items listed are not exclusive, but are for illustration only.) ALL EXPRESS AND IMPLIED WARRANTIES INCLUDING THE LIMITED WARRANTY OF MERCHANTABILITY ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied Limited Warranty lasts, so the exclusions may not apply to you.

This Limited Warranty gives you specific legal rights and you may also have others rights which vary from state to state. If a problem with this product develops during or after the Limited Warranty period, you may contact your dealer or Service Center. If the problem is not handled to your satisfaction, then write to the warrantor's Consumer Affairs Department at the addresses listed for the warrantor.

PARTS AND SERVICE (INCLUDING COST OF AN ON-SITE SERVICE CALL WHERE APPLICABLE) WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY ARE YOUR RESPONSIBILITY.

Customer Services Directory (for U.S.A. and Puerto Rico)

Customer Services Directory (United States and Puerto Rico)

Obtain Product Information and Operating Assistance; locate your nearest Dealer or Service Center; purchase Parts and Accessories; or make Customer Service and Literature requests by visiting our Web Site at:

http://www.panasonic.com/help

or, contact us via the web at:

http://www.panasonic.com/contactinfo

You may also contact us directly at:

1-877-95-VIERA (958-4372)

Monday-Friday 9 am-9 pm; Saturday-Sunday 10 am-7 pm, EST.

■ For hearing or speech impaired TTY users, TTY: 1-877-833-8855

Accessory Purchases (United States and Puerto Rico)

Purchase Parts, Accessories and Instruction Books on line for all Panasonic Products by visiting our Web Site at:

http://www.pstc.panasonic.com

or, send your request by E-mail to:

npcparts us.panasonic.com

You may also contact us directly at:

1-800-332-5368 (Phone) 1-800-237-9080 (Fax Only) (Monday - Friday 9 am to 9 pm, EST.)

Panasonic Service and Technology Company

20421 84th Avenue South.

Kent, WA 98032

(We Accept Visa, MasterCard, Discover Card, American Express, and Personal Checks)

■ For hearing or speech impaired TTY users, TTY: 1-866-605-1277

Limited Warranty (for Canada)

Panasonic Canada Inc.

PANASONIC PRODUCT - LIMITED WARRANTY

Panasonic Canada Inc. warrants this product to be free from defects in material and workmanship and agrees to remedy any such defect for a period as stated below from the date of original purchase.

Plasma TV / Monitor	In-home service	One (1) year parts (including Plasma Panel) and labour.						
LCD TV (42 in. over)	In-home service	One (1) year parts (including LCD Panel) and labour.						

In-home Service will be carried out only to locations accessible by roads and within 50 km of an authorized Panasonic service facility.

LIMITATIONS AND EXCLUSIONS

This warranty does not apply to products purchased outside Canada or to any product which has been improperly installed, subjected to usage for which the product was not designed, misused or abused, damaged during shipping, or which has been altered or repaired in any way that affects the reliability or detracts from the performance, nor does it cover any product which is used commercially. Dry cell batteries are also excluded from coverage under this warranty.

This warranty is extended to the original end user purchaser only. A purchase receipt or other proof of date of original purchase is required before warranty service is performed.

THIS EXPRESS LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESS OR IMPLIED INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT WILL PANASONIC CANADA INC. BE LIABLE FOR ANY SPECIAL INDIRECT OR CONSE UENTIAL DAMAGES.

In certain instances, some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or the exclusion of implied warranties, so the above limitations and exclusions may not be applicable.

In-home service requires clear, complete and easy access to the product by the Authorized Servicentre and does not include removal or re-installation of an installed product. If removal is required to service the product, it will be at the discretion of the Servicentre and in no event will Panasonic Canada Inc. or the Servicentre be liable for any special, indirect or consequential damages.

WARRANTY SERVICE

For product operation and information assistance please contact:


Our Customer Care Centre: 1-800 #: 1-866-330-0014


Email link: www.vieraconcierge.ca


FOR PRODUCT REPAIRS please contact Viera Customer Care Agent using the above contact info.


IF YOU SHIP THE PRODUCT TO A SERVICENTRE

Carefully pack and send prepaid, adequately insured and preferably in the original carton. Include details of the defect claimed, and proof of date of original purchase.

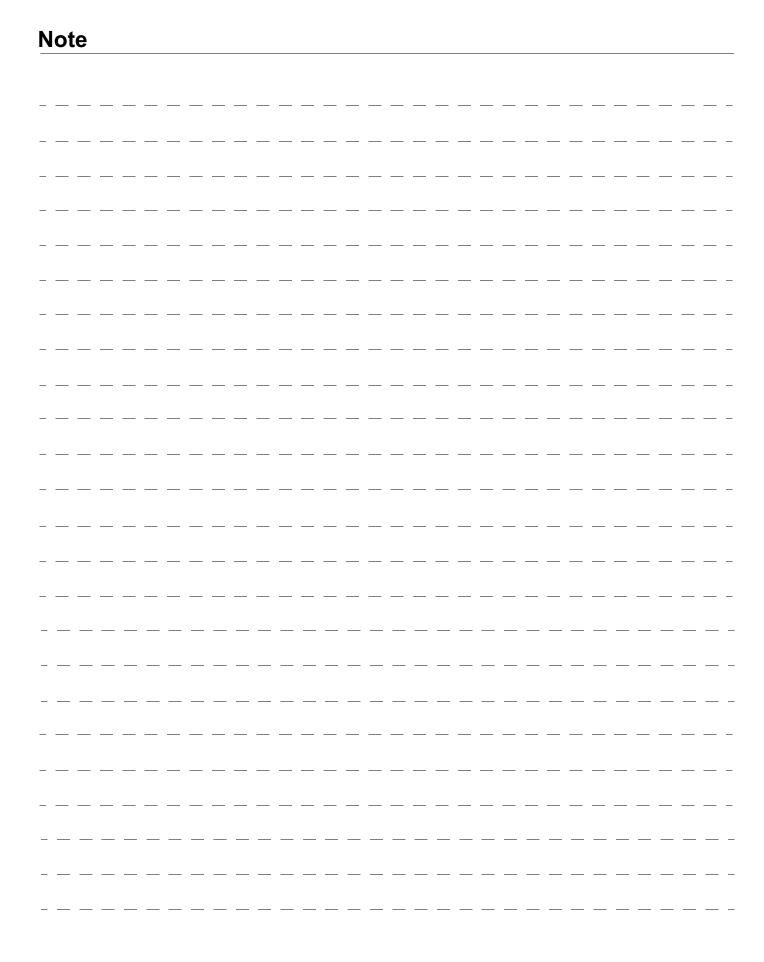

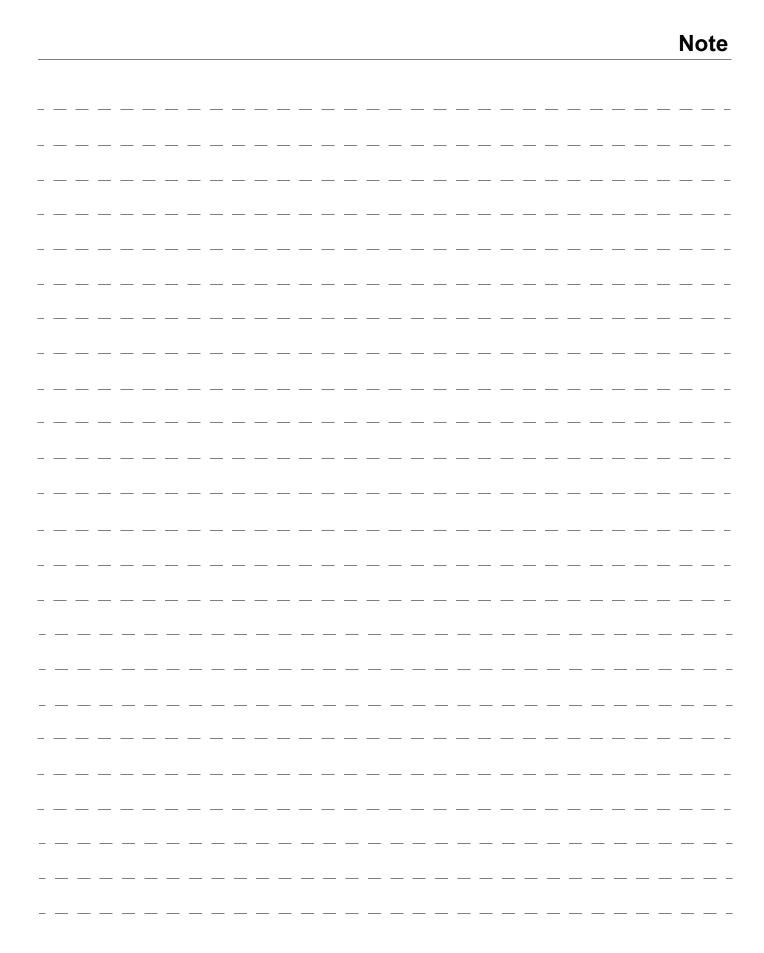

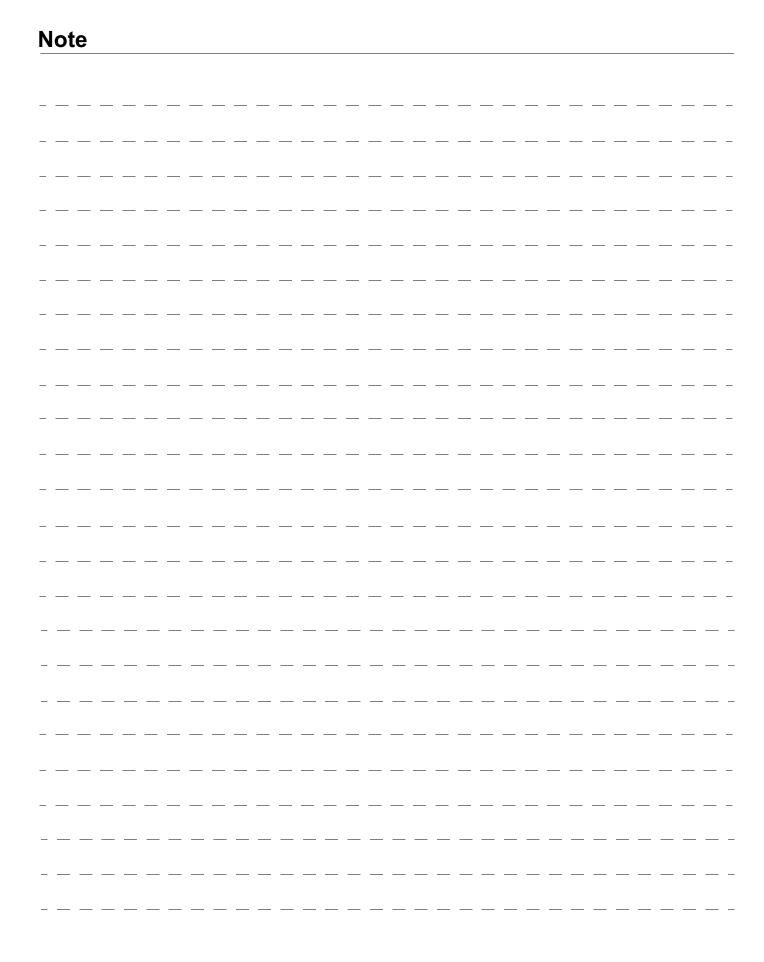

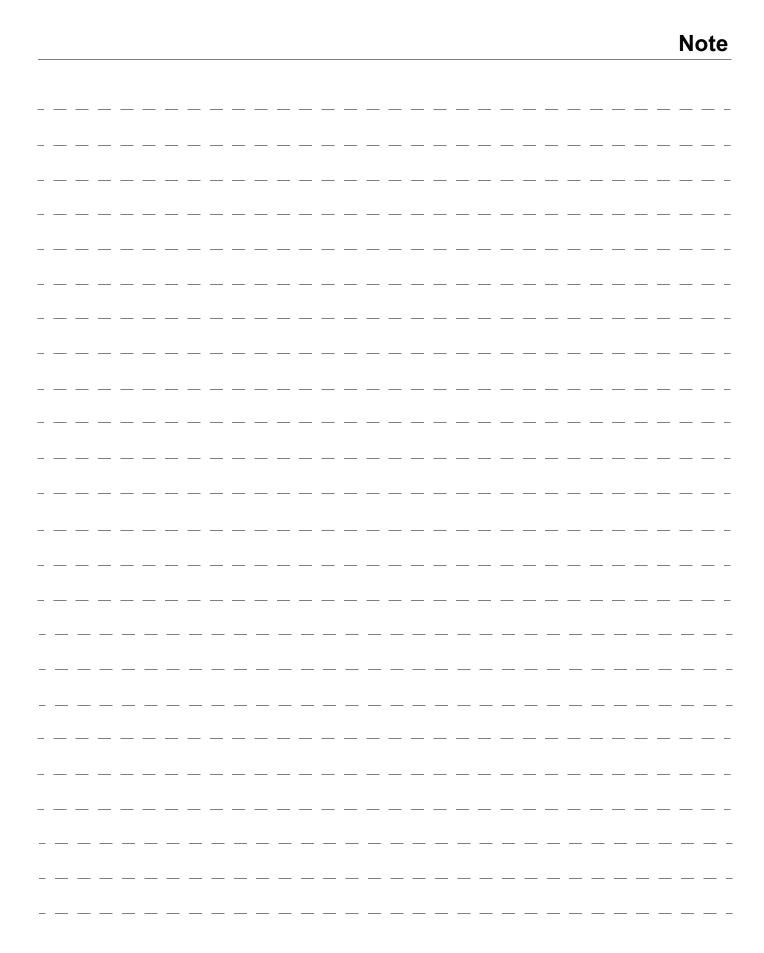

Customer's Record The model number and serial number of this product can be found of the space provided below and retain this book, plus your purchase in identification in the event of theft or loss, and for Warranty Service	eceipt, as a permanent record of your purchase to aid
Model Number	Serial Number
Anotación del cliente	
El modelo y el n mero de serie de este producto se encuentran en provisto a continuaci n y guardar este manual, m s el recibo de su para que le sirva de ayuda al identificarlo en el caso de que le sea s servicios que le ofrece la garant a.	compra, como prueba permanente de su adquisici n,
Modelo	N mero de serie

Panasonic Consumer Electronics Company, Division of Panasonic Corporation of North America One Panasonic Way, Secaucus New Jersey 07094 U.S.A. Panasonic Canada Inc. 5770 Ambler Drive Mississauga, Ontario L4W 2T3 CANADA

^{© 2009} Panasonic Corporation of North America. All Rights Reserved.

^{© 2009} Panasonic Corporation of North America. Todos los Derechos Reservados.

Maintaining the shiny parts

Notice

This unit has some shiny parts. Being shiny, these parts tend to show dust and fingerprints easily. Wiping these parts or rubbing them vigorously with a hard cloth may scratch their surfaces. When cleaning or otherwise maintaining these parts, use the cleaning cloth provided with the unit, and bear in mind the following points.

Maintenance procedure

(1) Regular maintenance

Using a dry cleaning cloth, remove the dust in such a way that the surfaces of the shiny parts will not be scratched.

(2) Removing fingerprints and other dirt

Remove the dust around the dirty areas, and then lightly wipe off the dirty areas.

(3) Maintenance for removing stubborn dirt

Immerse part of a cleaning cloth into water or a neutral detergent diluted a hundred times in water, wring it out thoroughly, and then wipe off the dirt. Lastly, wipe the surfaces clean and dry using the dry parts of the cleaning cloth.

Notice: Please keep these instructions together with the operating instructions of the main unit in a safe place.

CHILD SAFETY: It Makes A Difference How and Where You Use Your Flat Panel Display

Congratulations on your purchase! As you enjoy your new product, please keep these safety tips in mind:



THE ISSUE

- The home theater entertainment experience is a growing trend and larger flat panel displays are popular purchases. However, flat panel displays are not always supported on the proper stands or installed according to the manufacturer's recommendations.
- Flat panel displays that are improperly situated on dressers, bookcases, shelves, desks, speakers, chests or carts may fall over and cause injury.

THIS MANUFACTURER CARES!

 The consumer electronics industry is committed to making home entertainment enjoyable and safe.

TUNE INTO SAFETY

- One size does NOT fit all. Follow the manufacturer's recommendations for the safe installation and use of your flat panel display.
- Carefully read and understand all enclosed instructions for proper use of this product.
- Don't allow children to climb on or play with furniture and television sets.
- Don't place flat panel displays on furniture that can easily be used as steps, such as a chest of drawers.
- Remember that children can become excited while watching a program, especially on a "larger than life" flat panel display. Care should be taken to place or install the display where it cannot be pushed, pulled over, or knocked down.
- Care should be taken to route all cords and cables connected to the flat panel display so that they cannot be pulled or grabbed by curious children.

WALL MOUNTING: IF YOU DECIDE TO WALL MOUNT YOUR FLAT PANEL DISPLAY, ALWAYS:

- Use a mount that has been recommended by the display manufacturer and/or listed by an independent laboratory (such as UL, CSA, ETL).
- Follow all instructions supplied by the display and mount manufacturers.
- If you have any doubts about your ability to safely install your flat panel display, contact your retailer about professional installation.
- Make sure that the wall where you are mounting the display is appropriate.
 Some wall mounts are not designed to be mounted to walls with steel studs or old cinder block construction. If you are unsure, contact a professional installer.
- A minimum of two people are required for installation. Flat panel displays can be heavy.





See back page for important Digital Television Transition Notice

TQD2AA19511A Printed in U.S.A. Impreso en EE.UU. Imprimé aux États-Unis

SEGURIDAD PARA NIÑOS:

Marca una gran diferencia cómo y dónde usa el TV de pantalla plana

¡Felicitaciones por su compra! Mientras disfruta este nuevo producto, no olvide estos consejos de seguridad.



PROBLEMA

- La experiencia de entretenimiento del teatro en casa es una tendencia creciente y la compra de TV de pantalla plana más grande es cada vez más común. Sin embargo, los TV de pantalla plana no siempre se instalan en bases adecuadas ni de acuerdo con las recomendaciones del fabricante.
- Se instalan de forma incorrecta sobre tocadores, estantes, repisas, escritorios, altavoces, cómodas ó carritos que se pueden volcar y provocar lesiones.

PREOCUPACION DEL FABRICANTE

La industria de productos electrónicos para el consumidor está comprometida para que el entretenimiento en el hogar sea una experiencia agradable y segura.

SEGURIDAD

- Un tamaño no sirve para todos. Siga las recomendaciones del fabricante con respecto a la instalación y uso seguro del TV de pantalla plana.
- Lea detenidamente y comprenda las instrucciones adjuntas para el uso adecuado de este producto.
- No permita que los niños se suban al TV ó los muebles ni jueguen con éstos.
- No coloque el TV de pantalla plana sobre muebles que se pueden usar como peldaños, como los cajones de una cómoda.
- Recuerde que los niños se pueden agitar mientras ven un programa, en especial en el TV de pantalla plana "más grande de sus vidas". Se debe tener cuidado al colocar ó instalar el TV en lugares en que se pueda empujar, mover ó botar.
- Se debe procurar enrutar todos los cables conectados al TV de pantalla plana de modo que los niños no puedan jalarlos ni agarrarlos.

MONTAJE EN LA PARED: SI DECIDE MONTAR EN LA PARED EL TV DE PANTALLA PLANA, SIEMPRE:

- Utilice un soporte recomendado por el fabricante del TV ó el que indique un laboratorio independiente (por ejemplo UL, CSA, ETL).
- Siga todas las instrucciones que se proporcionan con el TV y que entregan los fabricantes de soportes para pared.
- Si tiene alguna duda sobre su capacidad para instalar de forma segura el TV de pantalla plana, comuníquese con el vendedor detallista para obtener información sobre una instalación profesional.
- Asegúrese de que la pared en que montará el TV es adecuada para ello. Algunos soportes no fueron diseñados para instalarse en paredes con montantes de acero ó construcción con bloques de concreto. Si no está seguro, comuníquese con un instalador profesional.
- Se requieren dos personas para la instalación, ya que los TV de pantalla plana son pesados.





SÉCURITÉ DES ENFANTS:

L'endroit et la façon dont vous utilisez votre écran plat font une différence

Félicitations pour votre achat! Tout en profitant de votre nouveau produit, veuillez vous rappeler de ces conseils de sécurité:



LE PROBLÈME

- L'attrait du cinéma maison est en croissance constante et les grands écran plats sont des achats populaires. Cependant, les écrans plats ne sont pas toujours installés sur les supports appropriés ou selon les recommandations du fabricant.
- Les écrans plats installés de façon inappropriée sur des commodes, bibliothèques, étagères, bureaux, haut-parleurs, coffres ou chariots peuvent tomber et entraîner des blessures.

COMME FABRICANT, ON SE SOUCIE DE VOTRE SÉCURITÉ!

• L'industrie des appareils électroniques grand public est engagée à faire en sorte que le divertissement cinéma maison soit agréable et sécuritaire.

BRANCHEZ-VOUS EN TOUTE SÉCURITÉ

- Un support à taille unique ne convient pas à tous les écrans. Suivez les recommandations du fabricant pour l'installation et l'utilisation sûres de votre écran plat.
- Lisez attentivement toutes les directives pour l'utilisation appropriée de ce produit et comprenez les bien.
- Ne permettez pas aux enfants de grimper ou de jouer avec les meubles et les téléviseurs.
- Ne placez pas les écrans plats sur des meubles qui peuvent facilement se transformer en marches, comme une commode avec tiroirs.
- Souvenez-vous que les enfants s'excitent souvent en visionnant un programme, surtout sur un grand téléviseur à écran plat. Il faut faire attention d'installer l'écran là où il ne peut pas être poussé, tiré ou basculé.
- Faites attention de placer les fils et les câbles connectés à l'écran plat de façon à ce que des enfants curieux ne puissent pas les tirer ou les accrocher.

INSTALLATION MURALE: SI VOUS DÉCIDEZ DE FIXER VOTRE ÉCRAN PLAT AU MUR, TOUJOURS:

- Utilisez un support recommandé par le fabricant de l'écran et(ou) répertorié par un laboratoire indépendant (comme UL, CSA, ETL).
- Suivez toutes les directives fournies par les fabricants de l'écran et du support mural.
- Si vous n'êtes pas certain de pouvoir installer l'écran plat en toute sécurité, communiquez avec votre détaillant au sujet d'une installation professionnelle.
- Assurez-vous que le mur où vous désirez installer l'écran soit convenable.
 Certains supports muraux ne sont pas conçus pour être fixés sur des murs avec colombage en acier ou sur une construction de bloc de ciment. Si vous n'êtes pas certain, communiquez avec un installateur professionnel.
- Il faut un minimum de deux personnes pour l'installation. Les écrans plats peuvent être lourds.





DIGITAL TELEVISION TRANSITION NOTICE AVISO SOBRE LA TRANSICIÓN A LA TELEVISIÓN DIGITAL AVIS AU SUJET DE LA TRANSITION À LA TÉLÉVISION NUMÉRIQUE

TV WITH TUNER (ENGLISH)

This device contains a digital television tuner, so it should receive digital over the air TV programming, with a suitable antenna, after the end of full-power analog TV broadcasting in the United States (as required by law) on June 12, 2009. Some local television stations may switch sooner. Some older television receivers, if they rely on a TV antenna, will need a TV Converter Box to receive over the air digital programming, but should continue to work as before for other purposes (e.g., for watching low-power and translator TV stations still broadcasting in analog, watching pre-recorded movies, or playing video games). When a Converter Box is used with an older television receiver, a signal splitter might be necessary to continue to receive low-power analog and translator broadcasts via an antenna. For more information, please contact your local television stations, www.DTV.gov, or 1-888-CALL-FCC (TTY 1-888-TELL-FCC). For information on government coupons that may be used toward the purchase of a TV Converter Box, see www.dtv2009.gov, or call the NTIA at 1-888-DTV-2009 (TTY 1-877-530-2634). Please check with your cable or satellite service provider if you have questions about your cable or satellite set-top box.

TV WITHOUT TUNER (ENGLISH)

This video monitor is designed to display television content from a separate TV tuner. Full-power analog TV broadcasting in the United States will end (as required by law) on June 12, 2009. Some local television stations may switch sooner. If this device is used after that date to record or display programming from a product with a TV tuner that relies on a TV antenna, that product would need to contain a digital tuner, or a TV Converter Box would be necessary to tune the digital signal received with a TV antenna. Analog TVs should continue to work as before for other purposes (e.g., for watching low-power and translator TV stations still broadcasting in analog, watching pre-recorded movies, or playing video games). When a Converter Box is used with an older television receiver or directly with this product, a signal splitter might be necessary to continue to receive low-power analog and translator broadcasts via an antenna. For more information, please contact your local television stations, www.btv.gov, or 1-888-CALL-FCC (TTY 1-888-TELL-FCC). For information on government coupons that may be used toward the purchase of at TV Converter Box, see www.dtv2009.gov, or call the NTIA at 1-888-DTV-2009 (TTY 1-877-530-2634). Please check with your cable or satellite service provider if you have questions about your cable or satellite set-top box.

TELEVISIÓN CON SINTONIZADOR (ESPAÑOL)

TELEVISIÓN SIN SINTONIZADOR (ESPAÑOL)


Este monitor de televisión está diseñado para mostrar contenidos desde un sintonizador de T.V. independiente. Las transmisiones de televisión de alta potencia análogas en los Estados Unidos finalizaran (como es requerido por ley) el 12 de Junio de 2009. Algunas estaciones locales de televisión pueden hacer el cambio antes. Si este dispositivo es usado después de esa fecha para grabar ó mostrar programas desde productos con un sintonizador de T.V. que dependen de una antena de T.V., esos productos necesitaran incluir un sintonizador digital, ó una caja convertidora será necesaria para sintonizar los canales de señal digital recibidos con una antena de T.V. Los televisores analógicos deberán continuar funcionando como anteriormente para otros propósitos (por Ej.: para ver programas de estaciones de baja potencia y estaciones traductoras que continuaran transmitiendo señal análoga, ver películas pre-pagadas, o conectadas a video juegos). Cuando una caja convertidora es usada con una televisión más antigua ó directamente con este producto, podría ser necesario el uso de un distribuidor de señal para continuar la recepción de señales de baja potencia análogas vía antena. Para mayor información, favor de contactar a sus estaciones locales de televisión, www.DTV.gov ó 1-888-CALL-FCC (TTY 1-888-TELL-FCC). Para información sobre el programa de cupones del gobierno que pueden ser usados para la compra de una caja convertidora, ver www.dtv2009.gov, ó llamar al teléfono NTIA 1-888-DTV-2009 (TTY 1-877-530-2634). Por favor verifique con su proveedor de servicio de cable ó satélite si tiene alguna pregunta sobre su caja de cable ó satélite.

TELEVISION AVEC SYNTONISATEUR (FRANÇAIS)

Cet appareil comporte un syntonisateur de télévision numérique et devrait donc capter le signal numérique de la radiotélévision, moyennant une antenne adéquate, après la fin de la télédiffusion analogique aérienne aux États-Unis (tel que requis par la loi) le 12 juin 2009. Certaines stations de télévisions locales pourraient faire la transition plus tôt. Certains téléviseurs plus vieux, s'ils utilisent une antenne pour capter le signal de radiotélévision, auront besoin d'un convertisseur télé pour recevoir la diffusion numérique aérienne mais devraient pouvoir être utilisés comme auparavant à d'autres fins (ex. : réception d'émetteurs-relais de télévision et de stations de télévision de faible puissance diffusant encore un signal analogique, visionnement de films préenregistrés ou utilisation de jeux vidéo). Si un convertisseur télé est utilisé sur un vieux téléviseur, il pourrait être nécessaire de recourir à un diviseur de signal afin de pouvoir continuer à capter des émissions analogiques faible puissance et en provenance d'émetteurs-relais de télévision au moyen d'une antenne. Pour de plus amples informations, contactez vos stations de télévision locales, visitez www.dtv.2009.gov, ou communiques avec la NTIA au 1-888-DTV-2009 (ou TTY 1-8877-530-2634). Veuillez communiquer avec votre fournisseur de câblodistribution ou de télévision par satellite pour toute question concernant votre boîtier décodeur pour câble ou télévision satellitaire.

TÉLÉVISION SANS SYNTONISATEUR (FRANÇAIS)

Ce moniteur vidéo est conçu pour afficher un signal de télévision capté par un syntonisateur de télévision séparé. La télédiffusion analogique aérienne pleine puissance prendra fin aux États-Unis (comme l'exige la loi) le 12 juin 2009. Certaines stations de télévisions locales pourraient faire la transition plus tôt. Si cet appareil est utilisé après cette date pour enregistrer ou afficher des émissions de télévision avec un téléviseur captant le signal de radiotélévision au moyen d'une antenne, cet appareil devra alors comporter un syntonisateur de télévision numérique ou encore un convertisseur télé sera nécessaire pour syntoniser le signal numérique capté par l'antenne de télévision. Les téléviseurs analogiques devraient pouvoir être utilisés comme auparavant à d'autres fins (ex. : réception d'émetteurs-relais de télévision et de stations de télévision de faible puissance diffusant encore un signal analogique, visionnement de films préenregistrés ou utilisation de jeux vidéo). Si un convertisseur télé est utilisé sur un vieux téléviseur ou connecté directement à cet appareil, il pourrait être nécessaire de recourir à un diviseur de signal afin de pouvoir continuer à capter des émissions analogiques faible puissance et en provenance d'émetteurs-relais de télévision au moyen d'une antenne. Pour de plus amples informations, contactez vos stations de télévision locales, visitez www.DTV.gov ou appelez au 1-888-CALL-FCC (ou TTY 1-888-TELL-FCC). Pour des renseignements sur le programme de bon offert par le gouvernement pour l'aide à l'achat d'un convertisseur télé, visitez www.dtv2009.gov, ou communiquez avec la NTIA au 1-888-DTV-2009 (ou TTY 1-877-530-2634). Veuillez communiquer avec votre fournisseur de câblodistribution ou de télévision par satellite pour toute question concernant votre boîtier décodeur pour câble ou télévision satellitaire.

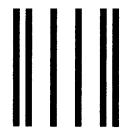

NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES

BUSINESS REPLY MAIL

FIRST-CLASS MAIL PERMIT NO. 81 ARLINGTON HEIGHTS IL

POSTAGE WILL BE PAID BY ADDRESSEE

Panasonic

ATTN: CUSTOMER CARE PLAN
PANASONIC SERVICE AND TECHNOLOGY COMPANY
5201 TOLLVIEW DR FL 2
ROLLING MEADOWS IL 60008-9974



THE

Panasonic

CUSTOMER CARE PLAN

USA ONLY

An extended service plan that assures continued top performance of your electronic product after the factory warranty has expired!

USE THE CONVENIENCE OF OUR TOLL-FREE CUSTOMER CARE PLAN HOTLINE:

1-800-637-2007
RESPOND PROMPTLY AND RECEIVE AN "EARLY BIRD" DISCOUNT!
TOMORROW'S SERVICE AT TODAY'S PRICES!

Panasonie deas for life

THE	CU	STOME	R CA	RE P	LAN	OFFERS	
ALL	ΩF	THESE	OUTS	RTAN	DING	BENEFI	rs:

Labor to complete repairs.
· · · · · · · · · · · · · · · · · · ·
Replacement parts.
Electronic or mechanical adjustments.
Specified internal cleaning.
Required maintenance checks.
No hidden charges or deductibles. Complete
coverage for one low, up-front price.
Coverage is transferable.

Service is performed by our nationwide network of Authorized Service Centers.

ACT NOW:

Just complete the attached postage paid postcard and drop it in the mail. We will contact you promptly with more information about the Customer Care Plan.

OR CALL:

1-800-637-2007

OFFERED AND ADMINISTERED BY:
Customer Care Plan Administration
PANASONIC SERVICE AND TECHNOLOGY COMPANY
5201 TOLLVIEW DR FL 2
ROLLING MEADOWS IL 60008-9974

PRODUCT INFORMATION CARD

Мо	del N	lo.								Date of Purchase					
											/	/			
Se	rial N	lo.	 	 	-1	-	 k	t	 	 					



I would like more information regarding the "Early Bird" discount offer for the manufacturers extended service plan. I understand that you will promptly contact me with more information.

Ŧ	Name Apt Apt							
ease	City		State	Zip A.M				
<u>B</u>	()	Phone		A.M.	P.M.			

Best time to call

10-08

acceptance by our company.

Certain restrictions apply: 1) Offered only in the United States with the exception of Florida: 2) Applications for coverage are subject to final

anasonic

Important! Please complete and return within ten days. You can also register online via the Internet at: http://www.panasonic.com/vieraregister It is not necessary to return this card in order to effectuate the limited warranty.

1.	1. ☐ Mr. 2. ☐ Mrs. First Name	3. Ms. 4. Miss			Q A	AAO1-01 Television
	Street			Apt. No.		
	City		State	ZIP Code		
2.	E-mail Address:					
3.	Telephone number:		14.	Excluding this purchase, what other electron	ics equipmer	nt do you currently
	()	-		own or intend to purchase? (A) If you Currently own	(B) If it's Panasonic or Technics	(C) Intend to buy in next 6 months
4.	Date of purchase: / Month Day	Year		TV/DVD Combination 0 TV/VCR Combination 0	11.	01.
5.	A. Model #: (refer to operating manual or	box)		Projection TV 0	14.	04.
	B. Serial #: (refer to the product)			Digital Camcorder □ 0 Digital Camera □ 0 Digital Satellite System □ 0 DVD Video Player □ 0	17.	07. □ 08. □ 09. □
6.	Name of store where purchased:			DVD Video Recorder (excluding PC DVD) 1	0.	10.
	City	State		Dolby Digital Receiver (AC-3) 1 Home Theater System	3.	13.
	or website address if purchased via	the internet:		Fax Machine □ 1 Home Computer □ 1 Personal Digital Assistant □ 1	6.	16.
7.	Price paid (excluding service contract, shipping and taxes):	.00		/	:0.	20.
8.	Did you purchase or receive an exteryour product?			Your date of birth: Month Year Movidal atoms 1 - Married - 0 - Size	1-	
9.	Yes Is this product: The first TV you've ever purchas: A replacement for another TV? An additional product, already of the An additional product, already of the An additional product, already of the An	own one other TV?		Male Female Age Mal	R and AGE (in ousehold? Child unde e Female	
10.	Where did you first learn about this p 01. ☐ Received as a Gift	08. Magazine Article/Review		1.		yrs.
	02. ☐ In-store Display 03. ☐ Store Advertisement/ Store Flyer/Circular	09. ☐ Catalog 10. ☐ Direct Mail Promotion 11. ☐ Friend/Family Recommendat	tion 18.	Occupation: (check all that apply)	You	yrs. Spouse
	04. ☐ Newspaper Ad 05. ☐ Magazine Ad 06. ☐ TV Advertisement 07. ☐ Radio Advertisement	 12. Salesperson Recommendat 13. Internet 14. Other 	ion	Professional/Technical Upper Management/Executive Middle Management. Sales/Marketing. Clerical/Service Worker		1.
11.	What were the most important factor of this product? (check up to 2 response) O1. Trust in Panasonic		19.	Tradesman/Machine Operator/Laborer Are you or your spouse		6. Spouse
	02.	08. Salesperson's Recommenda 09. Friend/Family Recommenda 10. Online Research 11. Other		A Homemaker?		1.
12.	06. ☐ Appearance/Design What were the most important featur of this product? (check up to 3 respe			In the Military?		5.
13	01. Picture Quality 02. HDTV Monitor 03. Comb Filter 04. Sound Quality 06. Input Jacks Which of the following brands did yo	07. Picture-in-Picture 08. Lighted Remote 09. On-screen Menu 10. Parental Controls 11. Energy Star Rating 12. Other		02. \$15,000-\$19,999 03. \$20,000-\$29,999 04. \$30,000-\$39,999 05. \$40,000-\$49,999 06. \$50,000-\$59,999 13.	income? \$75,000-\$ \$100,000-\$ \$125,000-\$ \$150,000-\$ \$175,000-\$ \$200,000-\$ \$250,000 8	\$124,999 \$149,999 \$174,999 \$199,999 \$249,999
	Panasonic? (check all that apply) 01. Did not consider any other brands	09. ☐ Sampo 10. ☐ Samsung	•	Level of education: (check highest level com 1. Completed High School 3.	<i>npleted)</i> □ Completed	
	02. ☐ Apex 03. ☐ Hitachi 04. ☐ JVC 05. ☐ Mitsubishi 06. ☐ Philips	11. ☐ Sanyo 12. ☐ Sharp 13. ☐ Sony 14. ☐ Sylvania 15. ☐ Toshiba	22.	Completed College Which credit cards do you use regularly? American Express, Diners Club 3. MasterCard, Visa, Discover 4.	School Dept. Store Do not use	
	07. Primps 07. Pioneer 08. RCA	16. Zenith 17. Other		For your primary residence, do you: 1.	Own?	2. 🗆 Rent?
			24.	Which of the following do you plan to do w Get Married	1-6 Mont	
				Have a Baby Buy a House Remodel a Home Move to a New Residence Buy a personal computer Buy/Lease a New Vehicle Buy/Lease a New Vehicle		2.

Please send products and other correspondence to:

Panasonic Consumer Affairs / 2F-3 Panasonic Consumer Electronics Company One Panasonic Way Secaucus, NJ 07094 First-Class
Postage
Required
Post Office will
not deliver
without proper
postage.

QAA01-01

PANASONIC CONSUMER ELECTRONICS COMPANY PO BOX 174287 DENVER CO 80217-4287

Please fold here											
25. Please check all that apply to your household.											
01. Shop by Catalog/Mail	04. Own a Compact Disc Player	08. Subscribe to an	10. 🗌 Own an Apple/Macintosh								
02. Member of Frequent	05. Have a Dog	Online/Internet Service	Computer								
Flyer Program	06. Have a Cat	09. Own an IBM or Compatible	11. 🗌 Own a CD-Rom								
03. Donate to Charitable Causes	07. Own a Cellular Phone	Computer									
26. To help us understand our customers' lifestyles, please indicate the interests and activities in which <i>you</i> or <i>your spouse</i> enjoy participating on a regular basis.											
01. Bicycling	14. Needlework/Knitting/Sewing	27. Health/Natural Foods	40. Real Estate Investments								
02. Golf	15. Flower Gardening	28. Photography	41. Stocks/Bonds/Mutual Funds								
03. Physical Fitness/Exercise	16. Vegetable Gardening	29. Attending Cultural/Arts Events	42. Entering Sweepstakes								
04. Running/Jogging	17. Crafts	30. Fashion Clothing	43. Casino Gambling								
05. Snow Skiing	18. Buy Prerecorded Videos	31. Fine Art/Antiques	44. Science Fiction								
06. Tennis	19. Automotive Work	32. Foreign Travel	45. Wildlife/Environmental Issues								
07. 🗌 Camping/Hiking	20. Electronics	33. Cruise Ship Vacations	46. Dieting/Weight Control								
08. 🗆 Fishing	21. Home Workshop/Do-It-Yourself	34. Travel in USA	47. Science/New Technology								
09. Hunting/Shooting	22. Recreation Vehicles	35. Gourmet Cooking/Fine Foods	48. Self-Improvement								
10. 🗌 Horseback Riding	23. Listen to Records/Tapes/CDs	36. Wines	49. Walking for Health								
11. Powerboating	24. Surf the Internet	37. Coin/Stamp Collecting	50. Watching Sports on TV								
12. 🗌 Sailing	25. Avid Book Reading	38. Collectibles/Collections	51. Home Video Recording								
13. Grandchildren	26. Bible/Devotional Reading	39. 🗆 Our Nation's Heritage	52. Moneymaking Opportunities								
27. Using the numbers in the above list, particles of taking the time to fill out this que mailings and special offers from a number of above. Through this selective program, you please check here if, for some reason, you	estionnaire. Your answers will be used for magnetic fine companies whose products and servic will be able to obtain more information about the prefer not to participate in this opportunity.	narket research studies and reports. They les relate directly to the specific interests, but activities in which you are involved and tunity.	nobbies, and other information indicated								
Please check here if you do not want to rece	eive mailings and offers from Panasonic us	ing your ⊑-maii address . ∟i									

Copyright © 2002 All Rights Reserved.

One Panasonic Way, Secaucus, NJ 07094 TQD2A81701-4

Send any correspondence about our product to:
Panasonic Consumer Affairs / 2F-3, Panasonic Consumer Electronics Company,

Panasonic

Panasonic Product Registration

THREE IMPORTANT REASONS

to register your new purchase immediately:

- 1. Protect Your New Investment
 - Register your new product for insurance purposes in case it is lost or stolen.
- 2. Product Safety Notification
 - Registering your product can help us to contact you in the unlikely event a safety notification is required under the Consumer Product Safety Act.
- 3. Improved Product Development
 - Help us continue to design products that meet your needs.

See details inside...

Send this card by mail or register via the Internet at: http://www.panasonic.com/vieraregister