

VIORE™ TECHNOLOGY & INNOVATION

OPERATING INSTRUCTIONS

10.2" Portable LCD Television with Built-in DVD Player PLCD10V59



AIR (TV)/CABLE MODE SELECTION

The AIR/CABLE menu option is set at the factory to "AIR" to allow reception of over-the-air TV broadcast using the included antenna. If you wish to tune cable television channels, this option must be set to "CABLE". Please refer to page 16 of this owner's manual for the details of this menu.

TV RECEPTION

1. Reception of over-the-air TV broadcast varies with location. Lack of reception of certain stations or interruptions in playback does not indicate a problem with your product but rather a weak received signal. Try repositioning the antenna, moving the unit to another location with better signal or connecting to your cable, satellite or home antenna. If you have recently relocated the TV, please re-scan channels.
2. TV broadcast is not intended to be received in a moving vehicle. For best reception, be sure to use this TV only in a stationary setting.



CONTENTS

Safety Precautions

- Power Supply 1
- Installation 2
- Use and Maintenance 3
- Important Safety Instructions 4-5

User Guidance Information

- Accessories 6
- Names of each part 6-8
- Remote Control 9

Connection

- Power connection 10
- Antenna connection 10
- Input connections 11
- Headphone connection 11

Basic Use

- Powering the LCD TV 12
- Selecting input source 12

Application

- Operating the menu 13
- Customizing the PICTURE Settings 14
- Customizing the FUNCTION Settings 15
- Customizing the TUNING Settings 16
- EPG menu 17
- Closed Caption 17

DVD Operation

- Getting Started 18
- DVD Functions operating instructions 19-22
- Card Reader and USB Playback 23
- DVD system operation 24-25

Cleaning and Maintenance

- Maintenance for disc 26

Maintenance and Service

 
- Troubleshooting 27

Power Supply

Warnings


Do not touch the power plug with wet hands.

- Doing so may result in electric shock.

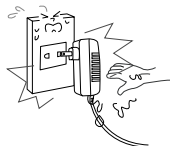


Do not use a damaged power cord or plug or a loose outlet.

 - Doing so may result in fire or electric shock.

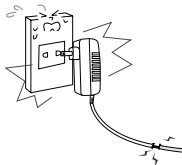

Do not plug several devices into the same outlet.

 - Doing so may cause the outlet to overheat and start a fire.

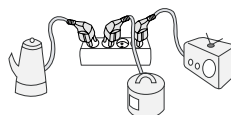

Insert the power plug fully into the outlet.

- A loose or improperly inserted power plug may result in fire.



 
Do not bend the power cord excessively or place heavy objects on it.

- Doing so may result in fire or electric shock.



Be sure to ground the unit.


- Failing to do so may lead to electric shock when a short circuit or overload occurs. If necessary, install a ground fault circuit breaker. Never ground to a telephone line, lighting rod, or metal gas pipe. (Doing so may result in fire, electric shock, or other hazards.)

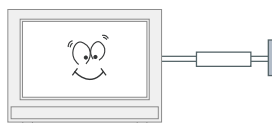

Cautions


When disconnecting the power cord from an AC outlet, always grasp it by the plug.

 - Pulling on the cord can damage the internal wire and may result in fire.

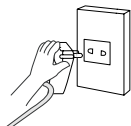

Always unplug the unit before cleaning.

 - Not doing so may result in fire or electric shock.

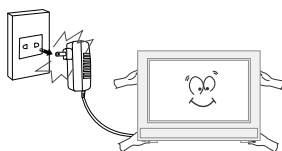

The purpose of these precautions is to ensure user safety and prevent property damage.

Be sure to read and observe all safety precautions.

 


Installation

Warnings

Do not place the unit where it is exposed to rain, excessive moisture or grease.

- Doing so may result in fire electric shock, malfunction, or deformation.

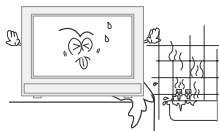

Do not use or store flammable or combustible materials near the unit.

- Doing so may result in fire or explosion.



 
Do not place a burning candle, burning anti-mosquito incense, or lighted cigarette on top of the unit. Do not place the unit near any heat source such as a fireplace or space heater.

- Doing so poses a serious risk of fire.




Do not run power cords near heat-producing appliances such as radiators, stoves, or irons.

- The excessive heat could melt the insulation and expose live wires, resulting in fire or electric shock.

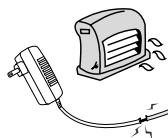

Install the antenna away from high-voltage power lines and communication cables and make sure it is installed securely.

 - If the antenna touches a power line, contact with the antenna could result in fire, electric shock, serious injury, or death.

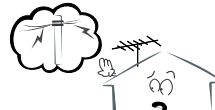

Cautions

Do not cover the unit with a tablecloth, curtain, or other material.

- If the temperature inside the unit rises, it may result in fire.



Warning

Form a drip loop where the coaxial antenna cable enters your building to prevent rainwater from traveling along the cable and coming in contact with the antenna input terminal.

- If rainwater finds its way inside the unit, it may result in fire or electric shock.



- The following precautions are divided into "Warning" and "Caution".

⚠ Warning: Ignoring this precaution may result in death or serious injury.

⚠ Caution: Ignoring this precaution may result in injury or property damage.

Use and Maintenance

Warnings

 
Disconnect the power cord from the wall outlet during an electric storm.

- Not doing so may result in fire or electric shock.



Do not insert any metal objects, such as a screwdriver, paper clip, or A/V terminals..

- Doing so poses a serious risk of fire or electric shock.

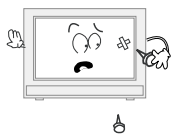

Never disassemble or modify the unit in any way. Do not attempt to service the unit yourself.

 
- Doing so may result in fire or electric shock. If the unit requires repair, contact the service center.



Cautions


When not using the unit for long periods of time, disconnect the power cord from the wall outlet.

- Dust could accumulate over time on the unit and cause it to generate heat and ignite, or deteriorate insulation, which in turn may result in an electrical fire.




When moving the unit, be sure to turn off unit and unplug the power cord from the wall outlet.

 - Moving the unit with the power cord connected to the outlet may cause damage to the cord, resulting in fire or electric shock.

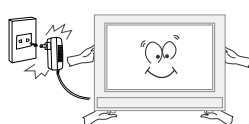

If you notice any unusual odors or smoke around the unit, immediately disconnect the unit from the outlet and contact the service center.

 - Failure to do so may result in fire or electric shock.

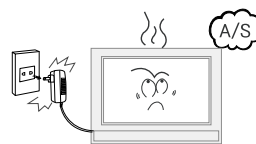

Warning

 
When removing the batteries from the remote control, make sure children do not swallow them. Keep the batteries out of the reach of infants and children.

- If a child has swallowed a battery, seek medical attention immediately.



Wipe off any moisture, dirt, or dust on the power plug pins with a clean dry cloth.

- Failure to do so may result in fire or electric shock.

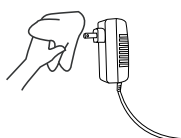

Always turn off the unit and unplug the power cord when cleaning the unit. Use a soft dry cloth to clean the unit.

- Never clean with industrial strength polish, wax, benzene paint thinner, air freshener, lubricant, detergent, or other such chemicals. Also, do not clean with a damp cloth.



As a disconnect device from the MAINS, the MAINS plug of the attached adapter shall remain readily operable.

Important Safety Instructions

Warnings and Precautions

 
To prevent any injuries, the following safety precautions should be observed in the installation, use, servicing and maintenance of this equipment.

Before operating this equipment, please read this manual completely, and keep it nearby for future reference.

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with a dry cloth.
- 7) Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use the attachments/accessories specified by the manufacturer.
- 12) Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, the apparatus does not operate normally, or the apparatus has been dropped.


Important Safety Instructions

- Servicing is required when the apparatus has been damaged in any way. Your TV could require servicing if any of the following occur:
 - Supply cord or plug is damaged
 - Objects have fallen into the apparatus
 - Apparatus has been exposed to rain or moisture
 - Apparatus has been dropped
 - Apparatus does not operate normally

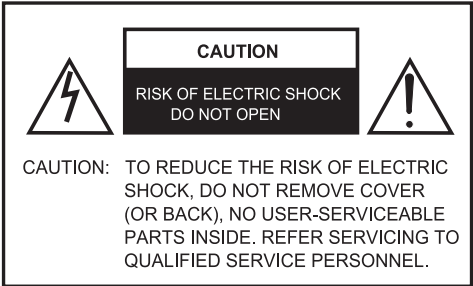


CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK), NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with an arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

5B-En

Apparatus with Class I construction shall be connected to a Main socket outlet with a protective earthing connection.

WARNING

TO PREVENT DAMAGE WHICH MAY RESULT IN FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

Caution :

- These servicing instructions are for use by qualified service personnel only.
To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.
- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



 
This unit complies with America Safety directives.



This unit complies with FCC directives.

Accessories

- The following accessories are included in the package

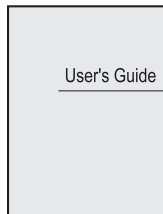

User's Guide



Remote Control



Power adapter



TV antenna



AV connection cable



 
Headphones



Car adapter


Names of each part

Front view

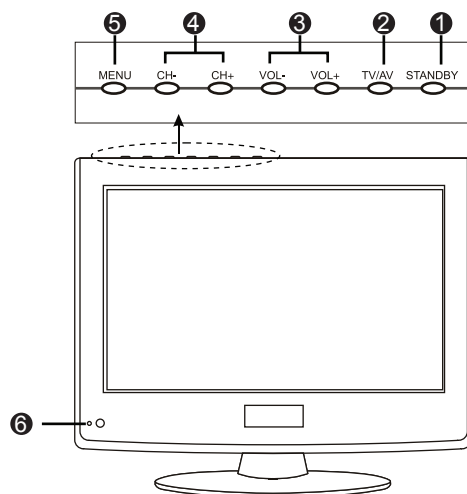

- ① STANDBY —Switch the power on/standby.
- ② TV/AV —Input source select.
- ③ VOL+/- —Volume up/down.
- ④ CH+/- —Channel Program up/down.
- ⑤ MENU —Press to display the OSD menu.
- ⑥ LED indicator and remote control window.
LED Blue – Power ON, LED Red – Standby

 Profile view

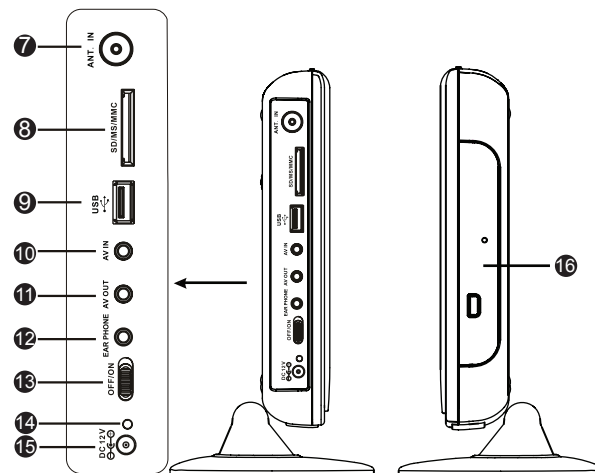


- ⑦ ANT.IN —Connect to antenna.
- ⑧ SD/MS/MMC card reader
- ⑨ USB jack
- ⑩ AV IN —Video & Audio input.
- ⑪ AV OUT —Video & Audio output.
- ⑫ EAR PHONE— Headphone out.
- ⑬ ON/OFF —Power switch:
up—power on, down—power off.
- ⑭ Power led indicator:
Light red—Battery is not full.
- ⑮ DC IN —Connect to DC power supply.
- ⑯ DVD Tray

Names of each part


Disassembly of TV Base

 - Contrarotate the base bolt to release the base of the TV.

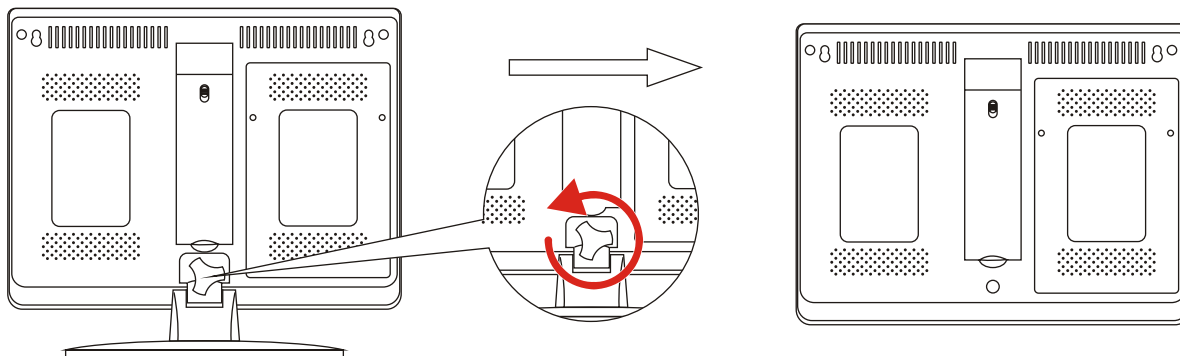


Wall-Hanging

 - Hang the TV on the wall with the slots on the TV back.

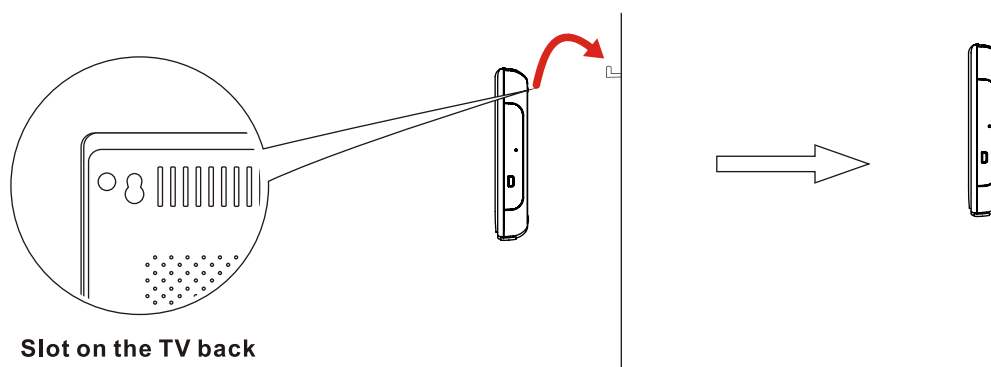

Standing the TV with Bracket

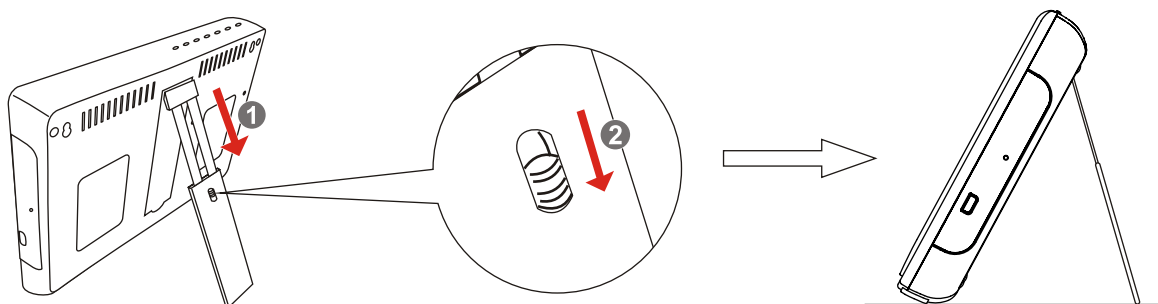 


1 Pull the bracket out.

2 Pull the switch down to lock the bracket.

Inserting Discs

There are two ways to open the disc tray:

 - If the TV is connected with the power and the power switch is ON, you can push the button on the right edge of TV.
- You can insert something slender into the slot to open the disk tray even there is no power supply to the TV.

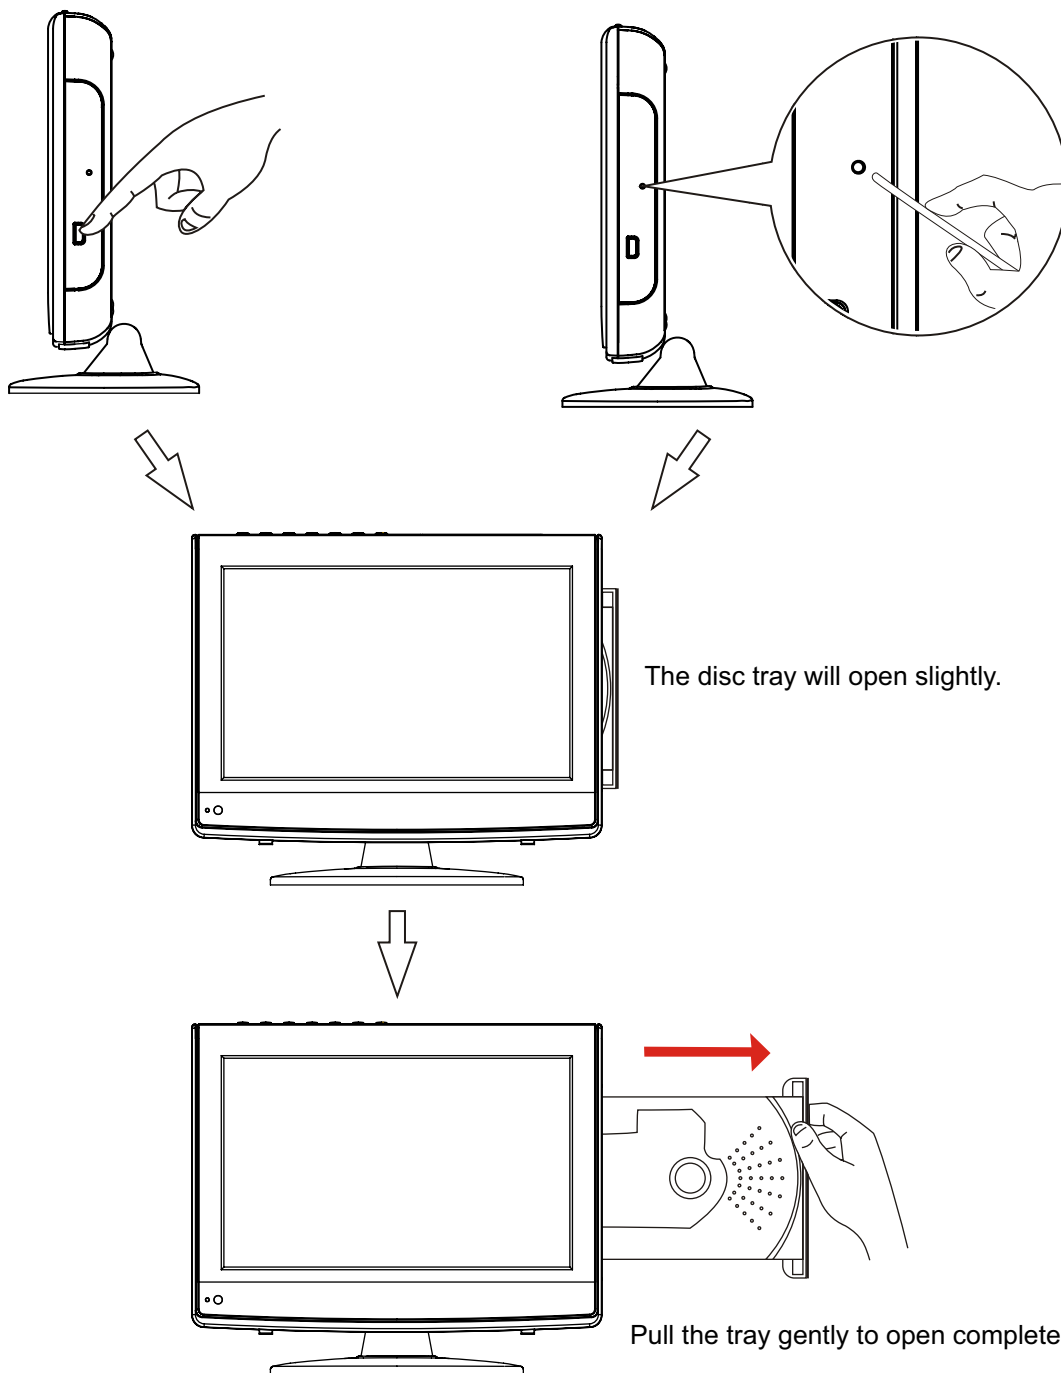

Remote Control

● Function of remote control buttons

The remote control uses infra-Red(IR). Point it towards the front of the LCD TV. The remote control may not work correctly if it is operated out of range or out of angle.



STANDBY : Press to turn the TV on/standby.

TV/AV : Press to display the input source menu.

MUTE : Press to mute the TV, press again or press **VOL+/-** button to unmute.

DISPLAY : Press to display the current program information.

NUMBER buttons and -/-- button:

Choose channel directly.

Press -/-- buttons to select "-", and press a number button to select the channel;

Press -/-- buttons to select "- -", and press two number buttons to select the channel;

Press -/-- buttons to select "- - -", and press three number buttons to select the channel;

: Return to the previous channel viewed.

LANG : Press to display the language select menu.

CC : Closed caption(see page 17).

EPG : To show the Electronic Program Guide during no-menu state only(see page 17).

VOL+/- : Volume up/down.

SLEEP : Timer.

LCD-MENU : Press to display OSD menu.

THUMBSTICK (▲/▼/◀/▶) : Allows you to navigate the on-screen menus and adjust the system settings to your preference.

ENTER : Confirm for source menu.

CH+/- : Channel/program up/down.

Buttons for DVD/Media operation

A-B : Select and play the preferable paragraph of program by pressing this key twice at the beginning and end of it.

SUB : Press to turn on/off the subtitle display.

ANG : Select DVD picture angle.

ZOOM : Press to change the screen display mode.

▶|| : Play/pause. ■ : Stop

SLOW : Slow the playing speed.

DVD SETUP : Press to display the SETUP menu.

◀▶ : Fast reverse/forward.

 
◀▶ : Previous chapter/next chapter.

PROG : Edit the program and play.

INTRO : Intro/scan/9 picture display.

REPEAT : Repeat playing the title or chapter.

GOTO : Play your favorite title/chapter/track.

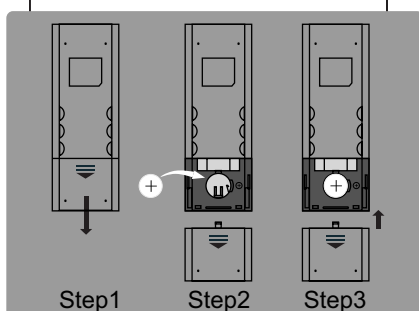

Step1 Step2 Step3

 
Insert a batteries.

Ensure that the polarities(+ and -) of the batteries are aligned correctly.

How to use the remote control

- Check the polarity(+,-) of the batteries in the remote control.
- Check that the batteries have power.
- Check that the LCD TV is powered and that it is properly plugged in.
- Check if any three-wavelength lamp, special fluorescent or neon sign is turned on near the LCD TV.
- The remote control should be operated within 30 feet (7m) and 30° to the left and the right of the IR receiver at the front of the LCD TV.
- Used batteries should be disposed properly.

Power connection

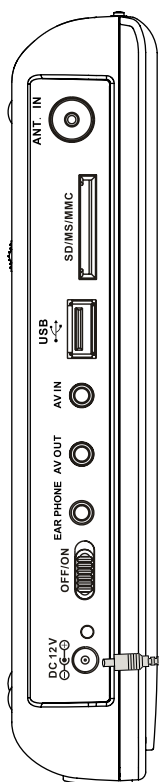


Power Connecting


1. Connect the small round plug on the power adapter cable to the power input socket at the rear of the set.
2. Connect the power adapter to the main supply.

Note:

 This model has a built-in rechargeable Li-ion battery. You can enjoy watching TV for approximately 2 hours using battery power after a full charge. You can charge the battery by connecting the supplied AC adapter. It will take about 3 hours to charge fully.

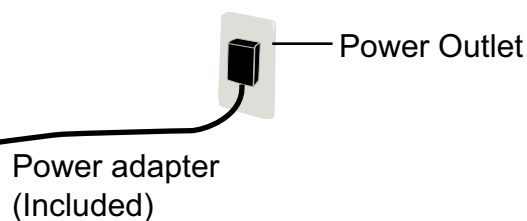

Antenna connection

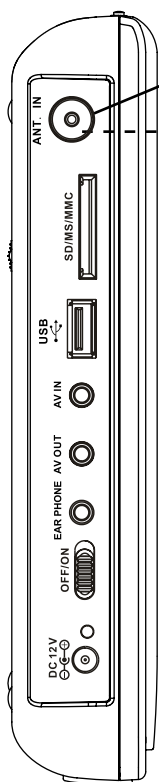 


Analog+Digital 75 Ω

Coaxial(Round)Antenna Cable




 External Antenna

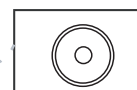

Wall jack with F-Connector

 Input Connections

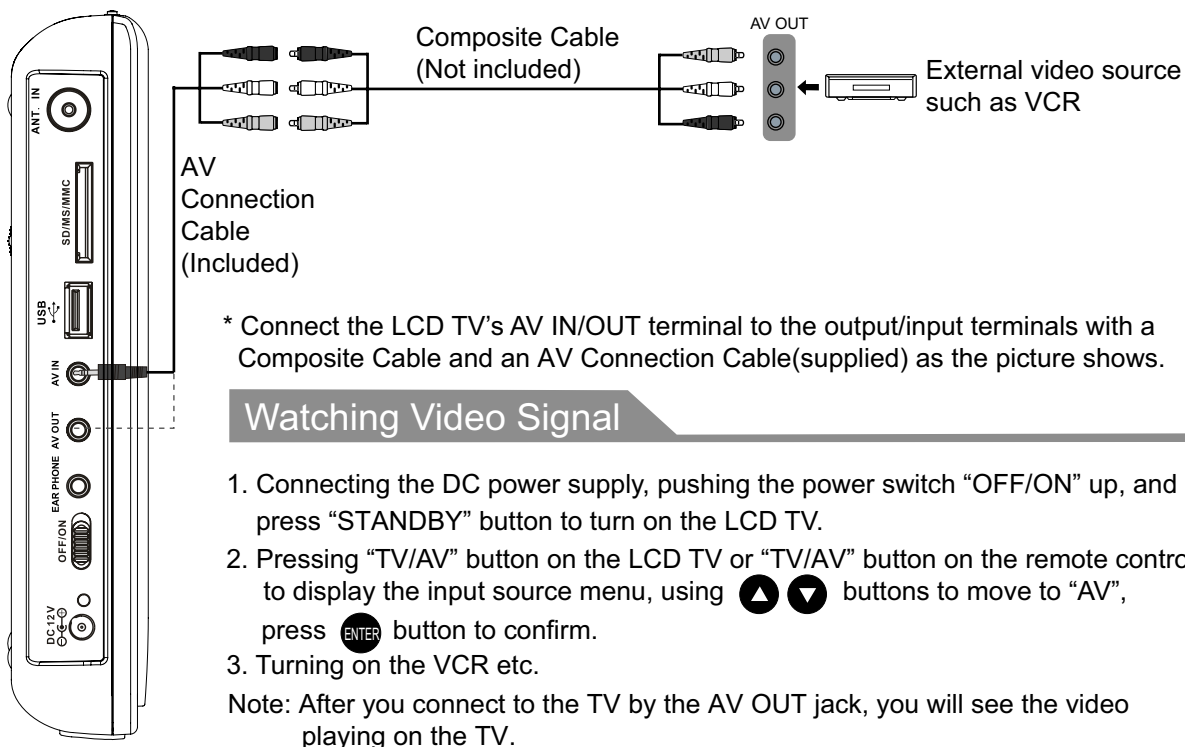


Watching Video Signal


1. Connecting the DC power supply, pushing the power switch "OFF/ON" up, and press "STANDBY" button to turn on the LCD TV.
2. Pressing "TV/AV" button on the LCD TV or "TV/AV" button on the remote control to display the input source menu, using buttons to move to "AV", press button to confirm.
3. Turning on the VCR etc.

Note: After you connect to the TV by the AV OUT jack, you will see the video playing on the TV.

 Headphone Connection

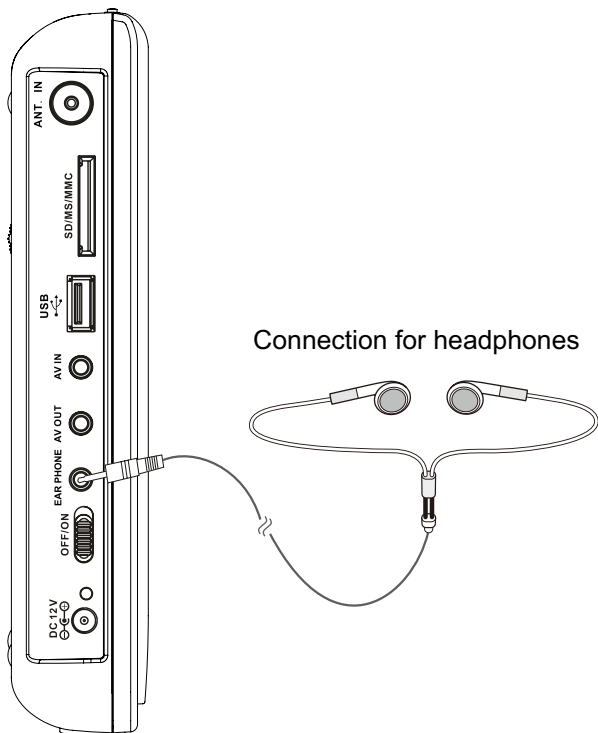



Powering the LCD TV


- To turn on the LCD TV.
Connect the DC power supply. Push the switch up, and then press **STANDBY** on the LCD TV.
- To turn off the LCD TV.
Press the **STANDBY** button on the LCD TV, and push the switch down.
- To turn on/off the LCD TV by remote control
Pressing  button.

Selecting Input Source

- * You can select between the TV signal and the input signal of other equipments connected to the TV.
- * Use this function to switch to the input source you wish to view.

Press  button on the remote control.

Use  to move to the desired input source.

Press  to select.

SOURCE

AV

TV

DTV

DVD

Operating the menu

1. Press **STANDBY** button to turn the LCD TV on.
2. Press **LCD-MENU** button on the remote control; the on-screen menu will appear on the screen.
3. Use **▲** and **▼** buttons to select your main menu option.
4. If you do not have a remote, use the following buttons to select an option from the sub-menu:
 LCD-Menu = menu or exit
 CH+/- = Scroll up and down
 Vol. + = Select

1. TV / DTV menu

Allows you to make adjustments to your picture settings.
 (Select TV/DTV source for example)

MENU	
BRIGHTNESS	50
CONTRAST	50
SATURATION	50
SHARPNESS	0
HUE	0

2. TV / DTV menu

Allows you to setup a variety of setup options.
 (Select TV/DTV source for example)

MENU	
LANGUAGE	ENGLISH
BLUE SCREEN	ON
WIDE SCREEN	16:9
RESET	→

3. TV menu

Allows you to search channels and setup a variety of channel options.
 (Select TV source for example)

MENU	
SKIP	ON
AFC	ON
FINETUNE	87.80MHZ
ANTENNA	AIR
AUTOSEARCH	→

3. DTV menu

Allows you to search channels and setup a variety of channel options.
 (Select DTV source for example)

MENU	
TIMEZONE	SAMOA
DAYLIGHT SAVE	OFF
ANTENNA	AIR
AUTOSEARCH	→

4. Use the **▲** and **▼** buttons to select an option of the sub-menu, and press the **▶** button.
 While in adjustment mode, use the **◀** and **▶** buttons to change the value of the item.
5. Press the **LCD-MENU** button to exit the menu.

Note:

Only when you input the suitable signal, the relevant items can be activated.

Customizing the PICTURE Settings




Press **LCD-MENU** button on the TV set to display the OSD MENU.

The OSD menu includes the following options:

Brightness	Controls the overall brightness of the picture
Contrast	Controls the difference between the brightest and darkest regions of the picture.
Saturation	Controls the saturation of the picture.
Sharpness	Increase this setting to see crisp edges in the picture; decrease it for soft edges.
Hue	Controls the hue(only used in NTSC mode).

 Customizing the FUNCTION Settings

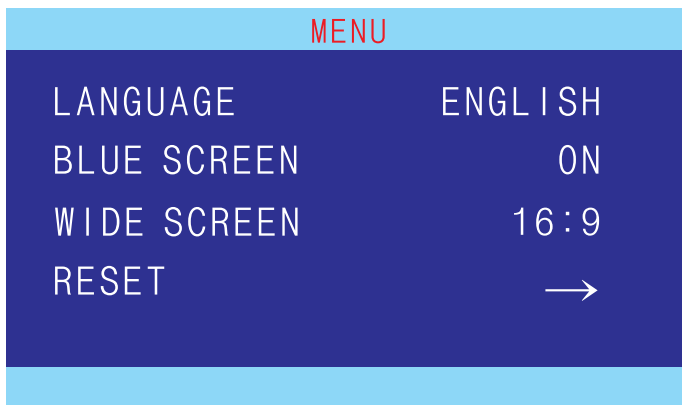

Press **LCD-MENU** button twice on the TV set to display the OSD MENU.

The FUNCTION menu includes the following options:

Language	Select the OSD menu language.
Blue Screen	Turn on/off the blue screen display when there's no signal.
Wide Screen	Control the OSD menu display mode on the screen: 16:9, 4:3.
Reset	Press ► button to reset all the set above.

Customizing the TUNING Settings

Tuning menu in TV mode

MENU	
SKIP	ON
AFC	ON
FINETUNE	87.80MHZ
ANTENNA	AIR
AUTOSEARCH	→

Tuning menu in DTV mode

MENU	
TIMEZONE	SAMOA
DAYLIGHT SAVE	OFF
ANTENNA	AIR
AUTOSEARCH	→

Press **LCD-MENU** button thrice on the TV set to display the OSD MENU.

The TUNING menu includes the following options:

Skip (in TV mode)	Skip the channel when you scan the channels with CH+/- button if you turn on the function.
AFC (in TV mode)	Automatic frequency control, the LCD TV will autosearch the best signal on the appointed frequency if you turn on the function.
Fine Tune (in TV mode)	Fine tune the frequency of the channel. Note: the AFC will be turned off automatically when you start to fine tune.
Time Zone	Select the Time Zone for your TV set according to you area.
Daylight Save	Turn on/off the Daylight Save function.
Antenna	Select the TV source input: AIR, CATV.
Autosearch	Press ► button, the screen will display a cue, and use ◀ and ▶ button to select "YES" or "NO", if you select "YES", and press ENTER button to confirm, it will start to autosearch.

EPG menu

Press **EPG** button on the remote control in DTV mode, the screen will display the Guide menu as below. Press **EPG** button to cancel.

Guide	
SAMPLE CHANNEL	
TIME	EVENT
05:00PM-05:30PM	Smart travels- Pacific Rim with Ruby
05:30PM-06:30PM	Nova
06:30PM-07:30PM	History Detectives
07:30PM-08:30PM	Buffalo's Houses
ABSTRACT	
This country is a natural-born beauty, winning us over with luxuriant landscapes and sleek scandinavian style. We cruise through Samiton's sun-dappled archipelago, visit a designer hotel and	
Page 1 of 5	

Note: The content shown in the picture above is just an example.

Closed Caption

Press **CC** button on the remote control in DTV mode, the screen will display the Closed Caption as below. Press **CC** button to cancel.

CC SETUP	
CC DISPLAY	ON
CC Type	Service 1
CC Mode	Broadcast
CC Customer	▶

CC Display Turn on/off the Closed Caption display.

CC Type Select the Closed Caption service.

CC Mode Select the Closed Caption mode from Broadcast/Customer.

CC Customer Press ▶ button to go to the CC customer menu to custom the CC style.
(Available only when the CC mode is selected to Customer)

CC Customer	
CC Size	Standard
CC Font	Font 0
CC Opacity	Solid
CC Color	White
Edge Color	Black
Edge Type	None
Bkgrd. Color	Black
Bkgrd. Opacity	Solid

Getting Started

1. Select DVD source

- Turn on the LCD TV and press **TV/AV** button to display the input source menu, select **DVD** by **▲/▼** button, and press **OK** button to enter the DVD source.

2. Insert Disc

- Insert the disc according to the instructions on page 8. The screen will display "READ" and the disc contents will be read.

NOTE: When inserting the disc, make sure that the printed side of the disc is facing forward. Inserting discs incorrectly may damage the player.

Supported Disc Formats

Disc Type	Disc Size (Diameter)	Recorded Time	Recorded Content	Remarks
DVD	12cm	Single side:120mins. Approx	DVD format: Compressed digital audio and video	
		Double side:240mins. Approx		
Super VCD	12cm	45mins. Approx	MPEG2 Compressed digital audio and video	Include SVCD
VCD	12cm	74mins. Approx	MPEG1 Compressed digital audio and video	Include: VCD2.0/ VCD1.1 VCD1.0/ DVCD
CD	12cm	74mins. Approx	CD-DA: Digital audio	
HD-CD	12cm	74mins. Approx	HD-DA: Digital audio	
MP3/JPEG	12cm	600mins. Approx	Digital audio	

Note 1: Playback of DVD-R/RW, DVD+/RW, CD-R, and CD-RW discs is also supported. Playback of all writeable/re-writeable discs cannot be guaranteed due to variations in media quality, burner hardware and software quality and speed beyond the manufacturer's control. Failure to play certain discs is not an indication of a problem with your player.

Note 2: The TV support the mp3 files with the Bit Rate between 32K and 320Kbps.

Note 3: The TV support the JPG files up to 14592 x 12888pixel or 179 Mega-pixel. And it will take a lot of time to read the files when it is larger than 5M.



WARNING! DO NOT INSERT OR PLAY 8CM DISC, THEY WILL GET STUCK.

Region Code 1

As it is usual for DVD movies to be released at different times in different regions of the world, all players have region codes and discs can have an optional region code. If you load a disc of a different region code into your player you will see the region code notice on the screen. The disc will not playback and should be unloaded. The region code for this player is 1(refer to the symbols below).



3. Play the DVD

- After the disc has been read, the title menu will be displayed. Select "PLAY" to commence playback. The **▶||** button may be used to toggle between PLAY and PAUSE modes.

DVD Functions operating instructions

1. Menu playback (for DVD/ super VCD and VCD 2.0 discs)

- Press MENU button
- For DVD discs, the screen will display the DVD Disc Menu (Root Menu)
- For Super VCD & VCD2.0 discs, the screen will display the Super VCD, VCD2.0 Disc Menu (PBC: [OFF])(Press the MENU button to display the PBC status).
- Playback the Super VCD & VCD2.0 discs, the default PBC status is ON.
- For DVD discs, use the navigation buttons to select and Play the highlighted contents; For Super VCD & VCD2.0 discs, use the numeric buttons to play your favorite content directly.
- NOTE:** PBC should be OFF.
- Press **ENTER** or **▶II** button to start from the highlighted content.
- Return to the Root Menu when playing the disc
- For DVD discs, press MENU to display the Disc Menu.
- For Super VCD & VCD2.0 discs, when PBC is ON, press MENU to display the Disc Menu.
- STOP
- Press **■** button once to stop. Press **▶II** button to resume from where you stopped.
- Press **■** button twice to stop. Press **▶II** button to start from beginning.
- In order to protect the disc, press **■** button then press EJECT button to take the disc out. When the disc is ejected, hold the disc edge slightly and take it from the eject direction to prevent scratches.
- When not using the DVD function (in stand-by mode or using other modes for a long time), please take out the disc to protect the DVD loader and the disc.

2. Title playback (for DVD disc only)

- Press **TITLE** button. The screen will show "TITLE".
- Press the direction or numeric buttons to select your favorite title.
- Playback will commence from the first chapter of the selected title.

3. Sequential playback (for DVD/ Super VCD/ VCD/ CD/ CD-G/HD-CD and Mp3/ JPEG discs)

- For Super VCD & VCD discs, if PBC is "ON" status, press **▶II** button will enter the disc menu. Press **MENU** button to turn PBC OFF. Press **▶II** button to start in sequent. For others, while it stopped, press **▶II** button to start in sequent.

4. Program playback (for DVD/ Super VCD/ VCD/ CD/ CD-G/HD-CD and Mp3/ JPEG discs)

- Using Program playback, you can select max. 16 tracks from the disc to playback in programmed order.
- OSD for program playback as below.

DVD/ MP3/JPEG discs

PROG							
T	C	T	C	T	C	T	C
1---	---	5---	---	9---	---	13---	---
2---	---	6---	---	10---	---	14---	---
3---	---	7---	---	11---	---	15---	---
4---	---	8---	---	12---	---	16---	---
PLAY				CLEAR			

Super VCD/ VCD/ CD /CD-G/ HD-CD discs

PROG							
1----		5----		9----		12----	
2----		6----		10----		14----	
3----		7----		11----		15----	
4----		8----		13----		16----	
PLAY				CLEAR			

- If it is in PBC ON status, using program playback will turn to PBC OFF automatically.
- According to the highlight area input the title and chapter number by numeric buttons, press **▶II** button to start; or move to the <PLAY> by navigation buttons, press **ENTER** button to start.
- While playing the program, you may press **PROGRAM** button to display the program menu for edit. To clear the program by moving to <CLEAR> and press **ENTER** button. Or press **■** button to end the program. When press **▶II** button again, the disc will play by sequent.
- While playing the program, there will have an on screen indication "PRG PLAY" and the current title and chapter number.

DVD Functions operating instructions

5. Play (for DVD/ Super VCD/ VCD/ CD/ CD-G/HD-CD and Mp3/ JPEG discs)

- For DVD disc, press **▶** button from root or title menu; while playing the DVD, you may play your favorite title directly with title selection by pressing the **TITLE** button.
- For Super VCD & VCD discs, while playing the disc, you may play your favorite tracks by numeric buttons.
(NOTE: When using the Program playback or when it is PCB ON status, you can only use ◀◀ or ▶▶ buttons to change the track)
- For CD, CD-G & HD-CD discs, while playing the disc, you may play your favorite tracks by numeric buttons.
- For MP3 / JPEG disc, you may play your favorite tracks by numeric buttons from the content menu.
- If input track number is not valid, it will not function.

NOTE: From track 1-10, use numeric buttons directly; For tracks over 10, press - / -- button first. (E.g. Track 15, press - / -- then 5)

6. Previous/Next (for DVD/ Super VCD/ VCD/ CD/ CD-G/HD-CD and Mp3/ JPEG discs)

- While playing the disc;
 - Press **◀◀** button to play to the last Title / Chapter / track.
 - Press **▶▶** button to play to the next Title / Chapter / track
- For super VCD & VCD discs, in PBC OFF status;
 - If the current track is the first one, press **◀◀** button will stop the playback.
 - If the current track is the last one, press **▶▶** button will stop the playback.
- For DVD discs, the above functions may vary due to different DVD disc's structure.

7. Forward/ Backward (for DVD/ Super VCD/ VCD/ CD/ CD-G/HD-CD and Mp3/ JPEG discs)

- While playing the disc, you may use forward or backward function.
- There are 4 speeds for forward. Press **▶▶** button to toggle between different speeds in sequent. (FORWARDx2 / FORWARDx4 / FORWARDx8 / FORWARDx20 / Play).
- While in backward, you may press **▶** to resume normal speed.
- For CD, HD-CD, MP3, backward also has audio output.
- For DVD discs, if backward to first title / chapter, it will start from the beginning.
- For Super VCD & VCD discs, in PBC ON status, if backward to the first track, it will start from the beginning.

NOTE: During Forward or Backward, the sound will be off.

8. Slow motion(for DVD/ Super VCD/ VCDdiscs)

- While playing the disc, you may use slow motion function.
- There are 6 speeds for slow motion. Press **▶** button to toggle between different speeds in sequent. (SF1/2, SF1/3, SF1/4, SF1/5, SF1/6, SF1/7, Play).
- While in slow motion, you may press **▶** to resume normal speed.

NOTE: During Slow motion, the sound will be off.

9. Pause (for DVD/ Super VCD/ VCD/ CD/ CD-G/HD-CD and Mp3/ JPEG discs)

- FOR CD, CD-G, HD-CD & MP3/JPEG discs, press **▶** button to pause; press **▶** button to resume.
- FOR DVD, Super VCD, VCD discs, press **▶** button to pause; press **STEP** button to playback frame by frame; press **▶** button to resume.

 
10. Repeat (for DVD/ Super VCD/ VCD/ CD/ CD-G/HD-CD and Mp3/ JPEG discs)

- Press **REPEAT** button once to display the current repeat mode.
- For Super VCD, VCD, CD, CD-G, HD-CD, discs, while playing in sequent, you may use the repeat playback. There are 2 repeat modes, press REPEAT to toggle between different modes in sequent. (REPEAT (OFF)/ REPEAT (1)/REPEAT (ALL)).
- For DVD discs, you may setup the repeat playback mode. There are 2 repeat modes, press REPEAT to toggle between different modes in sequent. (REP: (OFF) / REP: (CHAPTER) / REP: (TITLE) / REP: (ALL)).
- For MP3 / JPEG discs, while playing the disc, you may use the repeat playback. There are 3 repeat modes, press **REPEAT** to toggle between different modes in sequent. (REPEAT (OFF) / REPEAT (1) / REPEAT (DIR) / REPEAT (ALL)).


DVD Functions operating instructions

11. Display (for DVD/ Super VCD/ VCD/ CD/ CD-G/HD-CD and Mp3/ JPEG discs)

- Press **DISPLAY** button to activate the on screen roll-down menu for the current Title, Chapter, time and other information
- For DVD discs, (2 pages) Press **DISPLAY** button once to display first page as shown below:

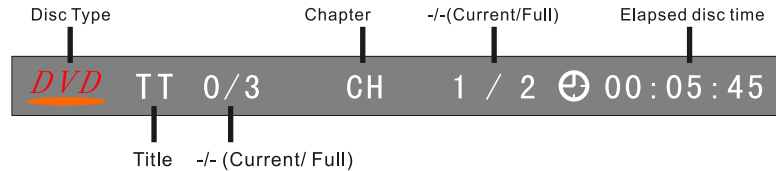

 Press **DISPLAY** button again to display second pages shown below:

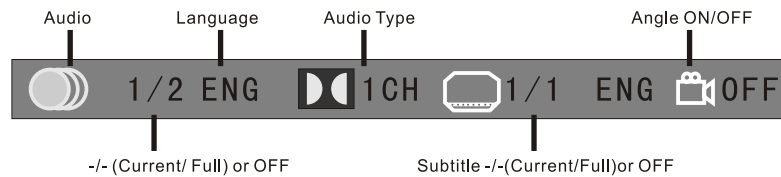

- For Super VCD discs, (2 pages), Press **DISPLAY** button once to display first page: Disc type, Track --(Current / Full), Mute status, PBC status, Repeat mode status, Current track time. Press **DISPLAY** button again to display second page: Audio/--(Current/Full) or OFF, Audio type, Language, Subtitle/--(Current/Full) or OFF. Press **DISPLAY** button again to turn off the on screen display.
- For CD, CD-G, HD-CD, MP3 / JPEG discs, Press **DISPLAY** button once to display first page: Disc type, Track --(Current / Full), Mute status, Repeat mode status, Current track time.
- Press **DISPLAY** button again to turn off the on screen display.

12. Goto (for DVD/ Super VCD/ VCD/ CD/ CD-G/HD-CD and Mp3/ JPEG discs)

- This function allows you to play your favorite Title / Chapter / track. Press **GOTO** button to activate the on screen scroll-down menu for edit. According to the highlighted area, input your favorite Title / chapter / Track number by numeric buttons or input the playback time. After editing, press **ENTER** to start. If the input is invalid, it will not function.

NOTE: While editing, the **GOTO** button is not function.

- If it is in PBC ON status, this function will switch it to OFF.

13. PREVIEW (for DVD/ Super VCD/ VCD/ CD/ CD-G/HD-CD and Mp3/ JPEG discs)

- For Super VCD & VCD discs, while the disc had stopped, press **PREVIEW** button.
 - The screen will split to 9 small displays to play each track by 3 sec. according to the tracks order.
 - If it is in PCB ON status, this function will switch it to OFF.
 - Press **◀▶** button to navigate the 9 small screens.
 - Press **▶** button to playback the current selection.
 - Press 1 - 9 button to activate corresponding small screen directly.
 - For CD, CD-G, DTC-CD, HD-CD discs, while the disc had stopped, press **PREVIEW** button. It will start to play each track by 15 sec. according to the tracks order.
 - Press numeric buttons directly to select the tracks for preview
 - Press **▶** button to playback the current track
 - While playing the discs, you may also press **PREVIEW** button to activate this function.
- NOTE: - If started the disc menu, preview will not function.
- if the current track started over 15 sec. this function will start from next track.

14. AUDIO (for DVD/ Super VCD/ VCD/ CD/ CD-G/HD-CD and Mp3/ JPEG discs)

- Press **AUDIO** button once to display current audio mode.
- Press again to toggle between different audio modes in sequent.
 - For Super VCD & VCD discs: (Stereo - L - R - Auto L - Auto R)

DVD Functions operating instructions

- For CD, CD-G, HD-CD, MP3 discs: (Stereo - L - R)

Note: Switching to Auto L / R audio channel may be varied due to different discs contents. Bilingual VCD discs can use **AUDIO** button to switch between different languages.

15. Language (for DVD and Super VCD discs)

- Press **AUDIO** button once to display current language.
- Press again to toggle between different languages mode in sequent.

NOTE: For Multi-languages DVD & Super VCD discs, press **AUDIO** button to select your favorite language.

16. Subtitle (for DVD and Super VCD discs)

- Press **SUBTITLE** button once to display current sub-title.
- Press again to toggle between different subtitle modes in sequent.

NOTE: For Multi-languages subtitle DVD & Super VCD discs, press **SUBTITLE** button to select your favorite subtitle language.

17. Angle (for DVD disc)

- Press **ANGLE** button once to display current playback angle.
- Press again to toggle between different playback angle codes in sequent. (E.g. Angle -/- (Current/Full) or OFF)

NOTE: Only for DVD with multi-angle, press **ANGLE** button to select your favorite playback angle. Selectable playback angle depends on the availability of the DVD contents.

18. Mute (for DVD/ Super VCD/ VCD/ CD/ CD-G/HD-CD and Mp3/ JPEG discs)

- Press **MUTE** button to mute the audio output. There will have an on screen symbol indicate "MUTE".
- Press again to cancel, or Press **VOL +** to cancel and adjust the volume.
- In case there is no audio output, try to press **MUTE** button to cancel mute.

19. ZOOM (for DVD/ Super VCD/ VCD / Mp3 and JPEG discs)

- Press **ZOOM** button to zoom in the picture.
- There are 6 zoom modes, press **ZOOM** button to toggle between different zoom modes in sequent. (Zoom2 - Zoom3 - Zoom4 - Zoom1/2 - Zoom1/3 - Zoom1/4 - Zoom OFF)
- In Zoom2-4, you may use the navigation buttons to pan the picture for your favorite portion.

20. Repeat A- B (for DVD/ Super VCD/ VCD/ CD/ CD-G/HD-CD and Mp3/ JPEG discsB)

- In normal Playback, fast forward or fast reverse, press **A-B** button at where you want to start the repeat portion. There will have an on screen indication "REPEAT A".
- In normal Playback, fast forward or fast reverse, press **A-B** button again at where you want to stop the repeat portion. There will have an on screen indication "REPEAT A B".
- The repeat function started to playback the portion from A to B automatically.
- Press **A-B** button again to cancel. There will have an on screen indication "A B CANCEL".
 - For Super VCD, VCD & CD discs, repeat A-B is only function within the same track. When playing the others, repeat A-B will cancel automatically.
 - For Super DVD discs, repeat A-B is only function within the same Title /Chapter. When playing the others, repeat A-B will cancel automatically.

 
21. Volume (for DVD/ Super VCD/ VCD/ CD/ CD-G/HD-CD and Mp3/ JPEG discs)

- Press - **VOL** / **VOL +** buttons to adjust the output volume.


Card Reader and USB Playback

- The following files formats **are supported** by this TV: JPG, MP3, WMA, MP4 (DivX3.11-5.11, Xvid), MPEG1 (DAT, MPG, MPEG), MPEG2 (mpeg, mpg).
- File formats including the following **are not supported** by this TV: BMP, PNG, AAC, DivX 6, DivX HD, Vob, ts.
- The following cards are supported by this TV: SD, MMC, Memory Stick (MS).
- Only full-size card formats are supported. If you wish to use compact formats such as miniSD, microSD, Memory Stick Duo etc., please be sure to use an adapter to convert to the full-size format.

1) Insert your USB device or card.

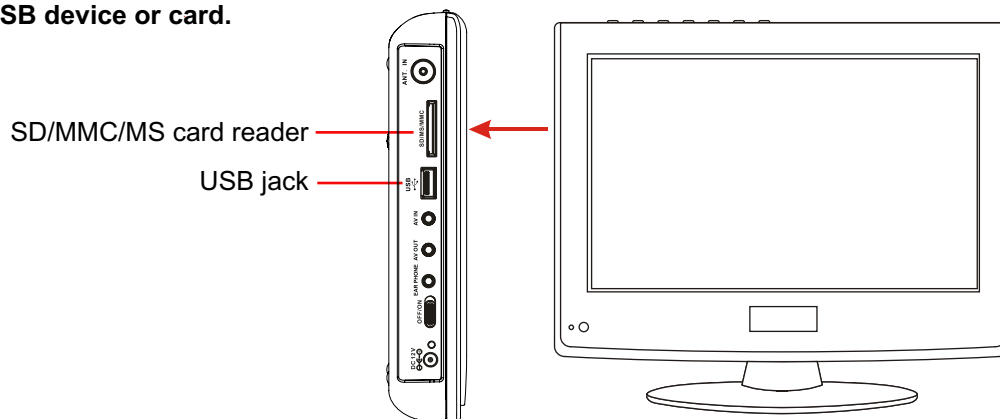

 - 2) Press the **TV/AV** button until DVD mode is selected. The contents of your memory device are automatically displayed.
- 3) If the contents of your memory device are not automatically displayed, press the **DVD-SETUP** button on the remote control to display the DVD setup menu as below.

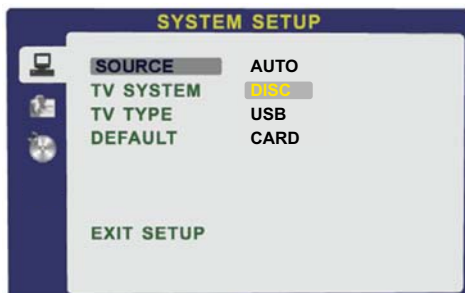

- ▶ Select **SYSTEM SETUP** using **▲▼** and press **OK** to select
- ▶ Select **SOURCE** and press **OK** to select
- ▶ Select **USB/CARD** and press **OK** to enter the folder and file navigation screen as below.

4) Play the Music, Video or view the Photos



- ▶ Use **◀▶** to select (3) - **Music**, (4) - **Photo** or (5) - **Movie**. The list of folders is displayed in area (1).
- ▶ Select area (1) using the **◀▶** keys and select the folder using **▲▼**. The list of files is displayed in area (2).
- ▶ Select area (2) using the **◀▶** keys and select the file you wish to play using **▲▼**.
- ▶ Press **ENTER** button to begin playback.

NOTE:

 
1. Pressing the **■ (STOP)** button on the remote control during playback will halt playback and return to the file and folder navigation screen.
2. The following keys have specific functions during photo playback:
 - ◀▶** : Rotate image
 - ▲▼** : Flip image
 - ▶▶** : Display the next photo
 - ◀◀** : Display the previous photo

DVD system operation

System operation will define the setting of the set; these definitions will be stored until you change them again.

Accessing the Setup Menu

1. Pause or Stop the player. Press **DVD-SETUP** on the remote control. The main menu will be shown as below.

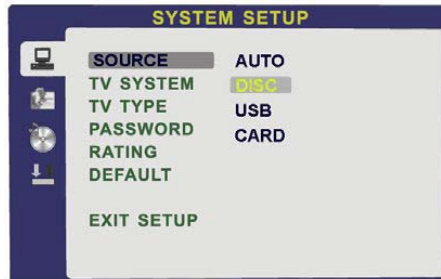


2. Press the ▲ / ▼ buttons to select the Icon of the desired section, e.g. "TV System" and press ► button to open that section.
 3. Press ▲ / ▼ to select the desired feature and again press ► button to open that section.
 4. Press ▲ / ▼ to select the desired feature and then press "ENTER" to select the new setting.
 - 5 To exit the menu, press "DVD-SETUP" or ▼ to select EXIT SETUP and then press "ENTER"
- When launching the setup routine, the pressing of the following buttons will turn off the setup menu, while the choices that have been changed will be saved.

Menu specification

1. SYSTEM SETUP

 The system setup options are illustrated below:

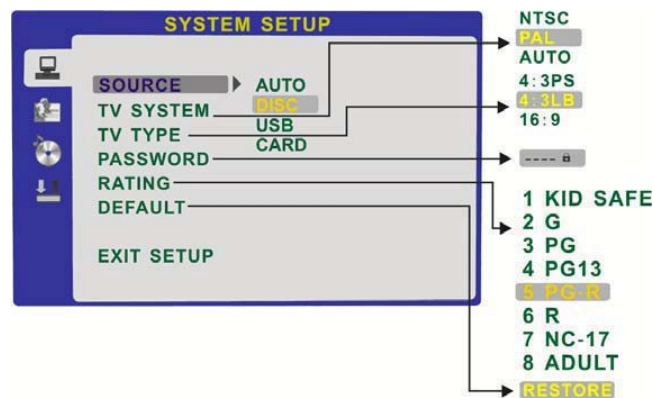

SOURCE

Select the source of the information you want to play: AUTO, DISC, CARD, USB

TV SYSTEM

According to the Color system of your TV, select proper TV TYPE.

TV TYPE

Format 4:3 PS, 4:3 LB, 16:9

PASSWORD

The password option is initialized as locked. You cannot set the ratings limit or change the password.

To enable these features you must unlock the Password. The default password is "0000". Using the ▲ / ▼ button, move the highlight to "PASSWORD", press the ► button and enter "0000". You will see the padlock symbol open. You may now change the RATING or put in a new password number.

If the Lock symbol is BLUE you must press the ► button to enter the lock field, the lock symbol will change to YELLOW, you may now enter a new 4 digit number. Please remember or write down the new Password and keep safe.

 
DVD system operation

RATING

The Rating feature is a rating limit feature, like movie ratings. This helps you to control what DVD the family watches. There are 8 levels of selection, from KIDS SAFE to ADULT. Adult is the "play all" selection.


2. LANGUAGE SETUP

The language setup options are illustrated below:

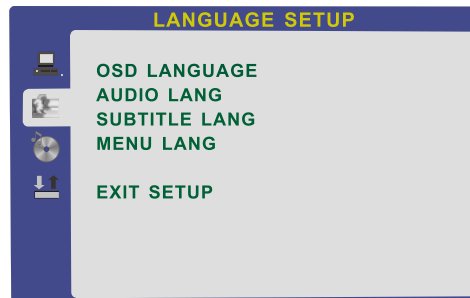

- OSD LANGUAGE: The OSD will display in the language you choose.
- AUDIO LANG: If the disc you are playing has the language you choose, it will output audio in that language.
- SUBTITLE LANG: If the disc you are playing has the language you require you may select this either in the Menu or using the "SUBTITLE" button on the Remote control. You may also switch this OFF.
- MENU LANG: If the disc you are playing has the language you require you may select this.

 3. AUDIO SETUP

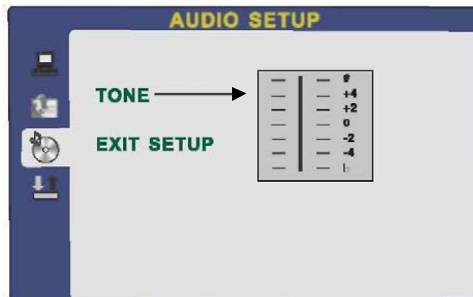


- TONE: Use the ▲/▼ button to move the scroll and adjust the tone.

4. DIGITAL SETUP

The video setup options are illustrated below:

 - DYNAMIC RANGE: Use the ▲/▼ button to move the scroll and adjust the dynamic range.
- DUAL MONO: Choose the mode of the audio output.
- There are four modes: STEREO, MONO L, MONO R, MIX MONO.

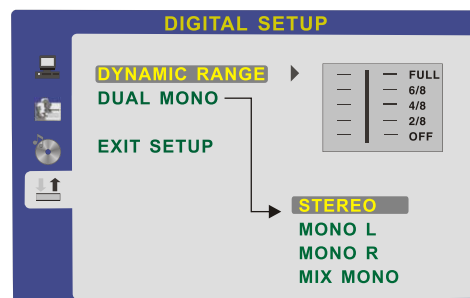

Maintenance for disc

Cleaning the screen

1. Here's a great way to keep the dust off your screen for a while. Wet a soft cloth in a mixture of lukewarm water and a little fabric softener or dish washing detergent. Wring the cloth until it's almost dry, and then used it to wipe the screen.
2. Make sure the excess water is off the screen, and then let it air-dry before you turn on your TV.

Cleaning the cabinet

To remove dirt or dust, wipe the cabinet with a soft, dry, lint-free cloth. Please be sure not to use a wet cloth.

 
Extended Absence



If you expect to leave your TV dormant for a long time (such as a vacation), it's a good idea to unplug the power cord to protect against possible damage from lightning or power surges.

Handling Discs

1. To remove a disc from its storage case, press on the centre of the case and take the disc out.
2. Hold the disc by the edges, to avoid touching the Recorded side of the disc.

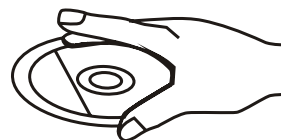

Cleaning discs

1. Fingerprints and dust should be carefully wiped from the disc's surface with a soft Cloth. Audio discs and DVD discs have no grooves to collect dust and microscopic debris so gently wiping with a soft cloth should remove most particles. Wipe in a straight line from the inside to the outside of the disc. Small dust particles and light stains should have no effect on reproduction quality.
2. Never use chemicals such as record sprays, antistatic sprays, Benzine, or thinners to clean the discs. These chemicals can irreparably damage the disc's surface.
3. Discs should be returned to their cases after use. This avoids serious scratches that could cause the laser pickup to skip.
4. Do not expose discs to direct sunlight, high humidity, or high temperature for extended periods. Exposure to high temperatures can warp the disc.
5. Do not stick paper or write anything with a ball point pen on the label side of the disc.



Trouble shooting

- In case a problem occurs with your LCD TV, please take the following steps first.
- If the problem still occurs, turn the power off and contact your dealer or an authorized service center.

Problem	Action
The screen does not appear.	Is the power plug pulled out? Insert the power plug. Press the power button.
The screen appears too slowly after the power is turned on.	This problem occurs for a brief time in the progression of image elimination processing in order to hide temporary screen noise that occurs when the power is turned on. If the screen does not appear after one minute, contact your dealer or an authorized service center.
Screen is too bright or too dark.	Perform brightness adjustment or contrast adjustment.
Screen is too large or too small.	Adjust the screen size.
Stripes appear on the screen and it shakes.	This problem can occur if wireless telephones, hair dryers, or electric drills are used near the TV.
Screen appears, Voice is not heard	<ol style="list-style-type: none"> 1. Press the "MUTE" button. 2. Increase the sound level by pressing volume adjustment button. 3. Check if sound terminal of external input is connected properly. 4. Check if audio cables are connected properly. 5. Select and check the other input. <p>If the sound still does not work and you have checked every channel to ensure that the problem is not channel specific, contact your dealer or an authorized service center.</p>
Remote control does not work	<ol style="list-style-type: none"> 1. Check if main power is On. 2. Check that the batteries of the remote controller were loaded properly. 3. Check to see if any obstacle exists between the LCD TV and the remote control. 4. If the batteries have no power, replace them with two new batteries.

VIORE™ LIMITED WARRANTY

Model: PLCD10V59

This **VIORE** brand Product, as supplied and distributed by **VIORE** and delivered new in the original carton to the original purchaser is warranted by **VIORE** against manufacturing defects in materials and workmanship for a limited warranty period of one (1) year on parts and labor. However, there will be only a 90 day parts and labor limited warranty for commercial use.

Proof of purchase within one year from date of purchase in the form of a Bill of Sale, Receipt or Receipted Invoice is evidence the Product is within the limited warranty period. The Bill of Sale, Receipt or Receipted Invoice must be presented as a pre-condition to obtaining the limited warranty service.

This limited warranty begins on the original date of purchase, and is valid only on Products purchased through **VIORE** authorized dealers and used in the United States by the original purchaser. To receive warranty service, the purchaser must contact **VIORE** for problem determination and service procedures. Warranty service may only be performed by a duly authorized **VIORE** service center. The original dated bill of sale, receipt or receipted invoice must be presented upon request as proof of purchase to **VIORE** or **VIORE's** authorized service center.

VIORE will repair or if repairs cannot be made, **VIORE** will replace this Product at no charge if the Product is defective as specified in this limited warranty during the limited warranty period. **VIORE** may use new, or remanufactured parts or products to repair or replace the Product at its sole discretion. All replaced parts and Products become the property of **VIORE** and must be returned to **VIORE**. Replacement parts and Products assume the remaining original limited warranty, or ninety (90) days, whichever is longer.

Product freight needs to be prepaid by original purchaser and shipped in either its original packaging or packaging affording an equal degree of protection. **VIORE** shall not be responsible for or obligated to replace damaged goods. If you reside in California and you cannot transport the television due to the size, weight, and method of attachment, **VIORE** will provide transportation for the television to the repair facility. If you reside in a state other than California, you are responsible for the costs of transporting the television to a repair facility.

If the product is received damaged by **VIORE**, it is the responsibility of the consumer to file a claim against the carrier. **VIORE** will only store the damaged product for 30 days and reserves the right, in its sole discretion, to dispose of the damaged product or ship it back to the consumer at consumer's expense after 30 days.

This limited warranty covers manufacturing defects in materials and workmanship encountered in normal, and except to the extent otherwise expressly provided for in this statement, noncommercial use of this product, and shall not apply to the following, including, but not limited to: to consumable parts, such as batteries, unless damage has occurred due to a defect in materials and workmanship; store display products; product sold as a "marked down" special; product sold in "as is" or, "open box" condition; products missing accessories; products received with no fault found; products damaged at time of delivery to **VIORE**; damage which occurs in shipment; delivery and installation; applications and uses for which this product was not intended; altered product or serial numbers; cosmetic damage or exterior finish; accidents, abuse, neglect, fire, water, lightning or other acts of nature; use of products, equipment, systems, utilities, services, parts, supplies, accessories, applications, installations, repairs, external wiring or connectors not supplied or authorized by **VIORE** which damage this product or result in service problems; incorrect electrical line voltage, fluctuations and surges; customer adjustments and failure to follow operating instructions, cleaning, maintenance and environmental instructions that are covered and prescribed in the instruction book; reception problems and distortion related to noise, echo, interference or other signal transmission and delivery problems; burned-in images. **VIORE** does not warrant uninterrupted or error-free operation of the product.

THERE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON VIORE. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. VIORE SHALL NOT BE LIABLE FOR ANY INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT; EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS LIMITED WARRANTY. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IS NONTRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Any provision contained herein which is found contrary to state or local laws shall be deemed null and void and the remaining provisions shall continue in full force and effect.

To obtain warranty service, please contact **VIORE** at:

Phone: 1-877-777-1428
www.viore.com

