

S-10S™

Single Channel Strobe Controller



Thank you for purchasing this American DJ® product. For your convenience this strobe controller has been tested and is ready to be used, there is no assembly required. Please read and understand the following instructions completely before attempting installation or using your new unit.

Caution! This apparatus must be grounded. To prevent fire or electrical shock, do not expose this apparatus under a high temperature or humid area. There are no user serviceable parts inside please do not attempt any type of service or repairs.

For all service issues please refer to your authorized local American DJ dealer

Introduction:

The S-10S™ is a single channel strobe controller. It features three operating conditions; Stand By (black out), Flash button, (manual), and Audio (sound active). This controller also features a Variable Speed Control Knob. The S-10S™ will control up to 6 American DJ® Super Strobe™, S150™, S-100A™, and SNAPSHOT™ strobes with 1/4" mono cable.

Operating Instructions:

1. Be sure the input power matches that of your unit and plug your unit in.
2. Turn the power switch to on position.
3. Select your desire control mode (Flash/Stand-By/Audio)

Flash Mode will allow you to manually adjust the rate of the flash by turning the rate knob in either a clockwise or counter-clockwise position (Clockwise will increase the flash rate and counterclockwise will decrease the flash rate.

Stand-By mode is basically a black out mode in this setting the strobe will not flash at all.

Audio mode will flash the strobe according to beat detected by the controllers built-in microphone.

Model: S-10S™

SPECIFICATIONS:

Power: 110V-130V/60Hz
Weight: 2 lbs.
Size: 6" x 2.5" x 2"

Sound Active