

AGES 8+
65855

Easy★Bake

Essentials

®
BRAND

PAN ESSENTIALS

INCLUDES: round cake pan, cupcake pan, heart-shaped pan, star-shaped pan, and mixing bowl.


Baking with the pans:

Place one of the silicone pans or the cupcake pan inside the round metal pan included in this set or in any metal EASY-BAKE® Oven baking pan. Spray the silicone or cupcake pan with cooking spray as instructed in the recipe. Pour the batter into the silicone or cupcake pan.

Do not use the silicone or cupcake pans without the metal pan.

Use of the silicone pans may require an additional 3-4 minutes of cooking time, beyond the Easy Bake® recipe times.

Contents to be used only with the EASY-BAKE® Oven or REAL MEAL™ Oven.

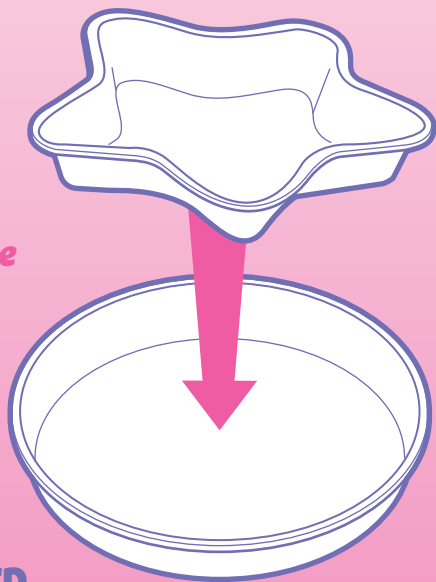

ADULT SUPERVISION REQUIRED.

Parents Please Note:

- Wash all pans, bowls and utensils by hand thoroughly before use. Do not wash in dishwasher.
- Dry all parts by hand thoroughly after washing.
- Make sure children wash their hands before using the pans, bowls and utensils.

Visit



For great recipes,
events and more!

EasyBake.com



Product and colors may vary.
© 2006 Hasbro. All Rights Reserved.
TM & © denote U.S. Trademarks.

65855

Questions? Call: 1-800-327-8264

P/N 663321000