

AGES 4+
77480 Asst.



Teacup Pup

INSTRUCTION MANUAL



TIGER
ELECTRONICS

© 2007 Hasbro, Pawtucket, RI 02862 USA.
All Rights Reserved.
TM & © denote U.S. Trademarks.
U.S. Pat. Nos. 7234989, 7207859 and
6811461.

P/N 6726500000

Register your pet's name at
www.furrealfriends.com

Questions? Call 1-800-844-3733




 **x3**
1.5VAAA or LR03 size


BATTERIES INCLUDED

Replace with 3 x 1.5V "AAA" or LR03 size alkaline batteries.
Phillips/cross head screwdriver (not included) required for
battery replacement.

GETTING STARTED

Your toy comes packaged in "TRY-ME" mode.
To activate its full range of features, move the
TRY-ME/OFF/ON switch to the "ON" position.

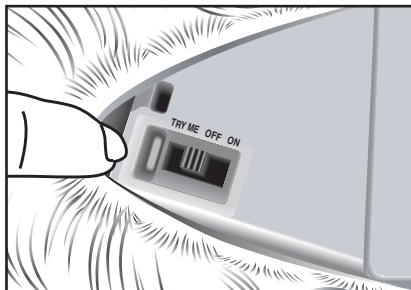

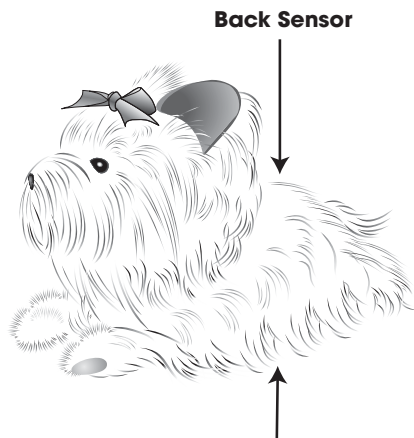

Back Sensor

**Battery door
&
TRY-ME/OFF/ON
switch**

A sensor is a part of the toy that responds to your touch!

2

MODES

Playful Mode

Petting your toy puppy's back sensor will activate sounds and movement. If you do not interact with your toy puppy within several seconds, it will enter the Waiting Mode (see below).



3

Waiting Mode

If your toy puppy is in Playful Mode and you stop playing with it for a short period of time, it will move and make sounds to attract your attention. If you still do not interact with it, it will enter Sleep Mode after about a minute (see below).

Calm Mode

If you press and hold the sensor on your toy puppy's back for about 3-5 seconds, it will sigh and enter Calm Mode. Then if you do not interact with your toy puppy within about 5-10 seconds, it will enter Sleep Mode (see below).



4

Sleep Mode

When your toy puppy enters Sleep Mode, it lowers its head and starts to snore. To wake your toy puppy up again, pet its back.

PLEASE NOTE:

Only the front legs of your toy puppy are poseable.

Your toy puppy's carrier has two straps that help keep your toy puppy in the carrier.


TROUBLESHOOTING

If your toy puppy does not respond properly, slide the power switch to OFF, then back to ON.

5

TO REPLACE BATTERIES

Using the Phillips/cross head screwdriver (not included), loosen screw in battery compartment cover (screw stays attached to cover). Remove door and replace with 3 x 1.5V "AAA" or LR03 size alkaline batteries. Replace cover and tighten screw.

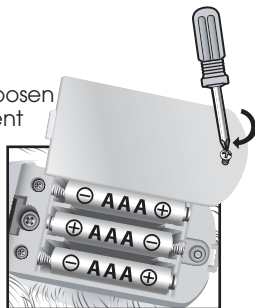

! CAUTION:

- 1) As with all small batteries, the batteries used with this toy should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone (202) 625-3333 collect. In other countries, have the doctor call your local poison control center.
- 2) Make sure the batteries are inserted correctly and always follow the toy and battery manufacturer's instructions.
- 3) Do not mix old and new batteries, alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference. Batteries should be replaced by an adult.

! CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert item correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.
8. As with all small items, these batteries should be kept away from children. If swallowed, seek medical attention immediately.

CLEANING & CARE

To clean your toy puppy, gently brush its fur with a cloth or soft brush to loosen any dirt. Then use a slightly damp cloth to remove stains.

- Do not put in the washing machine.
- Do not submerge in water.
- Do not use detergent or stain removers on fur.
- Do not get wet; to remove stains, use only a slightly damp cloth on the fur.
- To prevent staining fur, wipe off dirt immediately.
- If toy gets wet, remove batteries and dry the fur; once fur is completely dry, replace batteries.
- Avoid spilling food or beverages on the toy.
- Do not throw or kick the toy, and do not push sharp objects through the speaker openings.
- Do not leave toy in direct sunlight; high temperatures will destroy the mechanism.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.