

Includes 3 x 1.5V "A76"/LR44 batteries.
Alkaline batteries recommended.
Phillips/cross head screwdriver (not
included) needed to replace batteries.

Please note: GA GA'S MICRO BABIES
batteries are already installed.

Pull out the insulator tab to bring your
GA GA'S MICRO BABIES to life!



Questions?
Call 1-800-327-8264

TIGER
ELECTRONICS

TIGERTOYS.COM
FOR NEW PRODUCTS AND OFFERS

© 2003 Hasbro. All Rights Reserved.
® denotes Reg. U.S. Pat. & TM Office.
72688 P/N 6247010200

AGES 5+
72688 Asst.

GA GA'S™
MICRO BABIES™


Thank you for purchasing,
Ga Ga's™ Micro Babies™ the
babies that will send you Ga Ga!

Dear Babysitter,

You have been assigned the task of looking after this little handful known as the GA GA'S MICRO BABIES. GA GA'S MICRO BABIES take babysitting to a whole new level! Talk to them and hear them respond! If they're crying and unhappy, push in their pacifier to comfort them, or speak softly to soothe them. GA GA'S friends have a unique biorhythmic system that allows them to reach various states of happiness and comfort. You, as the babysitter, must make sure they stay happy and comfortable otherwise they will cry, scream & shake.

FEATURES

- Reacts to sound
- Reacts to touch
- Speaks
- Vibrates
- Displays 5 levels of emotion
- Moveable arms
- Designer hat

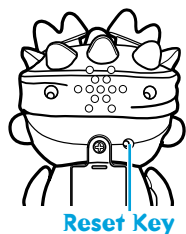

On/Off/
Comfort switch

Vibrating Motor

Microphone

TO USE:

1. Turn your GA GA'S friends on by pressing the pacifier located in their mouths.
2. GA GA'S friends will be in a "normal" state when first removed from the package. After activating your GA GA'S MICRO BABIES it's up to you to take care of them and how you do this will determine their mood.
3. To turn GA GA'S MICRO BABIES off, gently press the pacifier down for approximately 5 seconds.
4. To reset your GA GA'S MICRO BABIES, use a pen, pencil, or paper clip tip to depress the reset key located on the back of the head.

TYPES OF INTERACTION

Touch interaction

To give your GA GA'S friends love and interaction, gently press the pacifier. The more you care for the baby the happier it will become. But be careful! These babies get irritable and restless if they are left unattended.

Sound interaction

To give your GA GA'S friends love and interaction, speak with long and soft words. This will make the baby happy and in return, the baby will chat back to you in its very own special baby language. Conversely, short and sharply spoken words will make the baby uncomfortable. If your loud noise scares the baby, it will cry. If the noise is too long, the baby will become even more uncomfortable, resulting in a very unhappy screaming baby!


Different Moods

The baby's mood will be normal when you first turn it on. If you interact with the baby in the correct way it will go through various stages of happiness. If treated poorly or ignored entirely, the baby's mood will rapidly change, reaching "uncomfortable" and finally a "very uncomfortable" state. Note: If your baby becomes uncomfortable and starts to cry, show that you care by gently pressing its pacifier and speaking softly to it in order to make it happy once again.

- Very Happy
- Happy
- Normal
- Uncomfortable
- Very Uncomfortable

TO REPLACE BATTERIES

Use a Phillips/cross head screwdriver to loosen screw in battery compartment door (screw remains attached to door). Insert 3 x 1.5V "A76"/LR44 alkaline batteries. Replace door and tighten screw.

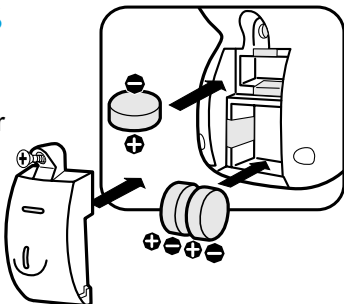

! CAUTION:

1. As with all small batteries, the batteries used with this toy should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and, in the U.S., have the doctor phone (202) 625-3333 collect, or, in Canada, have the doctor call your provincial Poison Control Centre.
2. Make sure the batteries are inserted correctly and always follow the toy and battery manufacturers' instructions;
3. Do not mix old batteries and new batteries or alkaline, standard (carbon zinc) or rechargeable (nickel-cadmium) batteries.

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference.

Batteries should be replaced by an adult.

! CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert item correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.

4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. **RECHARGEABLE BATTERIES:** Do not mix these with any other types of battery. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERY.**
8. As with all small items, these batteries should be kept away from children. If swallowed, seek medical attention immediately.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.