


Not suitable for children

under 3 years because of

small parts — choking hazard.

CAUTION: Hair entanglement may result if child's hair comes in contact with moving parts of toy. Adult supervision is required.



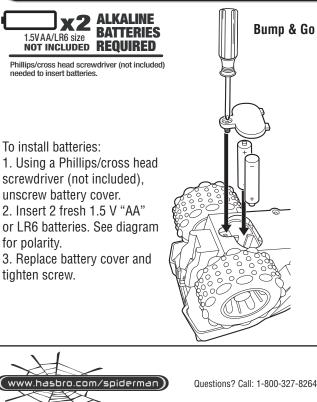

Bump & Go SPIDER-MAN Mud Buster

## **IMPORTANT: BATTERY INFORMATION**

Please retain this information for future reference. Batteries should be replaced by an adult.

## 

- 1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
- Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
- 3. Always remove weak or dead batteries from the product.

## 

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert item correctly by matching the + and – polarity markings.

2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.

3. Remove exhausted or dead batteries from the product.

4. Remove batteries if product is not to be played with for a long time.

5. Do not short circuit the supply terminals.

6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.

7. RECHARGEABLE BATTERIES: Do not mix these with any other types of battery. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.

## Product and colors may vary.

Spider-Man and all related characters and the distinctive likeness thereof: TM & © 2007 Marvel Characters, Inc. Spider-Man 3, the Movie: TM & © 2007 Columbia Pictures Industries, Inc. All rights reserved. www.marvel.com

 ${\ensuremath{\mathbb R}}^*$  and/or TM\* and  ${\ensuremath{\mathbb C}}$  2006 Hasbro. All Rights Reserved.

TM & ® denote U.S. Trademarks.

