


SPIDER-MAN® Web Copter

Assembly Instructions:


1

Remove gatling cannon from copter and load 5 missiles.

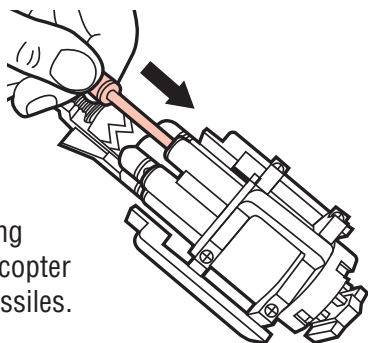


2

Lift front end of copter. Wings on gatling gun fit under tabs in copter. Push down to lock.

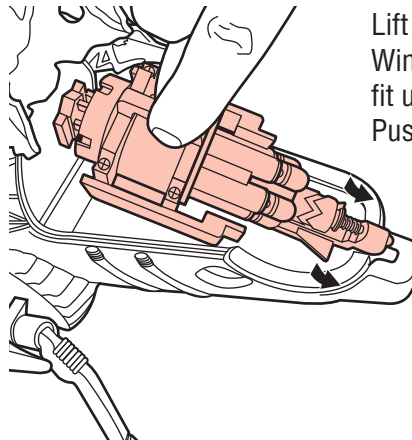


3

Snap front end of copter in place.

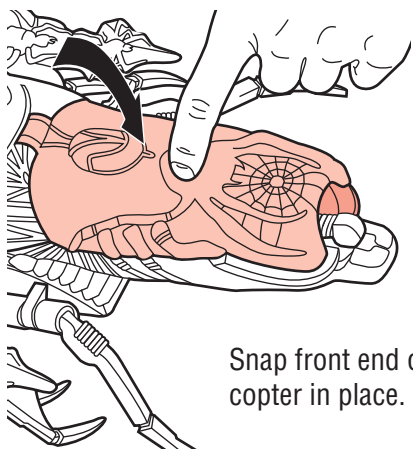


4

Pivot bottom blades clockwise until they lock into place.

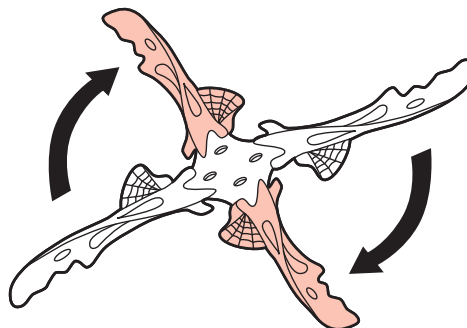

5


Set legs to open position.

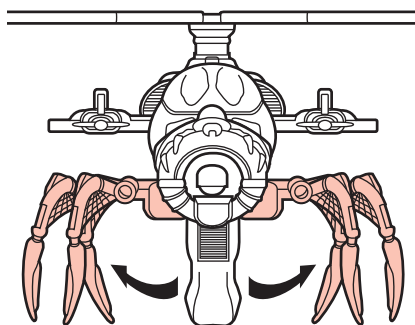


6

Load spider missiles.



Press trigger to launch.

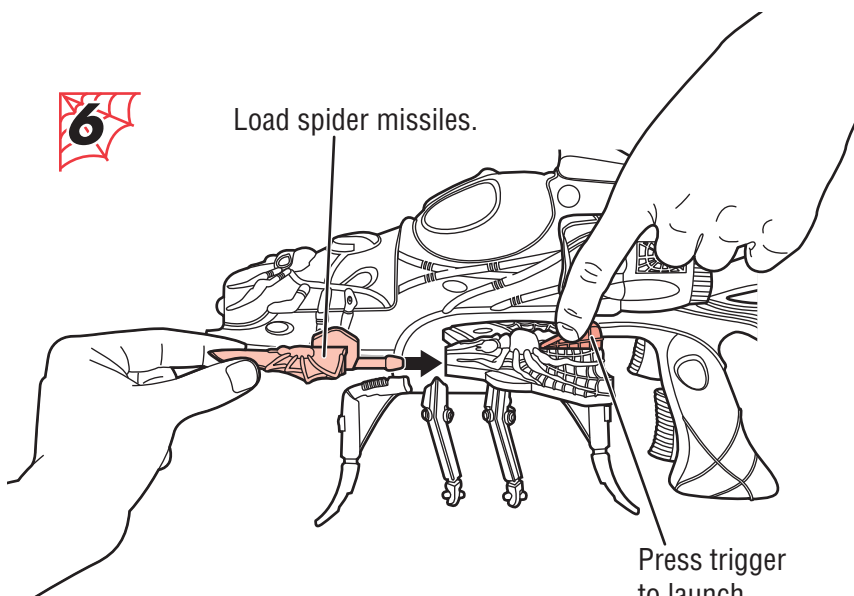


Web Copter Operation:

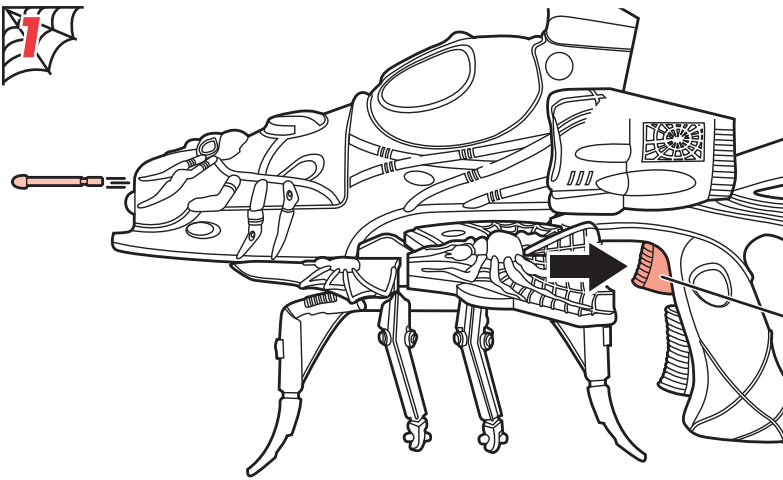

Pull top trigger on pistol grip to fire gatling cannon.

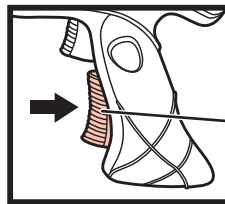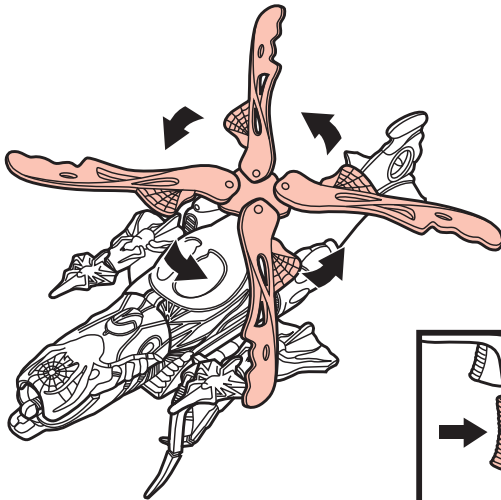

Squeeze bottom trigger to rotate copter blades.

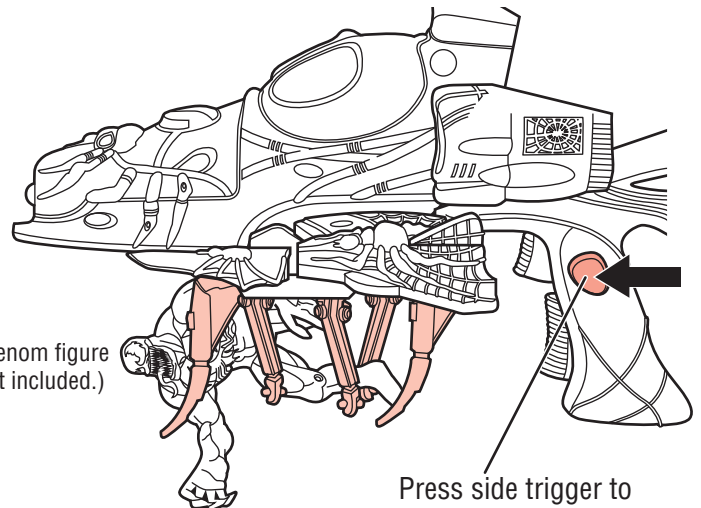

(Venom figure not included.)

Press side trigger to active spider legs.



Not suitable for children under 3 years because of small parts — choking hazard.

Product and colors may vary.
Spider-Man and all related characters: TM & © 2006 Marvel Characters, Inc.
Spider-Man movie elements: © 2002-2006 Columbia Pictures Industries, Inc.
All rights reserved. Licensed by Spider-Man Merchandising L.P.
®* and/or TM* & © 2006 Hasbro. All Rights Reserved.
TM & ® denote U.S. Trademarks.

P/N: 6631110000