

AGES 6+  
66492 Asst.



## INSTRUCTION MANUAL



© 2003 Hasbro. All Rights Reserved.  
® denotes Reg. U.S. Pat. & TM Office.  
U.S. Patent Pending  
66492 P/N 6300220000

**TIGER**  
ELECTRONICS



Questions? Call 1-800-327-8264



NOTE: If your Cat's tail motion seems to be restricted, gently tug her fur near the tail away from her body. This should free up any folds and allow the tail to move freely again.



Thank you for purchasing the FURREAL FRIENDS Cat toy, the cat that moves and sounds like a REAL cat!

Requires 3 x 1.5V "C"/LR14 alkaline batteries (not included). Phillips/cross head screwdriver (not included) needed to insert batteries.

FURREAL FRIENDS Cats are lifelike and affectionate pets that respond to your touch! Tickle their cheek and they'll lean into your hand and purr. Pet their soft, silky fur and watch as they arch their back - but watch out if you pull their tail!


FURREAL FRIENDS are fully animated from the top of their head to the tip of their tail. 6 sensors are specifically placed to encourage natural interaction between you and them.

Be sure to take good care of your Cat by following the instructions in this booklet!

To begin playing with your FURREAL FRIENDS Cat you must first install batteries.

## TO INSTALL BATTERIES

Pull back the plush flap on the bottom of the Cat. Use a Phillips/cross head screwdriver to loosen screw in battery compartment cover (screw stays attached to cover) on the bottom. Insert 3 x 1.5V "C"/LR14 alkaline batteries. Replace cover and tighten screw.

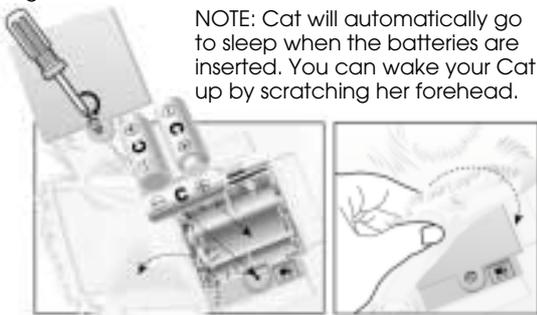

NOTE: Cat will automatically go to sleep when the batteries are inserted. You can wake your Cat up by scratching her forehead.



## CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
2. Do not mix old batteries and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
3. Always remove weak or dead batteries from the product.

## IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference. Batteries should be replaced by an adult.




## CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert item correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of battery. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**

## GETTING STARTED

FURREAL FRIENDS Cat consists of the following parts:

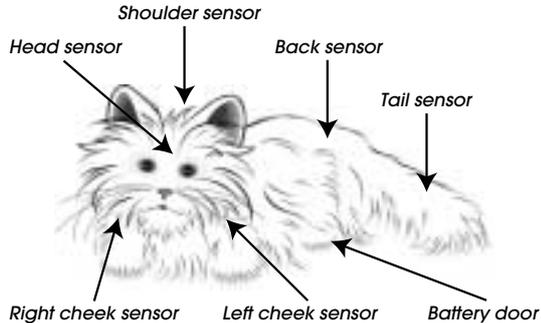

## HOW TO PLAY WITH YOUR FURREAL FRIENDS CAT

To turn your Cat ON, pull back the push flap over the battery door and switch the **ON/OFF** switch to **ON**. Then replace the flap.



Once your Cat is turned on, she will move like she's stretching and then go to sleep.



To wake up your Cat, gently scratch the top of her head.




**NOTE:** Your Cat will go to sleep and shut down if she is not played with for 3-5 minutes. You can wake her up by scratching her forehead. Please remember to turn the ON/OFF switch to the OFF position when you are not playing with your Cat.

Your FURREAL FRIENDS Cat is just like a real cat in many ways. If you pet your Cat gently or scratch her head or tickle her cheeks, you will make her happy. The following illustrations show how you can pet your Cat.


*Forehead sensor*



*Shoulder sensor*

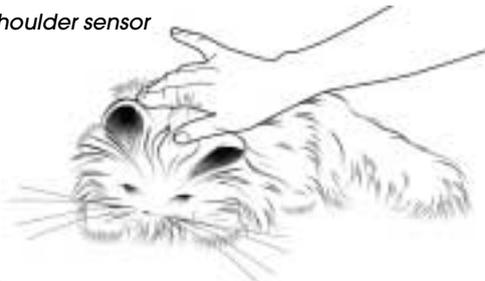


*Petting*

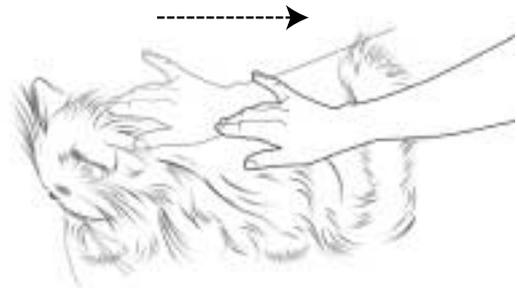


*Back sensor*



*Right cheek sensor*

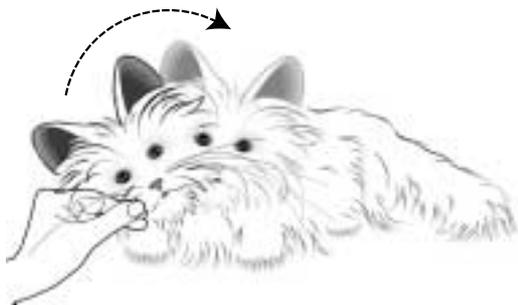

*Left cheek sensor*

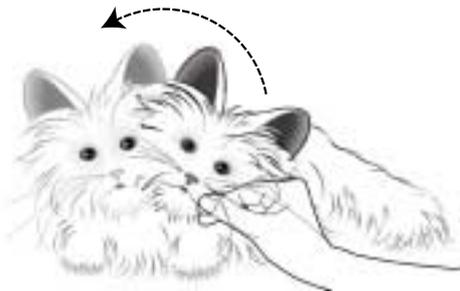

*Tail sensor*



NOTE: If you grab your Cat's tail, she will become unhappy.

## CLEANING INSTRUCTIONS

To clean your Cat's fur, gently brush her with a cloth or soft brush to loosen any dirt. Then use a slightly damp cloth to remove stains.

- DO NOT PUT IN THE WASHING MACHINE
- DO NOT SUBMERGE IN WATER
- DO NOT GET WET EXCEPT A DAMP CLOTH ON THE FUR
- TO PREVENT STAINING THE FUR, WIPE DIRT OFF IMMEDIATELY
- IF THE CAT GETS WET, REMOVE THE BATTERIES AND DRY THE FUR
- ONCE COMPLETELY DRY, REPLACE THE BATTERIES
- DO NOT USE DETERGENT OR STAIN REMOVERS ON THE FUR



High temperature will destroy the unit. Do not leave unit in direct sunlight.



Clean only with a piece of soft dry cloth.

- Prevent spills of food and beverage on the unit.
- Do not throw or kick the product, and do not push sharp objects through the speaker openings.

## FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.