 


Ages 12 mos. & Up

 
PLAYSKOOL

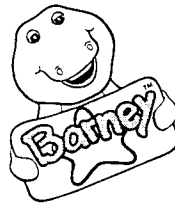

Talking Phone

Electronic talking toy featuring
Barney™ and Baby Bop™

PLAY FEATURES

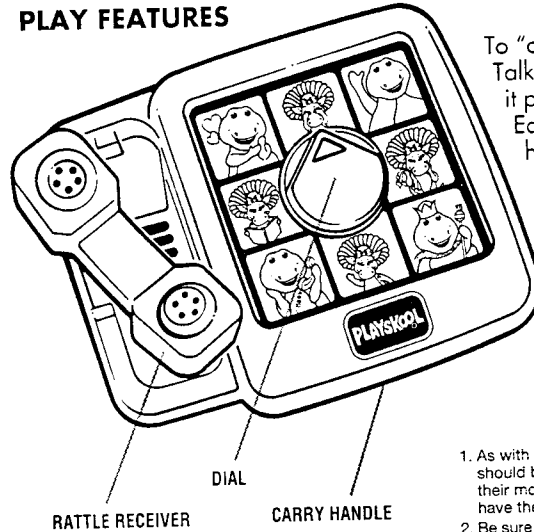

To "call" Barney™ or Baby Bop™ on the Talking Phone, simply turn the dial so that it points to one of them and press down. Each fun-loving character says four happy phrases!



The Talking Phone also includes a rattling receiver for pretend conversations, and a carry handle for on-the-go fun.

It's a "SUPER-DEE-DUPER" good time!

BATTERY CAUTIONS:

1. As with all small batteries, the batteries included with this toy should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone (202) 625-3333 collect.
2. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions.
3. Never mix old batteries and new batteries, or standard (carbon-zinc) with alkaline batteries.
4. Always remove exhausted or dead batteries from the product.
5. Remove batteries if product is stored for a long period of time.

BATTERY REPLACEMENT

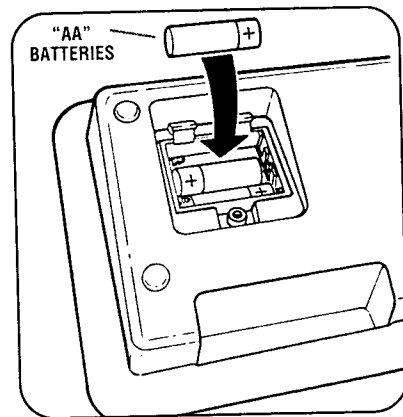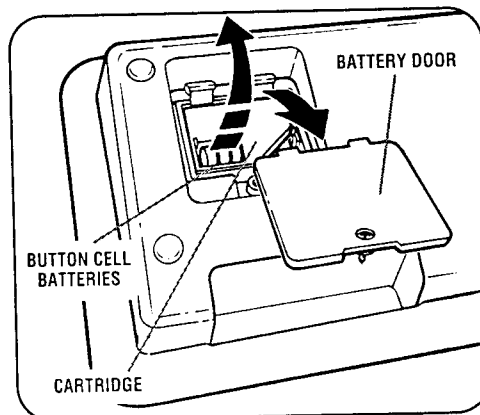

This toy comes with 3 button cell batteries. When they run out, use a Phillips® screwdriver (not included) to loosen the screw securing the battery compartment door and remove door as shown. The screw remains attached to the battery door.

Remove and discard the battery cartridge and batteries. Insert 3 "AA" batteries (alkaline batteries are recommended for longer life). Replace the battery door and re-fasten the screw with the screwdriver.

©1993 The Lyons Group. "Barney™" and "Baby Bop™" are trademarks of The Lyons Group.
©1993 Playskool, Inc., Pawtucket, RI 02862 USA, a subsidiary of Hasbro, Inc. All Rights Reserved.
® denotes Reg. U.S. Pat. & TM Office. **MADE IN CHINA.** U.S. Patent Pending.
5706 P/N 44502500