

Open Door
Enterprises

Opendoorremote.com

FREE SHIPPING!

Genie 912 GT912-BX, programming instructions

One Button Remote Control Transmitter

3028932244

NOTE: This replacement remote controller will work with both our 9 switch and 12 switch security code systems, provided the 3 digit frequency number matches the existing unit. If these numbers do not match, the new remote controller will not open the door.

INSTRUCTIONS FOR YOUR NEW REMOTE CONTROLLER

All remote controller and garage door opener security code switches must match to remotely control your garage door opener.

SETTING THE SECURITY CODE ON YOUR NEW REMOTE CONTROLLER

Your new remote controller is shipped with the mode switch in the 12 switch system position and all 12 security code switches set "ON" or in the up position. Locate the security code switches on your single button remote controller or door opener receiver. Your new remote controller **MUST** be set to the same security code for it to work.

NOTE: Do not use ANY multi-button remote controller for matching security codes. Use security codes on your garage door opener receiver or single button remote control.

1. Remove battery cover.

- Press firmly below arrow and slide cover off (Fig. 1).

2. Slide mode switch to either 9 or 12 to match number of security code switches on your existing single button remote controller or garage door opener receiver (Fig. 2).

3. Slide security code switches to match your single button remote controller or garage door opener receiver. For 9 switch systems use the upper row of numbers. For 12 switch systems use the lower row of numbers.

- Use ball point pen or small screwdriver.
- Slide security code switches firmly up or down.

NOTE: If your original remote controller includes "one time" punch out keys instead of switches, set security code switches of the new remote controller to "OFF" or down position to match keys that have been punched.

4. Replace remote control battery cover.

- Slide battery cover back in place over battery.
- Press firmly and slide forward to snap in place.

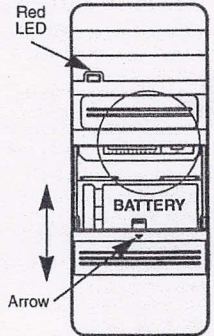 


Fig. 1

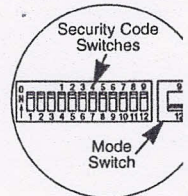 


Fig. 2

See label inside of battery cover

REMOTE CONTROLLER SECURITY CODES CAN BE CHANGED AT ANY TIME. ALL REMOTE CONTROLLER AND GARAGE DOOR OPENER SECURITY CODE SWITCHES MUST MATCH TO REMOTELY CONTROL YOUR DOOR OPENER.

 
REMOTE CONTROLLER OPERATION:

- Point the remote controller at the garage door and press the button. The door will open or close.
- Press the button while the door is moving. The door will stop.
- Press the button again. The door will move the other way.
- Door automatically stops at the end of open or close cycle.
- For maximum range, point remote controller at the door and press the button.

VISOR CLIP ATTACHMENT:

Attach visor clip to remote controller (Fig. 3).

- Spread wire ends into holes in sides of remote controller.
- Clip can be inserted up or down.

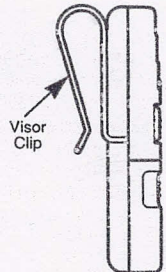

BATTERY REPLACEMENT: (Your remote controller is battery powered).

Remove battery cover.

- Press firmly below arrow on battery cover and slide cover off (Fig. 1).
- Install new battery in same position.
- Use Eveready 9V Classic No. 216.
- Replace cover.

LOST OR STOLEN REMOTE CONTROLLERS:

If your remote controller has been lost or stolen, it is recommended that you change the security code settings on all your remote controllers and receivers.

RADIO CONTROLS AS MANUFACTURED FOR THE U.S.A. ARE CERTIFIED TO COMPLY WITH FCC RULES PART 15.

RADIO CONTROLS AS MANUFACTURED FOR CANADA ARE CERTIFIED TO COMPLY WITH INDUSTRY CANADA RSS 210 ISSUE 1.

This device is manufactured under one or more of the following U.S. patents:

3,579,240	3,823,378	3,754,187	3,754,189
3,768,018	4,064,487	4,103,238	4,041,259

For additional information or help, call
CUSTOMER SERVICE 1-800-654-3643.

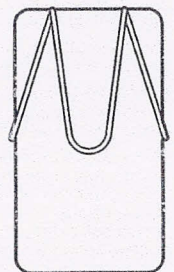 


Fig. 3