



HEARTH PRODUCTS

**INSTALLATION INSTRUCTIONS FOR UPPER AND LOWER GRILLE KITS
FOR USE WITH LENNOX™ 35/40/45 GAS FIREPLACES**

UPPER GRILLE KITS - SUNRISE			
Cat. No.#	Model	Description	Model Series
H3565	SUGK35C	35" Charcoal	MPD3530, MPD35ST, MPB-35ST & EDV3530
H3567	SUGK35SP	35" Satin Pewter	
H3573	SUGK40C	40" Charcoal	EDV4035, EDVST, MPD4035, EBVST
H3575	SUGK40SP	40" Satin Pewter	
H3581	SUGK45C	45" Charcoal	EDV4540, MPD4540
H3583	SUGK45SP	45" Satin Pewter	

UPPER GRILLE KITS - CRESCENTS			
Cat. No.#	Model	Description	Model Series
H3541	CUGK35C	35" Charcoal	MPD3530, MPD35ST, MPB-35ST & EDV3530
H3543	CUGK35SP	35" Satin Pewter	
H3549	CUGK40C	40" Charcoal	EDV4035, EDVST, MPD4035, EBVST
H3551	CUGK40SP	40" Satin Pewter	
H3557	CUGK45C	45" Charcoal	EDV4540, MPD4540
H3559	CUGK45SP	45" Satin Pewter	

LOWER GRILLE KITS - SUNRISE			
Cat. No.#	Model	Description	Model Series
H3569	SLGK35C	35" Charcoal	MPD3530, MPD35ST, MPB-35ST & EDV3530
H3571	SLGK35SP	35" Satin Pewter	
H3577	SLGK40C	40" Charcoal	EDV4035, EDVST, MPD4035, EBVST
H3579	SLGK40SP	40" Satin Pewter	
H3585	SLGK45C	45" Charcoal	EDV4540, MPD4540
H3587	SLGK45SP	45" Satin Pewter	


LOWER GRILLE KITS - CRESCENTS			
Cat. No.#	Model	Description	Model Series
H3545	CLGK35C	35" Charcoal	MPD3530, MPD35ST, MPB-35ST & EDV3530
H3547	CLGK35SP	35" Satin Pewter	
H3553	CLGK40C	40" Charcoal	EDV4035, EDVST, MPD4035, EBVST
H3555	CLGK40SP	40" Satin Pewter	
H3561	CLGK45C	45" Charcoal	EDV4540, MPD4540
H3563	CLGK45SP	45" Satin Pewter	

KIT CONTENTS		
ITEM	QUANTITY	DESCRIPTION
1	1 ea.	Grill, Upper or Lower
2	1 ea.	Instruction Sheet

Table 1 - Refer to Figure 1

Notes:

- The upper and lower grilles are ordered separately.
- Only the lower grilles include knobs (see 2 knobs shown on Crescent Style, Figure 1).

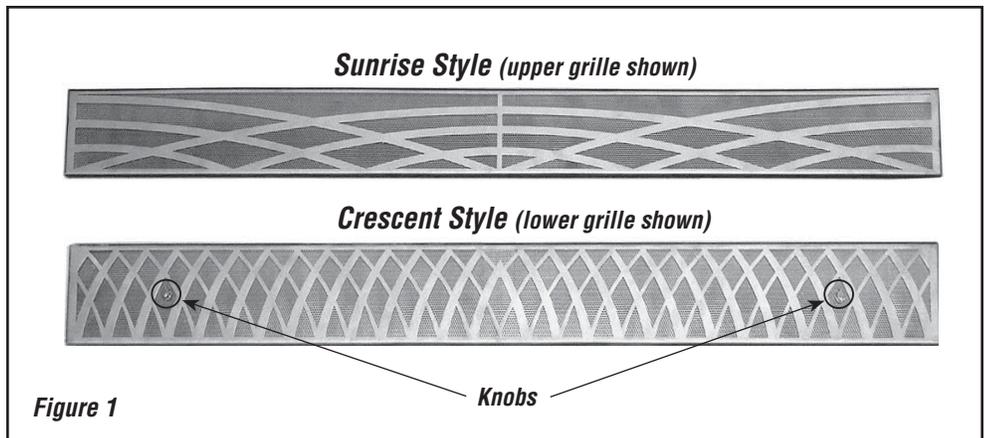

Read and understand all instructions and warnings in this document before beginning the installation.

TOOLS REQUIRED

Phillips Screwdriver
Cutting Pliers (required for modesty panels with side locating tabs only as shown in **Figure 6**)

GENERAL INFORMATION

These decorative grilles are offered in four attractive finishes and fit on the face of the appliance in place of the standard louvers or radiant panels. If you encounter any problems, need clarification of these instructions or are not qualified to properly install this kit, contact your local distributor or dealer.



! WARNINGS

- **Hot! Do not touch!** These decorative grilles are **NOT** heat guards. Carefully supervise children in the same room as appliance.
- The lower Grille covering the controls will become hot during operation. Use care when removing the grille to access the controls and make sure to place the grille on a surface that is non-combustible or will not be damaged by high temperatures.



- **INSTALL THIS KIT ONLY WHEN THE FIREPLACE IS OFF AND COLD!**

INSTALLATION INSTRUCTIONS:

1. Remove Louvered or Radiant Panel/Hood Assembly -

Upper Panel - Remove the upper louvered or radiant panel/hood assembly by pulling the assembly up and out (see **Figure 2**). In instances where the radiant panel is used and it is framed in with tile or other approved material, the hood must still be removed by firmly pulling it forward until it releases from the receiving brackets.

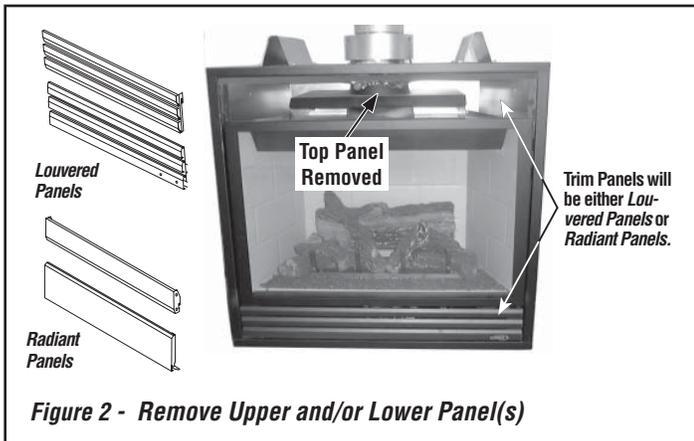


Figure 2 - Remove Upper and/or Lower Panel(s)

Lower Panel - Remove the lower louvered or radiant panel assembly as follows:

- **Hinged Panel (see Figure 3)** - Gently depress the outer top corners of the louvered *Control Compartment Access Panel* until the spring-loaded magnetic catches "pop" it free, allowing it to swing out and down to open. With the panel in the open position, depress the spring-loaded hinge pin on left side until it disengages from the left cabinet panel hole. Pull panel away from fireplace.

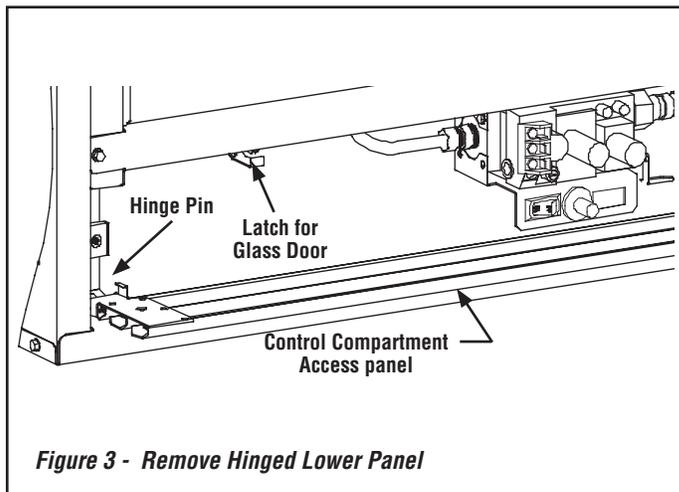


Figure 3 - Remove Hinged Lower Panel

- **Hooked Panel (see Figure 4)** - Remove the panel by gently lifting it upward until the hook catches on both sides clear the locating slots. Then pull door out to remove.

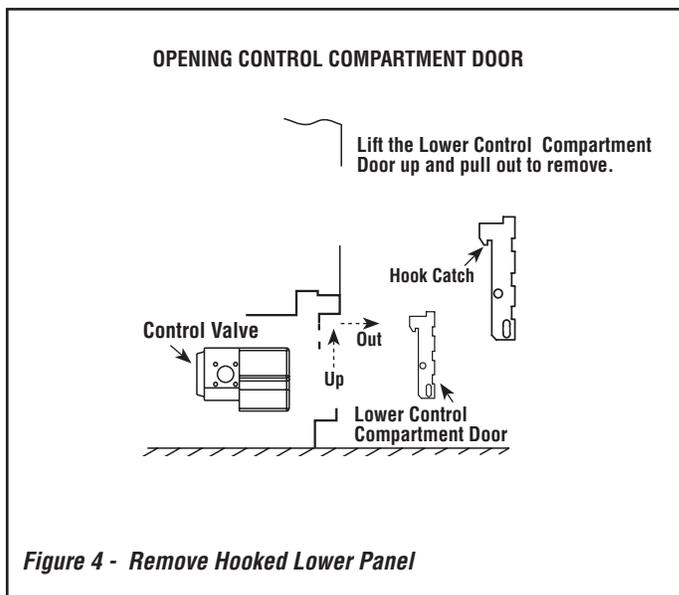


Figure 4 - Remove Hooked Lower Panel

2. If fireplace has a modesty panel with side locating tabs as shown in **Figure 5**, the left tab will require the following modification:
 - a. Remove the modesty panel from the control compartment (see instructions in Homeowners Care and Operation Manual).
 - b. Using cutting pliers, cut 1/2" off the end of the left top locating tab on the modesty panel only as shown in **Figure 5**.
 - c. Reinstall modesty panel in fireplace control compartment.



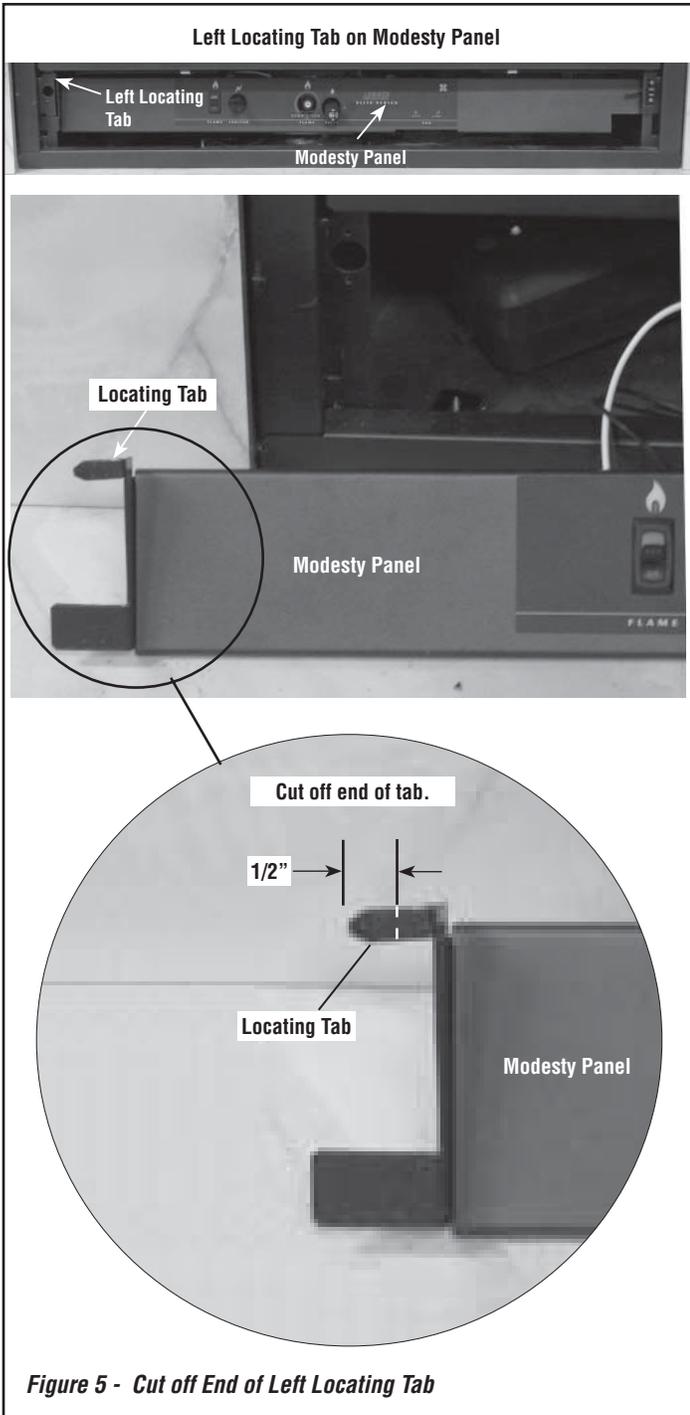


Figure 5 - Cut off End of Left Locating Tab

3. Remove Magnet in the Control Compartment (if necessary) per instructions in **Figure 6**.

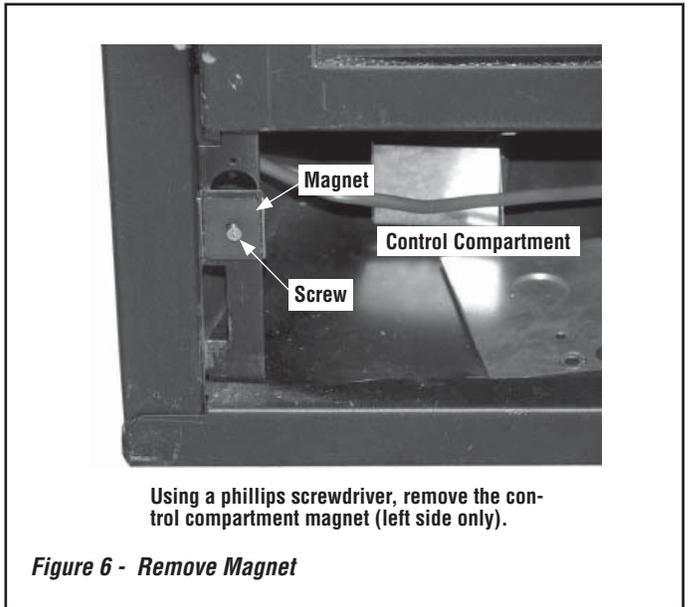

4. Light the appliance following instructions on lighting label in control compartment or see lighting instructions in *Homeowner's Care and Operation Manual* provided with appliance. **Ensure that the latch(es) below the door are engaged with the door's vee-flange and fully closed before operating the fireplace.**
5. **Install Grilles (see Figure 7)** - Remove the grilles from packaging. Position the grilles so that the hook catches on the back of grilles slide into corresponding slots on fireplace.

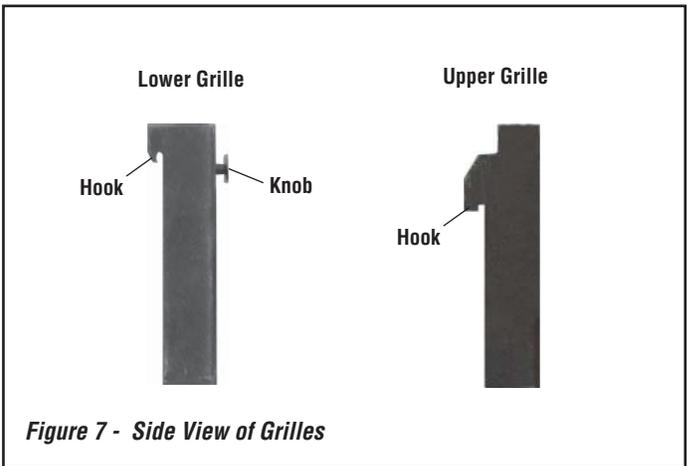



NOTE: DIAGRAMS & ILLUSTRATIONS ARE NOT TO SCALE.

Lennox Hearth Products reserves the right to make changes at any time, without notice, in design, materials, specifications, prices and the discontinuance of colors, styles and products. Consult your local distributor for fireplace code information.

LENNOXTM

HEARTH PRODUCTS

1110 West Taft Avenue • Orange, CA 92865

Printed in U.S.A. © LENNOX HEARTH PRODUCTS 2006