

Step-By-Step Instructions



WARNING: Follow all leak check procedures carefully in this manual prior to barbecue operation. Do this even though the barbecue is assembled.

NOTICE TO INSTALLER: These instructions must be left with the owner and the owner should keep them for future use.

THIS GAS APPLIANCE IS DESIGNED FOR OUTDOOR USE ONLY.

WARNING: Do not try to light this appliance without reading "Lighting" instructions section of this manual.

FOR YOUR SAFETY

1. Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

2. An LP tank not connected for use shall not be stored in the vicinity of this or any other appliance.

FOR YOUR SAFETY

If you smell gas:

- 1. Shut off gas to the appliance.
- 2. Extinguish any open flame.
- 3. Open lid.
- 4. If odor continues, immediately call your gas supplier or your fire department.

Assembly

Supplies needed

You will need a soap and water solution to check for gas leaks. (See Step "Check for gas leaks.")

Refer to exploded view if replacement parts are needed.

Your LP tank is shipped empty for safety. After setting the LP fuel scale you will need to fill it. (See Step "Fill LP tank.")

While we give much attention to our products, unfortunately an occasional error may occur. If a part is missing, do not go back to the store. Call the Weber Customer Service Center toll free **1-800-446-1071** to receive immediate assistance. Have your owner's manual available for reference.

Step 1

Removal of all tape

Remove tape from the following locations:

front and rear of side work tables

swing tables

swing table slide bars

bottom tray beneath the cooking box

bottom accessory trays

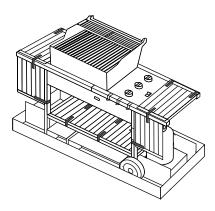


Figure 1

Step 2

Remove packaged parts

Remove and unpackage warming rack, Weber Warm-Up Basket, 2 cooking grates, cardboard box (which contains cookbook and warranty card), 8 short stainless steel Flavorizer Bars and 5 long stainless steel Flavorizer Bars.

Note - Be sure no packaging material is left in the cooking box before reinstalling parts.

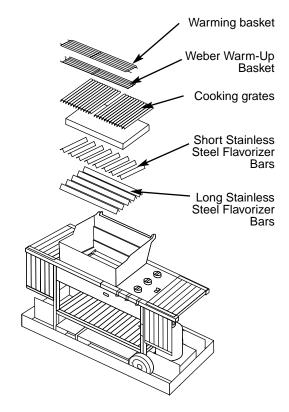


Figure 2

Reinstallation of Stainless Steel Flavorizer Bars, Cooking Grates and Warming Rack

Set the long stainless steel Flavorizer bars side to side in the lower position of the cooking box, then set the short stainless steel Flavorizer bars, front to back in the upper position. Figure 3.

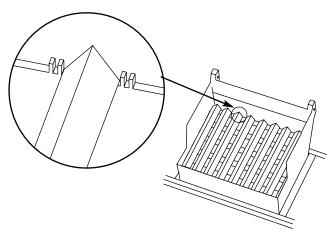


Figure 3

Set the cooking grates onto the ledges in the cooking box. The open "U" of the cooking grate goes down. Figure 4.

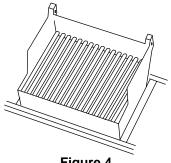


Figure 4

Set the warming rack into the slots at the rear of the cooking box. Figure 5.

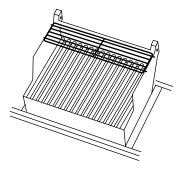


Figure 5

Step 4

Installation of catch pan holder into bottom tray

Pull out bottom tray from cooking box.

Remove packaging material from bottom tray, catch pan holder, catch pan, and drip pan.


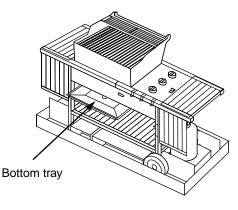


Figure 6

Hook the ends of the catch pan holder into the hole in the bottom tray. Figure 7. The front of the catch pan holder must be on the same side as the finger grip of the bottom tray.

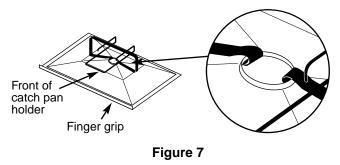

Slide the bottom tray onto the mounting rails under the cooking box with finger grip toward you.

CAUTION: Do not line bottom tray with aluminum foil. It can cause grease fires by trapping the grease and not allowing grease to flow into the catch pan.


Put the foil drip pan into the catch pan.

Slide the catch pan into the catch pan holder with its finger grip towards you.

Removal of LP Tank

Note - You must remove tank and it's packaging before lifting grill out of lower carton.

- 1) Loosen tank lock wing nut and turn tank lock up out of the way. Tighten wing nut. Figure 8 (a).
- 2) Lift tank straight up. The cardboard sleeve will come with it, then remove the sleeve from the tank.

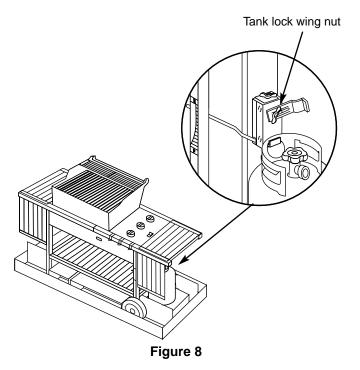

Step 6

Remove grill from lower packaging

WARNING: Lifting the barbecue from the lower packaging requires at least two people.

With two people lift straight up and over lower packaging and cardboard support.

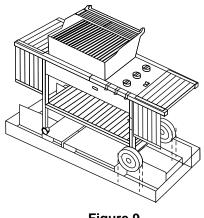


Figure 9

Install Lid

Remove hinge pins and hair pin cotters from back of cooking box.

Set the lid in place. Align the hinges at the rear of the barbecue. Insert hinge pins from the outside. Insert hair pin cotters into the small holes in the hinge pins. Figure 10.

Remove tape securing the thermometer into its holder.


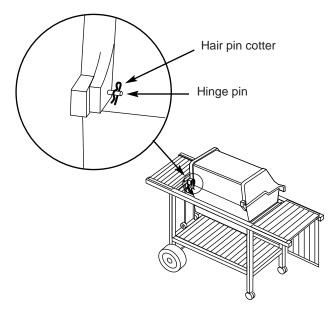


Figure 10

Step 8

Install Weber Warm-Up Basket

Insert one end of the Weber Warm-Up Basket into the hole in the right end of the lid and the other end into the slot in the left end of the lid. Figure 11.

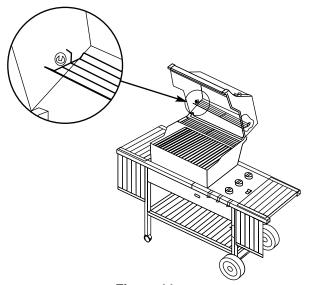

Step 9

Set LP fuel scale

You will need: LP tank (empty).

Note - For accuracy, the fuel scale must be set with an empty tank.

We utilize various LP tank manufacturers. Some of the tanks we receive have differing top collar assemblies. (The top collar is the metal protective ring around the valve.) One series of tanks mounts with the valve facing front. The other tanks mount with the valve facing away from the fuel scale. These types of tanks are illustrated in Figure 12.

Loosen the tank lock wing nut. Tighten so the lock is held up out of the way. Figure 12 (a). Lift and hook the tank onto the fuel scale. With an empty LP tank, adjust the fuel scale setting to E with scale setting (top) wing nut. Figure 12 (b).

CAUTION: Do not remove adjustment wing nut from tank scale.

After adjusting tank scale, push tank down a couple of times to check that the tank scale is set on "E".

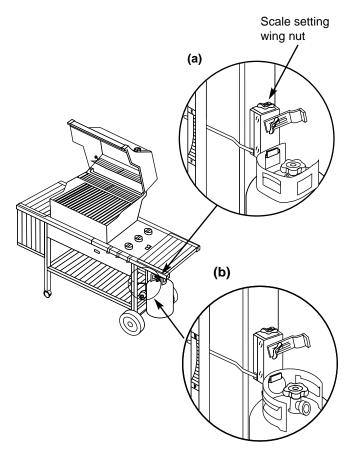


Figure 12

Fill LP tank

Note - The LP tank manufacturer is responsible for the materials, workmanship and performance of the tank. If the tank has a defect, malfunctions, or you have a question regarding the tank, call the tank manufacturer's customer service center. The phone number is on the warning decal which is permanently attached to the tank. If the tank manufacturer has not resolved the issue to your satisfaction, then call Weber-Stephen Products Co., Customer Service Center.

Take the LP tank to an RV center (or some other source of LP gas) to fill the tank with 20 pounds of liquid propane.

WARNING: We recommend that your LP tank be filled at an authorized LP gas dealer by a qualified attendant, who fills the tank by weight.

IMPROPER FILLING IS DANGEROUS.

Tell your LP dealer that this is a new LP tank. The air must be removed from a new LP tank before the initial filling. Your LP tank dealer is equipped to do this.

CAUTION: If you exchange your LP tank, make sure you get a similar tank in return. Your LP tank is equipped with a quick-disconnect valve. Other LP tanks are not compatible with your barbecue connection.

The LP tank must be installed, transported and stored in an upright position. LP tank should not be dropped or handled roughly.


Never store or transport the LP tank where temperatures can reach 125° Fahrenheit (too hot to hold by hand – for example: do not leave the LP tank in a car on a hot day).

For full instructions on safe handling of LP tanks, see Section "Safe handling tips for LP gas," in the Operating Guide.

Step 11

Remove control panel

Remove the right side work table. Remove the burner control knobs. Figure 13 (a). Grasp the under the edge of the control panel at the control panel push-in buttons and slide along the frame toward you. Figure 13 (b). Lift off the control panel.

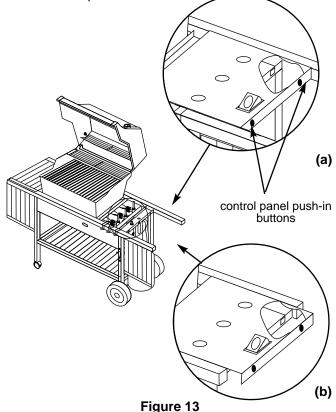

Step 12


Check that items are secured

Note - Although the following items were factory assembled, check that they have not loosened during shipping and handling.

Remove the tape from the manifold bracket.

Check that the bracket is securely hooked onto the frame brace and under the manifold at the center burner valve. Figure 14.

If it is loose lift the bracket, manifold and cooking box slightly as a unit and reposition onto the frame brace.

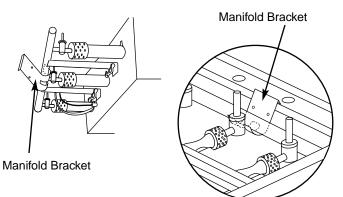

6



Check that the igniter is secure in the frame brace and has not shifted out of the key hole. Figure 15.

If it is loose, slide the igniter into the rear of the key hole. Carefully tighten the igniter lock nut with an adjustable wrench or pliers.


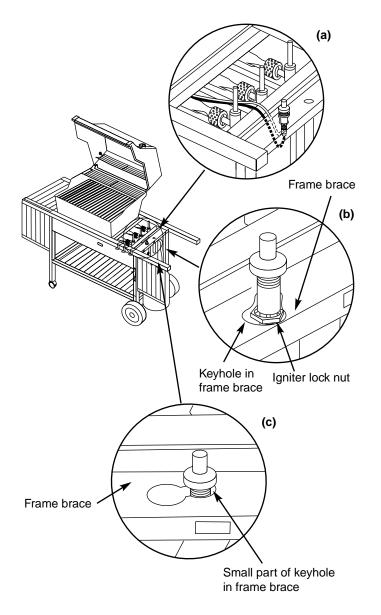



Figure 15

Check that the tank panel tabs are in their slots in the frame brace. Figure 16.

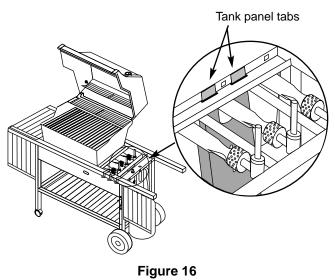

Check that all the burner valves are off.


Valves are shipped in the OFF position, but you should check to be sure. Put the knob on each valve. Check by pushing down and turning clockwise. If they do not turn, they are off, proceed to the next step. Figure 17.

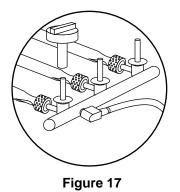

Connect filled LP tank

WARNING: Make sure that the LP tank valve is closed. Close by turning clockwise.

Hook the LP tank onto the fuel scale. Loosen the tank lock wing nut. Swing the tank lock down. Tighten the wing nut. Figure 18.

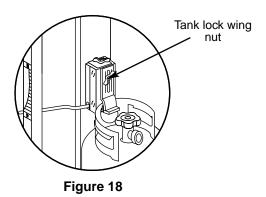


Remove the tape from the hose and regulator.

Route the hose so it will not interfere with the scale indicator rod.

The hose and regulator are connected in the following manner:

Slide back the collar of the quick disconnect on the tank valve. Push the male fitting of the regulator into the quick disconnect, and maintain pressure. Slide the collar closed. Figure 19 (a). Figure 19 (b) shows the quick disconnect engaged and various components of the tank and regulator. Regulator vent hole should be at 3, 6, or 9 o'clock. It should not be pointed up. Figure 19 (c).

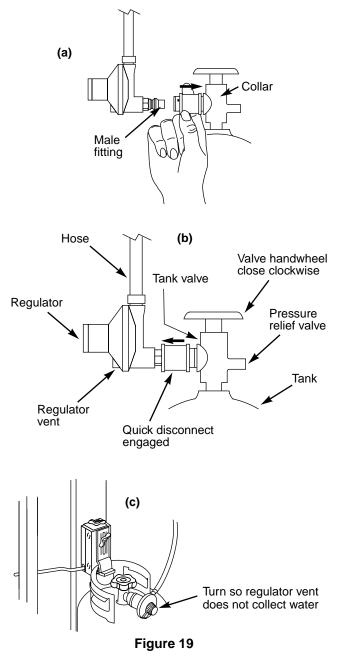

Check for gas leaks

DANGER

Do not use an open flame to check for gas leaks. Be sure there are no sparks or open flames in the area while you check for leaks. This will result in a fire or explosion which can cause serious bodily injury or death and damage to property.


WARNING: You should check for gas leaks every time you disconnect and reconnect a gas fitting.

Note - All factory made connections have been thoroughly checked for gas leaks. The burners have been flame tested. As a safety precaution you should recheck all fittings for leaks before using your Weber Gas Barbecue. Shipping and handling may have loosened or damaged a gas fitting.

WARNING: Perform these leak checks even though your barbecue was assembled.

You will need: a soap and water solution and a rag or brush to apply it.

To perform leak checks: open tank valve by turning the tank valve handwheel counterclockwise. Figure 20.

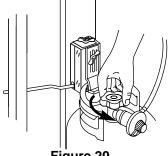



Check for leaks by wetting the connections with the soap and water solution and watching for bubbles. If bubbles form or if a bubble grows there is a leak.

Note - Since some leak test solutions, including soap and water, may be slightly corrosive, all connections should be rinsed with water after checking for leaks.

WARNING: Do not ignite burners when leak checking.

Check:

- a) Hose to manifold connection. Figure 21 (a).
- b) Regulator to tank connection. Figure 21 (b).


WARNING: If there is a leak at a or b, retighten the fitting with a wrench and recheck for leaks with soap and water solution.

If a leak persists after retightening the fitting, turn OFF the gas. <u>DO NOT OPERATE THE BARBECUE</u>. Contact Weber-Stephen Customer Service.

- c) Valves to manifold connections. Figure 21 (c).
- d) The hose to regulator connection. Figure 21 (d).

WARNING: If there is a leak at c or d, turn OFF the gas. <u>DO NOT OPERATE THE BARBECUE</u>. Contact Weber-Stephen Customer Service.

When leak checks are complete, turn gas supply OFF at the source and rinse connections with water.

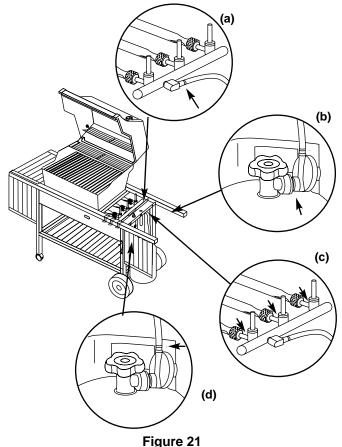


Step 15

Put the control panel back on


Set the control panel in place over both frame braces. (Hold the Crossover Ignition button up while setting the control panel in place.) Place your thumbs over the control panel push-in buttons, and push them into the frame brace until they snap into place. Figure 22 (a).

Push on the burner control knobs. Figure 22 (b).

Replace the right side worktable.

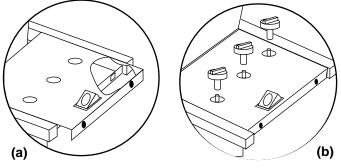



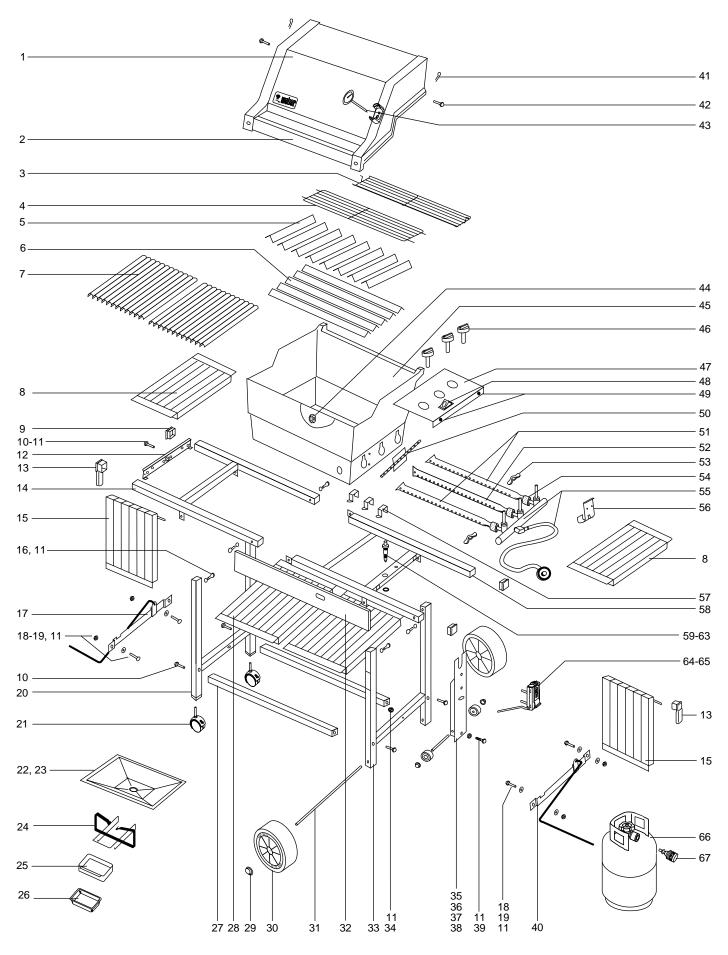

Parts List

All items are single quantities unless otherwise specified.

Parts can be ordered directly from Weber-Stephen Products Company by phone or mail.

Note - Do not return parts to Weber-Stephen Products Co. without first contacting the Customer Service Center by phone or mail. Returning the part may not be necessary.

- 1 Lid (assembly)
- 2 Lid handle
- 3 Warm-Up Basket
- 4 Warming rack
- 5 Stainless Steel short Flavorizer Bars (8)
- 6 Stainless Steel long Flavorizer Bars (5)
- 7 Cooking grates (2)
- 8 Work tables (2)
- 9 Tubing plugs (2)
- 10 1/4-20 x 2 inch bolts (5)
- 11 1/4 inch nylon washers (22)
- 12 Spacer bracket
- 13 Swing table end bracket (2)
- 14 Left frame
- 15 Swing Tables (2)
- 16 1/4-20 x 1/2 inch bolts (6)
- 17 Left hand slide bar assembly
- 18 10-24 x 1 3/4 inch machine screws (4)
- 19 10-24 hex nuts (4)
- 20 Caster frame
- 21 Casters (2)
- 22 Bottom tray mounting rails (2)
- 23 Bottom tray
- 24 Catch pan holder
- 25 Catch pan
- 26 Drip pans (2)
- 27 Frame connectors (2)
- 28 Accessory trays (2)
- 29 Wheel hub caps (2)
- 30 Wheels (2)
- 31 Axle
- 32 Front panel
- 33 Wheel frame
- 34 1/4-20 hex nut
- 35 Tank glides (2)
- 36 Glide axle
- 37 Glide hubcaps (2)
- 38 Tank panel
- 39 1/4-20 x 1 1/4 inch bolt

Contact: Weber-Stephen Products Company Customer Service Center 250 South Hicks Road Palatine, IL 60067-6241 (708) 705-8660 (800) 446-1071

- 40 Hair pin cotters (2)
- 41 Hinge pins (2) (Hardware size: 1/4 x 1 1/2 inch clevis pin)
- 42 Thermometer
- 43 1/4-20 keps nut
- 44 Cooking box
- 45 Burner control knobs (3)
- 46 Control panel
- 47 Igniter button
- 48 Control panel push-in buttons (2)
- 49 Crossover tube
- 50 Front or Back burner
- 51 Center burner
- 52 Stainless Steel wing nuts (2)
- 53 Spider Stopper Guards (3)
- 54 Manifold assembly
- 55 Manifold bracket
- 56 Tool holders (3)
- 57 Right frame
- 58 Igniter
- 59 Igniter lock nut
- 60 Igniter wire (black)
- 61 Igniter wire (white)
- 62 Gas catcher ignition chamber
- 63 Fuel scale (assembly)
- 64 1/4-20 wing nuts (2)
- 65 Right hand slide bar assembly
- 66 LP tank
- 67 Filler adapter

Note - The hardware size of nuts, bolts and screws is given. For example "1/4-20 x 2 inch bolt" means a bolt 1/4 inch in diameter with 20 threads to the inch, 2 inches long. On a small screw for example, "6-32 x 1/2 inch screw" means a number 6 screw, with 32 threads to the inch, 1/2 inch long.

WARNING:

Use only Weber factory authorized parts. The use of any part that is not factory authorized can be dangerous. This will also void your warranty.

A FINAL WORD OF THANKS

Thank you for choosing a Weber Barbecue. Our family bere at Weber has worked hard to produce the highest quality products for your satisfaction.

While we give much attention to our products, an occasional error may occur. Our knowledgeable Customer Service staff is prepared to belp you with any problems with parts or assembly. Call our toll free number 1-800-446-1071. For quicker service, please have your owner's manual available for reference. We also welcome any comments or suggestions you might have regarding our products.

We wish your family the best in outdoor cooking enjoyment.

Weber-Stephen Products Company Customer Service Center 200 East Daniels Road Palatine, Illinois 60067-6266

