



Owner's Manual Version 1.0



PRECAUTIONS AND NOTICES

■ Important Information

Please Read Carefully Before Using This Product.

This product is intended to safely provide turn by turn 7) instructions to get you to a desired destination. Please make certain that all persons using this navigation system carefully read these precautions and the following instructions fully.

- This product is not a substitute for your personal judgment. Any route suggestions made by this navigation system may never supersede any local traffic regulations or your personal judgment and/or knowledge of safe driving practices. Do not 8) follow route suggestions if the navigation system instructs you to perform an unsafe or illegal maneuver, places you in an unsafe situation, or routes you into an area which you consider

 If unsafe.
- Glance at the screen only when necessary and safe to do so. If prolonged viewing of the screen is necessary, pull over in a safe and legal manner and location.
- 3) Do not input destinations, change settings, or access any functions requiring a prolonged view of the monitor and/or remote control while you are driving. Pull over in a safe and legal manner and location before attempting to access the system.
- 4) Do not use the navigation system to route you to emergency services. Not all locations of emergency services such as police and fire stations, hospitals and clinics are contained in the database. Please use your own judgment and ask for directions in these situations.
- 5) The map database used in the navigation system is the most recent map data available at the time of production. Because of changes in streets and neighborhoods, there may be situations where the navigation system is not able to route you to your desired destination. In these cases, use your own judgment.
- 6) The map database is designed to provide you with route suggestions and does not take into account the relative safety of a suggested route or of factors which may affect the time required to reach your destination. The system does not reflect road closures or construction, road characteristics (i.e. type of road surface, slope or grade, weight or height restrictions, etc.), traffic congestion, weather conditions, or any other factors which may affect the safety or timing of your driving experience. Use your own personal judgment if the navigation system is unable to provide you with an alternate route.

- There may be situations where the navigation system displays the vehicle's location erroneously. Use your own driving judgment in this situation, taking into account current driving conditions. Please be aware that in this situation the navigation system should correct the vehicle's position automatically. However, there may be times where you may have to correct the position yourself. If this is the case, pull over in a safe and legal manner and location before attempting operation.
- Make certain that the volume level of the navigation system is set to a level which still allows you to hear outside traffic and emergency vehicles.

If there is anything in the manual about the operation of the navigation system which you are uncertain about, please contact your local Alpine authorized navigation dealer or Alpine at 1-888-NAV-HELP (1-888-628-4357) before using the navigation system.

FCC Compliance Statement

Blackbird has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide more reasonable protection against harmful interference in a residential installation, and are more stringent than "outdoor" requirements.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, you are encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
 Increase the separation between the equipment and
- •Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ·Consult an experienced radio/TV technician.

WARNINGS

Points to Observe for Safe Usage

Read this manual carefully before using this system. It contains instructions on how to use this product in a safe and effective manner. Alpine cannot be responsible for problems resulting from failure to observe the instructions in this manual.

This manual uses various pictorial displays to show you how to use this product safely and to alert you to potential dangers resulting from improper connections and operation. Following are explanations of these pictorial displays. It is important to fully understand the meanings of these pictorial displays in order to use this manual and the system properly.

↑ WARNING

This symbol means important instructions. Failure to heed them can result in serious injury or death.

DO NOT OPERATE ANY FUNCTION THAT TAKES YOUR ATTENTION AWAY FROM SAFELY DRIVING YOUR VEHICLE.

Any function that requires your prolonged attention should only be performed after coming to a complete stop. Always stop the vehicle in a safe location before performing these functions. Failure to do so may result in an accident.

KEEP THE VOLUME AT A LEVEL WHERE YOU CAN STILL HEAR OUTSIDE NOISE WHILE DRIVING.

Failure to do so may result in an accident.

MINIMIZE DISPLAY VIEWING WHILE DRIVING.

Viewing the display may distract the driver from looking ahead of the vehicle and cause an accident.

DO NOT DISASSEMBLE OR ALTER.

Doing so may result in an accident, fire or electric shock.

USE THIS PRODUCT AS SPECIFIED.

Use for other than its designed application may result in fire, electric shock or other injury.

KEEP SMALL OBJECTS SUCH AS BATTERIES OUT OF THE REACH OF CHILDREN.

Swallowing them may result in serious injury. If swallowed, consult a physician immediately.

DO NOT PLACE HANDS, FINGERS OR FOREIGN OBJECTS IN INSERTION SLOTS OR GAPS.

Doing so may result in personal injury or damage to the product.

USE THE CORRECT AMPERE RATING WHEN REPLACING

Failure to do so may result in fire or electric shock.

DO NOT BLOCK VENTS OR RADIATOR PANELS.

Doing so may cause heat to build up inside and may result in fire.

⚠ CAUTION

This symbol means important instructions. Failure to heed them can result in injury or material property damage.

HALT USE IMMEDIATELY IF A PROBLEM APPEARS.

Failure to do so may cause personal injury or damage to the product. Return it to your authorized ALPINE dealer or the nearest ALPINE Service Center for repairing.

PRECAUTIONS

Temnerature

Be sure the temperature inside the vehicle is between +45°C (+113°F) and -0°C (+32°F) before turning your unit on

Fuse Replacement

When replacing the fuse(s), the replacement must be of the same amperage as shown on the fuse holder. If the fuse(s) blows more than once, carefully check all electrical connections for shorted circuitry. Also have your vehicle's voltage regulator checked.

Servicing the Unit

If you have problems, do not attempt to repair the unit yourself. Return it to your ALPINE dealer or the nearest ALPINE Service Station for servicing.

Installation Location

- Make sure the PMD-B100 will not be exposed to:
- Direct sun and heat Excessive dust
- High humidity
 Excessive vibrations

Characteristics of LCD Panel

- After turning the system off, a slight ghost of the image will remain temporarily. This is an effect peculiar to LCD technology and is normal.
- Under cold temperature conditions, the screen may lose contrast temporarily. After a short warmup period, it will return to normal.
- The LCD panel is manufactured using an extremely high precision manufacturing technology. Its effective pixel ratio is over 99.99%. This means that 0.01% of the pixels could be either always ON or OFF.

Using Headphones

If ACC or the monitor's power source is turned off, a loud noise may be produced through the headphone jack. Be sure to remove the headphones from your ears before you turn the monitor off.

USER AGREEMENT

In using this Blackbird Portable Navigation System (hereinafter referred to as "System"), which includes Alpine Electronics, Inc. ("Alpine") Specifications, Space Machine, Inc. ("Space Machine") Software and NAVTEQ North America, LLC. ("NAVTEQ") Database, you are bound by the terms and conditions set forth below. By breaking the seal on the System and using your copy of the System, you have demonstrated your agreement to the terms and conditions of this Agreement. You should, therefore, make sure that you read and understand the following provisions.

The System may not be copied, duplicated or otherwise modified, in whole or in part, without the express written permission of Alpine, Space Machine and NAVTEQ.

The System may not be transferred or sublicensed to any third party for profit, rent or loan or licensed for reuse in any manner.

The System may not be decompiled, reverse engineered or otherwise disassembled, in whole or in part.

The System may not be used in a network or by any other manner of simultaneous use in multiple systems.

The System is intended solely for personal use (or internal use where the end-user is a business) by the consumer.

The System is not to be used for commercial purposes.

Neither Alpine, Space Machine nor NAVTEQ guarantees to the customer that the System meet the specific objectives of the user.

Neither Alpine, Space Machine nor NAVTEQ shall be responsible for any damages caused by the use of the System to the actual user and to any third party.

The warranty on the System shall not extend to an exchange or refund due to misspelling, omission of letters, or any other cosmetic discrepancy in layout found in the System.

The right to use the System shall expire either when the user destroys this software, or when any of the terms for use is violated and Alpine, Space Machine and/or NAVTEQ exercise the option to revoke the license to use this software.

The terms and conditions hereof apply to all subsequent users and owners as well as to the original purchaser.

The NAVTEQ Database may include or reflect data of licensors, including Her Majesty The Queen in right of CANADA. Such data is licensed on an "AS IS" basis. The licensors, including Her Majesty The Queen, make no guarantees, representations or warranties respecting such data, either express or implied, arising by law or otherwise, accuracy or fitness for a particular purpose.

The licensors, including Her Majesty The Queen, shall not be liable in respect of any claim, demand or action, irrespective of the nature of the cause of the claim, demand or action alleging any loss, injury or damages, direct or indirect, which may result from the use or possession of the data or the NAVTEQ database. The licensors, including Her Majesty The Queen, shall not be liable in any way for loss of revenues or contracts, or any other consequential loss of any kind resulting from any defect in the data or the NAVTEQ database.

End User shall indemnify and save harmless the licensors, including Her Majesty The Queen and the minister, and their officers, employees and agents from and against any claim, demand or action, irrespective of the nature of the cause of the claim, demand or action, alleging loss, costs, expenses, damages or injuries (including injuries resulting in death) arising out of the use or possession of the data or the NAVTEQ database.

TABLE OF CONTENTS

Warnings		E
User Agreement	. 4	E
Table of Contents	. 5	D
Installation	. 6	D
How to Mount Blackbird	. 6	Setup
To Remove the Navigation System from	1	Ċ
the Cradle		
Battery Installation	. 7	
How to Reset the System · · · · · · · · · · · · · · · · · · ·	. 7	
System Features	. 8	
Basic Operations	10	
To Turn On Power	10	
To Turn Off	10	
Set a Destination and Go!	10	C
Map Function · · · · · · · · · · · · · · · · · · ·	12	
Setting Estimate Time Display		
Setting the Map Orientation		
Repeating the Announcement	12	S
Zoom In/Out Map	12	S
GPS Status		C
Battery Status · · · · · · · · · · · · · · · · · · ·	12	
Setting a Destination Directly		
from Map Display	13	
Switching Map Display · · · · · · · · · · ·	13	Inforr
Destination	14	S
Setting a Destination by Address		V
Confirm Destination Screen		V
Setting a Destination by Places		V
Setting a Destination from the	-	Enter
Address Book · · · · · · · · · · · · · · · · · ·	16	L
Setting a Destination by Recently		P
Entered Destination	18	H
Setting a Destination by Coordinates		N
Setting a Destination by Intersection		Upda
Options		Н
Find Local Places		a
Saving a Destination into		In Ca
the Address Book	20	In the
Setting Waypoints · · · · · · · · · · · · · · · · · · ·		A
Home		0
Finding a Way Home	22	Speci
Finding Alternative Way to Go Home	22	Index
One-Touch Go Home	22	Limite
Route		
Recalling the Maneuver List	20	
during Guidance	23	
Finding Alternate Route	23	
Finding Detour	23	
Delete Route	23	
Doloto Houto		

Daniel Program d National Control	E.13
Precautions and Notices · · · · · 2	Edit 24
Warnings 3	Editing Home 24
User Agreement 4	Editing Address Book
Table of Contents 5	Deleting Previously Saved
Installation · · · · · 6	Destinations
How to Mount Blackbird 6	Setup 26
To Remove the Navigation System from	Customizing Display 26
the Cradle · · · · · · 6	Setting the Map Color 26
Battery Installation 7	Displaying and Editing
How to Reset the System · · · · · 7	Icons on the Map
System Features 8	Map Orientation
Basic Operations	Background Color
To Turn On Power	Trail
To Turn Off	Brightness
Set a Destination and Go! 10	Customizing Guidance
Map Function · · · · · 12	Turning Voice On and Off · · · · · 27
Setting Estimate Time Display · · · · 12	Changing Navi Mix Volume 27
Setting the Map Orientation 12	Setting Estimate Time Display 27
Repeating the Announcement · · · · · 12	Setting up the Clock · · · · · · · 27
Zoom In/Out Map · · · · · 12	Switching the Measuring Unit 27
GPS Status 12	Configuring System Settings · · · · 27
Battery Status12	FM Transmitter Setup 27
Setting a Destination Directly	Frequency
from Map Display · · · · · · 13	Remote Control 27
Switching Map Display · · · · · 13	Information · · · · · · 28
Destination	Simulating Navigation
	Viewing Trip Information
Setting a Destination by Address 14	
Confirm Destination Screen 14	Viewing GPS Status
Setting a Destination by Places · · · · · 16	Viewing System Information 29
Setting a Destination from the	Entertainment
Address Book	Listening to Audio
Setting a Destination by Recently	Playing Music on Your Blackbird 30
Entered Destination	How to Listen to Guidance and
Setting a Destination by Coordinates · · 18	Music from Your Car Stereo · · · · · 31
Setting a Destination by Intersection · · 19	Updating the System 31
Options 20	How to Update the New Software
Find Local Places 20	and Map Database
Saving a Destination into	In Case of Difficulty
the Address Book · · · · · 20	In the Box
Setting Waypoints · · · · · 21	Accessories
Home 22	Optional Accessories · · · · · 33
Finding a Way Home	Specifications
Finding Alternative Way to Go Home 22	Index
One-Touch Go Home	Limited Warranty
Route 22	Limited Wallanty


INSTALLATION

■ How to Mount Blackbird


⚠ WARNING


Improper installation may make the navigation system fall out from the cradle while driving. Please make sure all locks and knobs are turned tight.


Do not install the navigation while driving.

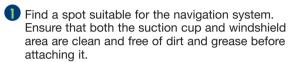

Stick the suction cup mount against the windshield. Turn the knob to activate the vacuum to lock the position.

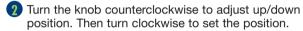

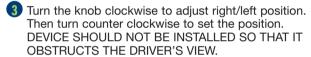

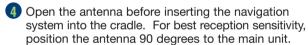

- Slide the navigation system into the cradle until you hear a click sound.
- Plug the cigarette lighter charger into the cigarette lighter socket.

↑ CAUTION


Remove the navigation system when you are away from the vehicle to prevent theft.


■ To Remove the Navigation System from the Cradle




- Press and hold the eject button on the cradle.
- Grasp the navigation system behind the antenna and remove by sliding up and out of the cradle.


Note to California consumers: California Vehicle Code 26708 prohibits the placement of any object on windows. Refer to your authorized Alpine dealer for other installation options.

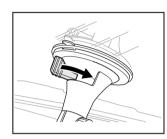


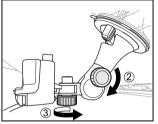

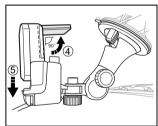

■ Battery Installation

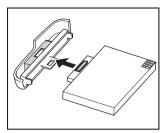

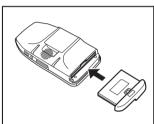

⚠ WARNING

Always turn off power to the system before installing or removing the battery. Failure to do so will result in damage to your system.

- Place Blackbird face down on a flat surface.
- Press the battery door and pull away from the main unit body.
- 3 Attach the battery to the battery door until a click sound-heard.
- 4 Insert and slide the battery assembly back into the main unit until a click sound is heard.

Note: It is recommended that the battery be charged using the supplied AC adapter for 8 hours before using the system. Avoid removing this rechargeable battery. If the battery needs to be replaced, dispose of it in accordance with local hazardous materials requirements.

■ How to Reset Blackbird

In the event the system requires a reset, pull over in a safe and legal manner before doing so. Insert a paper clip or similar object into the reset hole (located under the GPS antenna in the upper left hand corner of the recessed area) and depress the reset button for at least 1 second. Then, to restart the system, press and hold the power button for 2 seconds. The system will re-start.

SYSTEM FEATURES

Blackbird Portable Navigation System



Battery Charging Status Indicator


This illuminates when the system is being charged or requires charging. The battery will typically charge to full from empty in about three hours.

GREEN Battery is fully charged. RED Battery needs charging. AMBER Battery is charging.

Congratulations and thank you for purchasing the Alpine Blackbird Portable Navigation System. We hope you enjoy using this exciting product and trust that it will make your driving experience more comfortable, stress-free, and entertaining. The Blackbird Portable Navigation System provides an easy-to-use user interface. clear, easy-to-understand spoken driving instructions, and award winning design all in a portable product. Blackbird is built upon Alpine's history of navigation success in North America. Please read this manual carefully. If you have any further questions about Blackbird's operation, feel free to call Alpine at 1-888-NAV-HELP (628-4357) for technical assistance.


Main Menu 💷



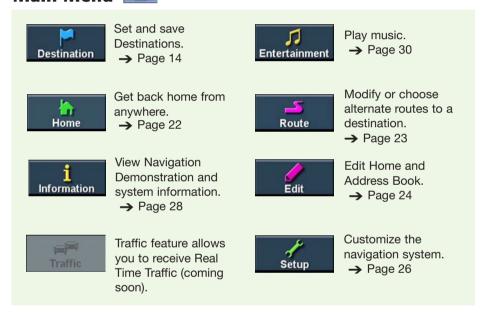

Cradle with Cigarette Lighter Charger

Optional External GPS Antenna Accessory Available (Model # PMD-ANT1)

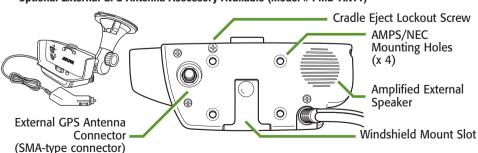

BASIC OPERATION

To Turn On Power

Power Button



Press and hold Power Button for 2 seconds.



2 Opening screen appears.

IMPORTANTI

This product is designed to assist you while you drive your vehicle. It should not be used as a substitute for your personal judgment.

Always observe existing traffic regulations. For safety, program the system when vehicle is stopped. See your Owner's Manual for complete instructions.

Read carefully.
Touch I Accept to display map.



The last-known current location is indicated on the map.

To Turn Off

Press and hold Power Button for 2 seconds.

Set a Destination and Go!





Touch Main Menu

Select Destination
from Main Menu, or
press Destination button.



Scroll the list. Select desired place list. (In this example, ATMS is selected.)



Select the place with correct address.

For Map Function, see page 12.

The following example briefly describes how to input a destination.



Select desired method. (In this example, Places is selected.)



Select the search method. (In this example, Sort By Name is selected.)



8 Select OK to Proceed to set the destination.

To Go Home, see page 22.



3 Select a search method. (In this example, By Place Type is selected.)



6 Type name of a place.
If more than one place with the same name exist, sort method screen appears.



Map is displayed. Follow the navigation.

To Find other routes, see page 23.

MAP FUNCTION



Setting Estimate Time Display



Click this icon to switch between Estimated Time Remaining and Estimated Time of Arrival.

Note: The time estimates are based on the average speed. The estimate time will vary depending on vehicle speed. The arrow always points toward the destination.

Setting the Map Orientation

Click icon to switch between North up and Heading Up views.



North Un

In north up view, north is always at the top of the display. This makes it easy to determine your current heading with respect to the map.



Heading Up

In heading-up view, the current direction is always pointing to the top of the display.

This makes it easy to see the direction of the next turn on the map.

Repeating the Announcement



Click icon to repeat the guide announcement.

Zoom In/Out Map



Click icon to display scroll bar.



Touch ▲▼ or blue bar to zoom the map in or out.

The scroll bar disappears automatically after 2 seconds. Minimum scale is 1/16th mile and Maximum is 350 miles.

GPS Status



Click icon to view GPS receiving condition information from satellite.

Battery Status





Shows status of the battery. (Lightning bolt) indicates that the battery is currently being charged. (3 bars) indicates that the battery has more than 60% charge. (2 bars) indicates that the battery has more than 40% charge. (1 bar) indicates that the battery has about 10% charge remaining.



■ Setting a Destination Directly from Map Display

- 1 Touch anywhere on map screen. The current location arrow changes to Crosshair Cursor on the screen.
- Move the cursor to the new desired street.

Note: Use Map Scale Bar to zoom out the map if the destination is far from the current location.

- 3 Touch Select .
- Select Set as Destination.
- 5 Touch OK to Proceed on the confirmation screen.

Note: To use other functions on the confirmation screen, see page 14 for details.








Switching Map Display

Touch the Current Position to switch between Map and Arrow modes. You may also configure the system to switch between Map and Split screen modes (see page 27).

Route Mode = Arrow (default mode)

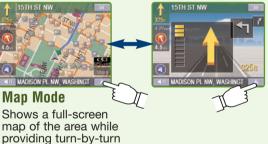

Arrow Mode

Displays threesuccessive arrow maneuvers all the way to your destination while providing turn-byturn guidance prompts.

Route Mode = Split



Split Arrow/ Map Mode

Displays a large arrow and larger next-street-name font along side a map screen while providing turn-byturn guidance prompts.

DESTINATION

- Setting a Destination by Address
- 1 Go to Main Menu .
 - → Destination → Address Address



Finding a Destination by Street Name First

- Select Input Street Name.
- 3 Type the first characters of the street name. If there are unique matches, the system will automatically display a short list of street names. Touch OK. The list of applicable street names appears.
- Select the desired street name from the list.
- 5 Type the street number and touch OK.
- Select the desired city. If there are multiple matches, the system will list cities containing the street name and address number that you keyed in.
- Confirmation screen appears. See below for details.







■ Confirm Destination Screen

OK to Proceed

Set the destination and display a map.



Change Method

Find an alternative way. (Refer to page 22.)





Change State

If you want to choose a different state from the one shown on the screen, touch **Change** to switch to a different state.



Selecting Letters

Selected characters are displayed.

- Deleting one letter
- Adding one space
- Going to number screen

Finding a Destination by City Name First

- Select Input City Name.
- Type the first few characters of the city name and press OK.

If there are unique matches, the system will automatically display a short list of city names. Select the desired city.


Type the first characters of the street name. Touch OK.

The list of applicable street names appears. Select the desired street.

- 5 Enter the street number.
- 6 Confirmation screen appears. See below for details.






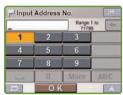

Option

Find Local Places → P20 Set as Waypoint → P21 Add to Address Book → P20

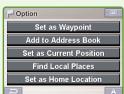

Map

Check the destination on the map. Touch to go back to the confirmation screen.



DESTINATION

■ Setting a Destination by Places

You can select from approximately 6 Million Point-of-Interest (POI) locations stored inside your Blackbird Portable Navigation System. These destinations are sorted by Place Name or by Place Type and are listed in order of distance from your current location.

- Go to Main Menu
 - → Destination
 - → Places Places

Finding a Destination by Place Name

- 2 Select By Place Name.
- **3** Type the desired place name. Touch **OK**. A list of place names appears.

Note: Use the arrows to the right of the list to move the yellow highlight. This will show detailed address information and phone number (if available) for each entry in the Places database.

- Select the place with correct address. For emergency locations such as Police Stations, Hospitals, etc., please verify availability before proceeding to such locations.
- Confirmation screen appears. Touch OK to Proceed to set the destination and start guidance.



By Place Name

By Place Type

Search Method

in CALIFORNIA



■ Setting a Destination from the Address Book

- Go to Main Menu
 - → Destination
 - → Address Book
- Select the desired destination.
- 3 Confirmation screen appears.
 Touch OK to Proceed to set your destination and start receiving turn-by-turn navigation instructions.

To save an address in the address book, see page 20.





Finding a Destination by Place Type

- Select By Place Type.
- Select a desired POI Category. There are 37 POI categories to choose from including ATMS, Banks, Gas Stations, Grocery Stores, Hotels, Parking Lots, Restaurants and more.
- Select Search Method.





Sort by Distance

- The list of place names appears in order of distance from the current vehicle position within the state region being searched.
- 6 Select the place → OK to Proceed



Sort by Name

5 Follow 3 to 5 in "Finding a Destination by Place Name" on Page 16.

Within a City

- 5 Type the city name and select a city.
- The list of Places appears in order of the distance from the selected city. Select the desired place.
- Touch OK to Proceed on the confirmation screen.



DESTINATION


■ Setting a Destination by Recently Entered Destination

- Go to Main Menu
 - → Destination
 - → Recent Recent
- The list of recent destinations appears. Select the destination.
- 3 Confirmation screen appears.
 Touch OK to Proceed to set the destination and start guidance.

Note: To use other functions on the confirmation screen, see page 14 for details.

■ Setting a Destination by Coordinates

- Go to Main Menu
 - → Destination
 - → Coordinate Coordinate
- Enter the Latitude of your destination. Touch OK.
- 3 Enter the Longitude of your destination. Touch **OK**.
- Confirmation screen appears. Touch OK to Proceed to set the destination and start guidance.

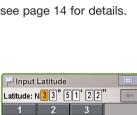

8

οк

9

Select Previous Destination

1 SANTA MONICA PL

TOMMY

ALPINE

BEN





- Setting a Destination by Intersection
- Go to Main Menu
 - → Destination
 - → Intersection Intersection

Finding a Destination by Street Name

- 2 Select Input Street Name.
- Type in the street name.

The list of applicable street names appears. Select the desired street.

- Input the second street name. If there is only one street crossing with the first street, the name of the street automatically appears.
- 6 Confirmation screen appears. Touch OK to Proceed.

Note: To use other functions on the confirmation screen, see the bottom of page 14 for details.









Finding a Destination by City Name

If you know the city name of the intersection you are searching, select Input City Name. The choice of the street is narrowed down automatically. This saves time in entering the street information.

- 2 Select Input City Name.
- 3 Type the city name, then select the city from the list.
- 4 Input the first street name.
- Input the second street name.
- Touch OK to Proceed on the confirmation screen.

OPTIONS

■ Find Local Places

The navigation system can display Points of Interest (POI) around the cursor position, when you scroll the map. As with POI categories, with the local places search you can chose from 37 categories including ATMS, Banks, Gas Stations, Grocery Stores, Hotels, Parking Lots, Restaurants and more.

How to Find Local Places Directly from the Map

- 1 Touch anywhere on map screen. The current location arrow changes to cross hair cursor on the screen.
- 2 Touch Select
- 3 Select Find Local Places. Select the desired category.
- 4 Select the desired place.
- S Touch OK to Proceed on the confirmation screen.

Note: To use other functions on the confirmation screen, see page 14 for details.

How to Find Local Places from the Destination Menu

You can also find local places from the Destination Menu.

- 2 On the confirmation screen, touch Option.
- Follow steps 3 to 5 above in "How to Find Local Places Directly from the Map".

■ Saving a Destination into the Address Book

Any destination can be saved into the Address Book.

- 1 Select a destination using any method.
- Prom the confirmation screen, select Option.
- 3 Touch Save in Address Book.





0.6 mi

Select POI Name

18537 S WESTERN AVE GARDENA, CA 310-532-0999

YAKITORI & HAKATA RA 0.6 mi

RESTAURANT SHU CHA 0.7 mi

MS SAIGON CAFE

■ Setting Waypoints

You can set up to 10 waypoints between your current location and your destination. The final destination must be set before entering any waypoints.

How to Set a Waypoint Directly from Map

- 1 Touch anywhere on map screen.

 The current location arrow changes to cross hair cursor on the screen.
- Move the cursor to the desired waypoint.
- 3 Touch Select
- Select Set as waypoint and select Re-calculate.
- When the route search is complete, the current location is displayed. The map navigates you to the first waypoint.





How to Set a Waypoint from the Destination Menu

You can also find local places from Destination Menu.

- Enter a destination by using the method on pages 14 through 19 from Destination Menu.
- 2 On the confirmation screen, select Option.
- 3 Select Set as Waypoint and select Re-calculate.

How to Set a Waypoint from the Address Book

- 1 Enter in a destination from the Address Book (see page 16).
- At the confirmation screen, touch Option → Set as Waypoint.
- Touch Re-Calculate to recalculate a route which includes your waypoint.
- Input Name screen appears.
 Type the desired name and touch OK.

Note: For the details of selecting letters, see page 15.

5 System returns to the Main Menu screen.

Note: To display the saved destination on the map, see page 16, "Setting a Destination from the Address Book".



HOME



■ Finding a Way Home

You can get home from anywhere once the home address is set from Edit Menu.

- 1 Go to Main Menu III
 - → Home
- Touch OK to Proceed on the confirmation screen.
- 3 Follow the map and go home.



To edit the Home Address, See Page 24.



■ Finding Alternate Way to Go Home

- · Quickest Way
- · Shortest Route
- · Maximize Freeway
- · Minimize Freeway
- · With/Without Ferry
- · With/Without Toll Road



One-Touch Go Home

For an even easier way to immediately get guidance instructions to your home, you can press and hold the flag provided on the circle key for 2 seconds. This will instantly display the destination confirmation screen and guide you to your home location.

ROUTE



■ Recalling the Maneuver List during Guidance

You can view a list of street names and upcoming turns and streets.

- Go to Main Menu → Route
- 7 Touch Maneuver List.
- 3 List of upcoming streets and turns appears on the screen.

To preview a specific point, select a street name/maneuver on the list.

To go back to Route List, Go to Main Menu

→ Route





■ Finding Alternate Route

Touch Main Menu

- → Route
- → Change Method

You can choose and re-calculate a different route based on Quickest Route, Shortest Route, Maximize Freeway, Minimize Freeway, with/without Ferry and/or Toll Road.

■ Finding Detour

Touch Main Menu

- → Route
- → Detour

The system automatically calculates and displays detour.

■ Delete Route

Go to Main Menu → Route






→ Delete Route → Yes

Note: After deleting the destination, you can not select Route Menu until the next destination is set. To set up the destination, see Destination Menu on Page 14.



EDIT

Locations and Home addresses saved in the Address Book can be edited for quick recall. Also information including phone numbers and icons can be modified.

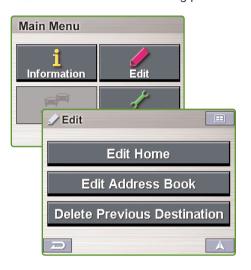

■ Editing Home

- ① Go to Main Menu □□□.

 → Edit

 ✓
- 7 Touch Edit Home.
- 3 "Edit Home Point" screen appears. See below for details.



Name Touch Name to change the display name of the stored location.

Note: For the details of selecting letters, see page 15.



Input Name Screen



- **■** Editing Address Book
- ① Go to Main Menu □□□.

 → Edit ■
- 7 Touch Edit Address Book
- The list of addresses appears. Select the destination you need to modify.
- "Edit Address Item" screen appears. See below for details.

Note: Select **DELETE ALL** to delete all addresses saved in the address book.

- Deleting Previously Saved Destinations
- ① Go to Main Menu □□□.

 → Edit ■
- Touch Delete Previous Destination.
- Select destination you need to delete.
- Touch YES to delete the destination on the confirmation screen.

Note: Select **DELETE ALL** to delete all recently entered destinations.

- **Tel** Touch **Tel** to change the telephone number of the stored location.
 - Touch Map to preview the location
- Map Touch Map to preview the location on the map.

To go back to Edit Menu,

Main Menu

→ Edit

Delete Touch **Delete** to delete the stored

location.

Icon Touch **Icon** to change the icon of

the stored location on the map.



Edit Telephone Screen



Delete Screen




Change Icon Screen

SETUP

You can customize Display, Guidance, Clock, Measuring Unit and FM frequency settings from the Setup Menu.

- Go to Main Menu
- 2 Select Setup setup.
- 3 Setup screen appears.

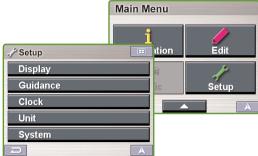

■ Customizing Display

Go to Main Menu

→ Setup Setup

→ Display

Setting the Map Color

Day - a bright tone screen

Night - a dark tone screen

Auto - switches automatically between Day and Night modes

Displaying and Editing Icons on the Map

POI Icons, the Home Icon and Icons used in the Address Book can be turned on and off from the Display Setup Menu. You can also change these icons.

Map Orientation

North Up or Heading Up map views can be set here. You can also change between North Up and Heading Up views directly in the map screen. See page 12.



Background Color

You can choose between gray or blue backgrounds for all menu screens.

Trail

The Trail feature allows you to turn on and off trail dots that appear wherever the vehicle icon traverses. This is especially helpful for off-road enthusiasts.

Brightness

The brightness of the screen can be adjusted.



■ Customizing Guidance

Turning Voice On and Off

This allows you to turn ON or OFF guidance voice prompts.

Changing Navi Mix Volume

This allows you to vary the volume of the voice prompts with respect to the music.

Setting Estimate Time Display

Estimated Time of Arrival (ETA) or Estimated Time Remaining (ETR) can be set here. You can also change between ETA and ETR directly in the map screen. See page 12.

Setting up the Clock

You can set the Time Zone and Daylight saving setting to fit your region.



Guidance Setup

Guidance Time Arrival

Route Mode Split

NAVI MIX Vol.

■ Switching the Measuring Unit

You can choose the unit of measure between Miles and Kilometers



System Setup

Frequency

Remote Control

■ Configuring System Settings

FM Transmitter Setup

When set to ON, the FM Transmitter broadcasts music and voice prompts (if set to ON) to an available frequency on your FM car radio. See page 31

Frequency

Allows you to change the frequency to find the best available station for broadcasting audio to your FM radio. See page 31

Remote Control

This feature allows you to turn ON the ability for the system to receive remote control signals (optional RUE-4140 remote control available separately). Turning OFF the remote control extends battery life while the system is in handheld mode and detached from the cradle or AC adapter.

INFORMATION

■ Simulating Navigation

You can watch a demonstration of the navigation system's voice and screen guidance.

To Start a Demonstration

- Go to Main Menu
- 2 Select Information information ...
- 3 Select Start Demo.
- Demonstration starts.

Information Demo Start Demo GPS Status System Information Trip Information Vehicle Connections

To Stop a Demonstration

- Go to Main Menu
- 2 Select Information information
- 3 Select Stop Demo.
- The demonstration will end.

Information Demo Stop Demo GPS Status System Information Trip Information Vehicle Connections

■ Viewing Trip Information

The odometer displays the route distance and time traveled.

- Go to Main Menu
 - → Information information
- Select Trip Information.



Here, you can see different types of information pertaining to your current trip.

Driving Average: Average speed since Trip Info was reset.

Overall Average: Average speed since start of trip.

Maximum Speed: Maximum speed reached on this trip.

Driving Time: Time vehicle has been moving since the trip was reset.

Idle Time: Time vehicle has been stopped (not moving) since the trip was reset. **Total Time:** Total elapsed time on the trip which is always the driving time plus idle time.



■ Viewing GPS Status

You can view the dynamic location information received from satellite such as signal strength, compass (direction information), latitude/longitude, approximate altitude, and speed. This feature allows you to view GPS satellite signal information. An explanation of the messages is shown below.

- An explanation of the messages is shown below.

 Go to Main Menu

 Information
- 2 Select GPS Status.



The following messages are displayed while the GPS receiver is tracking satellites:

- "Locating GPS Satellites": Blackbird searches the sky looking for GPS satellites.
- "Acquiring GPS Signal": Blackbird acquires positioning information transmitted from 1 to 3 tracked satellites while searching for more satellites (minimum 4 needed).
- **"Fixing GPS Position":** Blackbird requires continuous signals from 4 or more tracked satellites (for 30 seconds) in order to accurately fix your position.

"Temporary Poor GPS Coverage":

Thunderstorms, dense foliage or surrounding tall buildings may cause temporary loss of position fix (acceptable if under 30 seconds).

"Poor GPS Signal, Lost Position Fix":


You may have entered an area where consistently poor GPS signal (lasting 30 seconds or more) makes it impossible to maintain a position fix.

"No Line of Sight, Lost GPS Tracking": You are in an area where line of sight to GPS satellites has been blocked.

■ Viewing System Information

You can check software application, database version, and other information in this screen. Make a note of this information and refer to it whenever you communicate with Alpine Tech Support or your Alpine authorized dealer.

- 2 Select System Information.

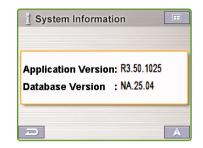

ENTERTAINMENT

■ Listening to Audio



M.I.X.

Touch M.I.X. to shuffle songs.

Touch M.I.X. again to cancel the shuffle.

REPEAT

Touch **REPEAT** to repeat songs. Touch **REPEAT** again to cancel the repeat.

■ Playing Music on Your Blackbird

You can play MP3 or WMA music files* from your SD or MMC card. Your music can be arranged in subfolders for easy retrieval when using your Blackbird device.

- *Blackbird only currently supports MP3 and WMA files without DRM.
- Insert an SD or MMC card containing folders with music files in the SD/MMC slot. The system will scan for music.
- Touch Folder Search to search the memory card.
- Select a folder, then select a song to play. The music will start playing the song you selected.

UPDATING THE SYSTEM



■ How to Listen to Guidance and Music from Your Car Stereo

Turning on the Transmitter and Playing Music from Your Radio

You can setup Blackbird to broadcast music and navigation voice guidance directly to your FM radio.

- Plug the cradle into your vehicle's cigarette lighter/power outlet.
- nsert Blackbird into the cradle (See page 6 for details).
- 3 Turn on your radio. Find an FM frequency from the following that is broadcasting nothing but static: 88.1 MHz, 88.3 MHz, 88.5 MHz, 88.7 MHz, 88.9 MHz, 106.7MHz, 106.9 MHz, 107.1 MHz, 107.3 MHz, 107.5 MHz, 107.7 MHz, 107.9 MHz (do this with Blackbird off at first).
- 4 Turn on Blackbird.
- On Blackbird, go to Main Menu → Setup → System. The default broadcast frequency is 88.1 MHz.
- 6 Turn the transmitter button ON in System Setup screen.
- Set Blackbird to that frequency and play music files on Blackbird. (Touch Main Menu → Entertainment, or simply press Music button) Blackbird provides 12 frequencies to choose from. You may have to try a few frequencies before you find one that works best in your vehicle.

Turning Off the Transmitter

- 1 Turn off or turn down the volume of your radio first to avoid the static noise.
- On Blackbird, go to Main Menu → Setup → System.
- 3 Turn the transmitter button OFF in System Setup screen.

■ How to Update the New Software and Map Database

Using your home PC, Blackbird can be updated with the latest mapping and Point of Interest information. Please refer to instructions included with the update software on how to upgrade your Blackbird system.

IN CASE OF DIFFICULTY

If you encounter a problem, please review the items in the following checklist. This guide will help you isolate the problem if the unit is at fault. Otherwise make sure the rest of your system is properly connected, batteries are completely charged and contact your authorized Alpine dealer or Alpine directly at 1-888-NAV-HELP (1-888-628-4357).

The vehicle's position is erroneous.

Reset the unit and drive the vehicle in an area of good GPS reception to allow the unit to recalibrate itself.

Move to a location where strong GPS reception is possible.

No operation

- · Moisture condensation
- Ambient temperature over 113°F (45°C)
- · Blown fuse

- → Allow enough time for the condensation to evaporate (about 1 hour).
- → Lower the temperature in the vehicle to below 113°F (45°C) by driving with the windows open or air conditioner on.
- → Replace with a fuse of the prescribed rating (2A glass-type fuse located in the head of the cigarette lighter adapter).

IN THE BOX

Accessories



Cradle with Cigarette Lighter Charger



AC Adapter



USB Cable



Carrying Case



Wiping Cloth

Registration Card



1200mAh Battery



Owner's Manual



Quick Reference Guide

Optional Accessories

• Dummy SD Card (Inside Main Unit)

The following accessories are available from your authorized Alpine dealer.

- PMD-DOK1 A Docking Station that allows you to connect and experience Blackbird navigation and music player from your Alpine Multimedia Station or stand-alone display.
- PMD-KIT1 A second car kit comprised of windshield mount, cradle, and home AC charger.
- PMD-ANT1 An external GPS antenna hard-wired to Blackbird used in instances where you cannot normally receive GPS signals inside the car, due to metallic window tint, etc.
- 4. PMD-BAT1 A 1200 mAh Li-Polymer battery for extra battery power on the go.
- **5.** RUE-4140 A combination navigation and audio remote control that allows you to control most of Blackbird's navigation features wirelessly.

SPECIFICATIONS

BLACKBIRD SPECIFICATIONS

Main Unit Size 6.1" x 2.9" x 1.2" (145mm x 74mm x 29mm)

Main Unit Weight 8 oz (227 g)

CPU Centrality Atlas II ARM9 CPU

GPS Embedded 16 channel GPS, Built-In Main Unit Antenna with

Optional External Antenna Connection

Storage Media Built-In 1" HDD with Pre-Loaded Maps of US* and Canada

and 6 Million Points of Interest Locations

(*Including Alaska and Hawaii)

Card Slot Secure Digital (SD) or Multimedia Card (MMC) for playback of

MP3 or WMA music files

Audio Integrated speaker in main unit, amplified speaker in cradle,

stereo headphone jack, optional docking station audio output

FM Transmitter Built-in cradle, up to 12 selectable frequencies

RDS-TMC Tuner Built-in main unit w/antenna in cradle power cable

USB Interface 2.0

Power Requirements

Handheld Mode 5V @ 1A (via 1200 mAh Li-Polymer Battery, approximately 2

hours of continuous use)

Cradle Mode 12 VDC @ 2A (via Cigarette Lighter Adapter)

Fuse AGC/3AG -2Amp

Operating Temp 32° to 140° F (0° to $+60^{\circ}$ C)

Storage Temp -13° to 176° F (-25° to +80° C)

Display

Screen Size 3.6" diagonal

Resolution QVGA 320 x 240 pixels, 16.7M possible colors **Display Type** Digital TFT display with anti-glare touch screen

Brightness 200 nits (typical)

Note: Due to continuous product improvement, specifications are subject to change without notice.

INDEX

A		G		S	
Accessories	33	GPS Status 12	2, 29	Saving a Destination into the	
				Address Book	20
В		Н		Set a Destination and Go!	10
Background Color	26	Home	22	Setting a Destination by Address	14
Basic Operations	10	Finding a Way Home	22	Setting a Destination from the	
Battery Installation	7	Finding Alternate Way to Go		Address Book	16
Battery Status	12	Home	22	Setting a Destination by Coordinates	18
Brightness	26	One-Touch Go Home	22	Setting a Destination by Places	16
3		How to Mount Blackbird	6	Setting a Destination by Recently	
C				Entered Destination	18
Changing Navi Mix Volume	27	1		Setting a Destination by Intersection	19
Configuring System Settings	27	lcon	25	Setting a Destination Directly	
Confirm Destination Screen	14	In Case of Difficulty	32	from Map Display	13
Customizing Display	26	Index	35	Setting Estimate Time Display 12,	
Customizing Guidance	27	Information	28	Setting the Map Color	26
odotomizing daldanoo		Simulating Navigation	28	Setting the Map Orientation 12.	
D		Viewing GPS Status	29	Setting up the Clock	27
Deleting Previously Saved		Viewing System Information	29	Setting Waypoints	21
Destination	25	Viewing Trip Information	28	Setup	26
Delete Route	23	Installation	6	Configuring System Settings	27
Destination	14	mountation	O	Customizing Display	26
Setting a Destination by Address		M		Customizing Guidance	27
Setting a Destination by) 14	Map Function	12	Setting up the Clock	27
Coordinates	18	Battery Status	12	Switching the Measuring Unit	27
Setting a Destination by	10	GPS Status	12	Simulating Navigation	28
Intersection	19	Repeating the Announcemen		Specifications	34
Setting a Destination by Places	16	Set a Destination Directly	11 12	Switching Map Display	13
Setting a Destination by	10		13	Switching the Measuring Unit	27
Recently Entered Destination	18	from Map Display Set Estimate Time Display	12	System Features	2 <i>1</i>
	10		12	System reatures	(
Setting a Destination from the Address Book	16	Set the Map Orientation	13	т	
Address Book	10	Switching Map Display	12	Table of Contents	
E		Zoom In/Out Map Map Orientation 12	2, 26	Trail	26
Edit	0.4	wap Orientation 12	2, 20		
	24	0		Turning Voice On and Off	27
Deleting Previously Saved	0.5	-	00		
Destination	25	One-Touch Go Home	22	U	
Editing Address Book	25	P		User Agreement	
Editing Home	24	•	0	V	
Entertainment	30	Precautions And Notices	2	V	~
How to Listen to Guidance and	0.4	Power	10	Viewing GPS Status	29
Music from Your Car Stereo	31			Viewing System Information	29
Listening to Audio	30	R		Viewing Trip Information	28
Playing Music on Your Blackbird	30	Recalling the Maneuver List		Voice	27
-		during Guidance	23	Volume	27
F	_	Remote Control	27	***	
FCC Compliance Statement	2	Repeating the Announcement	12	W	
Find Local Places	20	Route	23	Warnings	
Finding a Way Home	22	Delete Route	23	Warranty	36
Finding Alternate Route	23	Finding Alternate Route	23	_	
Finding Alternate Way to Go Home		Finding Detour	23	Z	
Finding Detour	23	Recalling the Maneuver List		Zoom In/Out Map	12
FM Transmitter Setup	27	during Guidance	23		
Frequency	27				

LIMITED WARRANTY

ALPINE ELECTRONICS OF AMERICA, INC. AND ALPINE OF CANADA INC. ("Alpine"), are dedicated to quality craftsmanship and are pleased to offer this Warranty. We suggest that you read it thoroughly. Should you have any guestions, please contact your Dealer or contact Alpine at one of the telephone numbers listed below.

●PRODUCTS COVERED:

This Warranty covers Car Audio, Navigation Products and Related Accessories ("the product"). Products purchased in the Canada are covered only in the Canada. Products purchased in the U.S.A. are covered only in the U.S.A.

●LENGTH OF WARRANTY:

This Warranty is in effect for one year from the date of the first consumer purchase.

OWHO IS COVERED:

This Warranty only covers the original purchaser of the product. who must reside in the United States, Puerto Rico or Canada.

OWHAT IS COVERED:

This Warranty covers defects in materials or workmanship (parts and labor) in the product.

•WHAT IS NOT COVERED:

This Warranty does not cover the following:

- 1 Damage occurring during shipment of the product to Alpine for repair (claims must be presented to the carrier).
- 2 Damage caused by accident or abuse, including burned voice coils caused by over-driving the speaker (amplifier level is turned up and driven into distortion or clipping) Speaker mechanical failure (e.g. punctures, tears or rips). Cracked or damaged LCD panels. Dropped or damaged hard
- 3 Damage caused by negligence, misuse, improper operation or failure to follow instructions contained in the Owner's manual.
- 4 Damage caused by act of God, including without limitation, earthquake, fire, flood, storms or other acts of nature. Any cost or expense related to the removal or reinstallation of the product.
- 5 Service performed by an unauthorized person, company or association.
- 6 Any product which has the serial number defaced, altered or
- 7 Any product which has been adjusted, altered or modified without Alpine's consent.
- 8 Any product not distributed by Alpine within the United States, Puerto Rico or Canada.
- 9 Any product not purchased from an Authorized Alpine Dealer.

●HOW TO OBTAIN WARRANTY SERVICE:

1 You are responsible for delivery of the product to an Authorized Alpine Service Center or Alpine for repair and for payment of any initial shipping charges. Alpine will, at its option, repair or replace the product with a new or reconditioned product without charge. If the repairs are covered by the warranty, and if the product was shipped to an Authorized Alpine Service Center or Alpine, Alpine will pay the return ship- Or visit our website at; http://www.alpine-usa.com ping charges.

- 2 You should provide a detailed description of the problem(s) for which service is required.
- 3 You must supply proof of your purchase of the product.
- 4 You must package the product securely to avoid damage during shipment. To prevent lost packages it is recommended to use a carrier that provides a tracking service.

•HOW WE LIMIT IMPLIED WARRANTIES:

ANY IMPLIED WARRANTIES INCLUDING FITNESS FOR USE AND MERCHANTABILITY ARE LIMITED IN DURATION TO THE PERIOD OF THE EXPRESS WARRANTY SET FORTH ABOVE AND NO PERSON IS AUTHORIZED TO ASSUME FOR ALPINE ANY OTHER LIABILITY IN CONNECTION WITH THE SALE OF THE PRODUCT.

●HOW WE EXCLUDE CERTAIN DAMAGES:

ALPINE EXPRESSLY DISCLAIMS LIABILITY FOR INCIDENTAL AND CONSEQUENTIAL DAMAGES CAUSED BY THE PRODUCT. THE TERM "INCIDENTAL DAMAGES" REFERS TO EXPENSES OF TRANSPORTING THE PRODUCT TO THE ALPINE SERVICE CEN-TER, LOSS OF THE ORIGINAL PURCHASER'S TIME, LOSS OF THE USE OF THE PRODUCT, BUS FARES, CAR RENTALS OR OTHERS COSTS RELATING TO THE CARE AND CUSTODY OF THE PRODUCT, THE TERM "CONSEQUENTIAL DAMAGES" REFERS TO THE COST OF REPAIRING OR REPLACING OTHER PROPERTY WHICH IS DAMAGED WHEN THIS PRODUCT DOES NOT WORK PROPERLY.

THE REMEDIES PROVIDED UNDER THIS WARRANTY ARE EXCLUSIVE AND IN LIEU OF ALL OTHERS.

●HOW STATE/PROVINCIAL LAW RELATES TO THE WARRANTY:

This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state and province to province. In addition, some states/provinces do not allow limitations on how long an implied warranty lasts, and some do not allow the exclusion or limitation of incidental or consequential damages. Accordingly, limitations as to these matters contained herein may not apply to you.

OIN CANADA ONLY:

This Warranty is not valid unless your Alpine car audio product has been installed in your vehicle by an Authorized Installation Center, and this warranty stamped upon installation by the installation center.

●HOW TO CONTACT CUSTOMER SERVICE:

Should the product require service, please call the following number for your nearest Authorized Alpine Service Center.

> CAR AUDIO 1-800-ALPINE-1 (1-800-257-4631) NAVIGATION 1-888-NAV-HELP (1-888-628-4357)

ALPINE ELECTRONICS OF AMERICA, INC.,

19145 Gramercy Place, Torrance, California 90501, U.S.A. ALPINE ELECTRONICS OF CANADA, INC.,

777 Supertest Road, Toronto, Ontario M3J 2M9, Canada Phone 1-416-736-6211 Do not send products to these addresses.

Call the toll free telephone number or visit the website to locate a service center. © 2006 NAVTEQ. All Rights Reserved.

© 2006 Alpine Electronics of America, Inc. All Rights Reserved.



The WTR Logo is a trademark of the Consumer Electronics Association.