

Pocket LOOX N100 Series



We make sure

FUJITSU COMPUTERS
SIEMENS

Are there ...

... any technical problems or other questions which you would like to be clarified?

Please contact:

- our Hotline/Help Desk
(see Help Desk List or the Internet: www.fujitsu-siemens.com/helpdesk)
- Your sales partner
- Your sales office

Further information can be found in the "Safety" and "Warranty" manuals.

The latest information on our products, tips, updates, etc., can be found on the internet at:
www.fujitsu-siemens.com

This manual was produced by Xerox Global Services.

Published by

Fujitsu Siemens Computers GmbH

Edition 1, June 2006

Order No.: **A26391-K197-Z120-1-7619**

Pocket LOOX N100 Series

EasyGuide

Your Pocket LOOX

Important notes

Operating the Pocket PC

Troubleshooting and tips

Technical data

Index

Windows Mobile CE is a trademark of Microsoft Corporation.

The Mini-SD Logo is a trademark of Secure Digital.

All other trademarks referenced are trademarks or registered trademarks of their respective owners, whose protected rights are acknowledged.

Copyright © Fujitsu Siemens Computers GmbH 2006

All rights, including rights of translation, reproduction by printing, copying or similar methods, in part or in whole, are reserved.

Offenders will be liable for damages.

All rights reserved, particularly for rights created by patent grant or registration of a utility model or design.

Delivery subject to availability. Right of technical modification reserved.

Contents

| | |
|---|----------|
| Your Pocket LOOX | 1 |
| Notational conventions | 2 |
| Optional Accessories | 3 |
| Audio Control Set | 3 |
| Head Set | 3 |
| External GPS Antenna | 3 |
| Traffic Message Channel (TMC) | 3 |
| Mini Secure Digital | 3 |
| Important notes | 5 |
| Safety notes | 5 |
| Travelling with the Pocket PC | 6 |
| Transporting the Pocket PC | 6 |
| Using the Pocket PC | 6 |
| Cleaning the pocket PC | 7 |
| Disposal and recycling | 7 |
| Liability | 7 |
| CE marking | 7 |
| Operating the Pocket PC | 9 |
| Overview of the controls, connections and displays | 9 |
| LED indicators | 10 |
| Initial start-up | 10 |
| Inserting the battery | 11 |
| Charging the Battery | 12 |
| Charging the battery via a USB port | 13 |
| Optimising battery operating time | 14 |
| Start Pocket PC for the first time | 14 |
| Switching the Pocket PC on and off | 16 |
| Switching Pocket PC off and on during normal use (Suspend mode) | 16 |
| Switching on and off with soft reset (warm boot) | 17 |
| Resetting the Pocket-PC (Cold start) | 18 |
| Using stylus and display | 18 |
| Using the hold switch | 18 |
| Using GPS | 19 |
| Music player | 20 |
| Connecting headphones or external loudspeakers | 20 |
| Using the music player | 20 |
| Managing music titles | 22 |
| Using utilities (world clock, calculator, games) | 23 |
| Setting date and time | 25 |
| Data transfer using USB | 26 |
| Connecting the Pocket PC with PC/Notebook | 26 |
| Device settings | 27 |
| Calling up device settings | 27 |
| Adjusting the volume | 27 |
| Adjusting display lighting | 28 |
| Energy management | 29 |
| Display system information | 30 |
| Inserting and removing expansion card | 31 |
| Inserting the expansion card | 31 |
| Removing the expansion card | 32 |
| Changing the front cover | 33 |

Contents

| | |
|--|-----------|
| Troubleshooting and tips | 35 |
| The time or date on the Pocket PC are..... | 35 |
| incorrect | 35 |
| The Pocket PC switches off | 35 |
| The Pocket PC does not start after switch on | 36 |
| The Pocket PC stops working | 36 |
| The battery discharges too quickly..... | 36 |
| No sound or minimal volume | 37 |
| Poor reception via GPS..... | 37 |
| Contact with hotline/help desk | 38 |
| Technical data | 39 |
| Pocket-PC | 39 |
| Battery (Li-Ion) | 40 |
| Power adapter..... | 40 |
| Index | 41 |

Your Pocket LOOX ...

... is equipped with the *Windows CE 5.0* operating system. It unites the functions of a GPS navigation system and a music player in one device.

Connect the Pocket LOOX to your computer using the USB cable and you'll be able to exchange data easily between your computer and your Pocket PC.

When travelling, play one of the pre-installed games or use the music player with MP3, WMA and AAC formats. In addition, the Pocket PC has an integrated calculator and a world clock.

You can use the Pocket PC as a navigation system using the fully-integrated GPS module and the pre-installed navigation software.

Memory cards ensure that even large amounts of data can be carried reliably.

The following documentation contains additional information on your Pocket PC and the *Windows CE 5.0* operating system:

- in the "Safety" and "Warranty" manuals
- on the CD supplied

Notational conventions

The meanings of the symbols and fonts used in this manual are as follows:



Pay particular attention to texts marked with this symbol. Failure to observe this warning may endanger your life, destroy the system, or lead to loss of data. Failure to follow the instructions may lead to loss of data, invalidate your warranty, destroy the Pocket PC, or endanger your life.



Indicates important information which is required to use the system properly.



Texts which follow this symbol describe activities that must be performed in the order shown.

This font

indicates programme names, commands, or menu items.

"Quotation marks"

indicate names of chapters, data carriers, and terms that are being emphasised.

Optional Accessories

We offer a range of accessories to make it easier and more convenient to work with your Pocket PC. Information on additional accessories for your Pocket LOOX is provided on the Internet at www.fujitsu-siemens.com/accessories.

Below you will find a short description of the special accessories for your Pocket PC.

Audio Control Set

The set contains headphones, a protective cover with carrying strap and a remote control cable. The remote control cable controls the MP3 functions such as Playback/Pause and Stop; jump to next/last title, fast forward and rewind of the Microsoft Media Player. In addition, you can control the volume.

Head Set

The accessories include a head set with a carry strap.

External GPS Antenna

With a Pocket PC with integrated GPS, you can connect an external GPS antenna to the rear of the Pocket PC. The external GPS antenna improves performance in difficult reception conditions.

Traffic Message Channel (TMC)

The Traffic Message Channels lets you navigate dynamically using the Pocket PC, i.e. you can include the current traffic position in planning the route or make automatic adjustments to the route in the case of changes in the traffic position. This European-wide standard continually transmits current traffic information via radio transmitters and does this in real-time.

Mini Secure Digital

With the mini Secure Digital (SD) memory card, you have additional memory capacity for your music and navigation cards.

Important notes

This chapter contains safety notes and important information you must observe when using your Pocket PC.

This Pocket PC complies with the relevant safety regulations for data processing equipment. If you have questions as to whether you can set up and operate the Pocket PC in the intended environment, please contact your sales point or our hotline/help desk.

Safety notes



Observe the safety notes in the "Safety" manual and the following safety notes to prevent damage to your device, data loss or injuries.

- During installation and before operating the keyboard, observe the instructions on environmental conditions in the "Technical data" chapter.
- Connect the power adapter plug to the power adapter supplied. The power adapter plug must never be plugged into an electrical outlet without the power adapter.
- The mains adapter supplied complies with the requirements of the country in which you purchased the Pocket PC. Make sure the mains adapter is approved for the country in which it is used.
- The mains adapter may only be connected to an electrical outlet when the Pocket PC or the cradle is connected to the mains adapter.
- Do not use the mains adapter for other devices.
- Do not use mains adapters which are not specially approved for this Pocket PC.
- You may only operate the Pocket PC with the mains adapter if the nominal voltage of the mains adapter (100 V to 240 V) matches the local mains voltage.
- When transporting the device on a trip, observe the information in the section "Travelling with the Pocket PC".
- Listening using a headset at very loud volume, particularly over a long period of time, can cause damage to your hearing. Fujitsu Siemens Computers will not be liable for any damage to health resulting from improper use.

Travelling with the Pocket PC

Observe the following information when you travel with your Pocket PC.

Transporting the Pocket PC

- Switch the Pocket PC off.
- Disconnect the cables from the Pocket PC.
- Protect the Pocket PC from severe shocks and extreme temperatures (e.g., direct sunlight in a car).
- If you wish to use your Pocket PC during a flight, check first with the airline if this is allowed and under which conditions.
- If you are travelling abroad, check that the mains adapter can be operated with the local mains voltage. Do not use any other voltage converter.

Using the Pocket PC

Store the Pocket PC in a fully charged state in a dry environment. When storing the Pocket PC, the storage temperature should be between -20°C and +60°C. The lower the temperature at which the batteries are stored, the lower the rate of self-discharge.



Avoid leaving your Pocket PC lying in direct sunlight in a car. The temperature could exceed the permissible 60 °C in such cases!

To protect the battery, battery charging is interrupted at excessively high temperatures (over 48 °C).

Please note that batteries discharge themselves over time. Therefore, recharge the battery of your Pocket PC at regular intervals during the storage period.

Protect the slots for expansion cards and the USB connection of the Pocket PC from soiling. Soiling can lead to contact problems.

Cleaning the pocket PC

- ▶ Switch the Pocket PC off.
 - ▶ Pull the power plug out of the mains outlet.
- or
- ▶ Disconnect the USB charging cable from the Pocket PC.



Do not use any cleaning agents that contain abrasives or may corrode plastic.
Please ensure that no liquid enters the Pocket PC.

The device surface can be cleaned with a dry cloth.
If it is very dirty, you can clean the device and the display with a damp cloth.

Disposal and recycling

You will find further information about country-specific recycling and disposal options on the Internet under www.fujitsu-siemens.com/recycling or on the CD supplied.

Liability

Fujitsu Siemens Computers GmbH cannot be held responsible for radio or television faults arising from unauthorised changes made to this device. Fujitsu Siemens Computers is, furthermore, not responsible for replacing and/or exchanging connector cables and devices which have not been specified by Fujitsu Siemens Computers GmbH. The user is solely responsible for repairing faults arising from such unauthorised changes made to a device and for replacing and/or exchanging devices.

CE marking



CE marking for devices without radio component

The shipped version of this device complies with the requirements of the EEC directives 89/336/EEC "Electromagnetic compatibility" and 73/23/EEC "Low voltage directive".

 
Operating the Pocket PC

In this section you will find a description of the operating controls of your Pocket PC and how you operate the Pocket PC.



Please refer to the notes in the "Important notes" chapter.

Overview of the controls, connections and displays

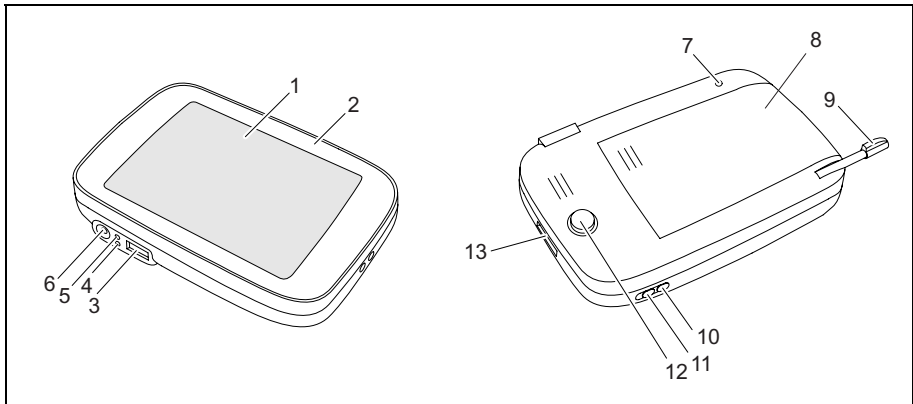

- 1 = Display
- 2 = Replaceable front cover
- 3 = Mini-USB port
- 4 = Radio indicator: GPS
- 5 = Battery charge status display
- 6 = Port for headphones
- 7 = Opening for soft reset
- 8 = Battery compartment
- 9 = Slot for telescopic stylus
- 10 = Hold switch
- 11 = Suspend/Resume button
- 12 = Port for external GPS antenna
- 13 = Port for Mini SD expansion card

LED indicators

| LED indicator | Colour | Description | Indicator state |
|------------------------------|--------|--|-----------------|
| Status: battery charge level | Red | Battery fully charged, battery charger connected | Off |
| | | Battery being charged | On |
| Radio indicator: GPS | Bleu | GPS activated | Flashing |

 
Initial start-up

In just a few steps your Pocket PC will be ready to use for the first time:

- Inserting the battery
- Connecting the mains adapter
- Start Pocket PC for the first time

You will learn more about the individual steps in the following sections.

Inserting the battery

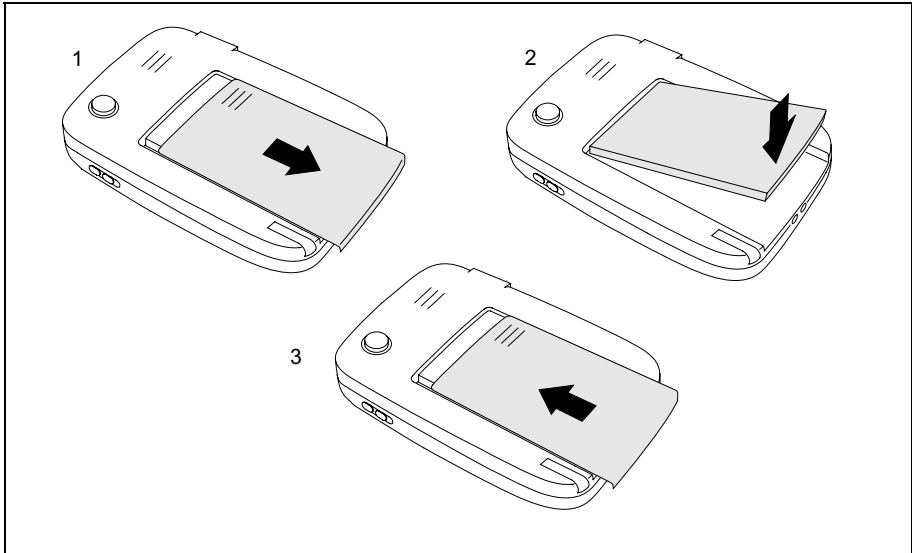

- ▶ Pull the cover (1) off the Pocket PC in the direction of the arrow.
- ▶ Lay the battery in the battery compartment (2). Check the contact connections.
- ▶ Slide the cover in the direction of the arrow as far as it will go (3).



The battery is not completely charged at the time of delivery. Therefore, charge the battery before the first mobile use (see "Charging the Battery" section).

Charging the Battery



Please observe the safety information in the "Important notes" chapter.

Your Pocket PC is equipped with a powerful battery. When you're on the road your Pocket PC is supplied with power by the integrated battery.



The battery is not charged on delivery and should be charged for 12 hours prior to the first mobile use.

 
The battery charging time is otherwise approx. 4 hours. When the Pocket PC is operating, the charging time is extended.

If the Pocket PC is charged using the USB port, the charging process can take longer than when using the mains adapter. The charging time depends on the USB port of the connected computer.

You have three ways of re-charging the battery:


- You can connect the Pocket PC directly to an electrical outlet with the mains adapter.
- or
- You can connect the Pocket PC to a computer's USB port using the USB cable.

Charging the battery using the mains adapter

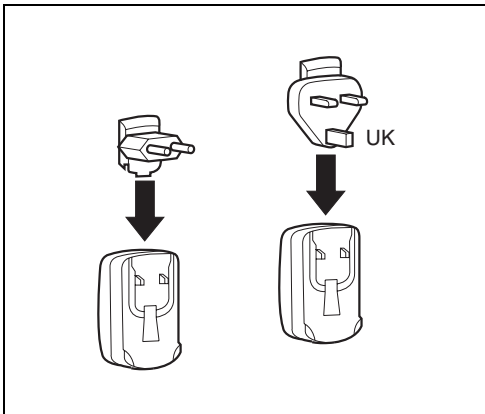

You can connect the mains adapter directly to the Pocket PC.

 - ▶ Slide the suitable mains adapter plug into the mains adapter in the direction of the arrow until it engages.

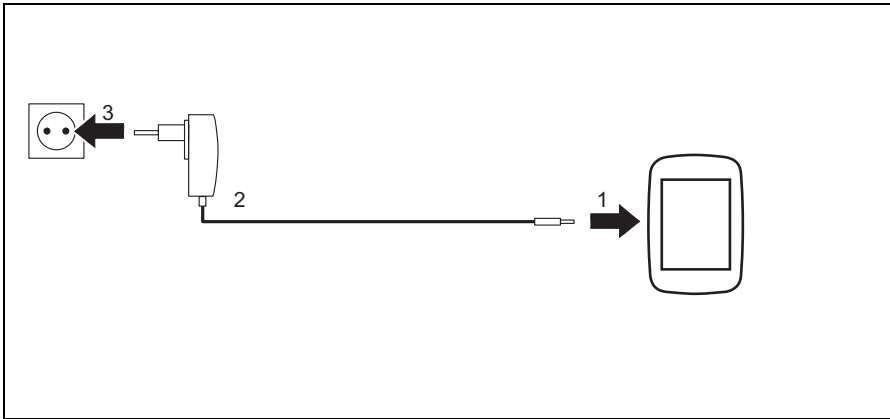

- ▶ Connect the USB cable to the Mini-USB port of the Pocket PC (1).
- ▶ Connect the USB cable to the mains adapter (2).
- ▶ Connect the mains adapter to an electrical outlet (3).

The installed battery will now be charged. The power-on indicator flashes red.

You can use the Pocket PC during the charging process. This extends the charging time.

Charging the battery via a USB port

- ▶ Connect the USB cable to your Pocket PC.
- ▶ Connect the USB cable to the computer's USB port.



The computer's USB port must deliver no less than 500 mA of power. Because of the low charging current, the charging process will take longer than it does using the power adapter.

 
Optimising battery operating time

The maximum operating time depends on the different applications, as these can consume more or less energy. You can make settings in the system settings to help you to save energy when using your Pocket PC. These settings enable you to use the battery operating time optimally.



In the default setting, a setting is activated that automatically switches the Pocket PC into the Suspend mode after three minutes when working without a power connection if no entries are made during this time. You can switch on the Pocket PC again at any time by briefly pressing the Suspend/Resume button and then continue working where you left off.

Start Pocket PC for the first time

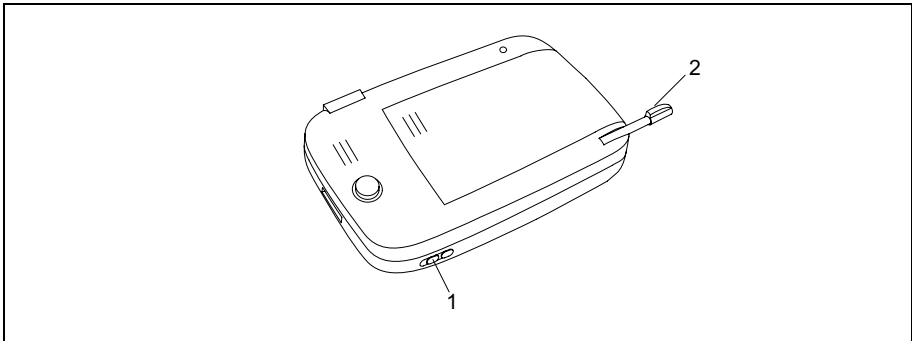

- ▶ Press the Suspend/Resume button (1) to switch on the Pocket PC.
- ▶ Pull out the stylus (2) in the direction of the arrow.

Adjusting display



Further information on orienting the display can be found in the chapter "Device settings" in the section on "Adjusting display".

You can operate the Pocket PC not only with the stylus but also using your fingers.

 
Start screen

Following the introduction the start screen appears. The start screen shows all important current information at a glance. From this screen you have access to all programs and to the system settings:



Switching the Pocket PC on and off

Switch the Pocket PC on or off with the Suspend/Resume button. After certain applications or the use of certain cards, it may be necessary to restart the Pocket PC with the soft reset.

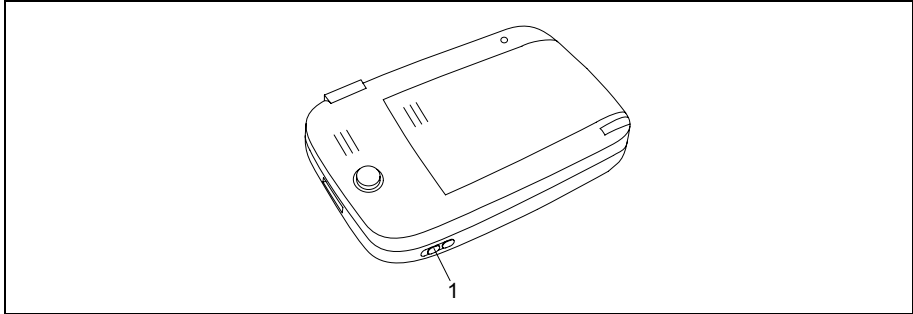

1 = Suspend/Resume button

Switching Pocket PC off and on during normal use (Suspend mode)

Switching on

- ▶ Briefly press the Suspend/Resume button to switch on the Pocket PC.

Switching off with Suspend/Resume button

- ▶ Briefly press the Suspend/Resume button to switch off the Pocket PC.

The Pocket PC is switched to suspend mode.



If you have specified a switch-off time with the system settings, your Pocket PC will automatically switch into the Suspend mode after this specified time.

 
There are two ways to switch on your Pocket PC:

Switching on and off with soft reset (warm boot)

After certain applications, it may be necessary to restart the Pocket PC with the soft reset.



Unsaved data is lost. Shut down all programs before you restart the Pocket-PC.

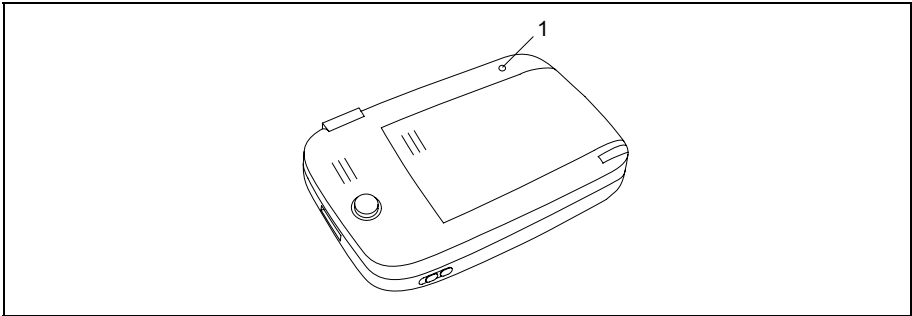

- ▶ Using the unscrewed end of the telescopic stylus, briefly press it in the opening for a soft reset (1).

The warm boot is carried out.

Resetting the Pocket-PC (Cold start)

If your Pocket-PC locks up and switching it on and off with the Suspend/Resume button and soft reset has no effect, you can reset your Pocket-PC using a cold start.



Unsaved data is lost. Shut down all programs before you reset the Pocket-PC.

- ▶ Take the batteries out briefly, then put them back in.
- ▶ Then switch the Pocket PC on again

 
Using stylus and display

The stylus is telescopic.

- ▶ Extend the stylus.
- ▶ Briefly touch the desired element on the display with the stylus to trigger an action.

Using the hold switch

Using the hold switch, you can lock the keys and the display of your Pocket PC to prevent entries being made inadvertently.

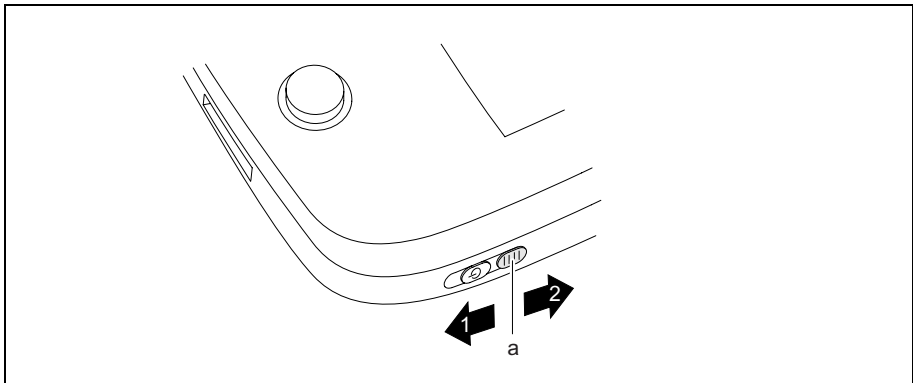

- ▶ To set the lock, move the hold switch (a) in the direction of the arrow (1).
The keys and display of the Pocket PC are now locked.
- ▶ To release the lock, move the hold switch in the direction of the arrow (2).
The lock is released.

Using GPS

With the fully integrated GPS module and the navigation software, you can use the Pocket PC as a navigation system.



To register your navigation software you require the serial number of the navigation software and possibly also the device ID of your Pocket PC.

A description of how to use the navigation software is provided in the instructions on the navigation software. You can find these instructions on the CD supplied.



If the reception signal is weak, you can connect an external GPS antenna. The external GPS antenna improves performance in difficult reception conditions.

 
The external GPS antenna is available as an accessory.

Music player

You can use the music player to play music files in MP3, WMA and AAC format.

Connecting headphones or external loudspeakers

Via the headphone port you can connect either headphones or external loudspeakers to your Pocket PC.

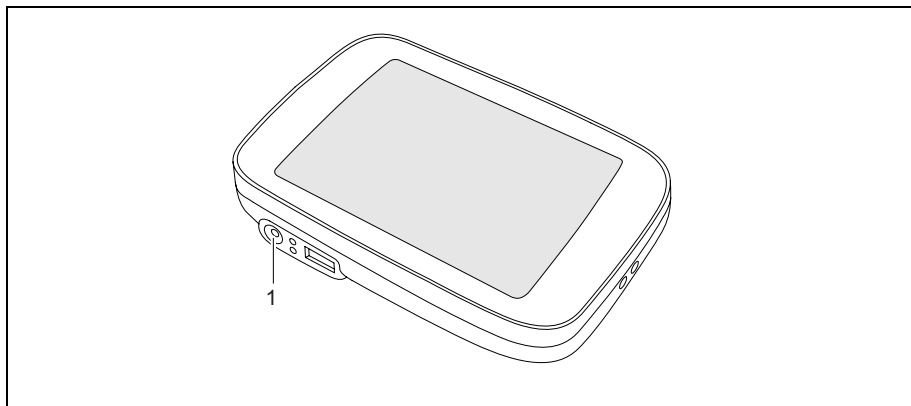

- ▶ Connect the headphones or loudspeakers to the port (1).
















Using the music player

- ▶ To start the music player, tap the music player symbol.

The music player is started:







Below are descriptions of the most important symbols for operating the music player and their respective functions:

| Icon | Function |
|--|--|
|  | Reduces the volume. |
|  | Increases the volume. |
|  | Playing sequence: Chronological sequence:  active |
|  or  or  | Play mode: <ul style="list-style-type: none"> • : Normal/simple title sequence without repeating titles • : Repeats all titles • : Repeats the current title |
|  | Opens the library for displaying and selecting all music titles available on the Pocket PC. A maximum of 5 favourites' lists can be created (My Favorites 1 – 5). |
|  | Plays the last title. |
|  | Starts playing. |
|  | Stops playing. |
|  | Plays the next title. |

Managing music titles

In the library, all available music titles are displayed, sorted according to different musical types of play list: All are sorted by artist, album and genre, as well as personal favourites.


Below are described the most important symbols in the library and their respective function:

| Icon | Function |
|--|--|
|  | Matches the library with the expansion card. The titles displayed are updated. |
|  | Adds a title to the selected list. |
|  | Deletes a title from the selected list. |
|  | Plays the selected title. |

Selecting the play list

- ▶ Select the symbol for the library:



- ▶ Tap on the desired play list, e.g. a certain album.
- ▶ Tap on , to play the music titles in the play list.

The music titles in the play list are played.

Using utilities (world clock, calculator, games)

A number of different utilities are installed on the Pocket PC:

- World clock
- Calculator
- Game *Bricks*
- Game *Smart Pixie*

► Tap the symbol for Utilities.



The utilities are opened:



- ▶ To start the world clock, tap the world clock symbol:



- ▶ To start the calculator, tap the calculator symbol:



- ▶ To start the *Bricks* game, tap on the corresponding symbol:



- ▶ To start the *Smart Pixie* game, tap on the corresponding symbol:



Setting date and time

- ▶ In utilities, tap on the clock symbol:



The world clock is displayed:



- ▶ Tap on the clock symbol in the upper left-hand corner:



The window for setting the time and date will be opened.

- ▶ Make the settings for the time and date.

 


In addition, you can set the time zone and program in an alarm function.

Data transfer using USB

You can exchange data between your Pocket PC and your computer using the Mini USB connection of your Pocket PC.

Connecting the Pocket PC with PC/Notebook

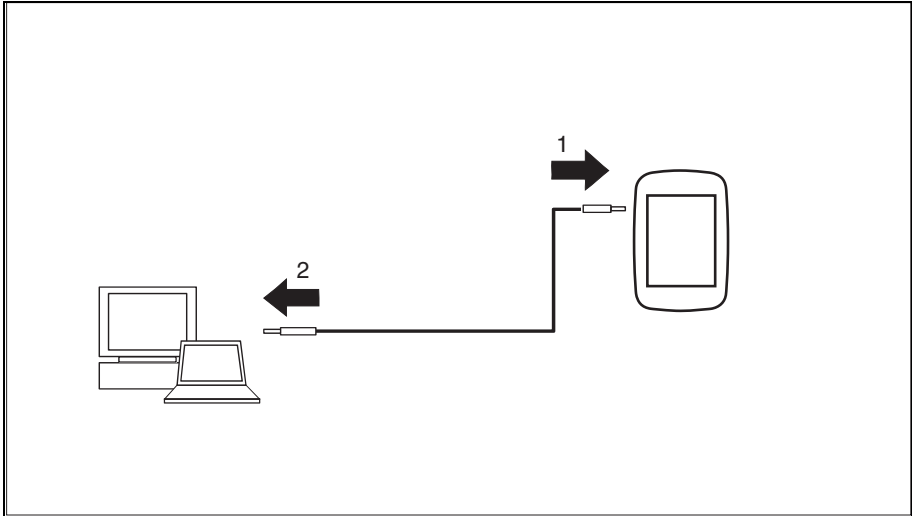

- ▶ Switch your computer (PC/Notebook) on.
- ▶ Connect the USB cable to the Mini-USB port of the Pocket PC (1).
- ▶ Connect the USB cable to a USB port (2) of your PC/notebook.

The Pocket PC is now connected to your PC/notebook.



The Pocket PC will appear in Windows Explorer as a removable data carrier.

Device settings

Calling up device settings



- ▶ Tap on the symbol for settings on your Pocket PC.

The window for device settings will open:




Adjusting the volume

You can control the volume of headphones, microphones and loudspeakers separately.

- ▶ In settings, tap on the audio symbol:



- ▶ Select the register card for headphones, microphone or loudspeaker.
- ▶ Adjust the volume using the slide control.
- ▶ Tap on , to close the window and accept the settings.

Adjusting display lighting


Adjusting display lighting

You can make the display lighting of your Pocket PC lighter or darker. Reduce the display brightness to save energy. In addition, you can determine how many minutes the display lighting will remain lit.

- ▶ In settings, tap on the display symbol:



The window for the display settings will be displayed.

- ▶ Set the display lighting in battery mode and/or with external power supply using the slide control until the desired brightness is achieved.
- ▶ If necessary, set the desired duration of the display lighting in battery mode and with an external power supply.
- ▶ Tap on  to close the window and accept the settings.

Calibrating the display

The display of your Pocket PC is a touchscreen. To ensure that the touchscreen of your Pocket PC reacts correctly when touched with the stylus, you will be asked to align the touchscreen after the initial start-up. In settings, tap on the display symbol:




- ▶ Tap on the register card for the display.
- ▶ Tap on the *Align Screen* button.
- ▶ Touch the centre of the crosshairs that appears on the display with the stylus.
- ▶ This procedure must be repeated several times, whereby the crosshairs appear at different locations on the display each time.
- ▶ Follow the instructions on the display.

Tap on to close the window and accept the settings.

In addition, you can select whether the user interface is to be displayed in portrait or landscape format:

- ▶ In settings, tap on the display symbol:



- ▶ Tap on the register card for the display.
- ▶ Select portrait or landscape format.
- ▶ Tap on  to close the window and accept the settings.



In addition, you can set the language as well as the colour of the user interface.

Energy management

General information on energy management

The battery operating time is considerably dependent on the applications used. Please consider that a particularly large amount of energy is required to play sound files. Therefore, if you want to work for several hours without a power connection, limit the use of energy-intensive applications.

Data exchange with a PC or notebook also consumes additional battery power. Therefore, always connect your Pocket PC to an electrical outlet during data exchange if possible.

Using energy-saving functions

You can save energy in several ways to optimally utilise the battery operating time:

- Switch the Pocket PC into the Suspend mode when you are not using it (see "Configuring Suspend mode" and "Switching Pocket PC off and on during normal use" chapters).
- Reduce the display lighting (see "Adjusting display lighting" chapter).
- Switch off the sound, reduce the volume or only allow acoustic signals for certain applications (see "Adjusting the volume" chapter).

Displaying battery charge level

- ▶ In settings, tap on the power symbol:



The battery charge level is displayed.


Configuring Suspend mode

- ▶ In settings, tap on the power symbol:



- ▶ Select the register card for non-use.
- ▶ Using the slide control, set the number of minutes of non-use after which the Pocket PC should switch into Suspend mode in battery operation and/or with an external power source.

At the end of the stated time, the Pocket PC will automatically be set into Suspend mode.

- ▶ Tap on  to close the window and accept the settings.

Display system information

You can display the system information of your Pocket PC, such as the hardware and software versions and the type of memory card:

- ▶ In settings, tap on the system symbol:



The system information will be shown.

Inserting and removing expansion card

A slot enables the operation of an expansion card of the type "Mini Secure Digital I/O".

 


Observe the manufacturer's instructions when using the expansion cards.

Never use force when inserting or removing an expansion card.

Make sure that no foreign objects enter the slot.


Inserting the expansion card

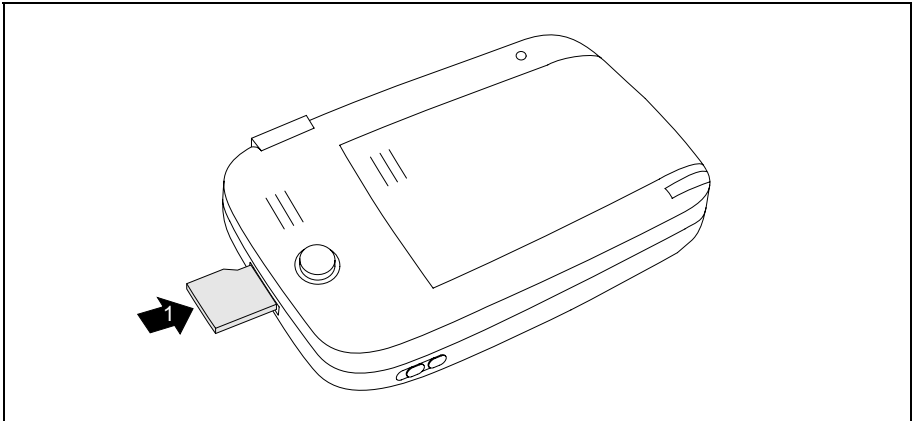

- ▶ Carefully push the expansion card (1) into the slot.

The expansion card can protrude by one to several millimetres (depending on the type of expansion card).

 
Removing the expansion card

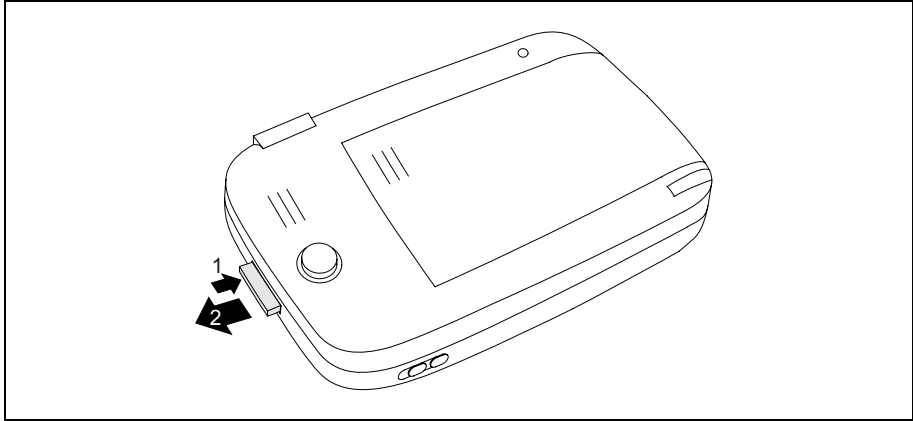


- ▶ Press on the edge of the expansion card (1) so that the expansion card jumps out of the slot slightly.
- ▶ Slide the expansion card carefully out of the Pocket PC (2).

Changing the front cover

 You can individualise your Pocket PC using replaceable front covers.

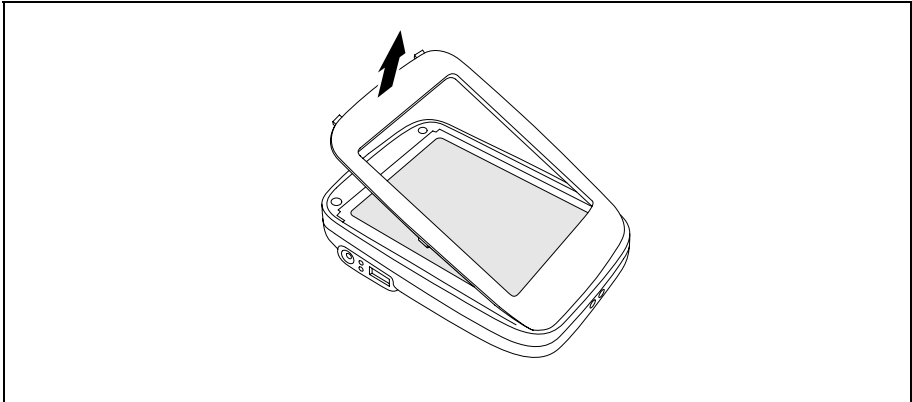

 - ▶ Carefully remove the front cover, making sure that the tabs on the front cover do not get damaged.

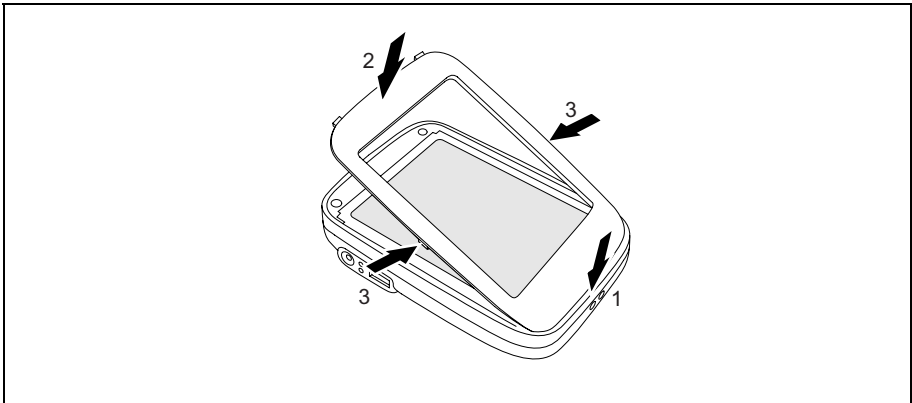

- ▶ Carefully insert the new front cover, making sure that the tabs latch correctly on all sides. Start with the widest edge (1) and then carefully latch the tabs on edge (2). Finally, carefully latch the tabs on the long sides (3).

Troubleshooting and tips

If a fault occurs in your Pocket PC, try to eliminate it with the measures described in this chapter. If you fail to correct the problem, proceed as follows:

- ▶ Make a note of the steps and the circumstances that led to the fault. Also make a note of any error messages displayed.
- ▶ Switch the Pocket PC off.
- ▶ Contact your sales outlet or our hotline/help desk.

The time or date on the Pocket PC are incorrect

| Cause | Troubleshooting |
|------------------------------|---|
| Time and date are incorrect. | <ul style="list-style-type: none"> ▶ Tap the symbol for Utilities: <div data-bbox="525 687 654 810" data-label="Image"> </div> ▶ Touch the clock symbol: <div data-bbox="525 863 654 1002" data-label="Image"> </div> ▶ Change the time and/or date. |

The Pocket PC switches off

| Cause | Troubleshooting |
|---------------------|---|
| The battery is dead | <ul style="list-style-type: none"> ▶ Connect the power adapter to the Pocket PC to charge the battery. <p>The battery is charging. The power-on indicator lights up red.</p> |

The Pocket PC does not start after switch on

| Cause | Troubleshooting |
|---|--|
| The battery is dead | <ul style="list-style-type: none"> ▶ Connect the power adapter to the Pocket PC to charge the battery. <p>The battery is charging. The power-on indicator lights up red.</p> |
| The mains adapter is not connected correctly. | <ul style="list-style-type: none"> ▶ Switch the Pocket PC off. ▶ Check whether the mains adapter is properly connected to the Pocket PC and the electrical outlet. ▶ Then switch the Pocket PC on again |



The Pocket PC stops working

| Cause | Troubleshooting |
|--|---|
| An application program has caused the fault. | <ul style="list-style-type: none"> ▶ Restart the Pocket PC (see the section "Switching on and off with soft reset (warm boot)"). <p>or</p> <ul style="list-style-type: none"> ▶ If the restart does not function, reset the Pocket PC (see the section "Resetting the Pocket-PC (Cold start)"). |
| The battery is dead | <ul style="list-style-type: none"> ▶ Connect the power adapter to the Pocket PC to charge the battery. <p>The battery is charging. The power-on indicator lights up red.</p> |

The battery discharges too quickly

| Cause | Troubleshooting |
|--|---|
| The battery is either too hot or too cold. | <ul style="list-style-type: none"> ▶ Bring the Pocket PC up/down to a normal temperature again. <p>If the operating time of the battery mode is extremely short, the battery is probably old and should be replaced. Please contact your dealer for a new battery.</p> |

No sound or minimal volume

| Cause | Troubleshooting |
|-----------------------|--|
| Volume is set wrongly | <ul style="list-style-type: none"> <li data-bbox="477 284 1031 311">▶ Tap on the symbol for settings on your Pocket PC: <li data-bbox="524 328 650 448">  <li data-bbox="477 459 762 486">▶ Touch the audio symbol: <li data-bbox="524 501 650 620">  <li data-bbox="477 627 911 675">▶ Select the register card for headphones, microphone or loudspeaker. <li data-bbox="477 683 919 710">▶ Adjust the volume using the slide control. |

Poor reception via GPS

| Cause | Troubleshooting |
|---|--|
| The installation position of the Pocket PC in your vehicle is unfavourable. | ▶ Change the installation position of the Pocket PC. |
| Your vehicle's windscreen is coated. | ▶ Use an external GPS antenna (available as an accessory). |

Contact with hotline/help desk

If you are unable to solve a certain problem, please contact the hotline/help desk. Additional details are contained in the "Safety" and "Warranty" manuals. Please have the following information ready when you call:

- The model name and serial number of the Pocket PC. The serial number can be found on a label in the battery compartment or in the system information; see chapter "Display system information"
- Notes of any messages that appear on the display and information on acoustic signals.
- Any changes you have made to the hardware or software after receiving the Pocket PC.
- Your system configuration and all peripheral devices connected to your system.
- Your sales contract.

Technical data

Pocket-PC

| General | |
|---|--|
| Processor | SAMSUNG SC32442 300 MHz |
| Main memory | 0 MB – 4 GM ROM (depending on model) 64 Mbyte RAM |
| GPS | SIRF Star III |
| Data: electrical | |
| Safety standards complied with | CE, FCC Part 15 Class B, EN 60950, cUL, UL |
| Protection class | III |
| Maximum power draw (when the Pocket PC is switched on and the battery is being charged) | 5 W |
| Display | |
| Transmissive LCD display: | 2.8 inch TFT, 240 x 320 pixels, 65,536 colours |
| Card slots | |
| 1 x slot | "Mini Secure Digital I/O" |
| Ports/interfaces | |
| Audio | Microphone, loudspeaker, headphones (3.5 mm) |
| Data | External GPS antenna, Mini USB connection |
| Environmental conditions | |
| Environment class 7K2, 7K2 | EN 60721-3-7 |
| Housing class 7M2 | EN 60721-3-7 |
| Temperature <ul style="list-style-type: none">• Operating (3K2)• Transport (2K2) | 5 °C – 40 °C -25 °C – 60 °C |
| Dimensions | |
| Height/width/depth | 89 mm x 62 mm x 16 mm |
| Weight | approx. 110 g |

Battery (Li-Ion)

| | |
|--|--|
| Rated capacity: | 1100 mAh |
| Charging time (when not in operation): | Approx. 4 hours |
| Operating time: | Operating time depends on the active applications. |

Power adapter

| Data: electrical | |
|---|--|
| Primary: <ul style="list-style-type: none">• Rated voltage:• Frequency: | 100 V to 240 V (automatic) 50 Hz to 60 Hz (automatic) |
| Secondary: <ul style="list-style-type: none">• Rated voltage:• Max. rated current: | 5 V \pm 5% 21.0 A \pm 5 % |

Index

A

- Accessories 3
- Adjust... 28
- Adjusting display lighting 28
- Adjusting touchscreen 14
- Alarm 25

B

- Battery
 - capacity 6
 - charging 12
 - charging using mains adapter 12, 13
 - discharges 36
 - storing 6
 - technical data 40
- Battery charge status display 9
- Bricks 23

C

- Calculator 23
- CE marking 7
- Changing
 - front cover 33
- Cleaning 7
- Colour settings 29
- Connecting
 - loudspeakers 20
- Connecting headphones 20
- Connecting loudspeakers 20
- Connecting the Pocket PC with PC/Notebook 26
- Cover 9

D

- Data
 - technical 39
- Data transfer 26
- Date
 - setting 25
- Delivered state 18
- Device settings 27
- Display
 - calibrating 28
- Display 9
 - charge level and battery 30
 - cleaning 7
- Display lighting
 - adjusting 28
- Display system information 30

- Display, setting 29
- Displaying battery charge level 30
- Disposal 7

E

- Electromagnetic compatibility 7
- Energy management 29
- Expansion card
 - handling 31
 - inserting 31
 - removing 32

F

- First start 14
- Floppy disk drive
 - Music player 20
- Front cover 9
 - changing 33
- Front of Pocket PC 13

G

- Games 23
- GPS 19
 - indicator 10
 - poor reception 37
- GPS antenna 9

H

- Hardware reset 18
- Headphones
 - connecting 20
- Hold switch 9, 18
- Hotline/Help Desk 38

I

- Important notes 5
- Indicator
 - battery charge level 10
 - GPS 10
- Indicators
 - device 30
- Infrared interface 9
- Initial start-up 10
 - connecting power adapter 12
 - first start 14
 - Start screen 14
 - touchscreen 14
- Inserting the battery 11

- L**
 - Landscape orientation 29
 - Language
 - setting 29
 - Liability 7
- M**
 - Mains adapter
 - connecting 12
 - technical data 40
 - Mini-USB port 9
 - Music player 20
 - Hold switch 18
 - symbols 21
- N**
 - No sound 37
 - Notational conventions 2
 - Notes
 - CE marking 7
 - cleaning 7
 - disposal 7
 - safety 5
- O**
 - On/off time 16
 - Operating the Pocket PC 9
 - Optimising battery operating time 14
- P**
 - Pocket PC
 - before you travel 6
 - cleaning 7
 - does not work 36
 - switching off 16
 - switching on 14, 16
 - transporting 6
 - Poor reception
 - GPS 37
 - Port for headphones 9
 - Port for Mini SD expansion card 9
 - Portrait orientation 29
 - Power saving possibilities 29
 - Power-on indicator 10
 - Preparing for use
 - first time 10
 - inserting battery 11
- R**
 - Radio indicator
 - GPS 9
 - Recycling 7
- S**
 - Safety notes 5
 - Setting
 - date 25
 - display 29
 - Suspend mode 30
 - time 25
 - Setting suspend mode 30
 - Settings
 - device 27
 - volume 27
 - Signs and symbols 2
 - Smart Pixie* 23
 - Soft reset
 - carrying out 17
 - Start screen 14
 - Status
 - battery charge level 10
 - Storage, battery 6
 - Stylus
 - removing 14
 - Suspend mode 16
 - Suspend/Resume button 9
 - switching off 16
 - switching on 16
 - System status display 28
- T**
 - Technical data 39
 - battery 40
 - Pocket PC 39
 - Technical data for the mains adapter 40
 - Telescopic stylus 9
 - Time
 - setting 25
 - Time zone
 - setting 25
 - Tips 35
 - To use the QuickPoint: 20
 - Transport 6
 - Travel, Pocket PC 6
 - Troubleshooting 35
- U**
 - Using profiles 23
 - Using the stylus 18
- V**
 - Volume
 - adjusting 27
 - Volume, minimal 37

W

Warm boot 17

Wireless indicator 10

World clock 23