



C520 C520t

User's Manual



R01 (EU)

Trademarks

The Bluetooth word mark and logo are owned by the Bluetooth SIG, Inc. All other brand and product names are trademarks or registered trademarks of their respective companies.

Disclaimer

Specifications and manuals are subject to change without notice. Mio Technology assumes no liability for damage incurred directly or indirectly from errors, omissions, or discrepancies between the device and the manuals.



Table of Contents

Precautions and Notices	v
1 Getting Started.....	1
1.1 Understanding Hardware Components.....	1
Front Components	1
Back Components.....	2
Left-Side Components	2
Top Components.....	3
Bottom Components	3
1.2 Performing the Initial Start Up.....	4
1.3 Connecting to AC Power and Charging the Battery.....	6
1.4 Charging the Battery via the USB Cable.....	7
1.5 Using Your Device in a Vehicle.....	8
Using the Device Cradle or TMC Cradle.....	8
Connecting the Car Charger	9
1.6 Operating Basics.....	10
Turning On and Off	10
Navigating on the Screen.....	10
Home Screen	11
Using the Soft Keyboard	12
1.7 Inserting a SD/MMC Card	14
2 Audio.....	15
2.1 Starting and Exiting Audio.....	15
2.2 Preparing the Audio Files for Your Device.....	16
2.3 Playing Audio Files.....	16
2.4 Playback Controls	17
2.5 Displaying Lyrics	19
Preparing the Lyrics Files for your Device	19
Playing Songs with Lyrics	19
2.6 Using the Play Lists.....	20
Creating a Play List.....	20
Opening a Play List.....	21

2.7	Equalizer	22
2.8	Settings	23
3	Pictures.....	25
3.1	Starting and Exiting Pictures	25
3.2	Preparing the Pictures for Your Device.....	25
3.3	Viewing Pictures in Thumbnail View	26
3.4	Viewing a Picture in Full Screen	27
3.5	On-Screen Control Buttons	27
3.6	Viewing the Slideshow	29
4	Contacts	31
4.1	Starting and Exiting Contacts.....	31
4.2	Using the Contacts List	32
4.3	Using the Summary Screen	33
4.4	Navigating to a Contact's Address	33
4.5	Making a Phone Call to a Contact	34
4.6	Managing Contacts	35
	Adding a Contact.....	35
	Editing a Contact.....	37
	Deleting a Contact.....	37
5	Bluetooth	39
5.1	About Bluetooth Profiles.....	39
5.2	Connecting a Bluetooth Mobile Phone.....	40
	Connecting a Mobile Phone for the First Time.....	40
	Connecting a Different Mobile Phone	43
	Using the Mobile Phone Shortcut.....	43
	Disconnecting the Mobile Phone.....	44
5.3	Phone Operations	44
	Placing a Call	44
	Receiving a Call	47
	Operations during a Call	48
5.4	Connecting a Bluetooth Headset	49
	Connecting a Headset for the First Time	49
	Connecting a Different Headset.....	51
	Using the Headset Shortcut	51
	Disconnecting the Headset	51
6	Calculator	53
6.1	Starting and Exiting Calculator.....	53
6.2	Using the Calculator Mode.....	54
	Calculator Memory	55

6.3	Using the Currency Mode	55
	Editing Exchange Rate.....	57
6.4	Using the Conversion Mode.....	58
7	File Manager.....	61
7.1	Starting and Exiting File Manager.....	61
7.2	Transferring Files	62
	From the Storage Card to Your Device.....	62
	From Your Device to the Storage Card.....	64
7.3	Managing Folders and Files.....	64
8	Settings.....	65
8.1	Starting and Exiting Settings	65
8.2	Backlight.....	66
8.3	Volume	67
8.4	Screen	68
8.5	Power	69
8.6	Date/Time.....	70
8.7	Language	72
8.8	Bluetooth	73
	BT Preferences	74
	Auto-answer Preferences.....	74
	Delete Preferences	75
8.9	Restore.....	75
9	MioTransfer	77
9.1	Installing MioTransfer	77
9.2	Starting and Exiting MioTransfer.....	78
9.3	Copying Multimedia Files to Your Device	79
	Managing Files.....	81
9.4	Copying Contacts Information to Your Device	81
10	Troubleshooting and Maintenance	83
10.1	Restart and Shut Down	83
	Restarting Your Device	83
	Shutting Down Your Device	83
10.2	Troubleshooting	84
	Power Problems.....	84
	Screen Problems.....	84
	Connection Problems.....	85
	GPS Problems.....	85
10.3	Maintaining Your Device	86

11 Regulatory Information87

11.1 Regulations Statements 87

European Notice 87

Bluetooth 88

11.2 Safety Precautions 88

About Charging 88

About the AC Adapter 88

About the Battery 89



 
Precautions and Notices

- For your own safety, do not operate the controls of the product while driving.
- Use this product prudently. The product is intended for use solely as a navigation aid. It is not for precise measurement of direction, distance, location or topography.
- The calculated route is for reference only. It is the user's responsibility to follow the traffic signs and local regulations along the roads.
- When you get out of the car, do not leave your device on the dashboard subjected to direct sunlight. Overheating of the battery can cause malfunction and/or danger.
- GPS is operated by the United States government, which is solely responsible for the performance of GPS. Any change to the GPS system can affect the accuracy of all GPS equipments.
- GPS satellite signals cannot pass through solid materials (except glass). When you are inside a tunnel or building, GPS positioning is not available.
- A minimum of 4 GPS satellite signals is needed to determine current GPS position. Signal reception can be affected by situations such as bad weather or dense overhead obstacles (e.g. trees and tall buildings).
- Other wireless devices in the vehicle might interfere with the reception of satellite signals and cause the reception to be unstable.

- A car holder is needed when using the device in a car. Be sure that you place the device in an appropriate place, so as not to obstruct the driver's view, or deployment of airbags.

Do not mount where the driver's field of vision is blocked.

Do not place unsecured on the dashboard.

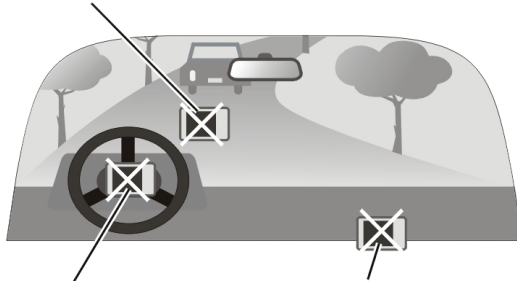

Do not mount in front of airbag panels.

Do not mount in front of an airbag field of deployment.

 
1

Getting Started

1.1 Understanding Hardware Components


NOTE: Depending upon the specific model purchased, the color of your device may not exactly match the device shown in this manual.

Front Components

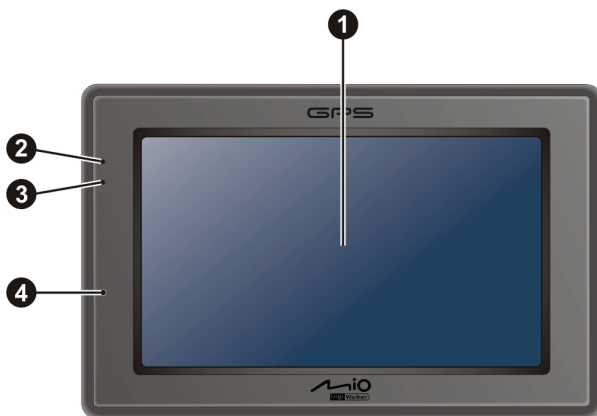


Ref	Component	Description
①	Touch Screen	Displays the output of your device. Tap the screen with your fingertip to select menu commands or enter information.
②	Bluetooth Indicator	Flashes in blue to indicate that Bluetooth is on.
③	Charge Indicator	Glowes bright amber to indicate that the battery is charging, and turns green when the battery is fully charged.
④	Microphone	For Bluetooth hands-free calling.

 Back Components

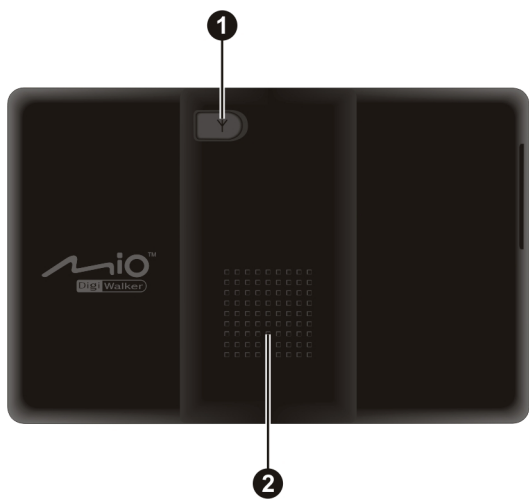

Ref	Component	Description
1	External GPS Antenna Connector	This connector (under rubber dust cover) allows use of an optional external GPS antenna with magnetic mount, which may be positioned on top of the car for better signal reception in areas with poor reception.
2	Speaker	Sends out music, sounds and voice.

 Left-Side Components

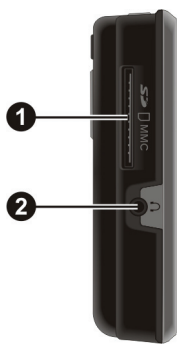


Ref	Component	Description
①	SD/MMC Slot	Accepts a SD (Secure Digital) or MMC (MultiMediaCard) card for accessing data such as MP3 music.
②	Headphone Connector	Connects to stereo headphones.

Top Components



Ref	Component	Description
①	Power Button	Turns on and off the device. (Pressing briefly or for a long duration makes a difference. See sections 1.6 and 10.1 for information.)

 
Bottom Components

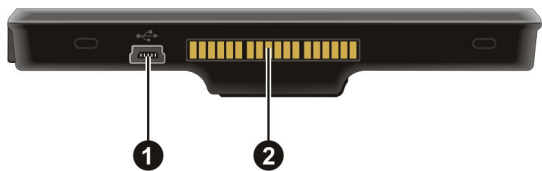


Ref	Component	Description
①	Mini-USB Connector	Connects to the charger or USB cable.
②	Cradle Connector	Connects to the cradle. (The cradle supplied with your device depends on the model you purchased.)

1.2 Performing the Initial Start Up

 
1. For the initial start up, press the power button for 5 seconds to turn on your device.

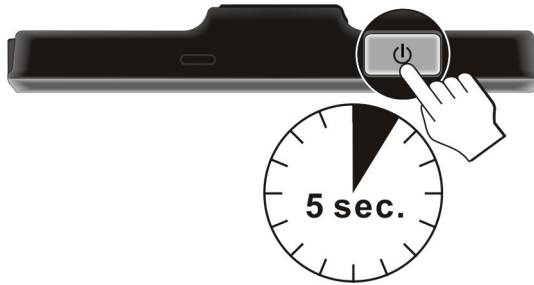

| NOTE: For normal operation, briefly press the power button to turn on and off your device.

2. Your device turns on. Immediately charge your device as described in the next section.
3. The “Switch Language” screen appears. Tap the arrow button to select the desired language. Then, tap the  button.



4. The “Date/Time” screen appears. Tap the appropriate arrow button to select the time zone, date, and time. Then, tap the  button.



 
5. The Home screen appears. You can now use your device.



1.3 Connecting to AC Power and Charging the Battery

When charging the battery for the very first time, you should charge it for at least 8 hours.

1. Slide and click the connector converter onto the AC adapter.
2. Connect the adapter cable to the bottom of your device.
3. Plug the AC adapter into a wall outlet.

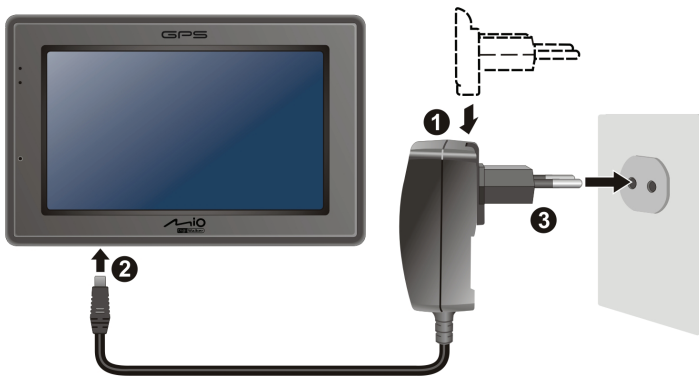

4. The charge indicator glows amber when charging is in progress. Do not disconnect your device from AC power until the battery is fully charged, the charge indicator will turn green. This will take a couple of hours.

NOTE:

 
- Do not immediately turn on your device after connecting the AC adapter to charge a power-depleted battery. If you need to turn on the device again, wait for at least one minute.
- Depending on your region of purchase, the connector converter may not look exactly the same as the picture shown.

CAUTION: For optimal performance of the lithium battery:


- Do not charge the battery where the temperature is high (e.g. in direct sunlight).
- There is no need to fully discharge the battery before charging. You can charge the battery before it is discharged.
- When storing the product for a long period of time, be sure to fully charge the battery at least once every two weeks. Over discharge of the battery can affect the charging performance.

1.4 Charging the Battery via the USB Cable

1. Turn on the computer.
2. Connect the mini-USB end of the USB cable to the bottom of your device and the other end to a USB port on your computer.

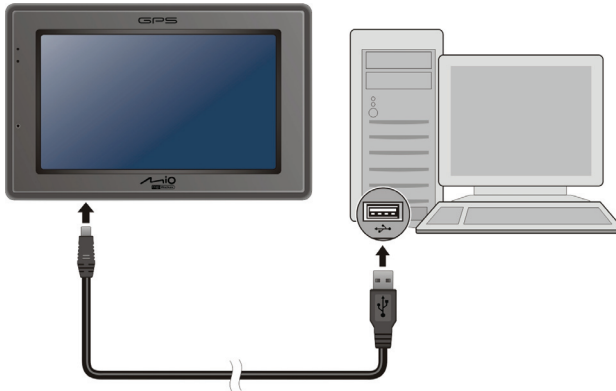

 3. If your device is on, the screen as shown below appears. Whenever your device is connected to a computer, you will not be able to use it.

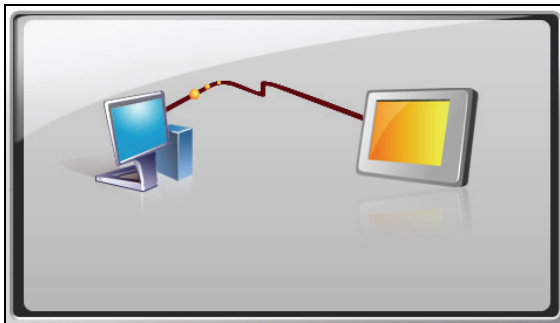

NOTE:

- When the device is connected to a computer, it is recognized as an external mass storage device. Do not delete any files pre-installed in the device. Deleting files of which the function is unknown can cause programs or features to malfunction.
- If you intend to charge your device in this way, turn off your device so that it takes less time to charge the battery.

1.5 Using Your Device in a Vehicle

CAUTION:

- Select an appropriate location for mounting the device in a vehicle. Never place the device where the driver's field of vision is blocked. Make sure that the GPS antenna has a clear view of the sky.
- If the car's windshield is tinted with a reflective coating, an external antenna (optional) may be needed to route the antenna to the top of the vehicle through a window. When closing the window, be careful not to pinch the antenna cable.

Using the Device Cradle or TMC Cradle

Depending on the model you purchased, a device cradle or a TMC cradle is supplied. Use the cradle and the stand to fix your device in a vehicle. (See a separate document for the installation instruction.)



With the TMC cradle (for select models only), you can connect the TMC antenna to receive radio transmissions that are used to inform drivers of traffic conditions. TMC information is monitored by the navigation software. Once the information is received, you can view it on your device and traffic icons will appear in the map view. Certain roads with reported traffic will be highlighted and you can choose to avoid those roads and an alternate route will be automatically calculated. (See the navigation software manual for detailed information.)

Connecting the Car Charger

The car charger supplies power to your device when you are using the device in a car.

CAUTION: To protect your device against sudden surges in current, connect the car charger only after the car engine has been started.

1. Connect one end of the car charger to the power connector of the cradle.
2. Connect the other end to the cigarette lighter in the car to power and charge your device. The indicator on the car charger lights in green to indicate that power is being supplied to your device.



1.6 Operating Basics

Turning On and Off

For normal operation, turn off the device by briefly pressing the power button. The device enters a suspended state.



When you next briefly press the power button, the system resumes. You will either be back to where you left off or see the Home screen.

NOTE:

- The screen you see after resuming depends on the program you were using when you suspended the device. Some programs will be closed when you suspend the device, meaning you can only see the Home screen after resuming.
- Pressing the power button for a longer duration has a different effect. See section 10.1 for more information.

Navigating on the Screen

To operate your device, touch the screen with your fingertip. You can perform the following actions:



- **Tap**
Touch the screen once with your fingertip to open items or select onscreen buttons or options.
- **Drag**
Hold your fingertip on the screen and drag up/down/left/right or across the screen.
- **Tap and hold**
Tap and hold your fingertip until an action is complete, or a result or menu is shown.

Home Screen

The first time you initialize your device, the **Home** screen appears. The **Home** screen is your starting place for various tasks. Tap a button to start a program or open another menu. When you exit a program, you are back to the **Home** screen.




No.	Button Name	Description	For Detailed Information
❶	MioMap	Starts the navigation software.	See the MioMap manual
❷	Audio	Plays audio files.	Chapter 2
❸	Pictures	Displays picture files.	Chapter 3
❹	Contacts	Keeps a list of names, addresses, and phone numbers.	Chapter 4
❺	Mobile Phone	Searches for Bluetooth mobile phones for a connection.	Chapter 5
❻	Stereo	Searches for Bluetooth headsets for a connection.	Chapter 5

	connection.	
7	Tools	Calculator provides basic arithmetic, currency conversion, and measure conversion functions. Chapter 6
		File Manager transfers multimedia files between a storage card and the device's flash memory. Chapter 7
8	Settings	Customizes the system settings. Chapter 8

Using the Soft Keyboard

 
There are occasions when you input text or numbers to your device. For example, you have to enter names, addresses, and phone numbers in the Contacts program. On such occasions, the soft keyboard as shown below will appear on the screen. Depending on the current operation, either the alphabet keypad or the number/symbol keypad appears.

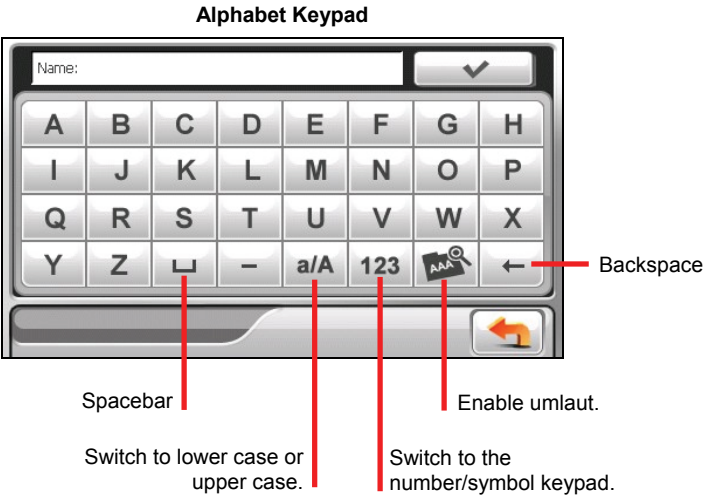


Number/symbol Keypad




Switch to the alphabet keypad.

 When you tap  to enable umlaut, you can tap a vowel letter repeatedly to input a different form of the letter. Alternatively, you can tap the letter in the pop-up window as shown below.

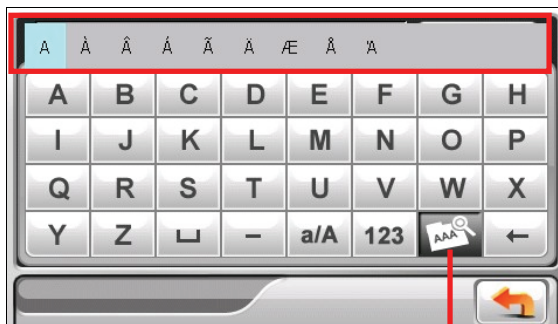

Umlaut enabled. Tap the button again to disable it.

After you complete an input, tap .

1.7 Inserting a SD/MMC Card

Your device has a SD/MMC slot where you can insert an optional Secure Digital or MultiMediaCard storage card. It supports up to 2GB storage card.

To use a SD/MMC card, insert it into the slot, with the connector pointing to the slot and its label facing the front of the device.



To remove a card, first make sure that no application is accessing the card, then slightly push the top edge of the card to release it and pull it out of the slot.

NOTE:

- Make sure that no foreign objects enter the slot.
- Keep a SD or MMC card in a well-protected box to avoid dust and humidity when you are not using it.

2

Audio

2.1 Starting and Exiting Audio

Audio features:


- Playback of MP3/WAV/WMA files
- Basic playback controls such as play, pause, stop, next and previous
- Playback includes single selection playback, repeat, single repeat, sampling playback, normal sequence and random sequence.
- 11 preset equalizer audio profiles
- Play list support
- Background playback
- Lyrics display

Tap **Audio** on the Home screen to start the program.



The control panel appears on the screen where you can easily control the player by tapping the control buttons.



To exit the program, tap .

2.2 Preparing the Audio Files for Your Device


Before using the program, have the files (.mp3, .wav, or .wma) ready on either your device's **My Flash Disk\My Audio** folder or on a storage card.

A tool called **MioTransfer** is supplied for you to easily copy the files from your computer to the correct location. (See section 9.3 for information.)

2.3 Playing Audio Files

1. If your files are in a storage card, insert the card into your device.
2. Tap **Audio** on the Home screen to start the program.
3. The program will search for the supported audio files in your device and in the storage card. When files are detected, they will be added to the play list.

| NOTE: You can create your own play lists for future playback. (See section 2.6 for details.)

4. To start the playback, tap . To control the playback, use the control buttons as described later.













 










The information area displays the current status including the play/pause/stop status, the elapsed time, the power status, the playback mode, the volume level, and the properties of the current song such as the artist (if available with the file), filename, total length, and stereo/mono information.

NOTE:

- During the playback, the screen backlight will automatically shut off if you haven't tapped the screen within the preset time (30 seconds by default). The backlight will restore when you press the power-button or when the playback of the current play list has ended.
- If the total length of a song exceeds 99 minutes and 59 seconds, the information area cannot correctly display the length because the maximum number allowed is 99:59. However, the playback of the song is not affected.

2.4 Playback Controls

Control Button	Name	Description
	Play/Pause	Plays or pauses the playback.
	Stop	Stops the playback.
	Previous/Next	Plays the previous or next file.
	Volume	Increase or decrease the volume. The indicator on the panel shows the current volume level.
	Track Bar	You can tap on a point along the track bar to move directly to a different location for the playback.

Control Button	Name	Description
	Playback Mode	Switches to the next mode:
	 Repeat One	Repeated playback of the current file.
	 Repeat All	Repeated playback of all files in the current play list in sequence.
	 Shuffle	Playback of all files in the current play list in random order.
	 Intro	Sampling (10 seconds) playback of all files in the current play list in random order.
	 Normal	Playback of all files in the current play list in sequence.
	Lyrics	Opens the lyrics display. Available only if the current song is with lyrics. (See section 2.5 for more information.)
	Minimize	Minimizes the control panel and play the music in the background.
	Play List	Opens the play list. (See section 2.6 for more information.)
	Equalizer	Opens the equalizer panel. (See section 2.7 for more information.)
	Settings	Opens the Settings screen for setting up power saving mode and accessing help. (See section 2.8 for more information.)
	Exit	Closes the program and returns to the Home screen.

2.5 Displaying Lyrics

The program allows you to display the real-time lyrics on the screen while playing songs. This feature is especially handy for you to sing along with the songs.

Preparing the Lyrics Files for your Device


To display the lyrics, you need to have the lyrics files (.lrc) ready on your device's **\My Flash Disk\My Audio\Lyric** folder or the **\Lyric** folder on your storage card.

| **NOTE:** You can search and download these .lrc files from the Internet.

Use **MioTransfer** to copy the lyrics to the correct location of your device. (See section 9.3 for information.) When copying a lyric file to your device, be sure to use the same filename as the audio file. For example, if a MP3 file is named **My Love.mp3**, the lyrics filename must be **My Love.lrc**.

| **NOTE:** When playing songs with lyrics, the 30s backlight shut off feature will be disabled.

Playing Songs with Lyrics

The  button is available when you're playing a song with lyrics. Tap this button to view the lyrics.




As the song plays, the lyrics scroll line by line on the screen, with the current line highlighted by a different color. The background image changes in turn at a specific time interval.

To close the lyrics screen and go back to the control panel, tap anywhere on the screen.



2.6 Using the Play Lists

 
You can create your own play lists for future use.



Creating a Play List


1. Tap  on the control panel to open the play list screen. The screen shows the current play list.

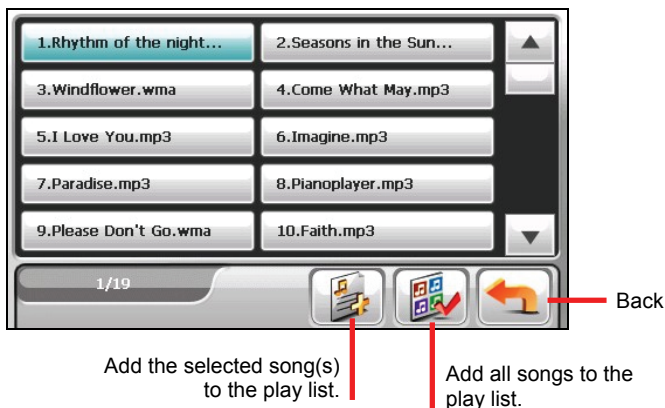

 
2. To add a song to the play list, tap .
3. A screen appears displaying all the audio files. Tap the song(s) you wish to add and then tap .



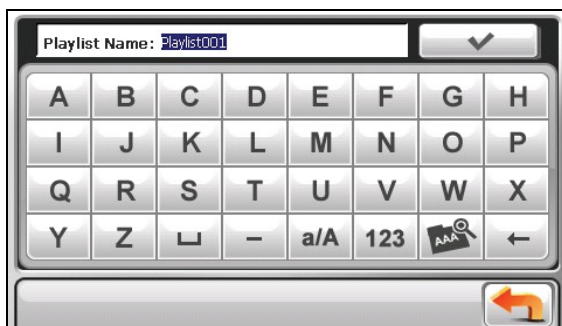

4. To save the play list, tap .
5. The keyboard screen appears where you can change the default name of the play list. Rename the play list if you want. Tap  when finished.




6. To return to the control panel, tap .


Opening a Play List

To open one of the play lists that you have created:


1. Tap  on the control panel.
2. Tap  to display all the play lists you have created.

 
3. Tap the play list you want to open and tap .






4. To return to the control panel, tap .


2.7 Equalizer

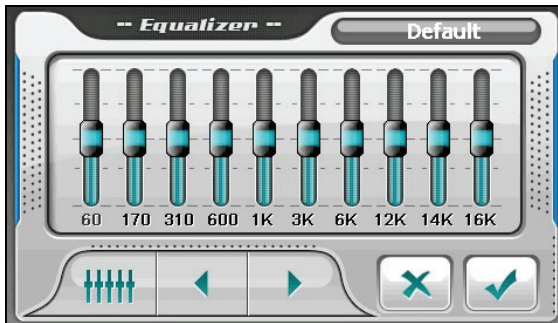The program provides 11 preset audio profiles. Tap  to open the equalizer panel.




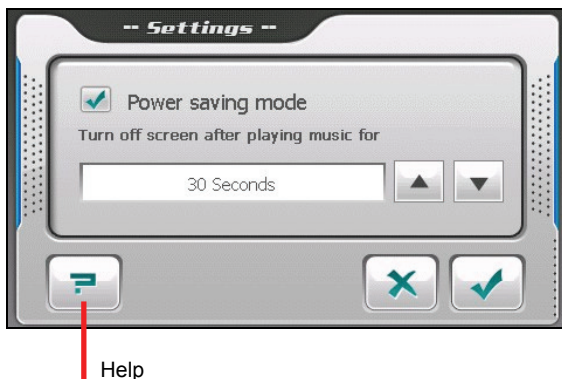 
Tap  or  to cycle through the available options: *Default, Rock, Pop, Jazz, Classical, Dance, Heavy, Disco, Soft, 3D and Hall.*


Tap  to save your selection and return to the control panel.

To select the *Default* profile, tap .


2.8 Settings

Tap  on the control panel. The Settings screen appears.



NOTE: To know the function of each button, you can tap . Then tap the button on the list to display a description line on the right side of the screen.

Tap the check box (✓) to turn on the power saving mode. Tap the up/down button to set the timer to *10 seconds*, *30 seconds*, *1 minute*, or *5 minutes*. During the playback, the screen backlight will automatically shut off if you haven't tapped the screen within the preset time (30 seconds by default). The backlight will restore when you press the power button or when the playback of the current play list has ended.

Tap  to save any changes you have made.

3

Pictures

3.1 Starting and Exiting Pictures

Pictures allows you to view pictures in JPG, JPEG, and BMP formats and view the slideshow of the pictures on your device.

Tap **Pictures** on the Home screen to start the program.



To exit the program, tap .

3.2 Preparing the Pictures for Your Device

 
Before using the program, have the files (.jpg, .jpeg, or .bmp) ready on either your device's **My Flash Disk\My Pictures** folder or on a storage card.

NOTE: The Pictures program does not support the display of BMP files in 32-bit and above color depth formats.


A tool called **MioTransfer** is supplied for you to easily copy the files from your computer to the correct location. (See section 9.3 for information.)

3.3 Viewing Pictures in Thumbnail View


1. If your files are in a storage card, insert the card into your device.
2. Tap **Pictures** on the Home screen o start the program.
3. The program will search the matching files in the specific folder on your device and in all folders on a storage card. It then displays the pictures in the thumbnail view. You can press the **Up** or **Down** arrow button to go to next or previous page.

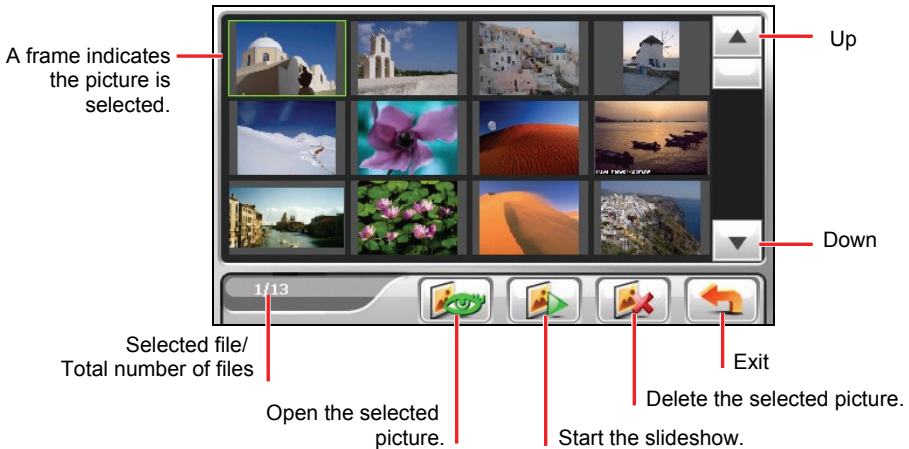

3.4 Viewing a Picture in Full Screen


When you tap a picture twice in the thumbnail view, the picture is displayed in full screen. Or, you can tap a picture and then tap .









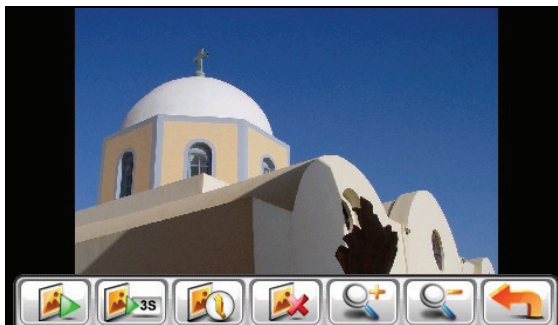 

To go back to the thumbnail view, tap anywhere on the screen to display the control buttons and then tap .

3.5 On-Screen Control Buttons



On-screen control buttons provide various functions and settings. Tap anywhere on the picture to display the buttons as shown below. To close the buttons, tap the picture again.



Control Button	Name	Description
	Slideshow	Starts the slideshow. (See section 3.6 for detailed information.)
	Interval	<p>Sets the length of time each slide is displayed before moving on to the next slide. Tap the button to switch to the next available option.</p> <p>1 second 3 seconds 5 seconds</p>
	Information	<p>Enables or disables the displaying of the name and date of the file.</p> 
	Delete	Deletes the current picture.
 	Zoom	Tap the button as many times as needed to zoom in to 1.2x, 1.5x, 1.8x, or 2.0x. When you have zoomed in the picture, you can drag the picture to view other parts of the picture.
	Back	Goes back to the thumbnail view.

3.6 Viewing the Slideshow

To view the slideshow of all your pictures, use one of the following ways:

- When in the thumbnail view, tap  to start the slideshow.
- When in full screen, tap anywhere on the picture to display the on-screen control buttons. Then tap  to start the slideshow.



To stop the slideshow, tap anywhere on the screen.

4

 
Contacts


4.1 Starting and Exiting Contacts

Contacts allows you to keep a list of names, addresses, and phone numbers.

NOTE: If you have created Microsoft Outlook Contacts information on your computer, you can copy the information to your device. (See section 9.4 for information.)

Tap **Contacts** on the Home screen to start the program. The contacts list appears.

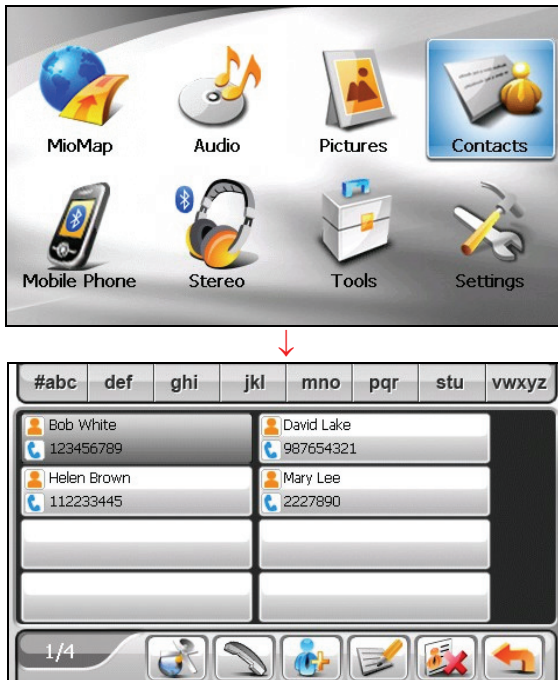


To exit the program, tap .

4.2 Using the Contacts List

After starting Contacts, the contacts list appears. It shows the names and phone numbers (mobile phone numbers by default) of your contacts.

 
You can use the various buttons on the screen to search a contact, navigate to the address of a contact, call a contact, and so on.

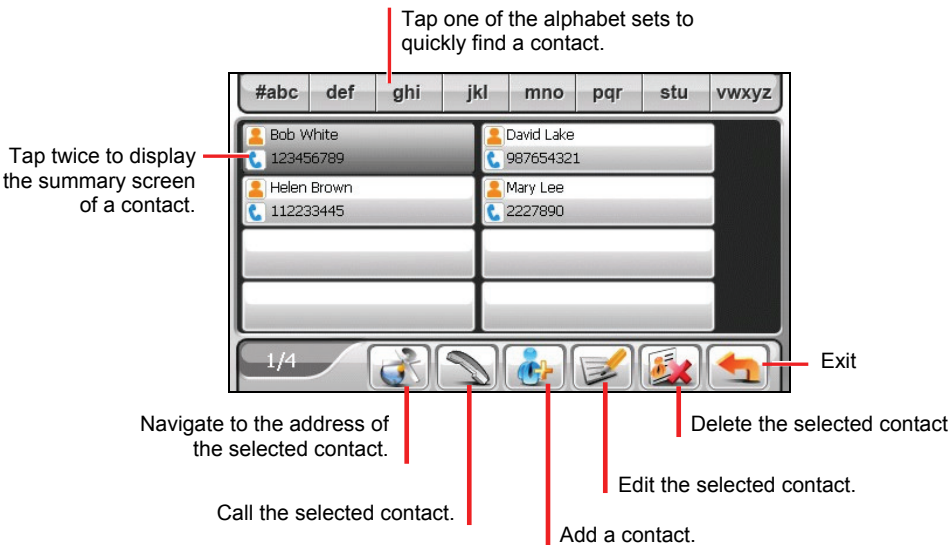

NOTE: If you have transferred the phone book from a Bluetooth mobile phone to your device (as described in section 5.3), the contacts will also appear in the list.


4.3 Using the Summary Screen

 
In the contact list, tapping a contact twice displays the summary screen of the contact.

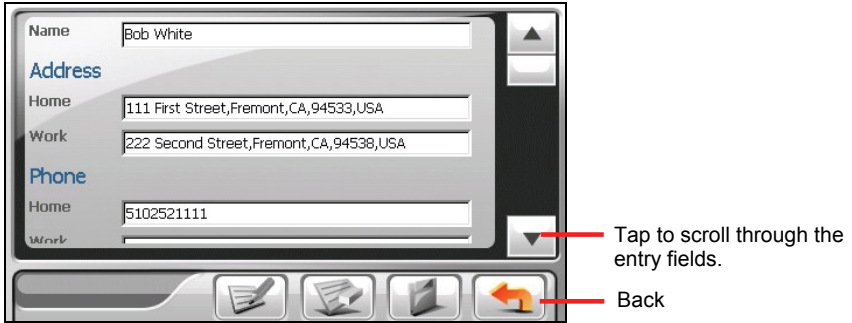


4.4 Navigating to a Contact's Address

You can set a contact's address as your GPS navigation destination.

  1. Tap the **Contacts** button on the Home screen to start the program.
2. In the contact list, select the desired contact and tap .

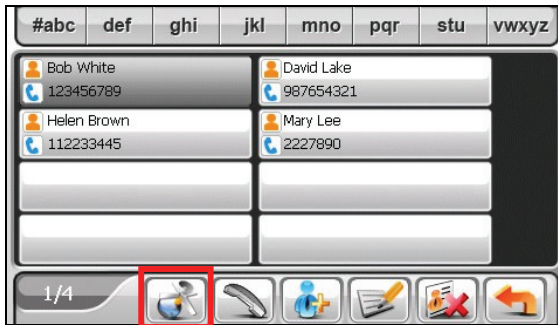


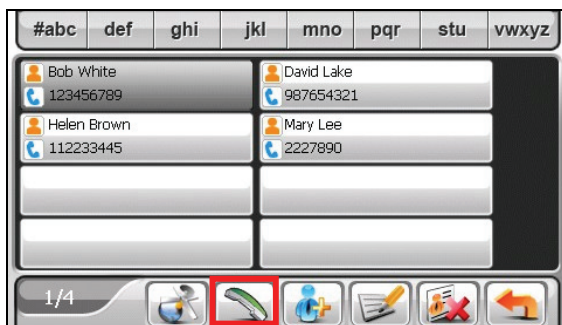 
3. Tap  to select the home address or  to select the work address.

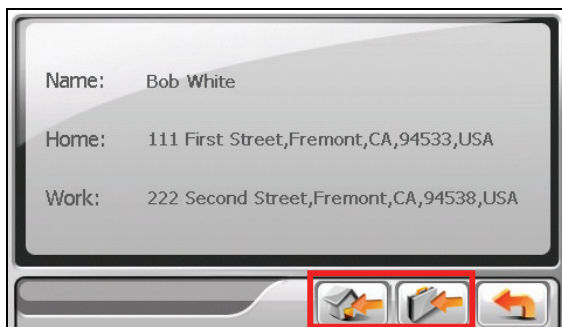


 

4. The navigation program starts. (See the document supplied with the navigation software for more information.)


4.5 Making a Phone Call to a Contact

1. Connect your device with a Bluetooth mobile phone as described in section 5.2.
2. Tap the **Contacts** button on the Home screen to start the program.
3. In the contact list, select the desired contact and tap .



| NOTE: The call button is available for use only when a Bluetooth mobile phone is connected.

 4. Tap  to call the home number,  the work number, or  the mobile phone number.

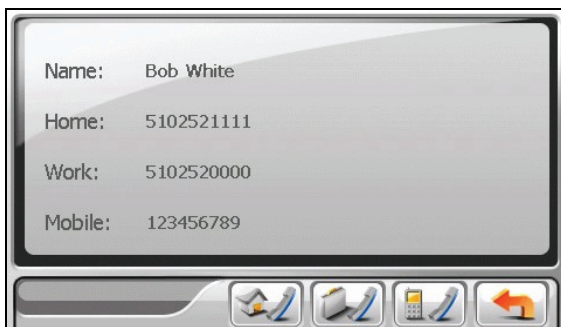



4.6 Managing Contacts

Adding a Contact


1. Tap the **Contacts** button on the Home screen to start the program.

 2. Tap .

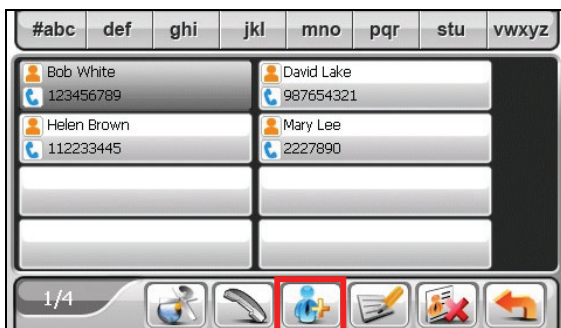


3. Tap an entry field twice. Or, tap a field and then tap . The soft keyboard appears.

A screenshot of a contact form interface. It features a list of labels on the left: 'Name', 'Address', 'Home', 'Work', 'Phone', 'Home', and 'Work'. To the right of these labels are corresponding input fields. The 'Name' field is at the top, followed by 'Address' which has sub-fields for 'Home' and 'Work'. Below that is 'Phone' with sub-fields for 'Home' and 'Work'. At the bottom of the form are four icons: a notepad and pencil, a document with an arrow, a folder, and a red arrow pointing left.


4. Use the soft keyboard to enter the information in the field and tap .

A screenshot of a soft keyboard displayed over a 'Name:' input field. The keyboard has a grid of letters A through Z, a spacebar, a hyphen/apostrophe key, a key with 'a/A' and '123', and a key with 'AAA' and a magnifying glass icon. A red arrow icon is visible in the bottom right corner of the keyboard area.

5. Enter the information in other fields such as address and phone number fields. You will need to scroll down to see all available fields.

NOTE: When entering the address, the soft keyboard guides you through different parts of the address including country, city, street, and house number. After entering a part, tap  to proceed to the next part.

A screenshot of a soft keyboard displayed over a 'Mobile:' input field. The keyboard has a grid of numbers 1 through 0, a '#' key, a '-' key, a ',' key, a '.' key, a ':' key, an '@' key, an '&' key, a '%' key, a '+' key, a '-' key, a key with a square and an arrow, a '?' key, an '*' key, an 'ABC' key, a key with a magnifying glass and 'AAA', and a red arrow icon in the bottom right corner.

6. Tap  save the contact's information and return to the contact list.





Editing a Contact


To modify a contact's information:

1. In the contact list, tap the contact twice to open the summary screen.


- or -

In the contact list, tap the contact and then tap .

2. Tap twice the field you want to edit and use the soft keyboard to edit. If you want to clear a field, tap the field and then tap .

3. Tap  to save the changes.

Deleting a Contact

In the contact list, select the contact you want to delete and tap .

5

Bluetooth

5.1 About Bluetooth Profiles

Your device incorporates Bluetooth wireless communications technology. Devices with Bluetooth capabilities can exchange information over a distance of about 10 meters (30 feet) without requiring a physical connection.

Your device supports Bluetooth profiles as below:

- **Hands-free Profile (HFP)**

Allows your device to serve as a hands-free device for a Bluetooth mobile phone. You can tap your device to place and receive phone calls instead of picking up the mobile phone, and can use the built-in speakers and microphone for your conversation.

- **Advanced Audio Distribution Profile (A2DP)**

NOTE:

- Not all Bluetooth devices support all profiles. Check the document of a Bluetooth device to know its Bluetooth capabilities.
- By default, the Bluetooth radio is on when the device power is on. When necessary, you can turn off the Bluetooth radio on your device. (See section 8.8 for information on Bluetooth settings.)

5.2 Connecting a Bluetooth Mobile Phone

Connecting a Mobile Phone for the First Time

NOTE: This chapter tells you how to initiate the Bluetooth connection from your device. If you want to initiate the Bluetooth connection from a Bluetooth mobile phone, make sure that your device is in discoverable mode. (See section 8.8 for information.)

1. Make sure that the Bluetooth mobile phone is in discoverable mode.
2. Tap **Mobile Phone** on the Home screen.



3. The program will search for nearby Bluetooth mobile phones if this is the first time you try to connect a mobile phone.



NOTE: If no device is detected, the screen shows the shortcut menu. (See the shortcut descriptions later in this section.)

4. The search result will show on the screen. Tap the mobile phone you want to connect.



5. Tap the soft keyboard to enter the passkey (within 16 characters).



6. Enter the same passkey on your Bluetooth mobile phone so that the connection can be established. Depending on the mobile phone model, you may need to select the hands-free service to complete the connection.
7. When the connection is completed, a message will appear on the screen. Tap **Yes**.
8. The shortcut menu appears with the name of the connected device on top of the screen. A check mark indicates that the device is connected. Tap **Back** to display the Mobile Phone main menu.



9. In the Mobile Phone main menu, you can place phone calls by tapping buttons on the screen. (See section 5.3 for information.)



10. You can tap **Back** to minimize the screen and use other functions of the device.

Connecting a Different Mobile Phone

To connect a mobile phone that is not already in the shortcut list:

1. If you are in the Mobile Phone main menu, tap **Connect to Phone**.



2. In the shortcut menu, tap **Find Others**.



Using the Mobile Phone Shortcut

Once a Bluetooth connection has been established, the shortcut will be saved. When you next tap the **Mobile Phone** button on the Home screen, the program will try to connect the last paired mobile phone.

You can also tap a particular shortcut button in the shortcut menu to connect the particular mobile phone.



Delete the selected shortcut.

NOTE:

- All shortcuts will be cleared if you shut down the device.
- The program can save up to 15 shortcuts. A 16th shortcut will replace the oldest one.

 
Disconnecting the Mobile Phone

Tap the connected device in the shortcut menu and tap **Disconnect** when the message appears asking you to select your operation.

5.3 Phone Operations

Placing a Call

After pairing with a mobile phone (as described in section 5.2), you can place a call with the onscreen keypad, phone book, or call history.

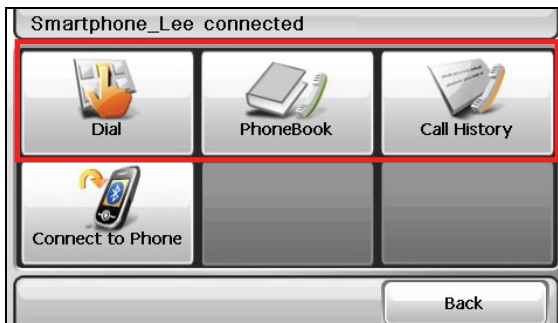

Dial



By tapping the **Dial** button in the Mobile Phone main menu, you can enter the telephone number with the onscreen keypad. After entering the telephone number,

tap



to place the call.



NOTE:

- International calls require a country code to be included in the phone number. On your device, the country code is separated from the rest of the number sequence by a plus (+) sign. If you are making an international call, tap and hold the **0** key until the + sign appears.
- To delete the last digit entered, tap the **Backspace** button. Tap and hold the button for about 1 second will clear the entire number.

Phone Book



By tapping the **Phonebook** button on the Mobile Phone main menu, you can select a phone number to call.

The program can display two types of phone books.

- **Local phone book**

This is the phone book from the device's Contacts program. (See Chapter 4.)

- **Remote phone book**

This is the phone book downloaded from the mobile phone during the first time connection. Depending on your mobile phone, this type of information may not be downloadable.

NOTE:

- When a mobile phone different from the previous one is connected, a message will appear asking if you want to replace the previous remote phone book with the current remote phone book.
- If you need to refresh the remote phone book, tap **Get Phone Number** to download the phonebook from the mobile phone again.

This icon indicates a contact from the mobile phone's phone book.



When a contact has more than one phone numbers, all numbers will appear in the list with the letter “m” meaning mobile phone, “h” meaning home, and “w” meaning work.

On the phonebook screen, tap the phone number to call.

NOTE: To remove the mobile phone's phone book from your device, use Bluetooth settings as described in section 8.8.



Call History

By tapping the **Call History** button on the Mobile Phone main menu, you can select a recent phone number to call.

The program can display two types of call history.

 
- **Local call history**

This is the call history from your device.

- **Remote call history**

This is the call history from the connected mobile phone. Depending on your mobile phone, this type of information may not be downloadable.

NOTE: When a mobile phone different from the previous one is connected, a message will appear asking if you want to replace the previous remote call history with the current remote call history.

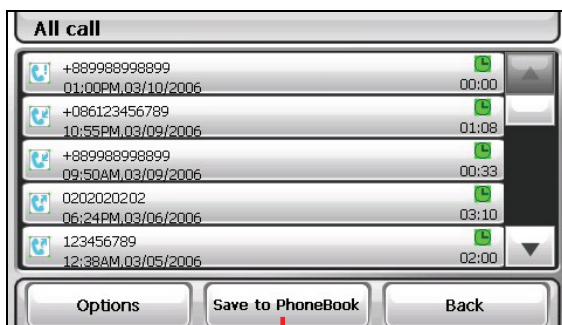

Save the selected phone number to the Contacts program.

By default, the list shows the incoming, outgoing, and missed calls. You can filter the calls by tapping **Options**.

| NOTE: To clear the call history, use Bluetooth settings as described in section 8.8.

Receiving a Call

After pairing with a mobile phone (as described in section 5.2), your device will ring and display the incoming call screen when there is an incoming call.




Answer

Reject

To accept the call, tap . To reject the call, tap .

| NOTE: You can have the device automatically answer an incoming call. (See section 8.8.)

 
Operations during a Call

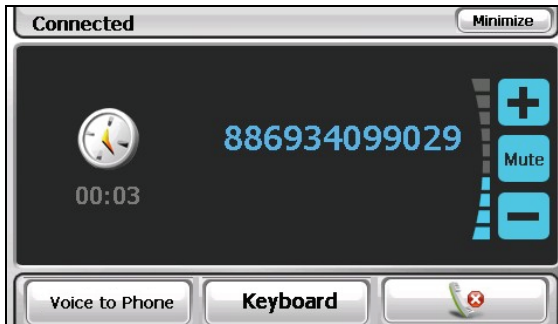

During a phone call:

- If you need to input other numbers, such as an extension number, tap **Keyboard** to open the keypad and tap the digits.



- Tap **Mute** to mute your sound so that the other party cannot hear you. To end the mute mode, tap the button again.
- Tap  to end the call.
- Tap **Voice to Phone** to switch the call to your mobile phone. To transfer back, tap the button again.
- Tap **Minimize** to minimize the screen and to back to the previous screen.

5.4 Connecting a Bluetooth Headset

Connecting a Headset for the First Time

1. Make sure that the headset to connect is a stereo Bluetooth headset.
2. Tap **Stereo** on the Home screen.



3. The program will search for nearby Bluetooth headsets if this is the first time you try to connect a headset.



NOTE: If no device is detected, the screen shows the shortcut menu. (See the shortcut descriptions later in this section.)

 
4. The search result will show on the screen. Tap the headset you want to connect.



5. Tap the soft keyboard to enter the passkey. (Check the headset manual for the passkey.)



6. When the connection is completed, a message will appear on the screen. Tap **Yes**.
7. The shortcut menu appears with the name of the connected device on top of the screen. A check mark indicates that the device is connected.

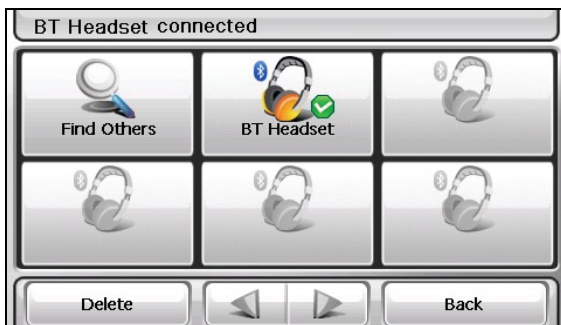

8. You can tap **Back** to go back to the Home screen.

Connecting a Different Headset

To connect a headset that is not already in the shortcut list, tap **Find Others** in the shortcut menu.

Using the Headset Shortcut

Once a Bluetooth connection has been established, the shortcut will be saved. When you next tap the **Connect to Headset** button on the Home screen, the program will try to connect the last paired headset.

You can also tap a particular shortcut button to connect the particular headset.



Delete the selected shortcut.

NOTE:

- All shortcuts will be cleared if you shut down the device.
- The program can save up to 15 shortcuts. A 16th shortcut will replace the oldest one.

Disconnecting the Headset

Tap the connected device in the shortcut menu and tap **Disconnect** when the message appears asking you to select your operation.

6 Calculator

 
6.1 Starting and Exiting Calculator


Calculator provides three modes: **Calculator**, **Currency**, and **Conversion**. You can use these modes to perform basic arithmetic, currency conversion, and measure conversion functions.

Tap **Tools** on the Home screen and then tap **Calculator** to start the program.



 
You will see the calculator screen. To switch to another mode, tap one of the buttons at the top right corner of the screen.

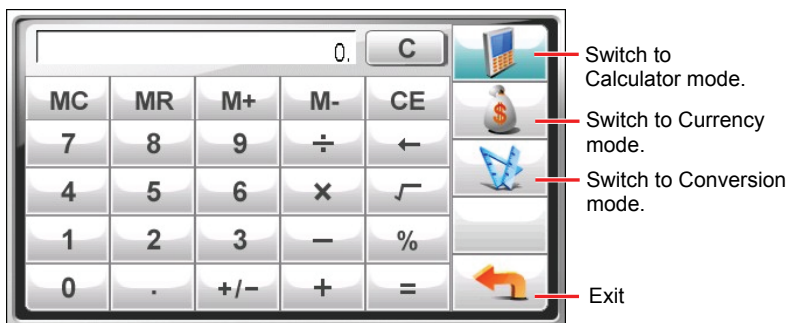


 
To exit the program, tap .

6.2 Using the Calculator Mode

 
The Calculator mode allows you to perform any of the standard operations for which you would normally use a handheld calculator.

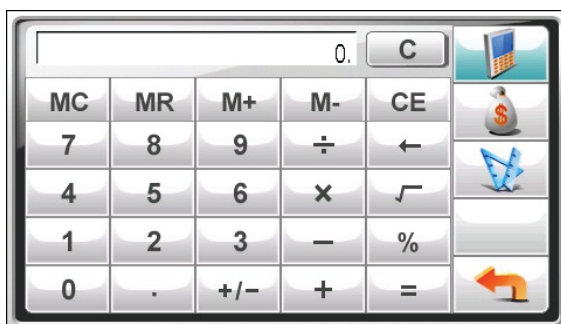





If you are currently not in the Calculator mode, tap the  button.

Tap the numeric keypad to enter numbers and mathematical symbols. Then tap the  button to generate the result.

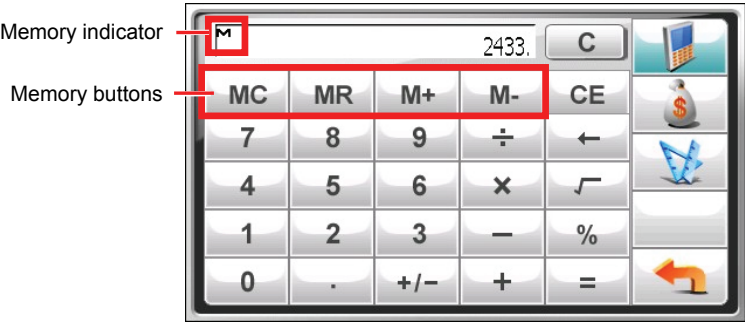
Calculator Memory

  


Button	Name	Description
	Memory Cancel	Clears the value in memory.
	Memory Recall	Shows the value in memory.
	Memory Plus	Adds the current value to the value in memory.
	Memory Minus	Subtracts the current value from the value in memory.


6.3 Using the Currency Mode

 Use the Currency mode to perform the currency conversion. You can also edit the exchange rate.

 
1. Start the Calculator program as described in section 6.1.
2. Tap  to switch to the Currency mode.

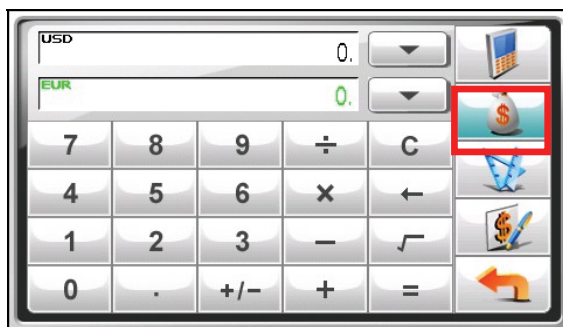

 3. Tap the down arrow next to the input field to display a list of currencies and select the currency to convert from. When a currency is selected, the abbreviation of the currency will be displayed on the upper left corner of the input field.

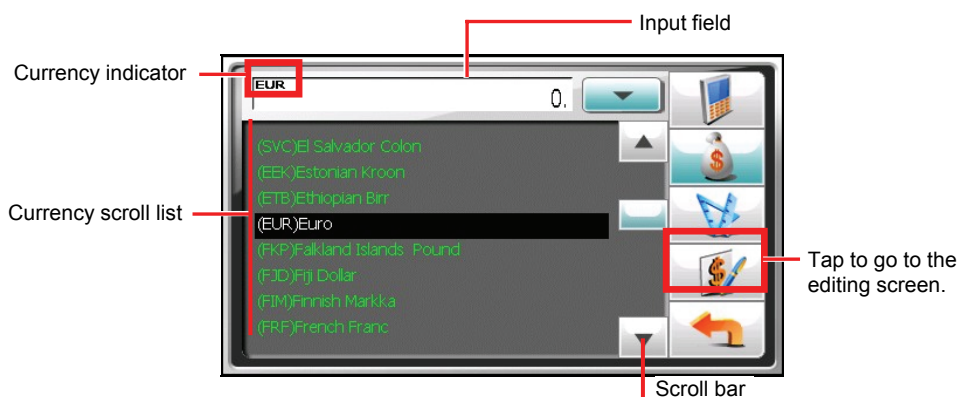

 4. Tap the down arrow next to the output field to display a list of currencies and select the currency to convert to. When a currency is selected, the abbreviation of the currency will be displayed on the upper left corner of the output field.

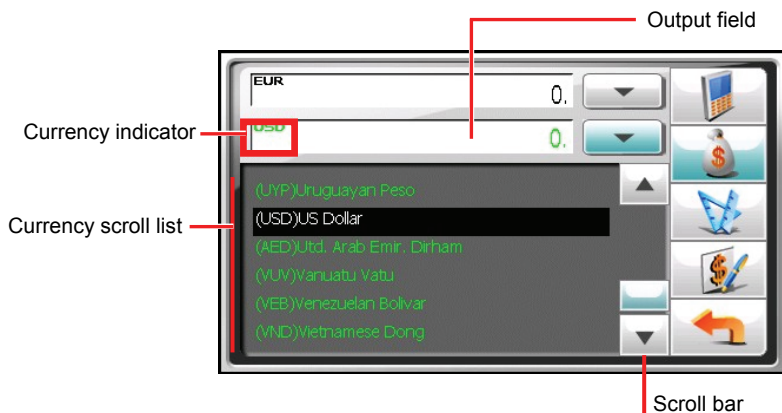

5. Enter the currency value in the input field by tapping the number buttons on the numeric keypad. You can also perform basic arithmetic in the input field.



The converted currency immediately appears in the output field.



NOTE: The program uses the default exchange rates unless you change them. (See the sub-section below for information.)

Editing Exchange Rate

Before performing the currency conversion, you can edit the exchange rate to the most up-to-date one.


1. Tap  on the Calculator screen.
2. Select the source and target currency.
3. Tap .

 
4. Enter the exchange rate and tap  to save the changes and go back to the previous screen.



6.4 Using the Conversion Mode

The Conversion mode allows you to convert measures from one unit to another.


1. Start the Calculator program as described in section 6.1.
2. Tap  to switch to the Conversion mode.

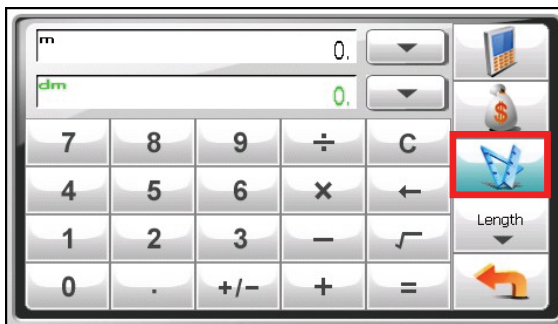


3. Tap the measure button to display a scroll list of measures. Select the desired measure from the list.



 4. Tap the down arrow next to the input field to display a list of units and select the unit to convert from. When a unit is selected, the abbreviation of the unit will be displayed on the upper left corner of the input field.

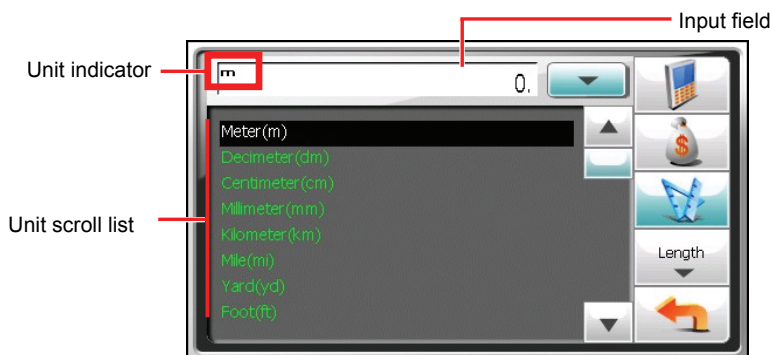

 5. Tap the down arrow next to the output field to display a list of units and select the unit to convert to. When a unit is selected, the abbreviation of the unit will be displayed on the upper left corner of the output field.

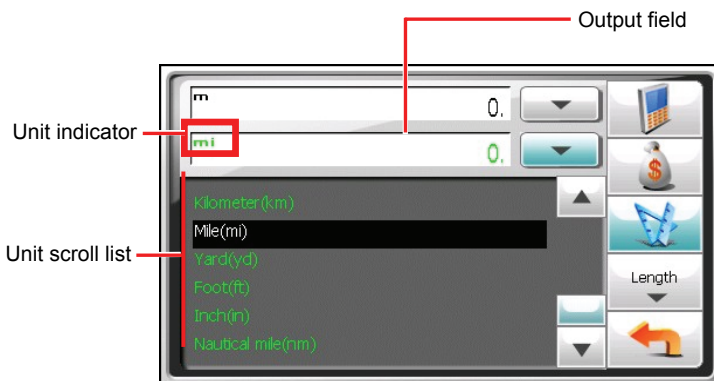

6. Enter the value in the input field by tapping the number buttons on the numeric keypad. You can also perform basic arithmetic in the input field.

The converted value immediately appears in the output field.



7

File Manager

 
7.1 Starting and Exiting File Manager

File Manager allows you to transfer multimedia files between your device and a storage card.

Tap **Tools** on the Home screen and then tap **File Manager** to start the program.



The File Manager screen shows specific folders of your device in the left column and the folder(s)/file(s) of the storage card, if inserted, in the right column.

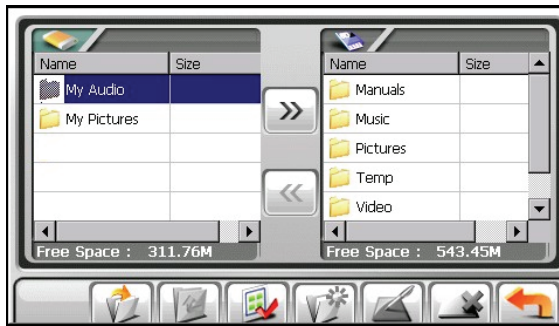


NOTE: The left column shows only “specific” folders in the **My Flash Disk** of your device. “Specific” folders refer to pre-defined data folders for multimedia programs (such as **My Audio** folder for the Audio program). Other folders are not accessible within the File Manager program.

To exit the program, tap .


7.2 Transferring Files


From the Storage Card to Your Device

 
1. Insert the storage card.
 2. Tap **Tools** on the Home screen and then tap **File Manager** to start the program.
- By default, the first folder of your device’s **My Flash Disk** is highlighted.

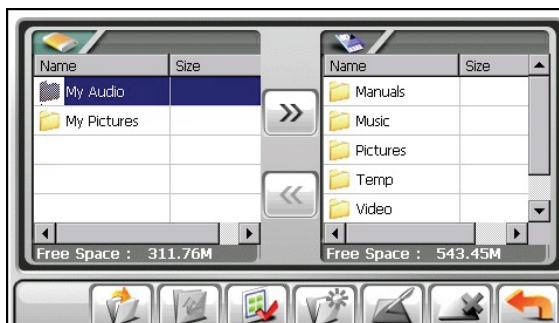


  3. To select the target folder, tap twice the folder in the left column to open it.
Or, tap the folder and then tap  to open the folder.

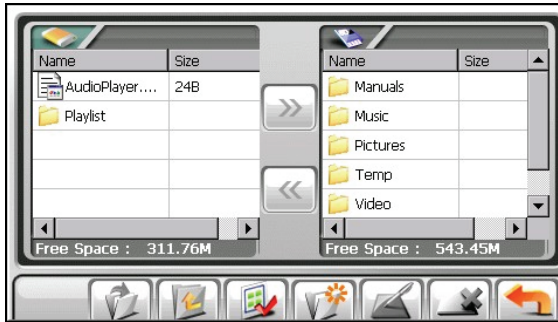


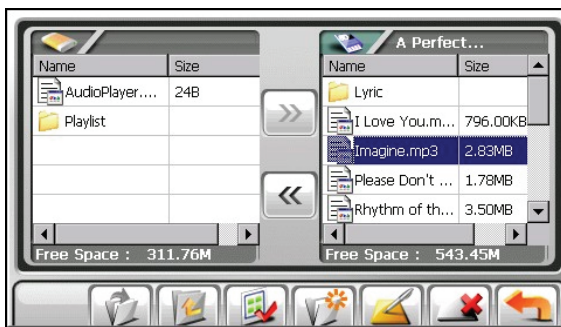 
4. If the source file is in a folder of the storage card, tap twice the folder in the right column to open the folder. Or, tap the folder and then tap  to open the folder.


If you want to select all folders, tap .

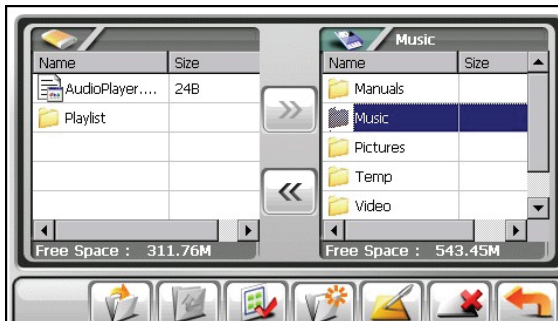

5. Select your source file by tapping it in the right column.

If you want to select all files, tap .



NOTE: To go up one level, tap .

6. Tap  to copy the selected file to the target folder.

From Your Device to the Storage Card




Use the same method as described in the previous sub-section to copy files from your device to the storage card except that the direction is from the left column to



the right column.

7.3 Managing Folders and Files

In addition to copying files, File Manager provides the below functions:

-  **Rename**
Changes the name of the selected folder/file.
-  **Delete**
Deletes the selected folder/file.
-  **New Folder**
Creates a new folder in the selected folder.

NOTE: You cannot rename or delete the pre-defined folders of your device. You cannot create new folders in the root level of your device.

8


Settings

8.1 Starting and Exiting Settings

You can customize the system settings such as backlight brightness, volume, and language. Once you change the settings, the new settings will remain until you change them again.

Tap the **Settings** button on the Home screen. The Settings menu appears as shown below.



To exit Settings, tap .

 
The following sections describe the various buttons and their functions.


8.2 Backlight

1. Tap the **Settings** button on the Home screen.
2. Tap the **Backlight** button.



3. Move the knob along the track bar to adjust the brightness of the backlight. To darken the backlight, move the knob to the left. To lighten the backlight, move the knob to the right.

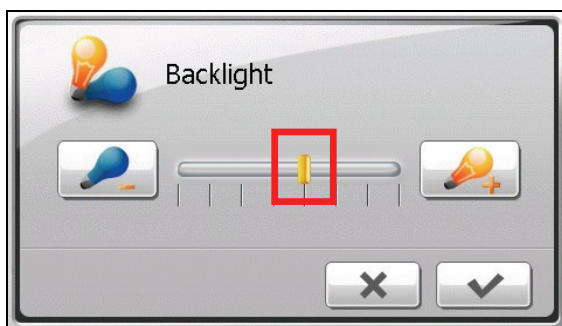

4. Tap  to save the changes.

8.3 Volume

1. Tap the **Settings** button on the Home screen.
2. Tap the **Volume** button.



3. Move the knob along the track bar to adjust the volume. To decrease the volume, move the knob to the left. To increase the volume, move the knob to the right.

 



4. Tap  save the changes.

8.4 Screen

You can calibrate the touch screen if it is not responding accurately to your taps.


1. Tap the **Settings** button on the Home screen.
2. Tap the **Screen** button.

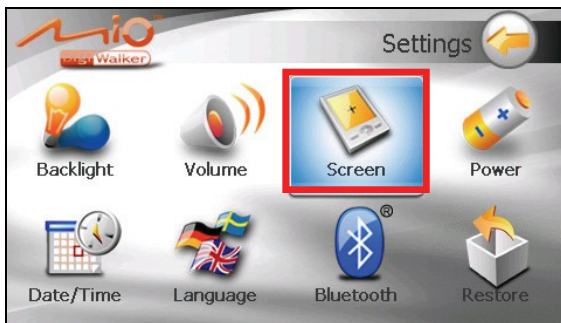


3. Tap  to start the calibration.



 4. Tap and hold the centre of the target.

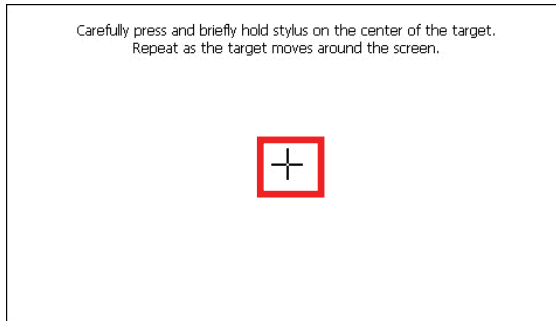

5. When the target moves to another position, tap and hold the centre of the new target. Repeat each time to complete the calibration process.
6. When completed, tap .

8.5 Power

To check the remaining power level of your battery and/or set up the power saving feature:

1. Tap the **Settings** button on the Home screen.
2. Tap the **Power** button.



3. The screen shows the remaining power of your battery.

You can set a timer to automatically turn off your device when it is idle for a set period of time. The options include **Never**, **30 minutes**, **20 minutes**, and **10 minutes**.



4. Tap  to save the changes.

8.6 Date/Time

1. Tap the **Settings** button on the Home screen.
2. Tap the **Date/Time** button.

 



3. To change the time zone, tap the arrow in the “Time Zone” item.



4. To change the date, tap the down arrow in the “Date” item. A calendar pops up. Tap the left arrow on the calendar to go to the earlier month and year or the right arrow to the later month and year. Alternatively, you can tap the month or year on top of the calendar to directly change the month or year.

When the calendar shows the current month, tap the date on the calendar.

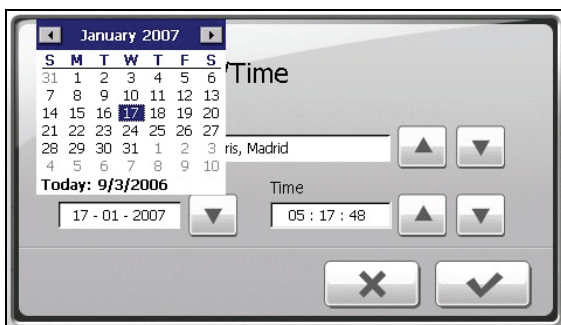

5. To set the time, first tap the hour, minute, or second in the “Time” item and then tap the up arrow to increase or down arrow to decrease the value.
6. Tap  to save the changes.



8.7 Language

1. Tap the **Settings** button on the Home screen.
2. Tap the **Language** button.



3. Tap the up/down arrow button to select the desired language.



4. Tap  to save the changes.
5. Tap the  button for the new setting to take effect.

8.8 Bluetooth

1. Tap the **Settings** button on the Home screen.
2. Tap the **Bluetooth** button.



3. The “Bluetooth Settings” screen contains 3 buttons as described below.



4. After you complete your settings in a screen, tap **Done**.
5. Tap **Back** to go back to the Settings screen.

 
BT Preferences



The setting items in the “BT preferences” screen are:


- **Name**
Tap twice this field if you want to rename the Bluetooth device name. A soft keyboard appears for you to enter the new name.
- **Enable Bluetooth**
The Bluetooth radio is on when this item is checked. Uncheck this item if you want to turn off the Bluetooth radio.
- **Discoverable Bluetooth**
Check this item to make your device discoverable for other Bluetooth devices. You can check this item only if the previous item is enabled.

Auto-answer Preferences

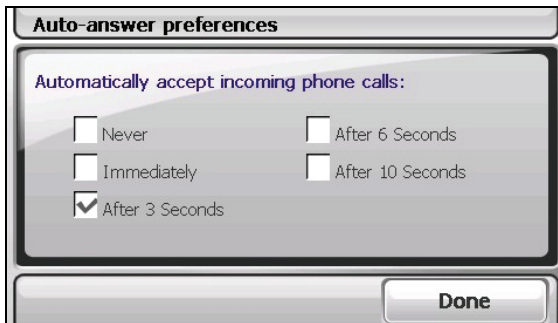

You can specify how soon your device automatically answers an incoming call. If you want to manually answer a call, select **Never**.

 Delete Preferences

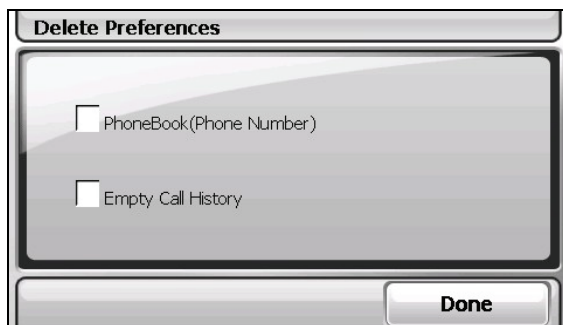

Whenever you want to delete particular data as listed below, check the corresponding item(s) in the “Delete preferences” screen.

- Phonebook (phone number)
- Empty call history

A message will appear on the screen asking if you want to permanently delete the data. Tap **OK**.

8.9 Restore

To restore the settings to factory default values:

1. Tap the **Settings** button on the Home screen.
2. Tap the **Restore** button.



3. Tap .

9

MioTransfer

9.1 Installing MioTransfer

MioTransfer allows you to easily transfer data such as MP3 and photos between your device and a computer. To install MioTransfer to your computer:

1. Turn on your computer and insert the supplied CD/DVD into the CD/DVD-ROM drive of your computer.
2. When the language selecting screen appears, click the language that you wish to install from.
3. Click **Install MioTransfer**.



4. Click **Next**. Follow the onscreen instructions to complete the installation.

NOTE: If MioTransfer has already been installed on your computer, clicking **Install MioTransfer** will remove the application from your system.

9.2 Starting and Exiting MioTransfer

Click **MioTransfer** icon on the Windows Desktop to start the program. The MioTransfer screen appears.



It provides the following tools:

- **Audio**
Allows you to transfer the audio files between your device and your computer. (See section 9.3 for details.)
- **Pictures**
Allows you to transfer pictures between your device and your computer. (See section 9.3 for details.)

- **Contacts**

Allows you to copy the **Microsoft Outlook Contacts** information from your computer to your device. (See section 9.4 for details.)

- **Mio Online**

Provides link to the Mio website.

 
To exit MioTransfer, click **Exit** at the bottom right corner of the screen.

CAUTION: Before disconnecting the cable, you must click the device icon in the task bar and click “Safely remove xxx” (where xxx is the name of your device). If you are transferring data, disconnecting the cable without following the correct removal procedure can result in data loss.

9.3 Copying Multimedia Files to Your Device

Before playing multimedia files such as MP3 files, you need to have the files ready on your device. Use MioTransfer to copy the files from your computer to the correct location on your device.

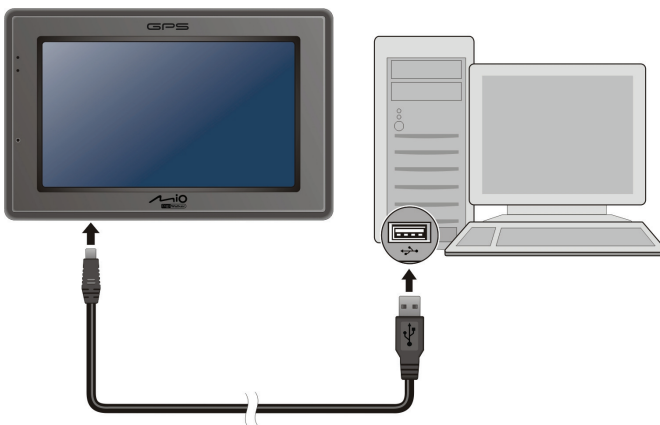

1. If you want to copy files to a storage card, insert the card to your device.
2. Turn on your computer and your device.
3. Connect the mini-USB end of the USB cable to the bottom of your device and the other end to a USB port on your computer.

 


4. Start MioTransfer by clicking **MioTransfer** icon on the Windows Desktop. The MioTransfer screen appears.



5. Select the type of file to copy:

- To copy audio files, click **Audio** on the top menu bar.
- To copy photos or pictures, click **Pictures** on the top menu bar.

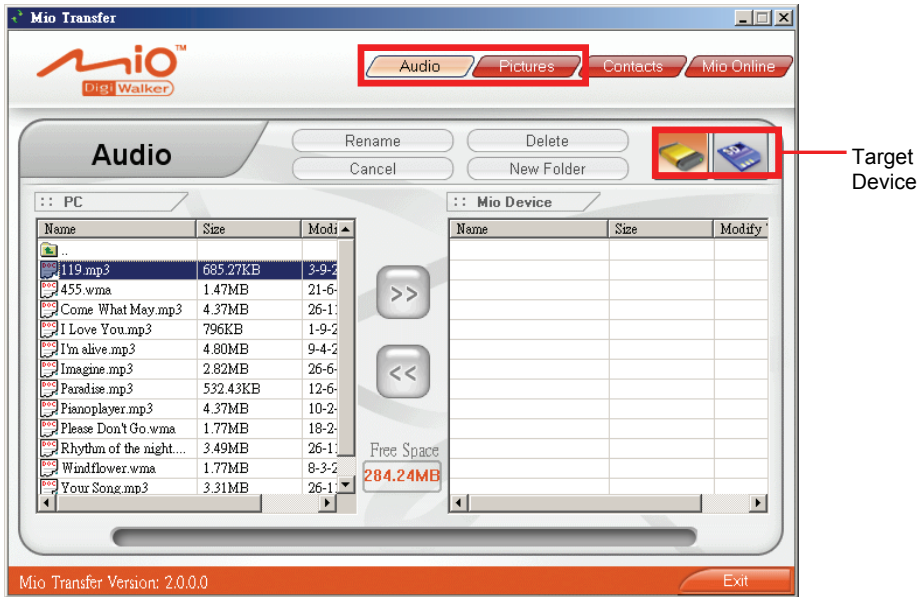
The left column shows the drives of your computer and the right column shows the files in the appropriate folder of the target device (either  or ).




6. Select your target device by clicking one of the icons:

-  - the flash memory of your device
-  - a storage card inserted into your device.

7. Select the folder where your audio or picture files are from the left column.

Select the file you want to copy and tap . The status bar will indicate the progress of file transfer and the selected file will be copied to the target device.

NOTE: You can also copy files from your device to your computer. First select the file you want to copy from the right column and select a folder on the left column to place these files. Then click  to start the file transfer.

Managing Files

 
Various buttons are available for you to manage the files:

- **Rename**
Changes the name of the selected file.
- **Delete**
Removes the selected file.
- **Cancel**
Aborts the ongoing action of file transfer.
- **New Folder**
Creates a new folder in the selected drive or folder.


9.4 Copying Contacts Information to Your Device

You can copy the Microsoft Outlook Contacts information from your computer to your device using MioTransfer. This saves you the time for entering the information all over again on your device or on your computer. (For information on Contacts, see Chapter 4.)

1. Turn on your computer and your device.
2. Connect the mini-USB end of the USB cable to the bottom of your device and the other end to a USB port on your computer.

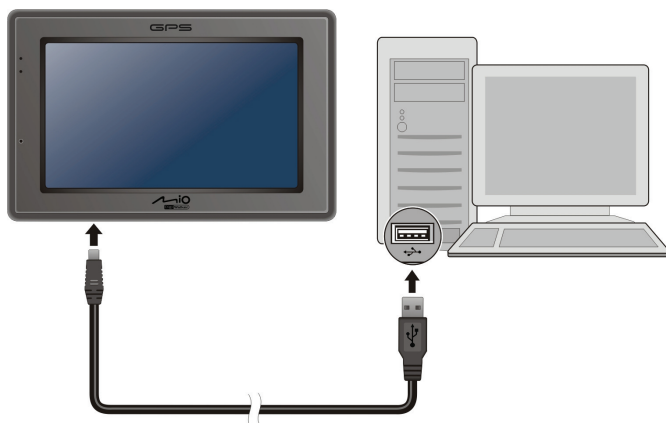

 3. Start MioTransfer by clicking **MioTransfer** icon on the Windows Desktop. The MioTransfer screen appears.
4. Click **Contacts** on the top menu bar.
5. Select your option and click **Apply**.

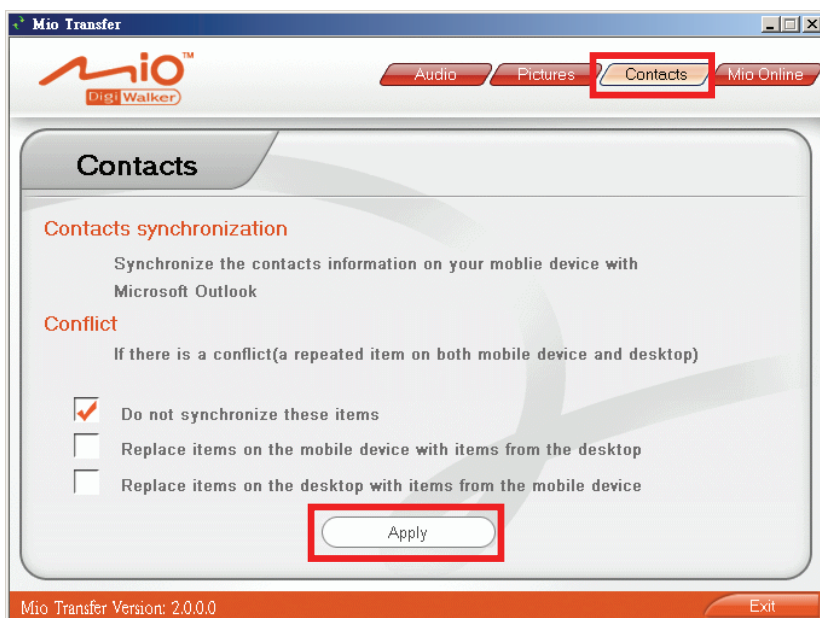

10

Troubleshooting and Maintenance

10.1 Restart and Shut Down

Occasionally, you may need to reset your device. For example, you should reset your system when it stops responding; or appears to be “frozen” or “locked up.”

Restarting Your Device

To restart your device, press the power button for 5 seconds until the “Power Off Selection” screen appears and then tap **Restart**.



Shutting Down Your Device

To shut down your device, press the power button for 5 seconds until the “Power Off Selection” screen appears and then tap **Shutdown**.

Alternatively, you can press the power button for 10 seconds to directly shut down the device. This is useful when a software failure prevents the “Power Off Selection” screen from displaying.

Shutting down puts the device in a deep sleep state. The device will close all running programs before shutting down. To use the device again, press the power button for 5 seconds. The Home screen appears.

10.2 Troubleshooting

NOTE: If you encounter a problem you cannot solve, contact an authorized service center for assistance.

Power Problems

Power does not turn on when using battery power

- The remaining battery power may be too low to run your device. Charge the battery.

Screen Problems

Screen responds slowly

- Make sure that your device is not running out of battery power. If the problem still exists, reset your system.

Screen freezes

- Reset your system.

Screen is hard to read

- Make sure that the backlight of the display is on.
- Move to a location with more light.

Inaccurate response to taps

- Recalibrate the touch screen.

Connection Problems

Cable Connection Problems

- Make sure that your device and your computer are both turned on before trying to establish a connection.
- Make sure that the cable is securely plugged into the USB port on your computer and on the device. Connect the USB cable directly to your computer—do not run the cable through a USB hub.
- Reset your device before connecting the cable. Always disconnect your device before you restart your computer.

GPS Problems

When there are no valid signals available, consider the following:

- Make sure that the device is facing a clear view of the sky.
- Note that the GPS reception can be affected by:
 - ✓ Bad weather
 - ✓ Dense overhead obstacles (e.g. trees and tall buildings)
 - ✓ Other wireless device in the car
 - ✓ Reflective car window tint and heated screens.

10.3 Maintaining Your Device

Taking good care of your device will ensure trouble-free operation and reduce the risk of damage to your device.

- Keep your device away from excessive moisture and extreme temperatures.
- Avoid exposing your device to direct sunlight or strong ultraviolet light for extended periods of time.
- Do not place anything on top of your device or drop objects on your device.
- Do not drop your device or subject it to severe shock.
- Do not subject your device to sudden and severe temperature changes. This could cause moisture condensation inside the unit, which could damage your device. In the event of moisture condensation, allow the device to dry out completely before use.
- Take care not to sit on the device. We advise not to carry the device in one's back pocket for that reason.
- The screen surface can easily be scratched. Avoid touching it with sharp objects. Non-adhesive generic screen protectors designed specifically for use on portable devices with LCD panels may be used to help protect the screen from minor scratches.
- Never clean your device with it powered on. Use a soft, lint-free cloth moistened with water to wipe the screen and the exterior of your device.
- Do not use paper towels to clean the screen.
- Never attempt to disassemble, repair or make any modifications to your device. Disassembly, modification or any attempt at repair could cause damage to your device and even bodily injury or property damage and will void any warranty.
- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as your device, its parts or accessories.

11 Regulatory Information

NOTE: Marking labels located on the exterior of your device indicate the regulations that your model complies with. Please check the marking labels on your device and refer to the corresponding statements in this chapter. Some notices apply to specific models only.

11.1 Regulations Statements

European Notice

Products with the CE marking comply with Radio & Telecommunication Terminal Equipment Directive (R&TTE) (1999/5/EEC), the Electromagnetic Compatibility Directive (89/336/EEC) and the Low Voltage Directive (73/23/EEC) – as amended by Directive 93/68/ECC - issued by the Commission of the European Community.

Compliance with these directives implies conformity to the following European Standards:

EN301489-1: Electronic compatibility and Radio spectrum Matters (ERM), ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 1: Common technical requirements

EN301489-3: Electronic compatibility and Radio spectrum Matters (ERM), ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 3: Specific conditions for Short-Range Devices (SRD) operating on frequencies between 9 kHz and 40 GHz

EN55022: Radio disturbance characteristics

EN55024: Immunity characteristics

EN6100-3-2: Limits for harmonic current emissions

EN6100-3-3: Limitation of voltage fluctuation and flicker in low-voltage supply system

EN60950 / IEC 60950: Product Safety

The manufacturer cannot be held responsible for modifications made by the User and the consequences thereof, which may alter the conformity of the product with the CE Marking.

Bluetooth

Bluetooth QD ID B012565

11.2 Safety Precautions

- Prolonged listening of music in maximum volume can damage the ears.
- The use of headphones other than those recommended/supplied can cause hearing impairment due to excessive sound pressure.

About Charging

- Use only the charger supplied with your device. Use of another type will result in malfunction and/or danger.
- This product is intended to be supplied by a LISTED Power Unit marked with “LPS”, “Limited Power Source” and output rated + 5 V dc / 1.0 A”.
- Use a specified charger approved by the manufacturer.

About the AC Adapter

- Do not use the adapter in a high moisture environment. Never touch the adapter when your hands or feet are wet.
- Allow adequate ventilation around the adapter when using it to operate the device or charge the battery. Do not cover the AC adapter with paper or other objects that will reduce cooling. Do not use the AC adapter while it is inside a carrying case.
- Connect the adapter to a proper power source. The voltage requirements are found on the product case and/or packaging.
- Do not use the adapter if the cord becomes damaged.

- Do not attempt to service the unit. There are no serviceable parts inside. Replace the unit if it is damaged or exposed to excess moisture.

About the Battery

- Use a specified battery in the equipment.

CAUTION: This unit contains a non-replaceable internal Lithium Ion battery. The battery can burst or explode, releasing hazardous chemicals. To reduce the risk of fire or burns, do not disassemble, crush, puncture, or dispose of in fire or water.

- Important instructions (for service personnel only)
 - ✓ **Caution:** Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.
 - ✓ Replace only with the same or equivalent type recommended by the manufacturer.
 - ✓ The battery must be recycled or disposed of properly.
 - ✓ Use the battery only in the specified equipment.