



iVIEW-975TPC

USER'S MANUAL



9.7" CyberPad Tablet PC

To assure the product to work in best status please read the users manual carefully before operation and keep it well for future use



Thank you for purchasing iVIEW products, for more information or to purchase new products, visit us on ***WWW.IVIEWUS.COM*** or call: **(909) 627-9888**.



iVIEW-975TPC
(9.7" Tablet with Dual Core)



iVIEW-1030TPC
(10" 4:3 Tablet PC)



iVIEW-795TPC
(7" Tablet with Dual Core)



iVIEW-972TPC
(7" Tablet with Phone)



iVIEW-760TPC
(7" Tablet with Leather Case)



iView-430TPC
(4.3" Tablet with Phone)



iVIEW-700EB-T
(7" Ebook)



iView-705NBII
(7" Netbook)



iVIEW-1000GB
 (Google TV Box)



iVIEW-HFR2-SU3
 (eSata 4 Bay Enclosure)



iVIEW-368PTV
 3.5" ATSC Portable TV



iVIEW-700TPC
 7" ATSC Portable TV



iVIEW-1900LEDTV
 19" LED TV



iVIEW-3000STB
 Converter Box



iVIEW-970PDVXII
 (9" Portable DVD)



iVIEW-1000KOD
 Karaoke on Demand

Contents

1. Notes.....	1
2. Appearance and button	2
3. Start-up and shut-down	3
4. The desktop	4
5. Buttons	4
6. Main menu operation.....	4
7. System settings.....	5
* Date & Time.....	6
* Brightness	7
* Screen standby.....	8
* Wireless & Network.....	8
* Bluetooth Function.....	10
* HDMI	11
8. Install, unload, run the application.....	11
9. Network	14
10. Music.....	15
11. Video.....	17
12. Photo browse	17
13. Change desktop wallpaper	18
14. Recording.....	19
15. Camera.....	20
16. E-mail.....	21
17. External device	23
* USB connection	23
* OTG use	24
* Keyboard and mouse	24
18. Features	25

 
Thank you for purchasing iView products,
for technical support or more information
please visit us on **WWW.IVIEWUS.COM**
or CALL US at **(909) 627-9888**

iVIEW's new 9.7" CyberPad 975TPC Tablet PC is the next generation of mobile internet device. It features with 9.7" high resolution screen (1024x 768) and strong processors of Dual Core Cortex A9 CPU and GPU of Quadra Core for graphic processing with bluetooth function. In addition, it provides access to the web, customization through Android Apps, and viewing of multimedia content. You are able to access easily and download thousands of Apps from the Android Play Store and the King Kong Apps Market to tap your need, such as news, weather, or local business info, enjoying your favorite movie clips, watching some You Tube videos, playing games, or just kicking back and listening to some music, working on the get-go with Office productivity software. With built-in memory of 8GB, you may store plenty of pictures, movies, and documents. Expansion storage is available via Micro Card Reader slot, up to 32GB. iVIEW-975TPC CyberPad is your all-in-one

Notes:

- * This is a high-density electronic product; please do not dismantle it by yourself.
- * Avoid strong beat and collision.
- * Avoid using this product in the following environments: High and low temperature, humidity, dusty, with strong magnetic and long-term exposure to the sun.
- * Wipe the product shell by using dry wet cotton cloth gently; the use of other chemical cleaning is prohibited. This product should keep away from water drop and water splash, so cups filled with liquids should not be placed near the product.
- * Use the headset long time, high volume may cause permanent damage to hearing.
- * Do not use headphones when going across a road, driving a motorcycle or bicycle, in order to avoid traffic accidents.
- * Please use permitted battery, charger and accessories only, the use of any other type of product would be a breach of warranty regulations, and may be dangerous.
- * Please deal with waste machinery and accessories according to local environmental regulations.
- * If you have any questions in the process of using of the product, please contact the local dealer or contact Wiltronics customer service center directly.
- * For the smeared memory loss that is caused by product damage, repair or other causes of product damage, repair, the company is not responsible for it, so please follow the user's guide and timely backup.

Appearance and button:

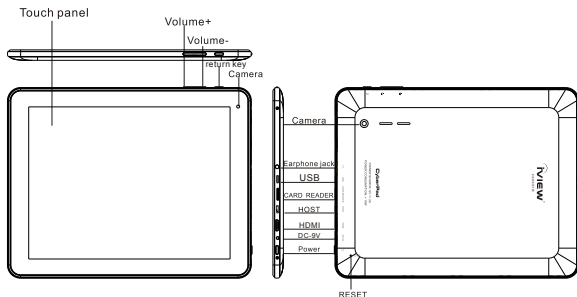

1.1 Touch panel

9.7" Capacitive five point touch panel: Click or drag on the touch panel to operate to most of 5 touch points

1.2 POWER

Start-up: Long press and hold the power button, the system will enter the main interface.

Shutdown: In the main menu interface, press the power button about 5 seconds to shutdown. The system shows "Power Off" option. Then, click "OK", and you can safely shut down. When the tablet is frozen or locked for forgetting the password then you can use the reset function to restore the function. Use a long thin stick to insert the reset port and

【Remark】:

Do not use the reset function unless the tablet is unable to shutdown. We recommend you to shut down by normal operation to avoid damage to the tablet.

Lock Screen: Short press power button to lock screen or unlock screen.

Remark 1 : When the power runs out, the system will shut down automatically. 2 When turning off the tablet in unusual circumstances it may take longer to restart it.

1.3 Volume +, Volume-

The buttons on top Volume+, Volume- to turn down and up the volume

1.4 Earphone jack

3.5 mm standard earphone jack

1.5 HDMI

HDMI output interface

1.6 HOST

external connection of USB flash drive.

1.7 Card Reader

Card Reader slot: external T-FLASH card compatible with Micro SD Card (TF Card)

1.8 USB

USB Jack: The USB port serves to connect with PC and MP3 player or flash drive for data transmission and firmware upgrading. However, it cannot be used to charge the tablet through connecting to the PC.

1.9 Reset

When the Tablet under the condition of the crash, use the small objects to short press RESET button, tablet will force to shutdown.

NOTE: It is not recommended to use the RESET key often since the table system may be damaged.


Start-up and shut-down:

* Start-up: Press the power key and the system will enter the process of Start-up, as shown below:

Startup Logo, in the process of startup




 The system has been started and is entering the Android system:

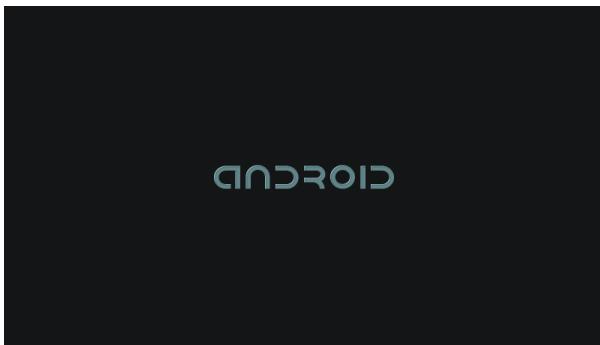

Then the system enters the default home interface

 
*Shutdown: Press the power key then pop-up options will show on the desktop. Choose the Power Off option as below:

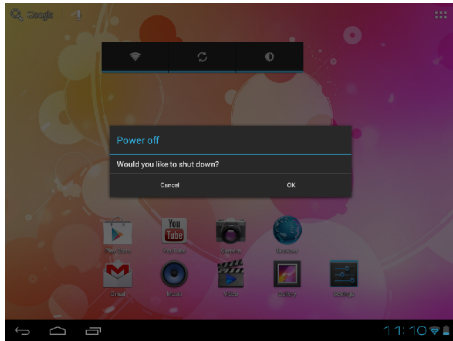

* Sleep: In the normal state operation of the machine, press the power button, enter a state of dormancy, at this time, the screen will be closed. Another short press on the power button will resume to normal mode. When Cyberpad is not in use you can start this function to reduce power consumption.

Desktop:

 After the normal startup of the system is completed, you can see the Android 4.0 desktop (below). The default desktop is consisted of quick search bar, status bar, and menu label icon.

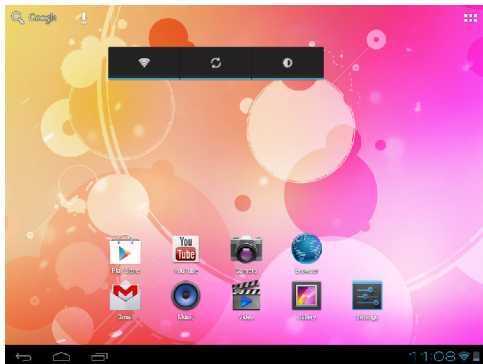

The status bar is used to display the network status of current system, battery power, time and other information.

Quick search box is used by typing keywords to do the Internet search. The main menu tag is in the right middle side of the screen, click it and the default menu bar can be expanded.

Buttons:

 
Keys used in Android systems process:

The volume keys: Volume +, Volume - in the taskbar can be used for Volume change

The power button: Press long time for switching machine. Press quickly to enter or leave the state of dormancy.

Main menu operation


Press the main menu tag on the main menu, as shown below:

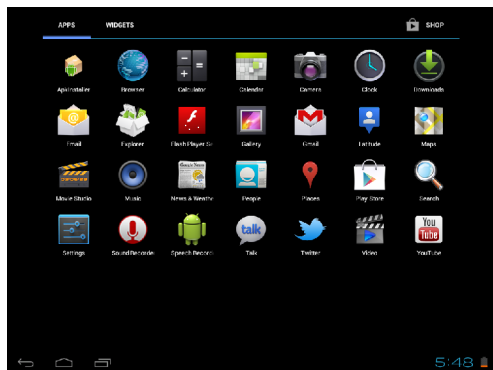

In the main menu, you can set the system, operate the existed application, install a new application, and play music and video, browse webpage, play game and other operations.

System settings:

 Click on the main menu interface in the "Settings" icon, and then open the system settings interface, as shown below:

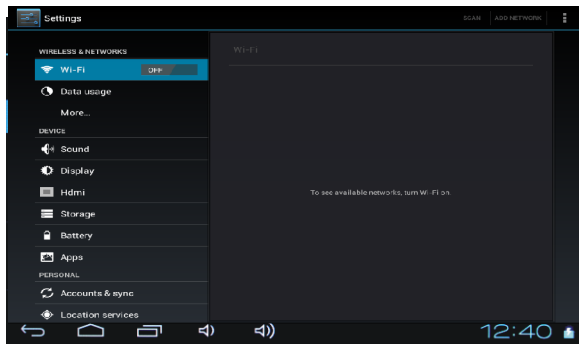

Select the relevant items to do corresponding operation, for example:

- * Wireless & network:
- * Sound & Display
- * Date & Time
- * The equipment and so on


*** Time / Date setting:**

 In the interface of the setting, select "the time and date settings" to enter the date and time settings interface:

You can choose the automatic mode by using the network time.

You also can choose to set the date, select time zone, set time, select date format, set date and other information


For example, choose the set date, as shown below:

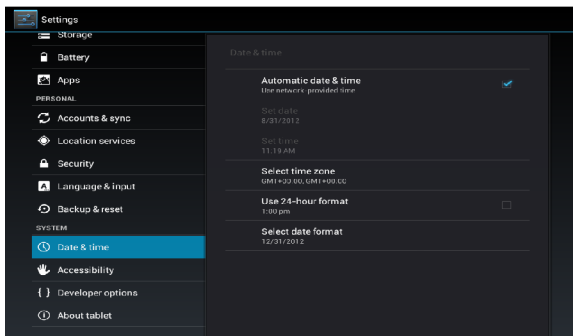

Choose +: It means increase of 1 unit,

Select -: It means it reduces 1 unit.

 
You can also choose the number to enter the input pattern. Directly input the number, and then select the button done, as shown below:

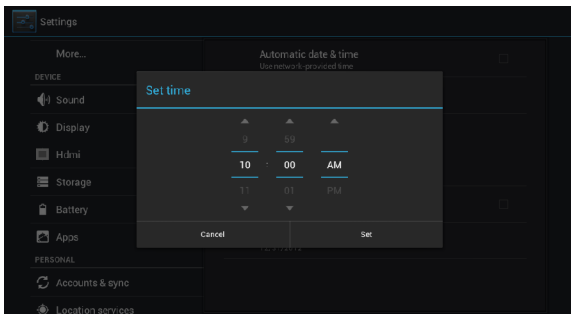

Select "done". If the input number is legitimate, then the operation is successful, and the system will use the new settings.

* **Brightness:**

 In the setting of the interface to select "display settings" into the display settings interface, roll drop-down lists to select "Brightness" as appeared in the following dialogue.

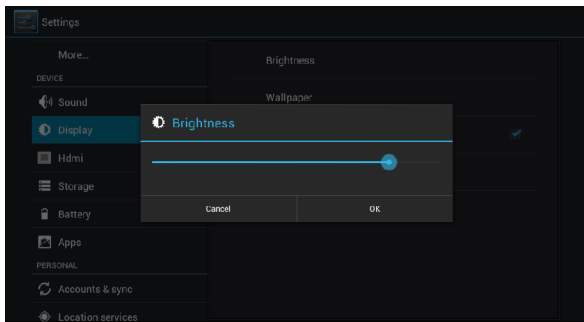


* Screen standby:

Screen standby: You can set the time for the screen standby function to occur. After it starts it will lock the screen, the screen saver appears.


In the setting of the interface to select "display settings" into the display settings interface, roll drop-down lists to select "screen standby" as appeared in the following interface:

 Note: During video playback, the screen standby function is automatically inhibited..

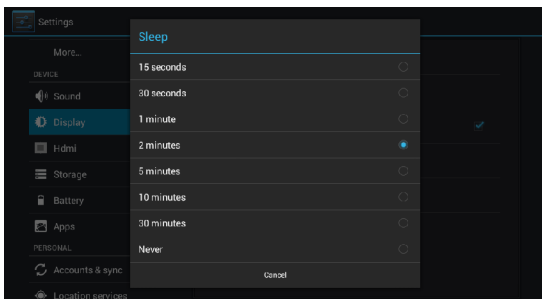


* Wireless & network:

 
Click on the "Settings" icon in the main menu, click on the "wireless and network" into the "wireless and network" settings. Click on the "WIFI" column and WIFI function can be started at once. Click "WIFI setting" column can enter "WIFI setting interface", as shown below:

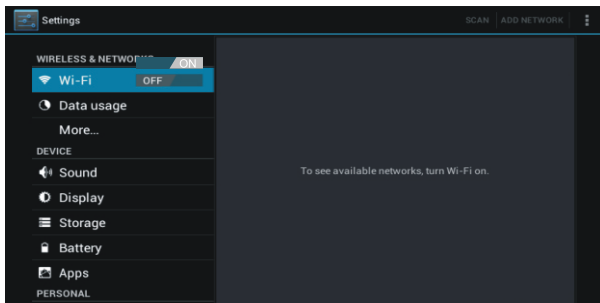

 In the "WIFI" interface (Pictured above), by click on the WIFI column you can open and close the WIFI function. Click "network notification" to list the wireless router that is searched by Cyberpad . Click the searched wireless router and setup window will pop-up. Follow the prompts to complete the WIFI network links.

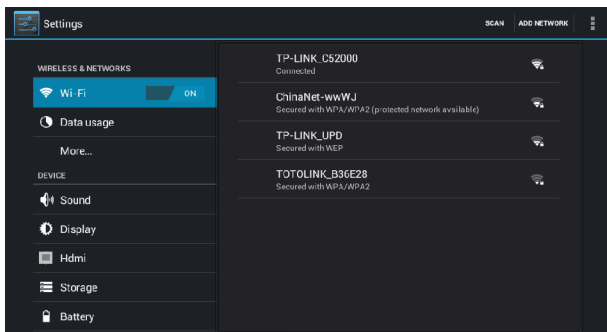


 After you connecting WI-FI as shown a bove, the following image will appear:

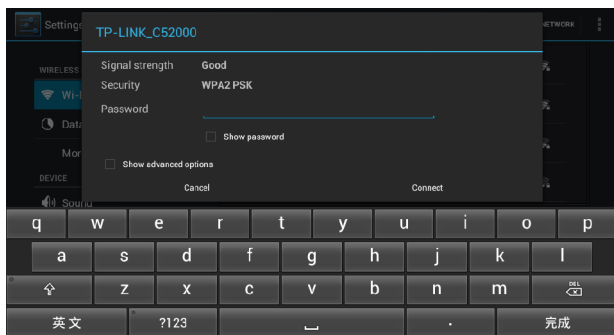

Bluetooth Function

 At the homepage interface, press Menu key to display the Setting menu.

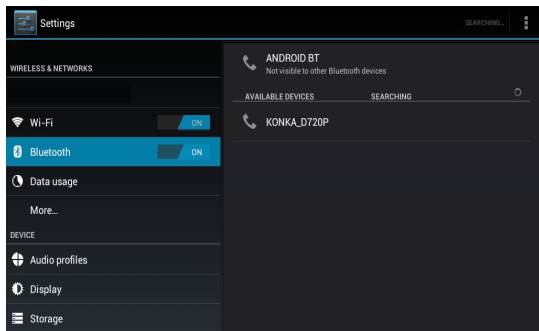

1. Click on Settings.
2. Click on Bluetooth.
3. Click "ON"
4. Then, the bluetooth devices nearby can be detected.
5. Click search Device, so that available device in the Search Device can find the matching bluetooth.
6. Click the bluetooth name of counterpart, bluetooth send matching request, click matching, then bluetooth matching is successful.
7. Choose the file you want to send, such as Picture/Music, and click bluetooth sending.
8. Bluetooth receiving: When receiving the request of counterpart bluetooth sending, click matching, then bluetooth matching is successful.
9. when receiving counterpart who send file transmission, click accept, then you will successfully receive the file.

*HDMI

The product supports HDMI output.

 
* Use the HDMI cable to connect the Tablet PC and devices with HDMI input. About 5 seconds later, the system will output sound and image to HDMI output.

When using the HDMI output, LCD display content will scale the output to the external device at the same time.


Install, unload, run the application

*Android installation: There are a variety of ways to install applications, for example, you can click on the Apk file directly and it will automatically be installed. In case that it is the third party programs installation the system may identify it as unsafe and will need the following procedures for installation with the assistance of the Appinstaller.

1. Enter the menu and select Settings - Application

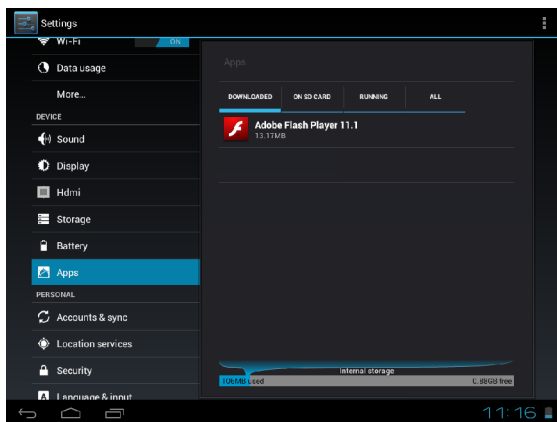

 2. Press “Unknown sources” and then “OK”, the following image will appear

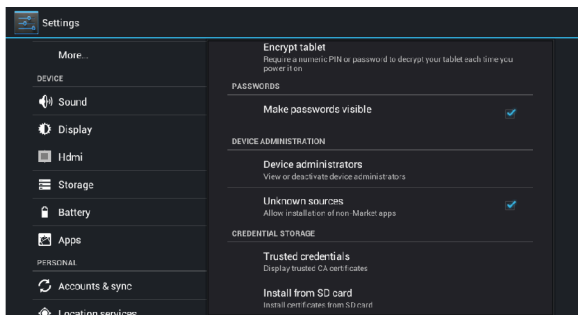


3. Copy the APK software program that will be installed to Micro SD card or NAND FLASH.


Select "App installer" icon in the main menu.



 
4. The first time to enter the program installation, the system defaults Internal Memory as the search directory.

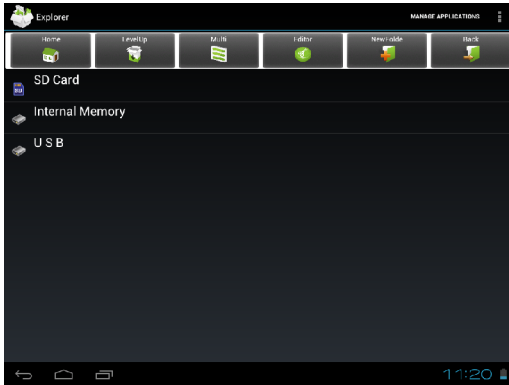

 5. If your APK setup application is on Micro SD card. The system will automatically search the directory from Micro SD Card.

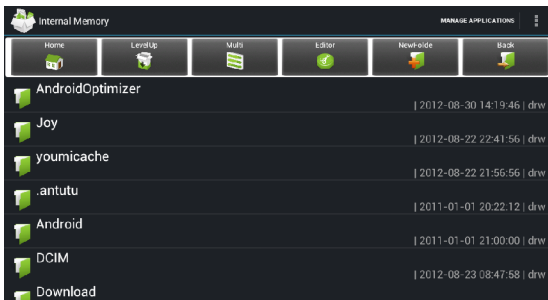

 6. Install the searched application

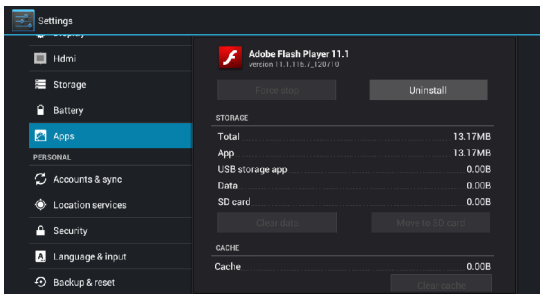

The user can do on-line installation through "market", or download and install by the computer, or through a built-in browser download and install online

 
*Uninstall the application: You can use the third party software management tools or use the built-in Android application management software.

Select "Settings" / "application" / "management application", and select the corresponding installed applications to check the program information, uninstall the program and other operations.


Network:

Webpage browsing:

When the network is connected, open the webpage browser and enter the URL, you can browse webpage; or go through the main desktop search bar to input the website and open the webpage

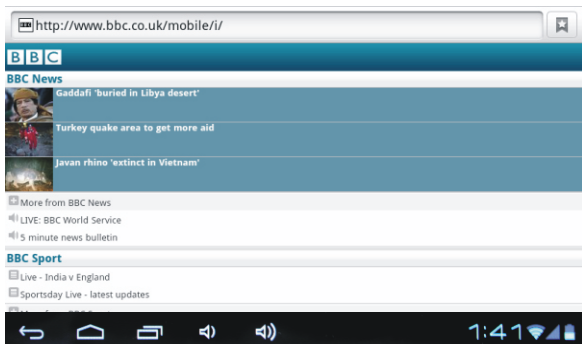

 Webpage can be free scaled by the scaling controller, as shown below:

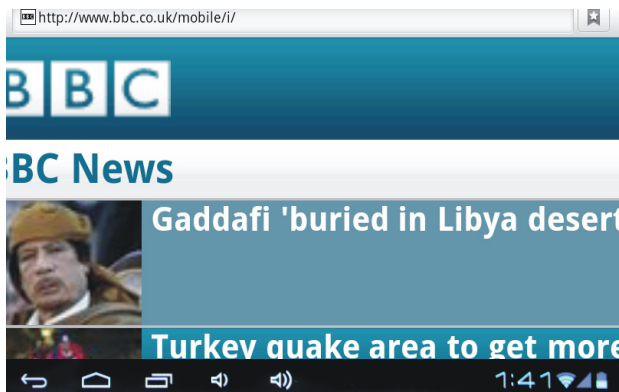


Online video

Users can use the "market" or other ways to download online video player software, online TV player software, online music software, and then install in the machine. To open the installed software, you can watch online video or online TV, and listen to online radio.

Users can also download other third party network application software, including the webpage browsing, video player, website client, instant messaging and other software.


Music playback

 Click on the "music" icon in the main menu, and then enter the music player interface. The default list system in the user data area for all audio files is shown as below:

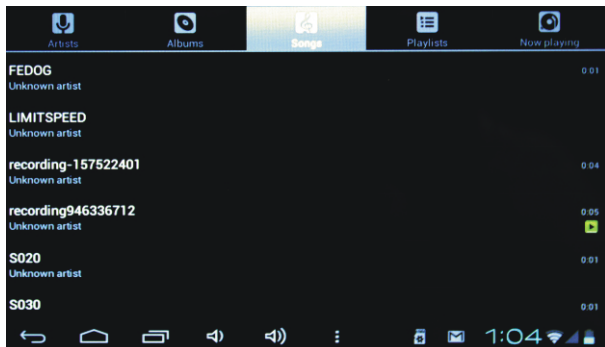

You can use synchronous USB to input audio file, or by inserting a Mirco SD card with audio file to input audio files. You can also use the network to download the audio file.

 Select the corresponding tag, and check the interface as "artists", "album", and "song" and so on to play the song.

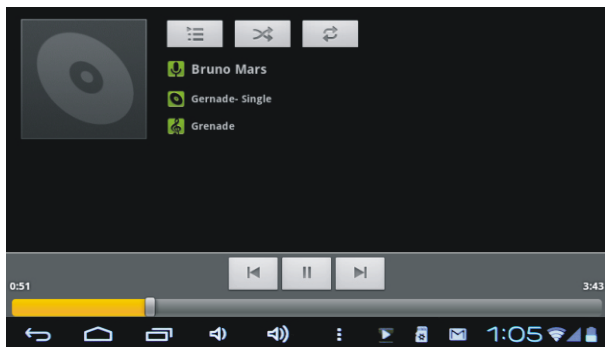

Video playback:

Click on the "Video player" in the main menu, to enter the "Super-HD player" main interface. It lists all video files and image files as shown below:

 


Select the video file and enter the video playing interface, as shown below. Select "play", "stop", "fast forward", "rewind", "progress" and other control keys to control the playback schedule.

 


Photo browse:

Click on the main menu "Super-HD player" to enter the "Super-HD player" interface. It lists all the picture files and video files as shown below:

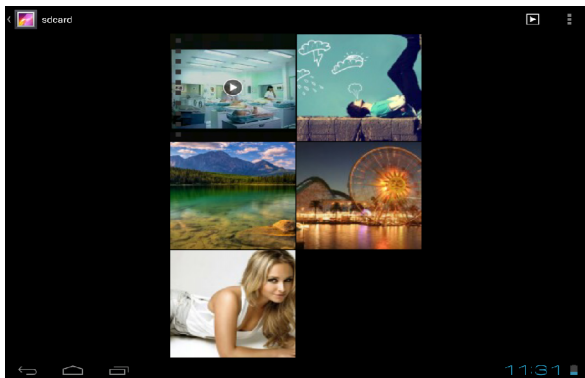


Select a picture file; enter the picture play interface, as shown below. Select "zoom", "narrow" "set" and "delete" operation.

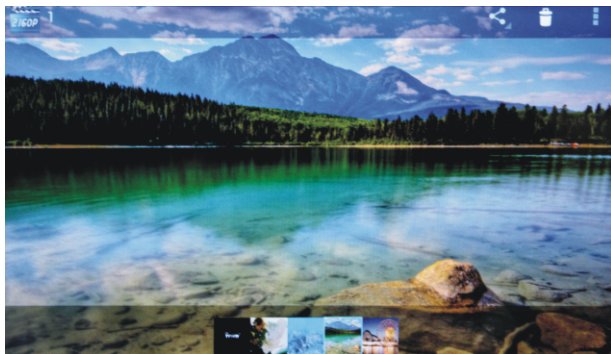

Change desktop wallpaper

 
Touch the screen of main interface for a few seconds, then appear the below interface:

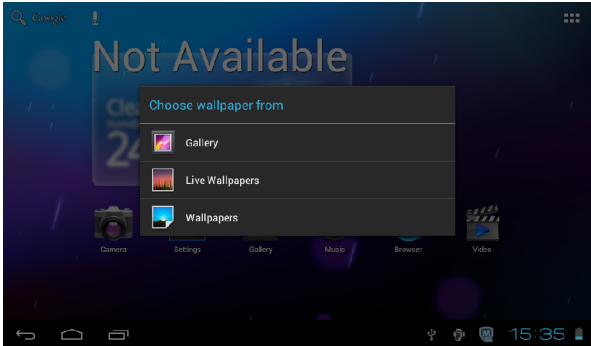

Click the picture or wallpaper to select pictures.


Record

 
Click on the "sound recorder" icon in the main menu and enter the "sound recorder" main interface as shown below:

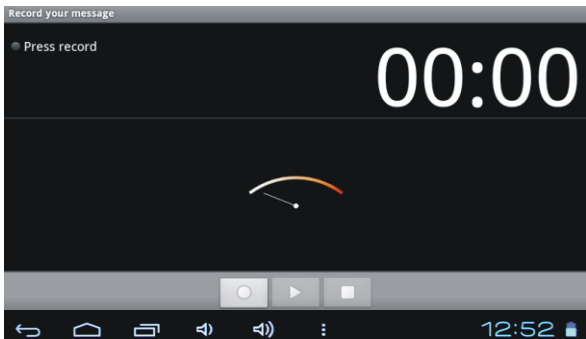

Select the “recording” button to record and after recording is completed press “stop” button. At this time you can select the “play” button to play the recorded sound. Select “Use this recording” button to save the recording, so that you can find the corresponding audio files in “NAND”; if you do not need to save, you can select the “give up” button.


Photo taking functions

 1. Click on Camera.
2. The system enters the camera interface.
3. Click on shoot button to have photos taken easily.
4. You can set sizes, storage locations, white balance and focusing adjustment and other functions.
5. After photo taking, there will be preview of thumbnail display.
6. Press the , you can switch between the front camera and rear camera

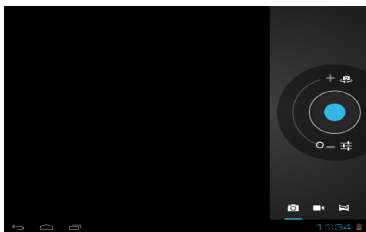


Video recording functions

 1. Drag up the switchover button to switch it into the video recording mode.
2. Click on red Video Record button to perform video recording.
3. You can set color effect, white balance and video quality and other functions.
4. Click on Video Record button again to end video recording, and you can preview videos

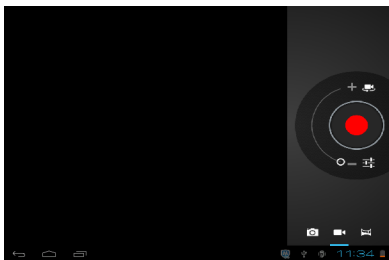

E-mail:

 Click on the "e-mail" icon in the main menu to enter email interface Allocation of account information will be required the first time. As shown below:

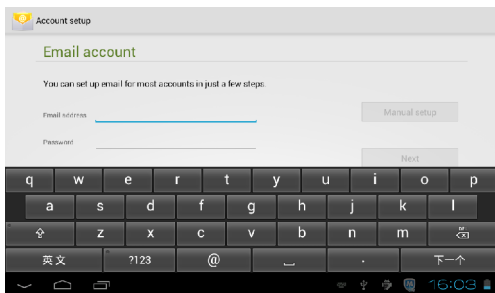


Email requires network support. Make sure that network link is normal.


Here we take whhpwjh@126.com as an example:

In the email address bar, enter your valid email address: whhpwjh@126.com


In the password field to enter your valid password: * * * * *

  Then you can choose the "next", account type selection interface will appear as shown below:

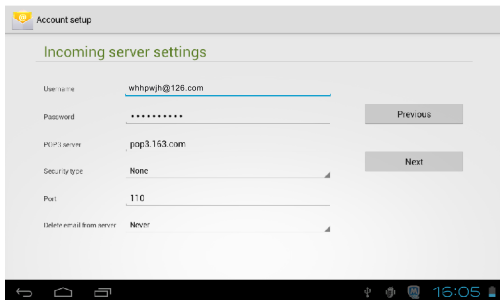

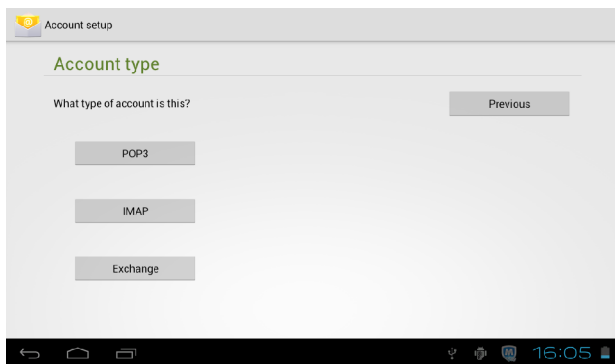

 Choose POP3 account. And the receiving service settings will appear as shown below:

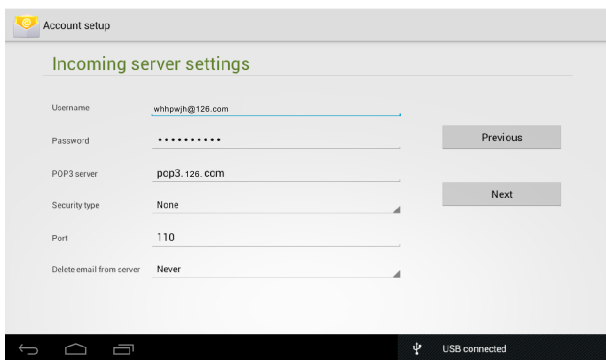

Please input different parameter, according to each email provider's information as:

 
The POP3 server: Default is "126.com", and should be modified as "pop.126.com"

The port number is "110"

Then select the "next", you will enter the "inspection acceptance server settings", if set up correctly, there will be a "foreign server settings" interface as follows:

In the column "name", input the name you want to display in the outgoing message, and then click "finish" button, you can enter the mail interface. It will load the mail automatically;

Select one of the column to be viewed in the message. You can do "Reply", "delete", "more reply" and other operations at the view bar.

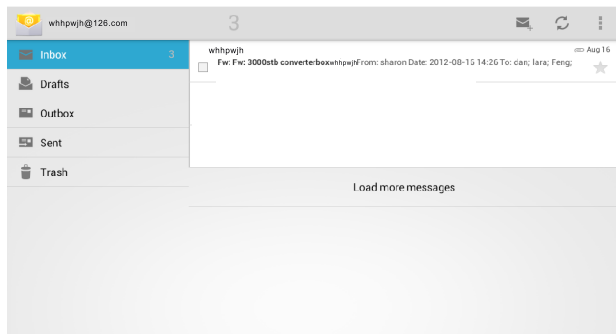


External device:

* USB connection

Using USB to connect the Cyberpad and PC, the default connection mode is a

 synchronous mode. You can drag the status bar to drop, appeared as the following interface:

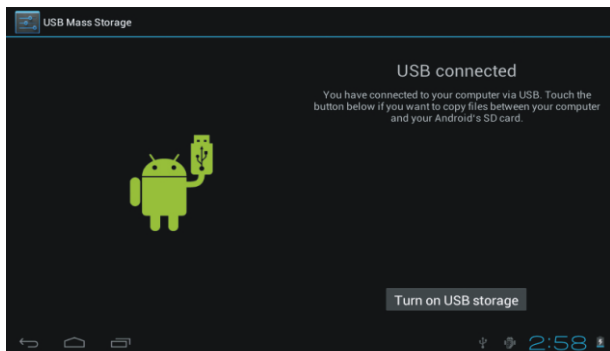

"USB connected": It means that the external memory (SD) loading is completed, and you can see the corresponding letter in the PC terminal.

* **OTG use**

Cyberpadsupports FAT32 format mobile devices such as U disk and mobile hard disk.

The plug-and-play connection method:

Use the OTG wire to connect the Tablet PC USB OTG and the external equipment.

* **Keyboard and mouse**

Cyberpad supports USB mouse and keyboard device.

Features:

- Screen: 9.7" Capacitive Touch Screen, 1024 x 768 Resolution
- CPU: Dual Core Cortex A9 up to 1.5 Ghz
- OS: Android 4.0 Ice Cream Sandwich
- GPU: Quad Core Mali 400MP
- RAM: 1GB DDR3
- Memory: 8GB (Support up to 32GB)
- Wireless Connection: WIFI 802.11b/g
- Support Bluetooth Function
- Support 3G Module USB Dongle
- Support G-SENSOR
- Support Dual Camera 0.3MP (Front), 2MP (Back)
- Mini USB port / Micro SD Card (Max: 32GB)
- Support 1080P HD video
- Support Mini HDMI Output
- Audio Output: Stereo Speaker (8Ω1.0w) / 3.5MM Stereo Headphone Jack
- Android Market, King Kong Market, Internet Browser, Office, Calendar, Calculator, E-mail
- Picture Viewing, Music / Video Playback, Ebook, Games
- Battery: Built in 4000mAh/7.4V

Basic Warranty Statement

This product is warranted to the original purchaser ONLY, to be free from defects in materials and workmanship under normal use, for ninety **(90) DAYS** (parts and labor) and **one (1) YEAR** (parts only) from the date of original purchase. We agree under the warranty period to replace product if it is determined to be defective at "No Charge". This limited warranty does not cover any loss or damages that occur as result of:

- Cosmetic damage.
- Shipping or improper installation or maintenance.
- Misuse.
- Neglect.
- Any cause other than ordinary commercial or industrial application.
- Adjustment by non-authorized source or any of the products firmware or hardware that you or any third party have modified or altered
- Improper environment
- Excessive or inadequate heating or air conditioning or electrical power failures, surges, connection to improper voltage supply or settings or other irregularities.
- Accidents, acts of God.

In the United States and Canada contact Customer Service at (909) 627 - 9888.

*** Please note that in order to have your merchandise repaired and replaced by warranty, you must contact our customer service representatives by phone or email, and get RMA number**

To obtain factory service, the original purchaser MUST present the following:

1. A sales receipt/proof of purchase indicating date of purchase
2. Your Name, Place of Purchase, Address, UnitModel, and Description of Problem.
3. Send the unit pre-paid to the address below in the original packaging or reasonable substitute to prevent damage. **No return will be shipped back to a PO BOX.**
4. All of the accessories that came with the product package must be sent along with the main unit.
5. Please include your check or money order in the amount of \$20.00 to cover handling and return shipping charges. We will not be responsible for delays or unprocessed claims resulting from purchaser's failure to provide any or all of the necessary information.



***Please review your user
guide carefully before
using this product.***

*If you need further assistance **DO NOT**
return it to the store where you bought*

It from, please contact us at:

(909) 627 - 9888

*Additional troubleshooting information
can also be found on the web at:*

***www.iviewus.com and click on "Support"
or email us at support@iviewus.com***