

190*130MM

iVIEW[®]

iVIEW-700PTV

USER'S MANUAL



NOTE: iVIEW-700PTV does not receive the signal while vehicle is moving.

7" Portable DIGITAL TV

To assure the product to work in best status
Please read the users manual carefully before operation and keep it well for future use

WARNING AND SAFETY PRECAUTION

Warning

Do not open the TV unit and attempt any service. Any TV unit that has its seal tampered will void the factory warranty. Opening any service panel may also cause electric shock. Please contact us for service.

Installation

- There is a ventilation grill placed on back on of the unit in order to avoid overheating the TV. Please make sure to keep any objects at least 10 inches away from the grill.
- Do not expose the TV to direct sun light or other heat-source.
- Do not expose the TV to liquids.
- Do not put magnetized objects near TV unit.

Safety Precautions

 
- Do not put any objects into the ventilation grill; otherwise, it may cause fire, electric shock or other malfunctions.
- Do not place any liquids (including water) on or near TV.
- Damaged or exposed power cable may cause fire, electric shock or other malfunctions. Please disconnect the power plug by pulling it out gently from the outlet.
- Do not place any heavy objects on the power cable.
- Do not twist power cable in order to avoid short-circuit.
- Please power off the TV and pull out the power plug when not in use.
- Please pull out the power plug, antenna cord and do not touch the antenna during thunder storms.
- Please shut off this TV unit and pull out the power plug when not in use.

CONTENT


ABOUT THE PORTABLE TV.....	1
<i>Panel.....</i>	1
<i>Remote Control Appearance.....</i>	2
<i>Remote Control Buttons & Functions.....</i>	3
<i>System Connection.....</i>	5
BATTERY FEATURES.....	7
BASIC OPERATION.....	8
USING YOUR PORTABLE TV.....	9
<i>TV Mode.....</i>	10
<i>AV In Mode.....</i>	15
<i>AV Out Mode.....</i>	15
<i>FM Mode.....</i>	15
<i>External Storage Mode.....</i>	16
Common Troubleshooting	20
Technical Specifications	22

ABOUT THE PORTABLE TV

Panel

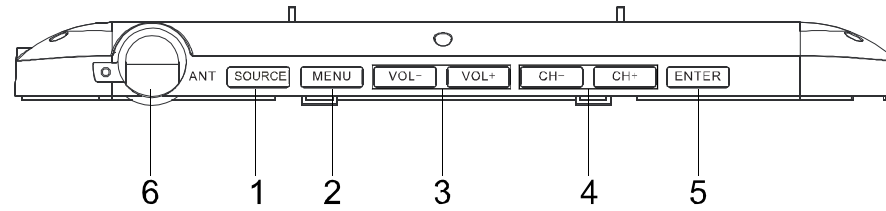

 
- 1.SOURCE
- 2.MENU
- 3.VOL-/VOL+
- 4.CH-/CH+
- 5.ENTER
- 6.TV ANT

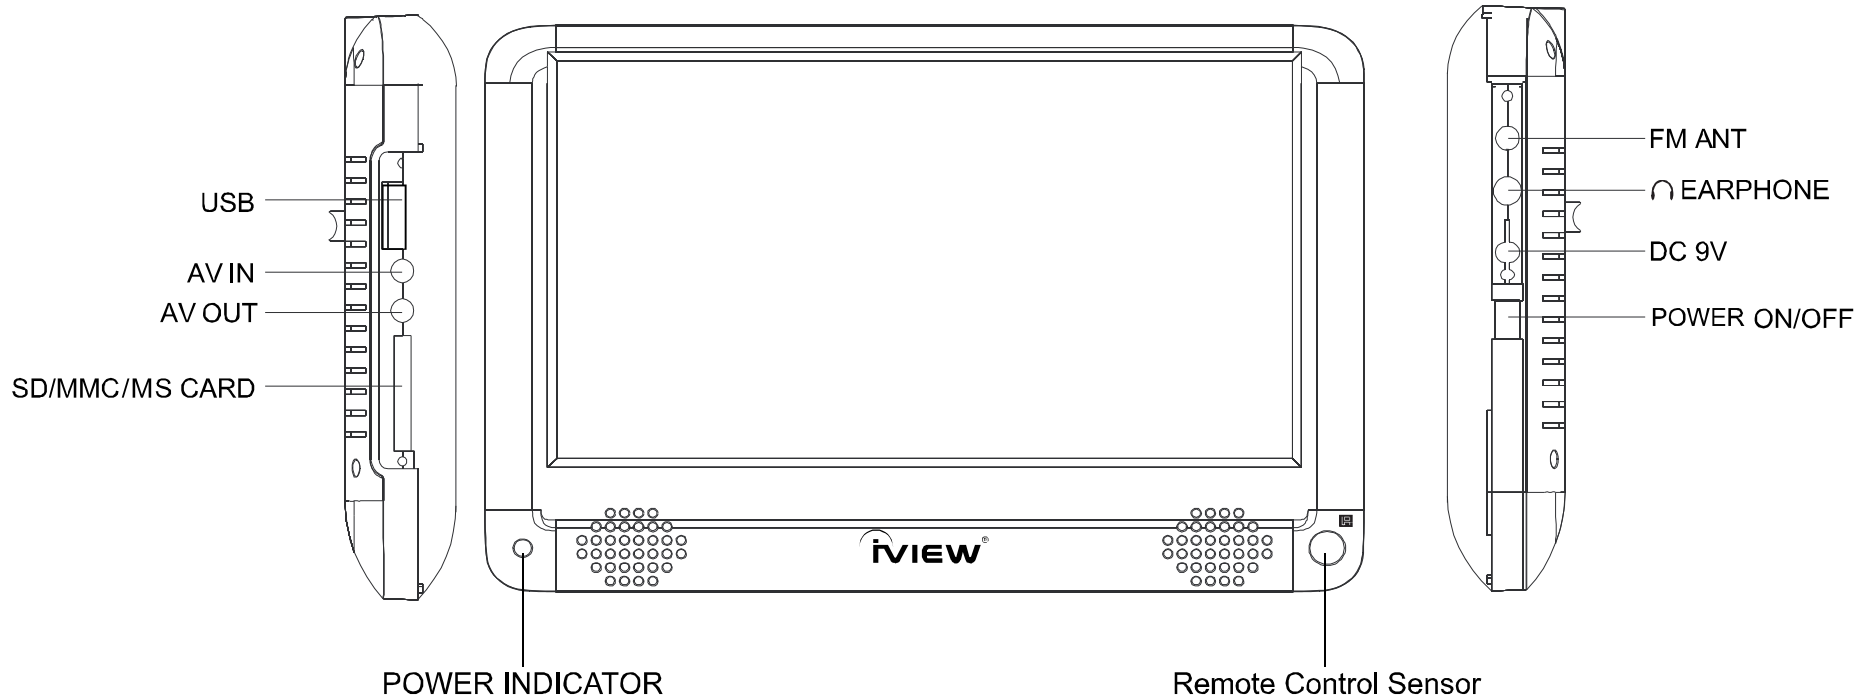

Charge indicator /power indicator: the indicator will not light when the power is off. The indicator is red when charging, and it will turn green when charging full. If the power is on, the green indicator indicates that the battery has energy.

 Remote Control Appearance

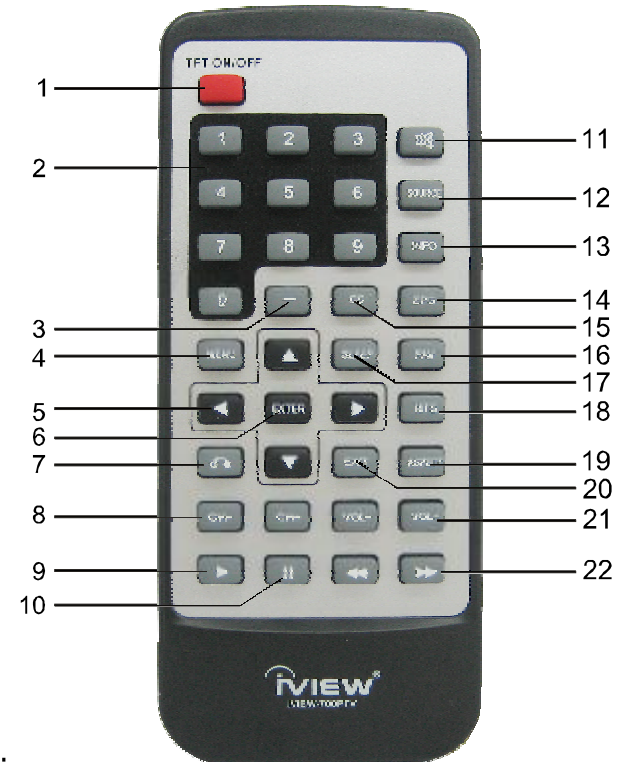

Inserting Batteries Into The Remote Control:
The supplied remote can be used to control the player.
Insert one "CR2025" type batteries into the compartment,
matching + and - as indicated on the inside of the battery
housing. The remote must be pointed directly at the player.



Notes:


1. Avoid exposing the remote control to extremes of temperature e.g. direct sunlight.
2. Ensure that no foreign objects enter the battery housing, especially metal objects.
3. If the player's infra - red sensor sensor is bathed in strong direct sunlight, or intense artificial light, then it may not be able to detect signals sent from the handset.
4. If the remote is not to be used for an extended period then please remove the batteries to avoid leakage and corrosion.


Remote Control Buttons & Functions

No.	Name/Symbol	Function in TV Mode	Function in USB/CARD Mode	Function in FM radio Mode
1.	TFT on/off	Turn the TFT on/off	Turn the TFT on/off	Turn the TFT on/off
2.	Number 0-9	Channel number	No function	No function
3.	-	Dash	No function	No function
4.	Menu	Control menu switch	No function	No function
5.	⬆/⬇/⬅/➡	Press the up/down or left/right to select	Press the up/down or left/right to select	Press the up/down or left/right to select
6.	Enter	Press to confirm the selected menu	Press to confirm the selected menu	No function
7.		Return to the previous program	No function	No function
8.	CH +/-	Program up/down	No function	Radio channel up/down
9.	▶	No function	Play the music/photo/movie at the moment	No function
10.		No function	PAUSE the playing	No function
11.		Mute	Mute	Mute
12.	Source	Select the TV/AV/FM External storage	Select the TV/AV/FM External storage	Select the TV/AV/FM External storage
13.	INFO	Show the TV information	No function	Search the FM radio
14.	EPG	Program guide	No function	No function

No.	Name/Symbol	Function in TV Mode	Function in USB/CARD Mode	Function in FM radio Mode
15.	CC	Close caption	No function	No function
16.	FAV	Enter the favorite channel	No function	No function
17.	Sleep	Set the sleep time	No function	No function
18.	MTS	Program guide	No function	No function
19.	ASPECT	The video format	No function	No function
20.	EXIT	Sound mode	Sound mode	No function
21.	Vol+/-	Volume up/down	Volume up/down	Volume up/down
22.	◀/▶	No function	Fast Forward / Reverse search	No function

  System Connection

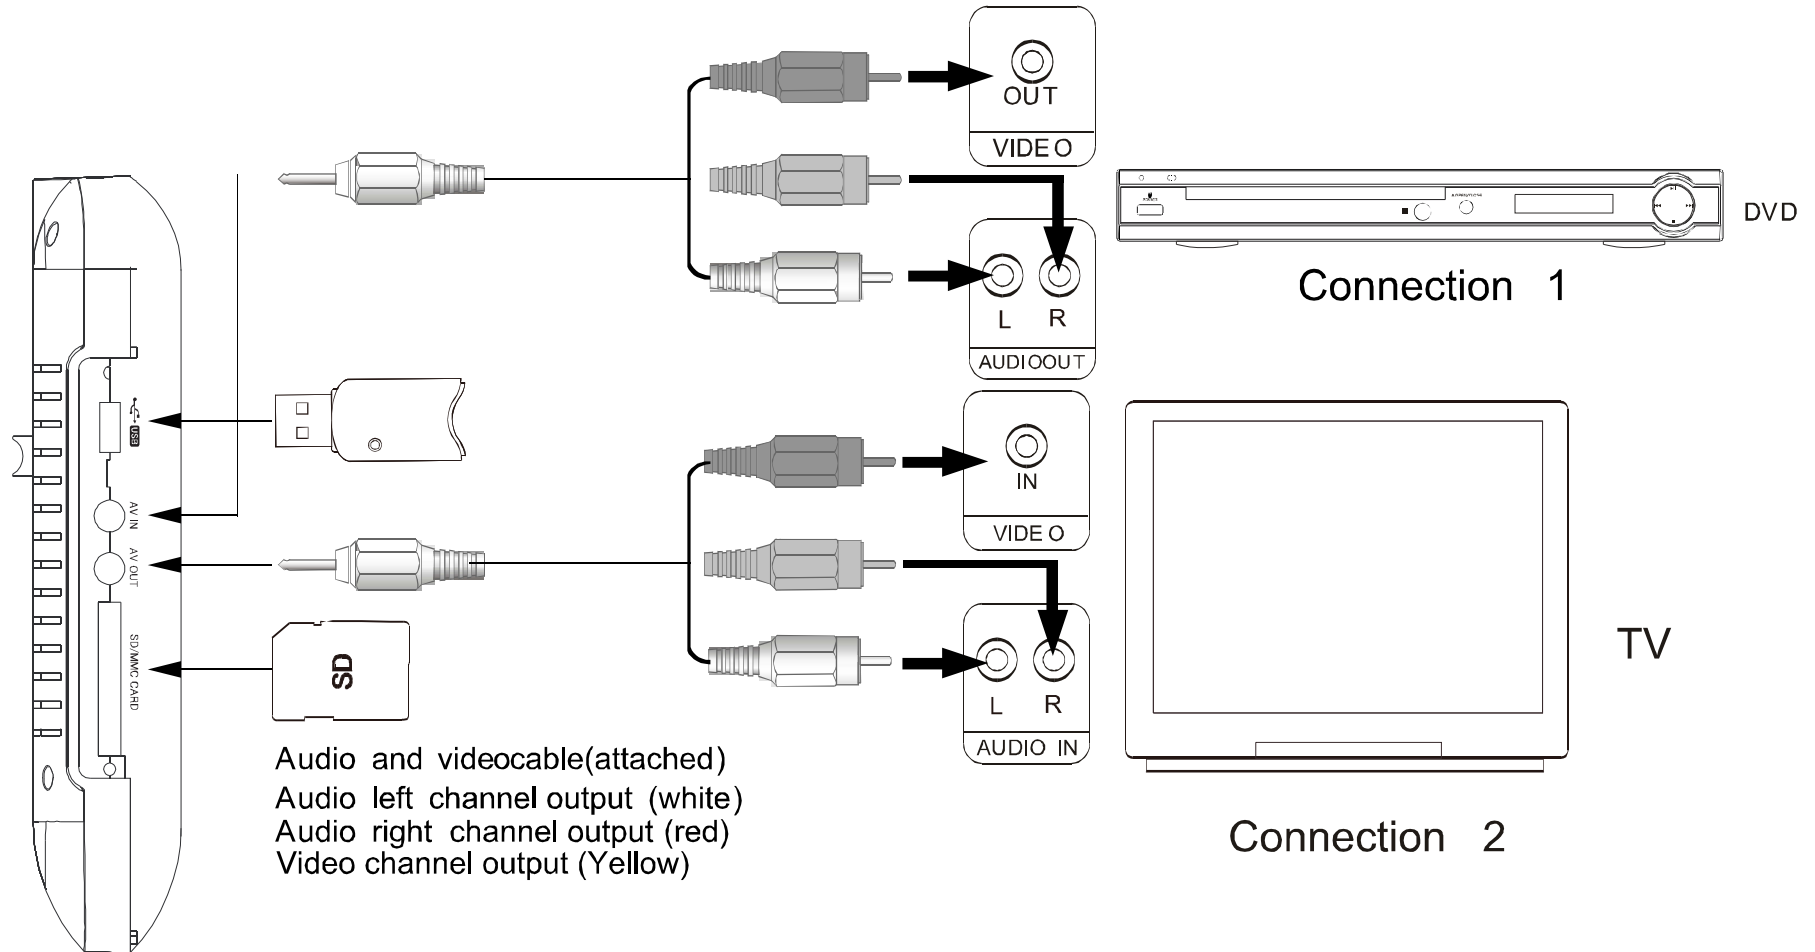

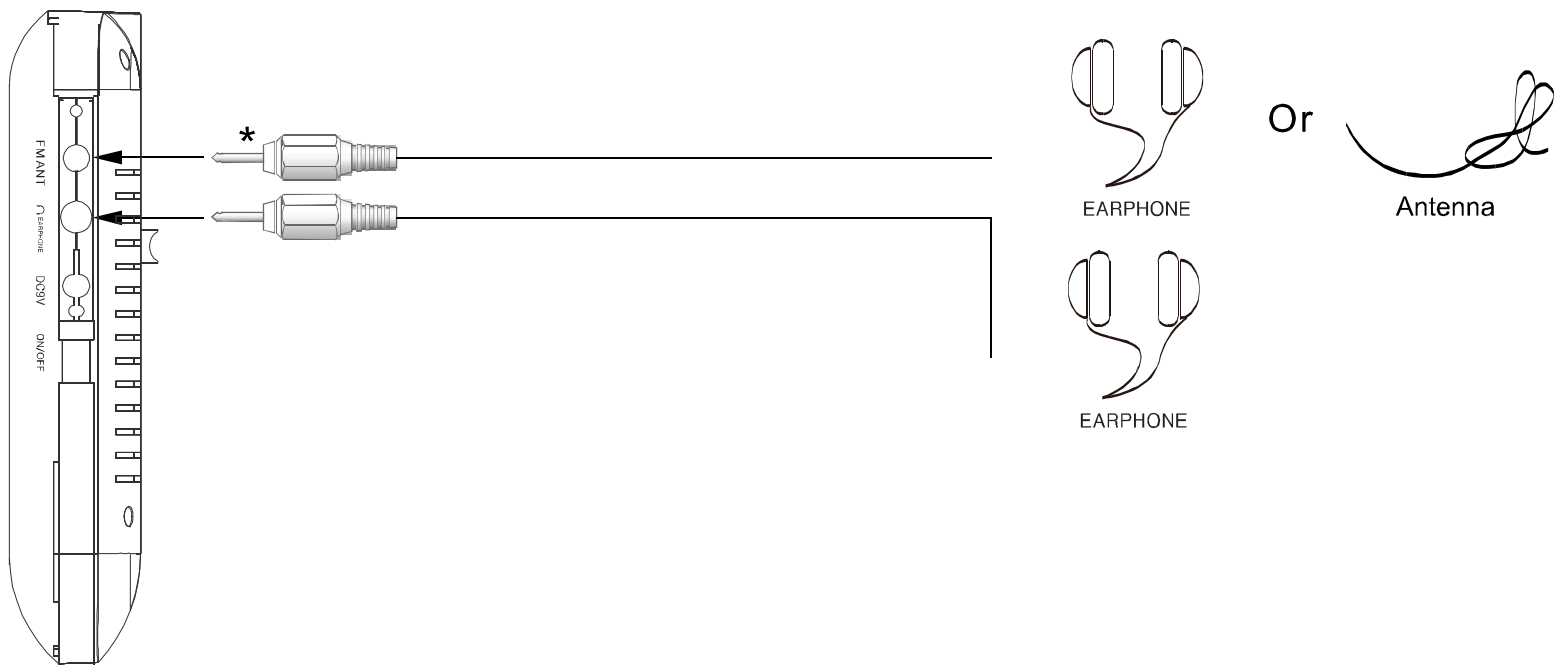

There are two options for operating the FM function:

Inserting the FM ANT or the Earphone into the FM ANT input to receive the FM signal. Insert the Earphone to the earphone input to receive the FM signal. At this operation, the earphone works both as the FM ANT to receive the FM signal and also as an earphone to listen.

Note: For best FM signal reception, please move the FM ANT around to search for the best signal. Then, fix the position and keep the FM ANT steady. If you move the FM ANT constantly around you may not get the desired signal you wish.

BATTERY FEATURES

Charging process:

Please first connect the power adapter to the AC power. Insert the DC plug of the power adapter to the DC IN port of the TV. Please make sure that you must switch off the player first so that you can start to charge the TV.

Charging indication:

When the indicator of "CHARGE" is RED, it means that the battery is charging now!

 
When the indicator of "CHARGE" is GREEN, it means that the battery has been charged fully. Then you can make your TV work now.

Charging time:

Please charge it for 3.5 hours to 4 hours .

After a period time of working , the battery of the TV will be exhaust , then a battery sign will be appeared on the TFT panel. It indicates that you must charge the battery of your TV. If you have not charge it , the player will be standby automatically . So you should charge the battery immediately, when you see the battery sign.

BASIC OPERATION

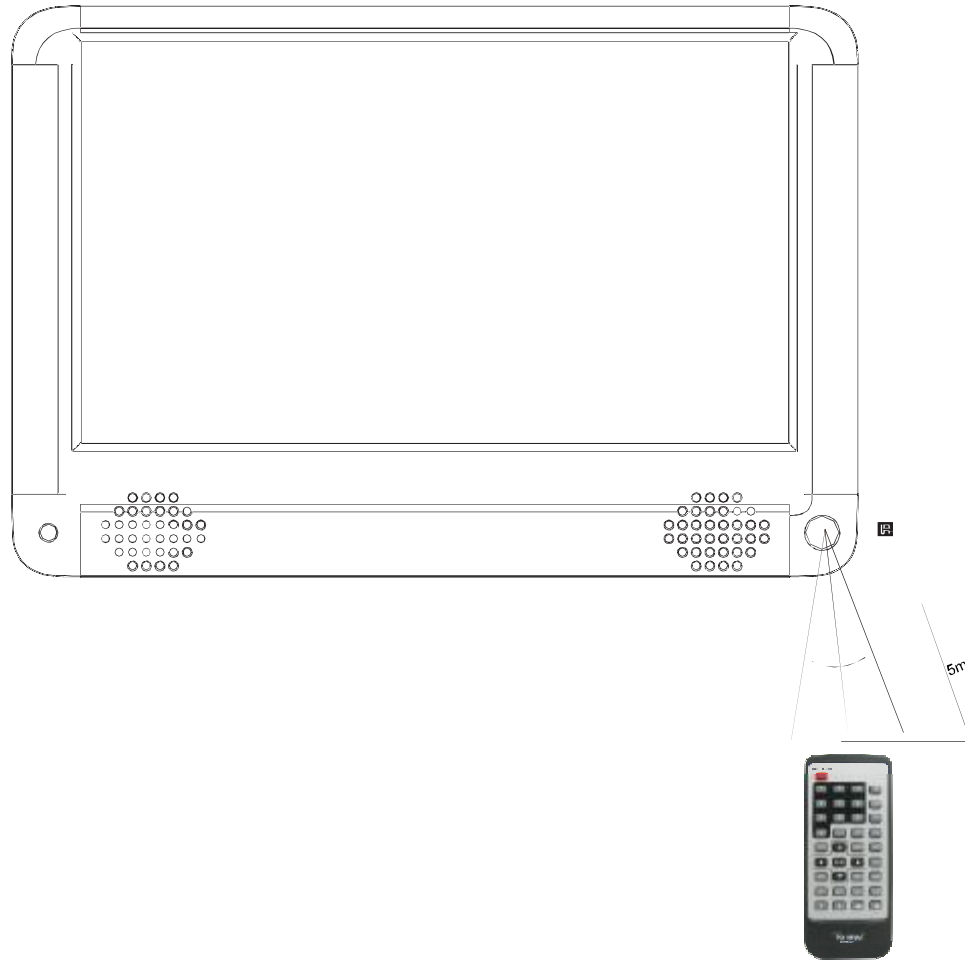


Remote control range is 5m.

Caution:

Most of the functions can operate on machine, but a few functions only can be used by remote control.

 USING YOUR PORTABLE TV



Press POWER button on the TV to turn On/Off the TV.

Select Input Source

Input Source
TV
AV
FM
External storage

 
Selectable Input Source:

TV/AV/FM External storage

TV Mode


Press the source button to select TV


TV Programs Auto Scan

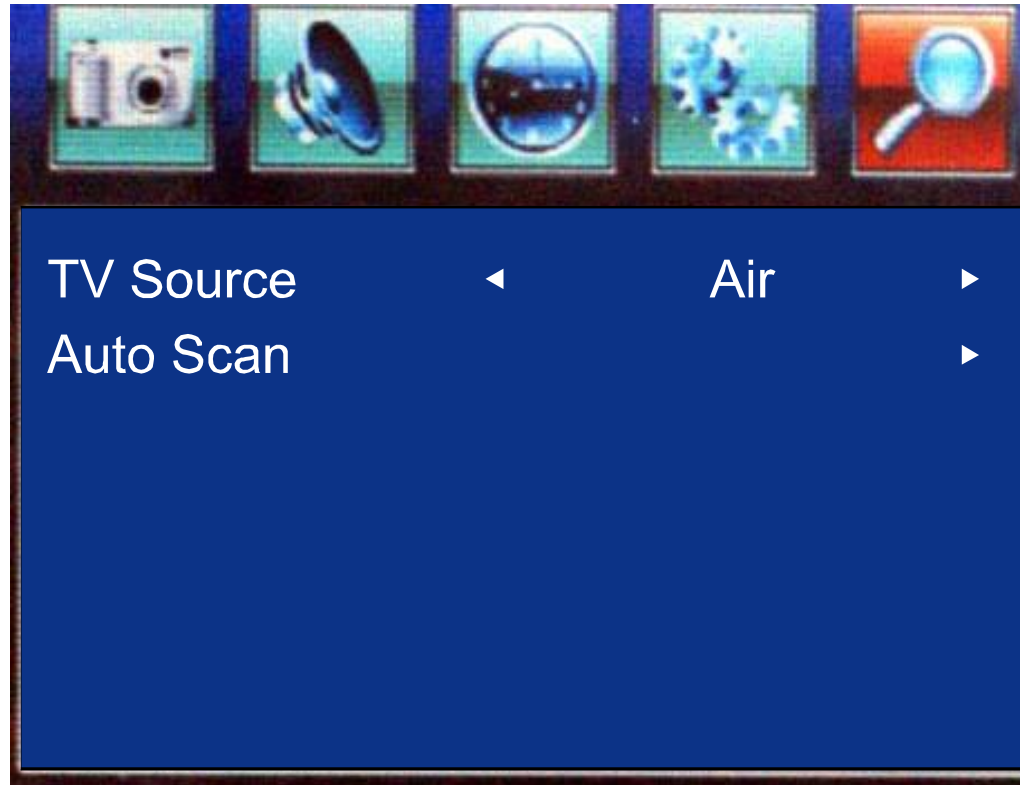

With access to the AIR or CATV. Press MENU to enter the main menu interface, and then press ► to enter search interface. Select Auto Scan, press ENTER. It will automatically scan and store TV programs. All Digital TV (DTV) and Analogue TV (ATV) programs will be stored.

 Choice Of TV Programs

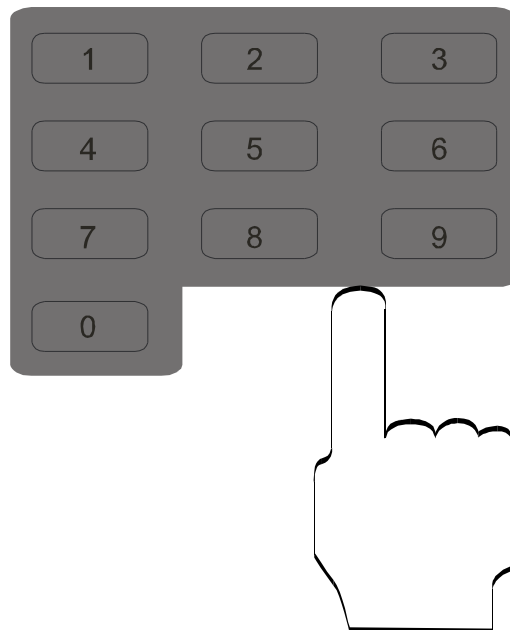

Press  on top of the TV or on the remote control to change the channels. You can also input the channel number directly.

Sleep Mode



Sleep timer: you can set the sleep time of this portable TV for 5 minutes-240minutes to enter the sleep mode, and press any button on the remote or panel to wake up.

Image Quality Adjustment



Press MENU to select picture submenu.

Press \blacklozenge to choose sub-menu. Use $\blacktriangleleft\blacktriangleright$ button to adjust.

Image quality adjustment options:

Picture Mode/Brightness/Contrast/Color/ Sharpness/Tint/Color Mode

Sound Adjustment

Press VOL+ to increase volume; Press VOL- to reduce volume. Press Mute to turn off the sound

Sound Effect Adjustment



Press MENU to select sound submenu.

Press \blacktriangle to choose sub-menu. Use $\blacktriangleleft\blacktriangleright$ button to adjust. Sound Effect options:

- 1) Sound Mode: Standard, Music, Movie, Sports
- 2) Treble/Bass: Treble, Bass, Balance
- 3) Prefer Language: English, French, Spanish

AV In Mode

Select source AV

Use the AV cable to input the signal source to this TV. Then you can enjoy high-quality images and sound on this TV.

AV Out Mode

Under the TV status or AV-IN mode, the AV signal can be output to another device. Connect AV Cable from the TV to the output device, and then power on the TV. Power on your input device. The signal will be shown on your device.

FM Mode

Please insert the antenna line into the FM ANT. Select source FM to enter the FM mode , on this mode, you can search the radio channel. Before searching, please insure to connect a antenna, then press the INFO button to search automatically.

After searching all the FM radio channel , you can press the CH+/- to select the channel you want to listen, and press the ◀▶ to adjust the frequency one by one.

External Storage Mode



Support SD/MMC/MS and USB2.0

* If USB or Card device is connected, the USB or Card Logo will turn to be active.

Select USB or Card and Press Enter.

You will find the following 3 folders: pictures, music and videos. You can use the ◀▶ to move the focus and then press Enter.



Picture Viewer



Supported formats: EXIF, JPEG, JPG, DCT.

When you enter into the Photos, there will be list of ALL supported pictures on your USB or Card Reader Devices. You will find a picture preview at the right.

 
After entering the full-screen picture viewer, Press Enter to enter Slideshow options.
Use ◀▶/ ⬇ to select and adjust your selections.

MP3 Player




Supported formats: All MP3 files.

A list of all Mp3 files will be shown at the left side, when you enter into the MUSIC Folder.
Use **◆** to select the files, press ENTER to play your selected file.

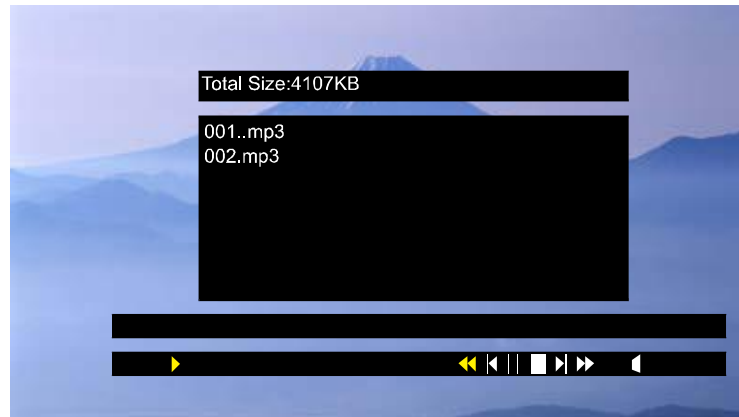


The bottom line of screen function keys are: rewind, on one, pause, stop, next song, fast forward, volume. Use **◀▶** to move Left and Right; Press Enter to make your Choice; Press **◀▶** to adjust your selections.

 Video Player

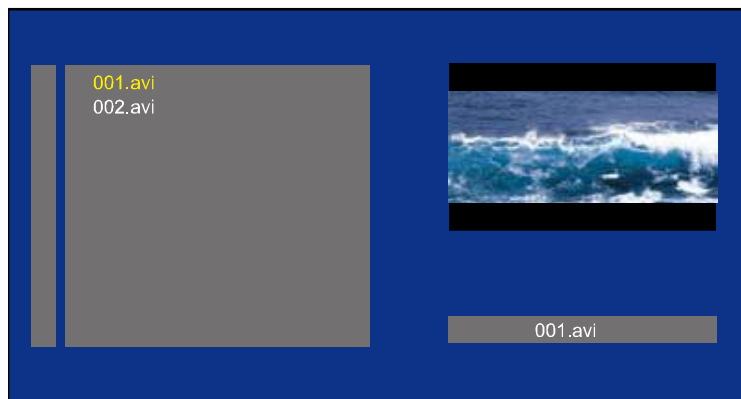

 Enter into the Video list; There will be preview on the right, if the file format is supported. Then press Enter to view in Full Screen. Please Exit to quit to video file list. Please Exit again to quit to the Photo/Music/Video menu.

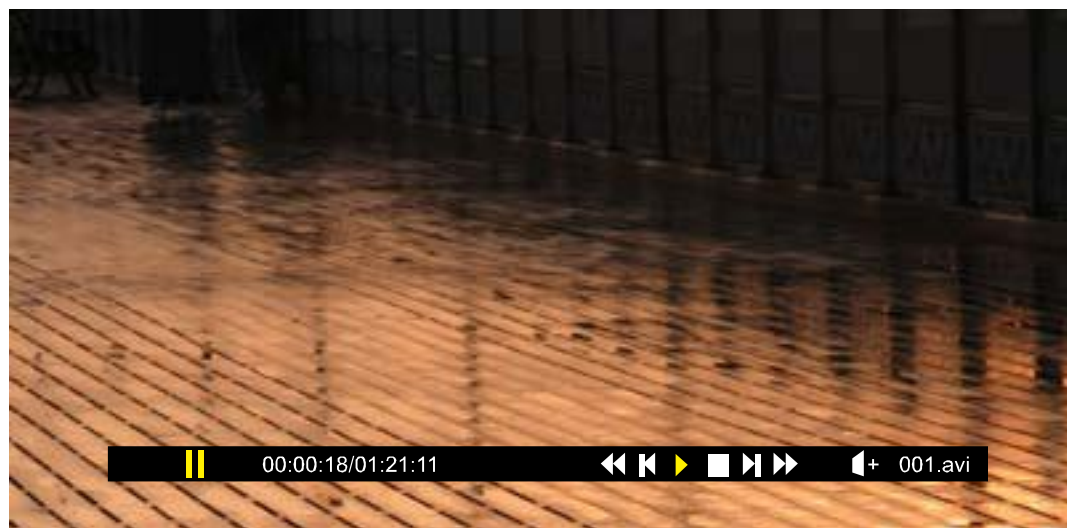

In full-screen playback, press ENTER to enter the video play menu. Press ◀▶ to move left and right. Press Enter again to select submenu.

Notes:

This portable TV can support video format such as: MPEG4

Common Troubleshooting

UNUSUAL PHENOMENA	REASON	METHOD TO SOLVE THE PROBLEM
Power connected but TV does not work	Plug not fastened well.	Connect the power supply again
No sound	The audio output wire has not correctly connected or is loose; TV or the amplifier are not in a normal working condition	Connect again the audio wire; check if the TV is in the AV mode, if the amplifier is in the normal working condition
No picture	The video output wire has not correctly connected or is loose; TV is not in normal working condition	Connect again the audio wire; check if the TV is in the AV mode
Picture without color	The picture mode of the TV is not the same as the player	Change the picture mode system setting up
the remote control does not work	The battery does not have enough power; the remote controller does not point correctly at the remote sensor or the remote sensor is dirty. The protection film of the battery is not taken off.	Change the battery. Point the remote controller directly at the remote sensor; clean the surface of the remote sensor Take off the protection film.
The player does not work	The player interfaced by another electrical appliance or the quality is not in a good condition	Turn off the power and turn on again, then try to operate the player. If it still does not work, please contact the service centre.

FEATURES:

Built-in ATSC Digital & NTSC Analogue TV Tuner over-the-air programming. HDTV programs supported.
7 inch 16:9 TFT-LCD panel with Pixel resolution: 480*234
Digital Photo Frame function to view your photos
Media Player function to play audio/video files from MP3 player and flash drive via USB and Card slot
FM Radio
Clock function
Monitor function via AV input with DVD player and other electronic devices
Output to Big Screen TV via AV output
Earphone output for private listening
USB & SD/MMC/MS Card Slot
Electronic Program Guide and Program Information (EPG)
Timer-off function (Auto Sleep)
Closed Captioning
Inside Speaker: 1.5W x 2, 8 Ohm

ATSC SYSTEM:

Tuner: Modulate: 8VSB, 64-QAM, 256-QAM;
Input Frequency: 57MHz~803MHz; Input Resistance: 75 Ohm
Band width: 6MHZ
Sensitivity:-83dB~0 dB (8VSB)
C/N:15 dB /-50 dB
TV RECEIVING:
AIR: 2~69 CHANNELS; CATV(STD, IRC, HRC): 2~125 CHANNELS

POWER:

Built-in rechargeable Li polymer battery
Power Input: DC9V = 1.5A
Power Consumption: 10.5W

ACCESSORY:

TV Antenna
Antenna Converter Connector
Car Charger
AC Adapter
Remote Control
Earphone
AV Cable
Carry Bag
User Manual