



iVIEW-352PTV

USER'S MANUAL



NOTE: iVIEW-352PTV does not receive the signal while vehicle is moving.

3.5" Portable DIGITAL TV

To assure the product to work in best status
Please read the users manual carefully before operation and keep it well for future use

TABLE OF CONTENT

1 Introduction.....	1
1-1 Features.....	1
1-2 Accessories.....	1
1-3 Precautions.....	1
2 Basic Instruction	2
2-1 Connection.....	2
2-2 Key definition.....	2
2-3 Channel Scan / First installation.....	4
2-4 How to change channel.....	4
2-5 Channel List.....	4
2-6 Program Information.....	5
3 Setup Menu	6
3.1 Channel Setup.....	6
3.2 Closed-caption / CC Setup.....	6
3.3 Emergency Alarm System (EAS).....	7
3.4 System Setup.....	7
3.4.1 Factory Reset.....	7
3.4.2 Time Setup.....	7
3.4.3 OSD.....	7
3.4.4 Audio.....	7
3.4.5 Screen.....	7
3.4.6 Format.....	7
3.5 Parental Control / V-chip	8
3.5.1 MPAA / Movies Rating.....	8
3.5.2 TVPG / USA TV Content Rating.....	9
3.5.3 Canada English Rating.....	10
3.5.4 Canada French Rating.....	10
3.5.5 RRT Rating.....	11
3.6 Change Password.....	11
4 Trouble Shooting	12
5 Technical Specification	13

INTRODUCTION

1. Introduction

1.1 Features

- 3.5" True Color Digital LCD Display
- Supports ATSC Digital Channels
- Electronic Program Guide (EPG)
- Built-in VHF/UHF antenna
- Supports Audio/Video output
- Supports Stereo Earphone output
- Built-in 1 W speaker
- Built-in Li-Polymer rechargeable battery
- AC-DC Adapter 5V $\overline{\text{---}}$ 1.4A

1.2 Accessories

- | | |
|---------------------|------|
| ● Stereo earphone | 1pce |
| ● Audio/Video Cable | 1pce |
| ● User Manual | 1pce |
| ● Warranty Card | 1pce |
| ● Power Adapter | 1pce |
| ● Pouch | 1pce |

1.3 Precautions

- Do not use this unit near water. Water and moisture maybe damage this unit.
- Do not use this unit near heat source. Heat maybe damage this unit.
- Changes in specifications and features may be made without notice or obligation.

Disposing of the product

 
**Your device should not be placed at municipal waste.
Please check local regulation for disposal of electronic
products.**




BASIC INSTRUCTION

2. Basic Instruction

2.1 Connection

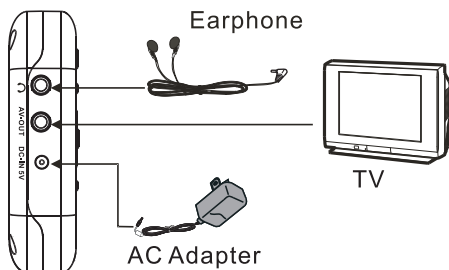

 
2.2 Key Definition

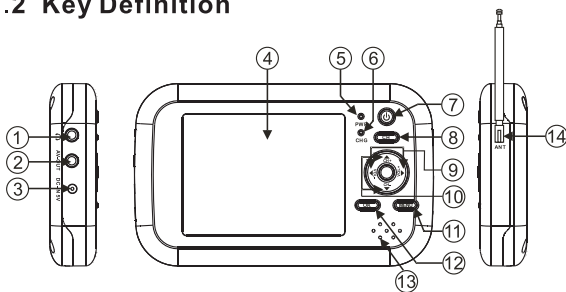

- 1. Earphone
- 2. AV-OUT
- 3. DC-IN
- 4. LCD
- 5. Power Indicator
- 6. Charge Indicator
- 7. Power

- 8. CH
- 9. ▲ VOL+ / ▼ VOL-
- 10. ► CH+ / ◀ CH-
- 11. MENU
- 12. OK
- 13. Speaker
- 14. Antenna

 BASIC INSTRUCTION

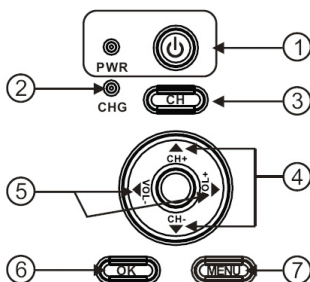

(1). Power

- Press several seconds to turn power on or off.

(2). LED Indicator

- Power Indicator : When the power is on, the indicator is lighted.
- Charge Indicator

Green : While the power adapter charges built-in Li-polymer battery, the indicator is lighted green.

OFF : When the battery is finished charging, the indicator will be off.

Battery Low : While the factory capacity is low, LCD will display "Battery Low". The system will turn off automatically after a while. Please charge the battery.

(3). Channel List

Press [CH] to enable channel list. Use navigation keys to select desired TV channel.

(4) CH+ / CH- / ▲ / ▼

USE CH+ / CH- to change the current TV channel.

(5). VOL+ / VOL- / ◀ / ▶

- USE VOL+ / VOL- to change the audio volume.
- In menu mode, press [◀] to go back to last menu, press [▶] to select a new function or confirm it.

(6). OK

Select the menu item and confirm it.

 
(7). MENU

- Display/leave Main Menu screen.
- Return to last menu.
- While in MENU screen, use [▲] / [▼] and [OK] key to select menu item and confirm.

BASIC INSTRUCTION

2.3 Channel Scan / First Installation

When first time installation or move to a new place, you need to perform channel scan to get channel list updated. Stretch the built-in telescopic TV antenna first. Press [MENU] to enter [Main Menu], Select [Auto Search] and [Start Search] then start searching TV channels. All the founded channels stores into the channel list.

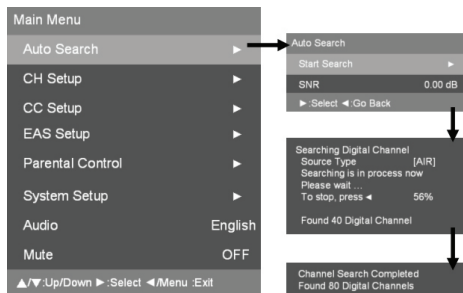

2.4 How To Change Channel

There are two options to select desired TV channel.

- (1) CH +/- : Press Key [CH+] / [CH-] to select a next/previous channel from the channel list.
- (2) CH List : Press [CH] and select desired channel from the Channel List.

2.5 Channel List

Press [CH] to display channel list on the screen. Use navigation keys to select desired channel.

Program List		Page 1 of 1
Channel	Name	Skip
2-1	WGB-SD	Off
2-2	PBS-HD	ON
▲/▼:Up/Down OK: Select ◀:Exit		

BASIC INSTRUCTION

2.6 Program Information


Press [POWER] to display program information on the screen.

2	WGB-SD	11:30
Daily News		
Audio [English]		
Unrated	Freq: 57000(KHz)	

SETUP MENU


3. Setup Menu

 3.1 Channel Setup

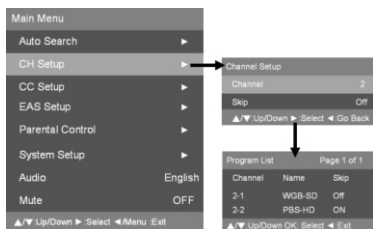

You can select a channel and enable [SKIP] to ON then this channel will be bypassed when changing channel by CH+/CH-.

 3.2 Closed-Caption / CC Setup

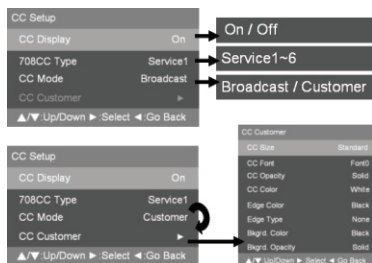

- (1) Enable or disable closed-caption from the [CC Display] menu.
- (2) Select CC Service1~6 from TV program provider.
- (3) To customize CC style, change CC Mode to [Customer] then modify the parameter from the menu.

 
SETUP MENU

3.3 Emergency Alarm System (EAS)



- (1) Enable or disable [EAS] from the [EAS Setup] menu.
- (2) Set the priority of EAS notice.

3.4 System Setup

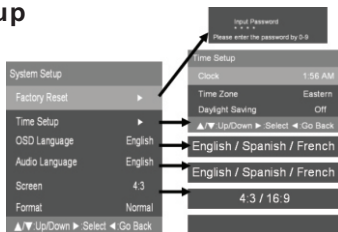

3.4.1 Factory Reset

Reset to factory default setting. (Password required)

3.4.2 Time Setup

Select time zone and enable/disable daylight saving.

3.4.3 OSD

Select OSD language (English / Spanish / French)

3.4.4 Audio

Select Audio language (English / Spanish / French)

3.4.5 Screen

Select Display aspect (16:9 / 4:3)

3.4.6 Format

Select Video display ratio (Normal, Crop, Squeeze and Letter Box)

This item is valid when [SCREEN] is in [4:3].


 
SETUP MENU

3.5 Parental Control / V-chip


For protecting children from harmful television, parents can change the parameter from the parental control menu.

There are many different V-chip systems in the

world. TV program consist related information in the stream. The device will display or block according to the setup level.

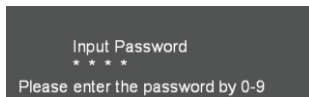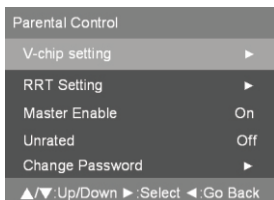

 
Password required before entering the setup menu of V-chip

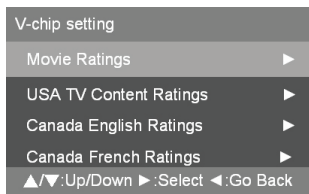

3.5.1 MPAA / Movies Rating

MPAA Rating / Movies Rating		
G	General Audiences	All Ages admitted
PG	Parent Guidance Suggested	Some material may not be suitable for child
PG-13	Parent Strongly Cautioned	Some material may be in appropriate for child under 13
R	Restricted	Under 17 requires accompany parent or adult guardian
NC-17	Not rated	No one 17 and under admitted
X		Unified with NC-17

SETUP MENU

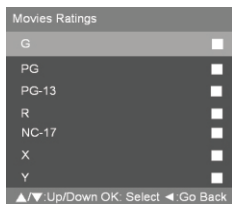


This channel is blocked by the Movie Rating of "R"

Blocking a rating affects all the higher ratings, so that blocking "R" in the example above automatically blocks "NC-17" and "X", whatever previous state of these ratings was. If a password is defined while a TV program warning is received for the current channel, sound is muted and the following menu is displayed on the center of screen; what's more, the rating information should be consistent with current active program rating.

3.5.2 TVPG / USA TV Content Rating

TVPG Rating / USA TV Content Rating		
Age Based	TV-Y	All Child
	TV-Y7	Director older child
	TV-G	General Audience
	TV-PG	Parent Guidance Suggested
	TV-14	Parent Strongly Cautioned
	TV-MA	Mature Audience Only
Content Based	ALL	All Scene
	FV	Fantasy Violence Scene
	V	Violence Scene
	S	Sexual Situation
	L	Adult Language
	D	Sexually Suggestive Dialog

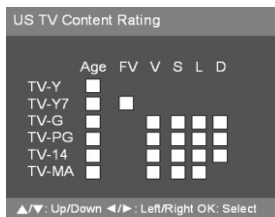

Blocking a rating affects all the higher ratings, so that blocking "TV-PG" in the example above automatically blocks "TV-14" and "TV-MA", whatever previous state of these ratings was. If a password is defined while a TV program warning is received for the current channel, sound is muted and the following menu is displayed on the center of screen; what's more, the rating information should be consistent with current active program rating.

This channel is blocked by the USA TV content Rating of "TV-G"

SETUP MENU


3.5.3 Canada English Rating



Blocking a rating affects all the higher ratings, so that blocking “PG” in the example above automatically blocks “14+” and “18+”, whatever previous state of these ratings was. If a password is defined while a TV program warning is received for the current channel, sound is muted and the following menu is displayed on the center of screen; what’s more, the rating information should be consistent with current active program rating.

This channel is blocked by the English
Canada Rating of "C8+"

3.5.4 Canada French Rating

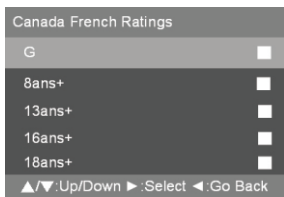

Blocking a rating affects all the higher ratings, so that blocking “13 ans+” in the example above automatically blocks “16 ans+” and “18 ans+”, whatever previous state of these ratings was. If a password is defined while a TV program warning is received for the current channel, sound is muted and the following menu is displayed on the center of screen; what’s more, the rating information should be consistent with current active program rating.

This channel is blocked by the French
Canada Rating of "G"

SETUP MENU

3.5.5 RRT Rating

RRT setting	Dimension Name 1
Dimension Name 1	Rating Value 1 <input type="checkbox"/>
Dimension Name 2	Rating Value 2 <input type="checkbox"/>
Dimension Name 3	Rating Value 3 <input type="checkbox"/>
Dimension Name 4	Rating Value 4 <input type="checkbox"/>
▲/▼:Up/Down ◀/▶:Page +/- OK: Go Back	▲/▼:Up/Down OK: Select ◀: Go Back

The RRT rating is dynamic. It comes with different dimension name and rating. You need to check dimension first then check the rating under the dimension.

3.6 Change Password

<div>Change Password New Password * * * *</div> <div>Please enter the password by 0-9</div>	<div>Change Password Confirm Password * * * *</div> <div>Please enter the password by 0-9</div>
---	---

To change the password for V-Chip function, you need to input a new password then input the password again. If two passwords is matched then password is changed.

Password Changed Success!

TROUBLE SHOOTING

4. Trouble Shooting

Symptom	Remedy
No power	Check if both plugs of the mains cord are properly connected. Check if there is power at the AC outlet by plugging in another appliance. Check if battery pack is inserted appropriately. Check if car adaptor is connected appropriately.
No picture	Try to re-scan channel again. Check the level setting of parental control.
Distorted picture	Try to stretch TV antenna or move to a place closed to the window.
No sound	Check audio connections. If using a HiFi amplifier, try another sound source.
Some TV program lost	Try to re-scan TV channel again after moving to a new place. Try to stretch the TV antenna. Some TV program broadcasted in lower frequency need longer TV antenna to receive properly, and some TV program broadcasted in higher frequency need shorter TV antenna to receive properly. Change direction or move to place more closed to the window.
Player feels warm	When the player is in use for a long period of time, the surface will be heated. This is normal.

TECHNICAL SPECIFICATION

5. Technical Specification

Specification		
LCD Display	Screen Size	70 x 52 mm (3.5")
	Display Format	320 x 240 RGB
	16:9 or 4:3	4:3
	Contrast	300
	Viewing Angle (degree)	120/110 H/V
INPUT / OUTPUT Terminal	RF	Built in Telescopic Antenna
	AV-OUT	ø 3.5 phone jack for Composite Video and Stereo Audio
	Earphone	ø 3.5 phone jack for Stereo 32/16Ω
	DC IN	5V 1.4A
ATSC	Tuner	ATSC
	Band	UHF:57MHz ~ 803MHz @ 6MHz
	Channels	CH 2-69
	Modulated Method	8VSB
	RF Sensitivity	+5~-83dBm
Audio Spec.	Level	1Vpp ± 0.1V
	S/N	>60db
	THD	0.10%
Video Spec.	Level	1Vpp
Battery	Type and Capacity	Lithium-Polymer @ 1800mAh / 3.7V
	Playback / Charge Time	2 hours / 4 hours
	Life Time	≥ 300 times
Speaker	Max output	1W max
Antenna	Type	Telescopic Antenna
	Length	67~225mm
	Main Unit	129x78x20mm
Power Adapter	AC/DC	AC 110 (IN) / DC 5V , 1.4A (Out)
Accessory		User Manual
		DC Adaptor
		AV Cable (ø 3.5 phone jack to RCA)
		Earphone
		Warranty Card
		Pouch