



122K00

Illustrated Parts List

Model Series

122K00

TYPE NUMBERS
0006 through 3113.

TABLE OF CONTENTS

Alternator	6
Air Cleaner	4
Blower Housing/Shrouds	5
Camshaft	2
Carburetor	3
Controls	4
Crankshaft	2
Cylinder	2
Electric Starter	6
Electrical	6
Engine Sump	2
Exhaust System	4
Flywheel	6
Flywheel Brake	6
Fuel Supply	3
Governor Spring	4
Ignition	6
Kits/Gaskets	2 & 3
Lubrication	2
Piston Group	2
Rewind Starter	5
Valves	2



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

122K00

1319 WARNING LABEL



REQUIRED when replacing parts with warning labels affixed.


1058 OPERATOR'S MANUAL




1330 REPAIR MANUAL




1019 LABEL KIT

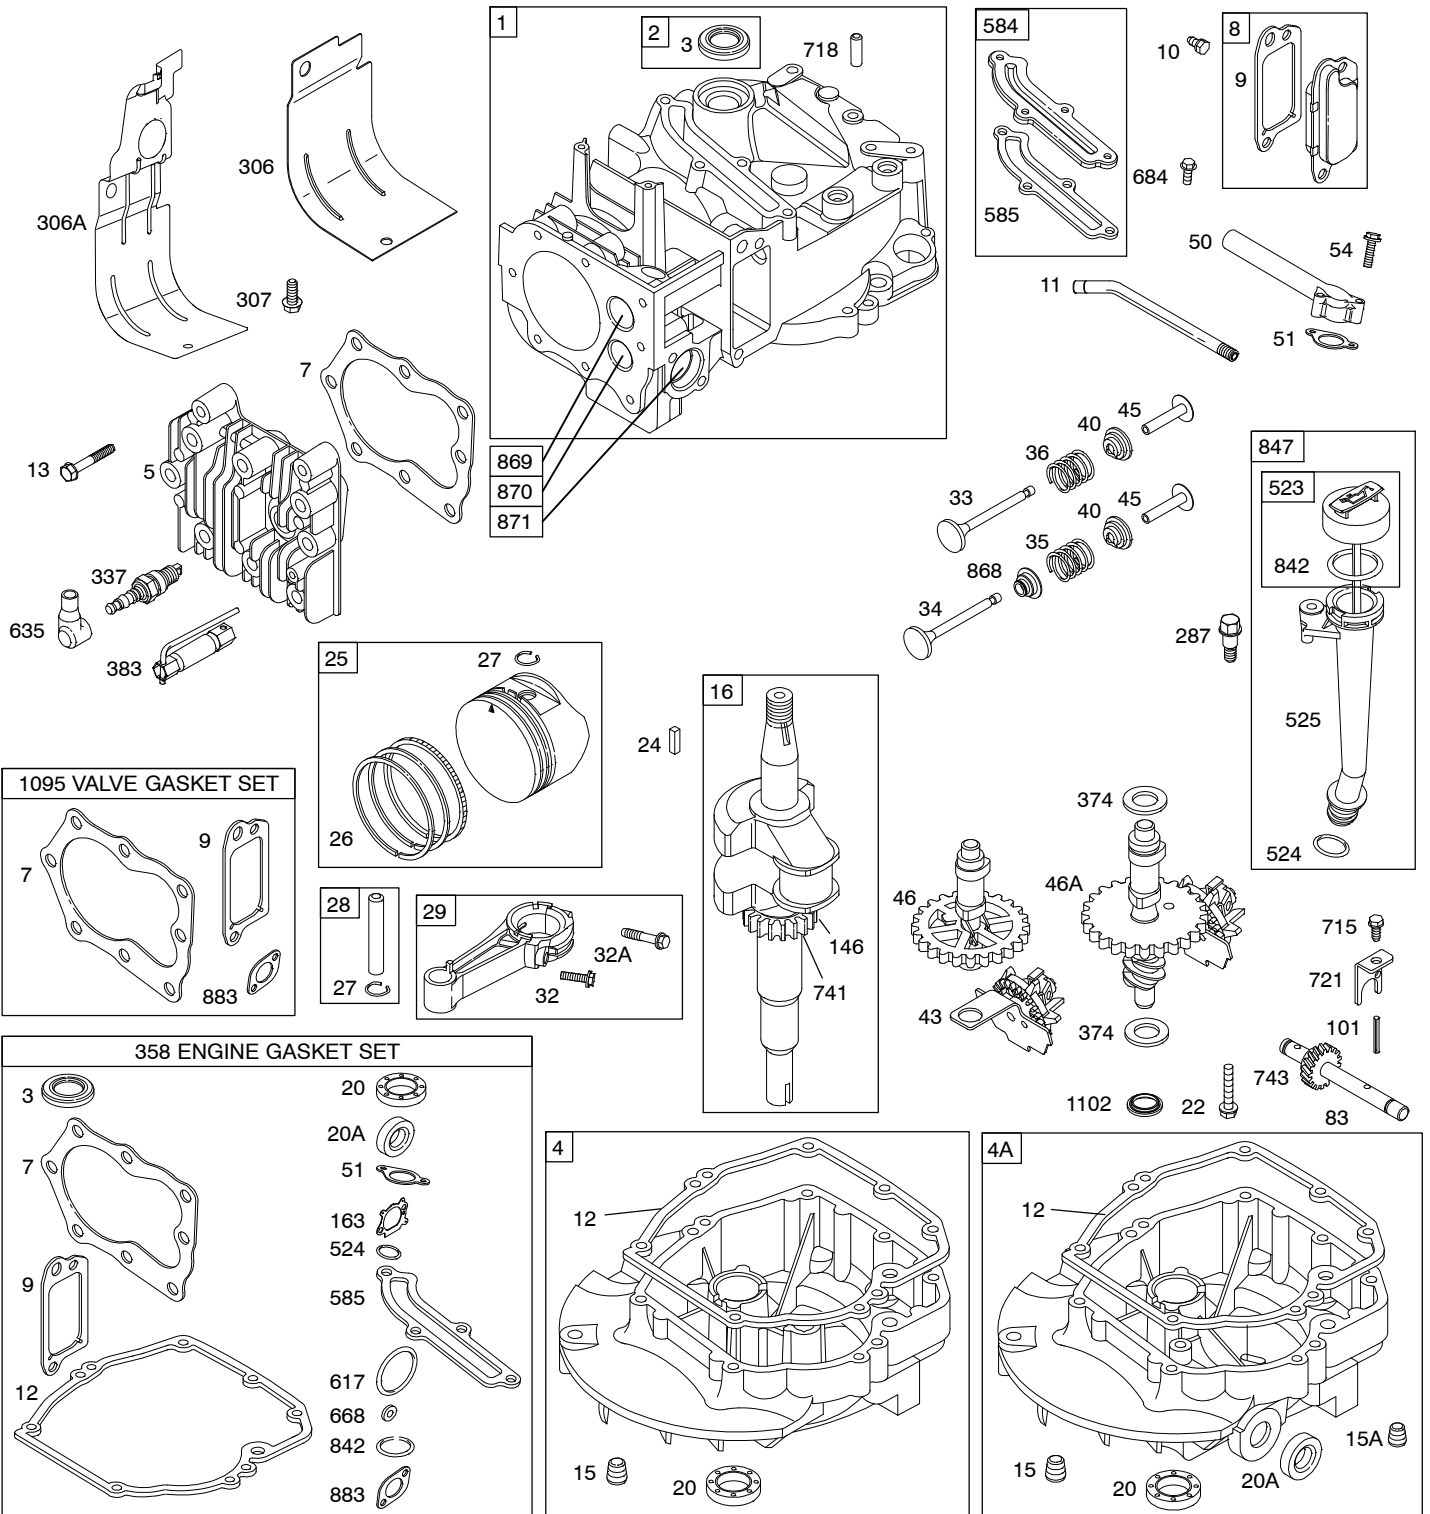







1095 VALVE GASKET SET

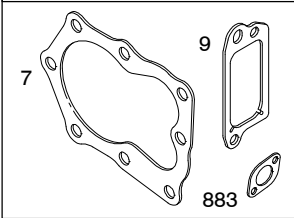


358 ENGINE GASKET SET

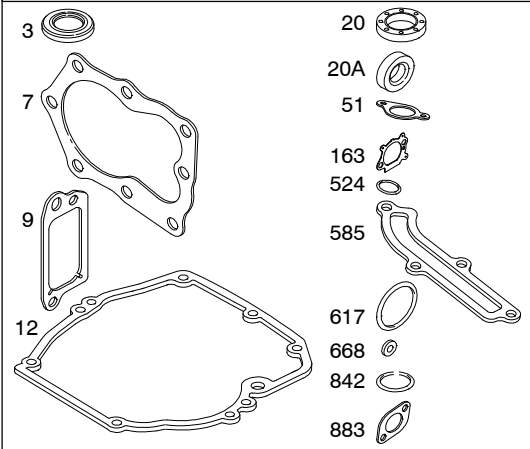


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5053-2 Assemblies include all parts shown in frames. 07/09/2008

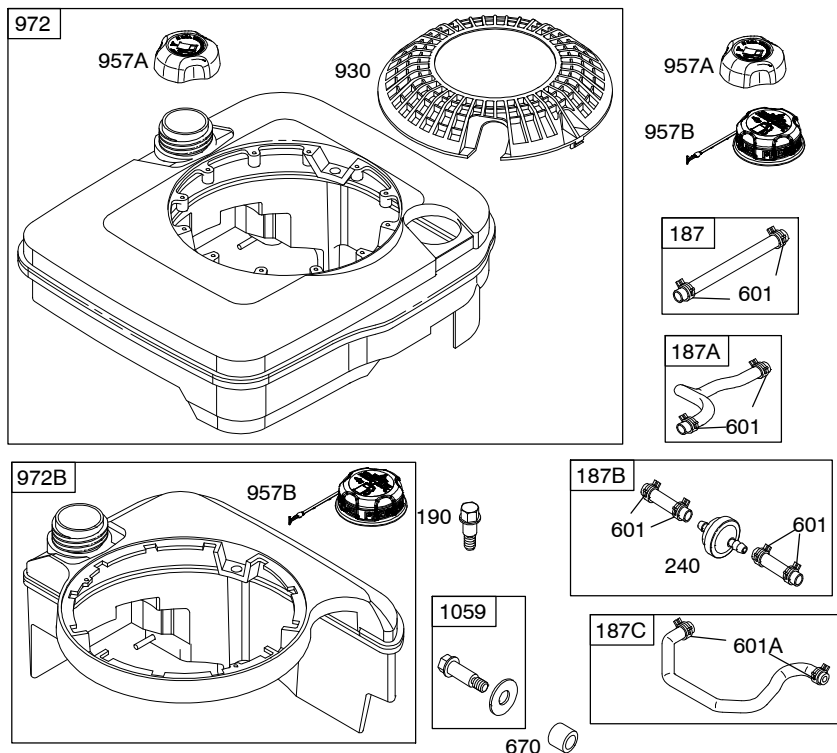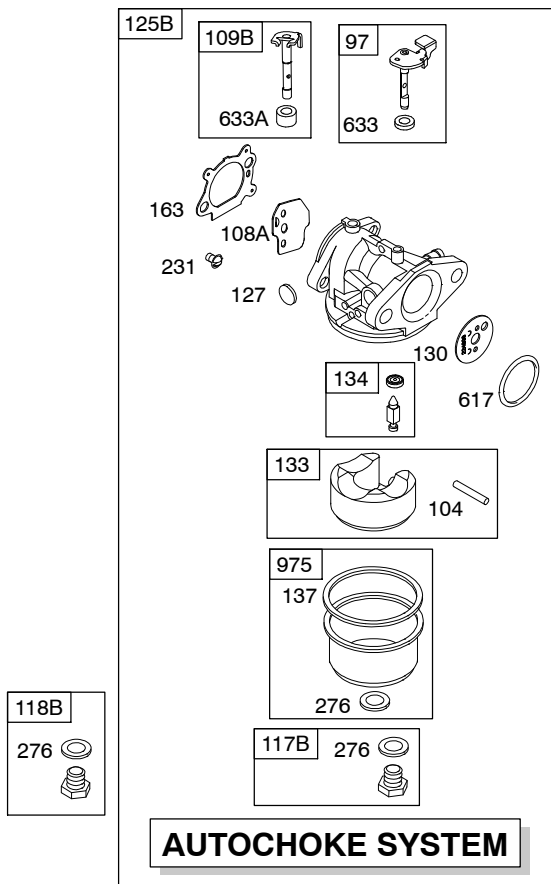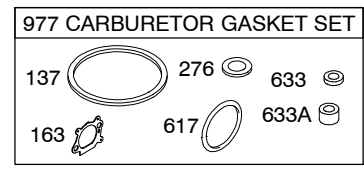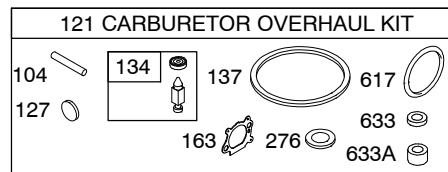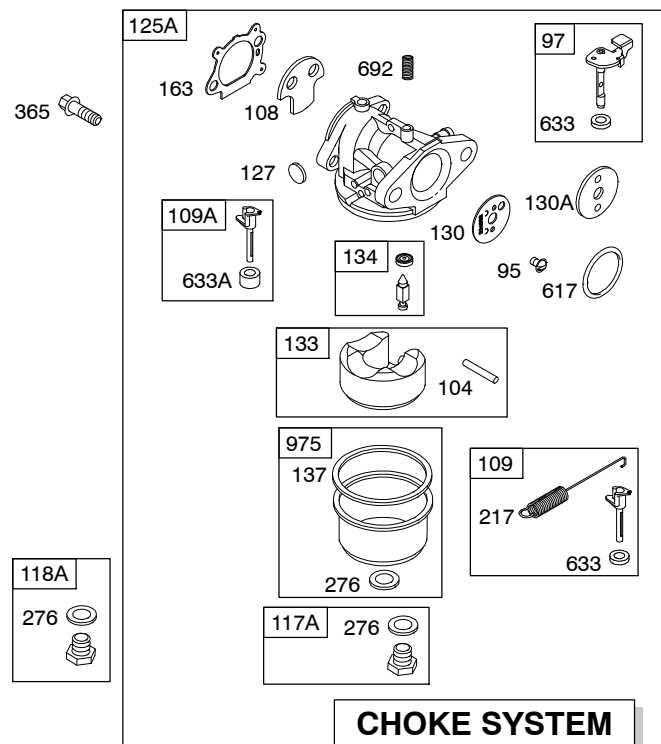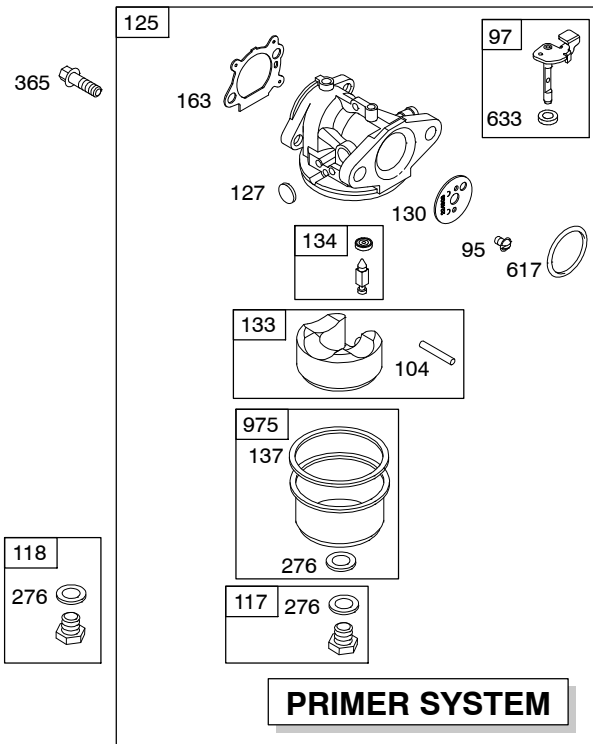

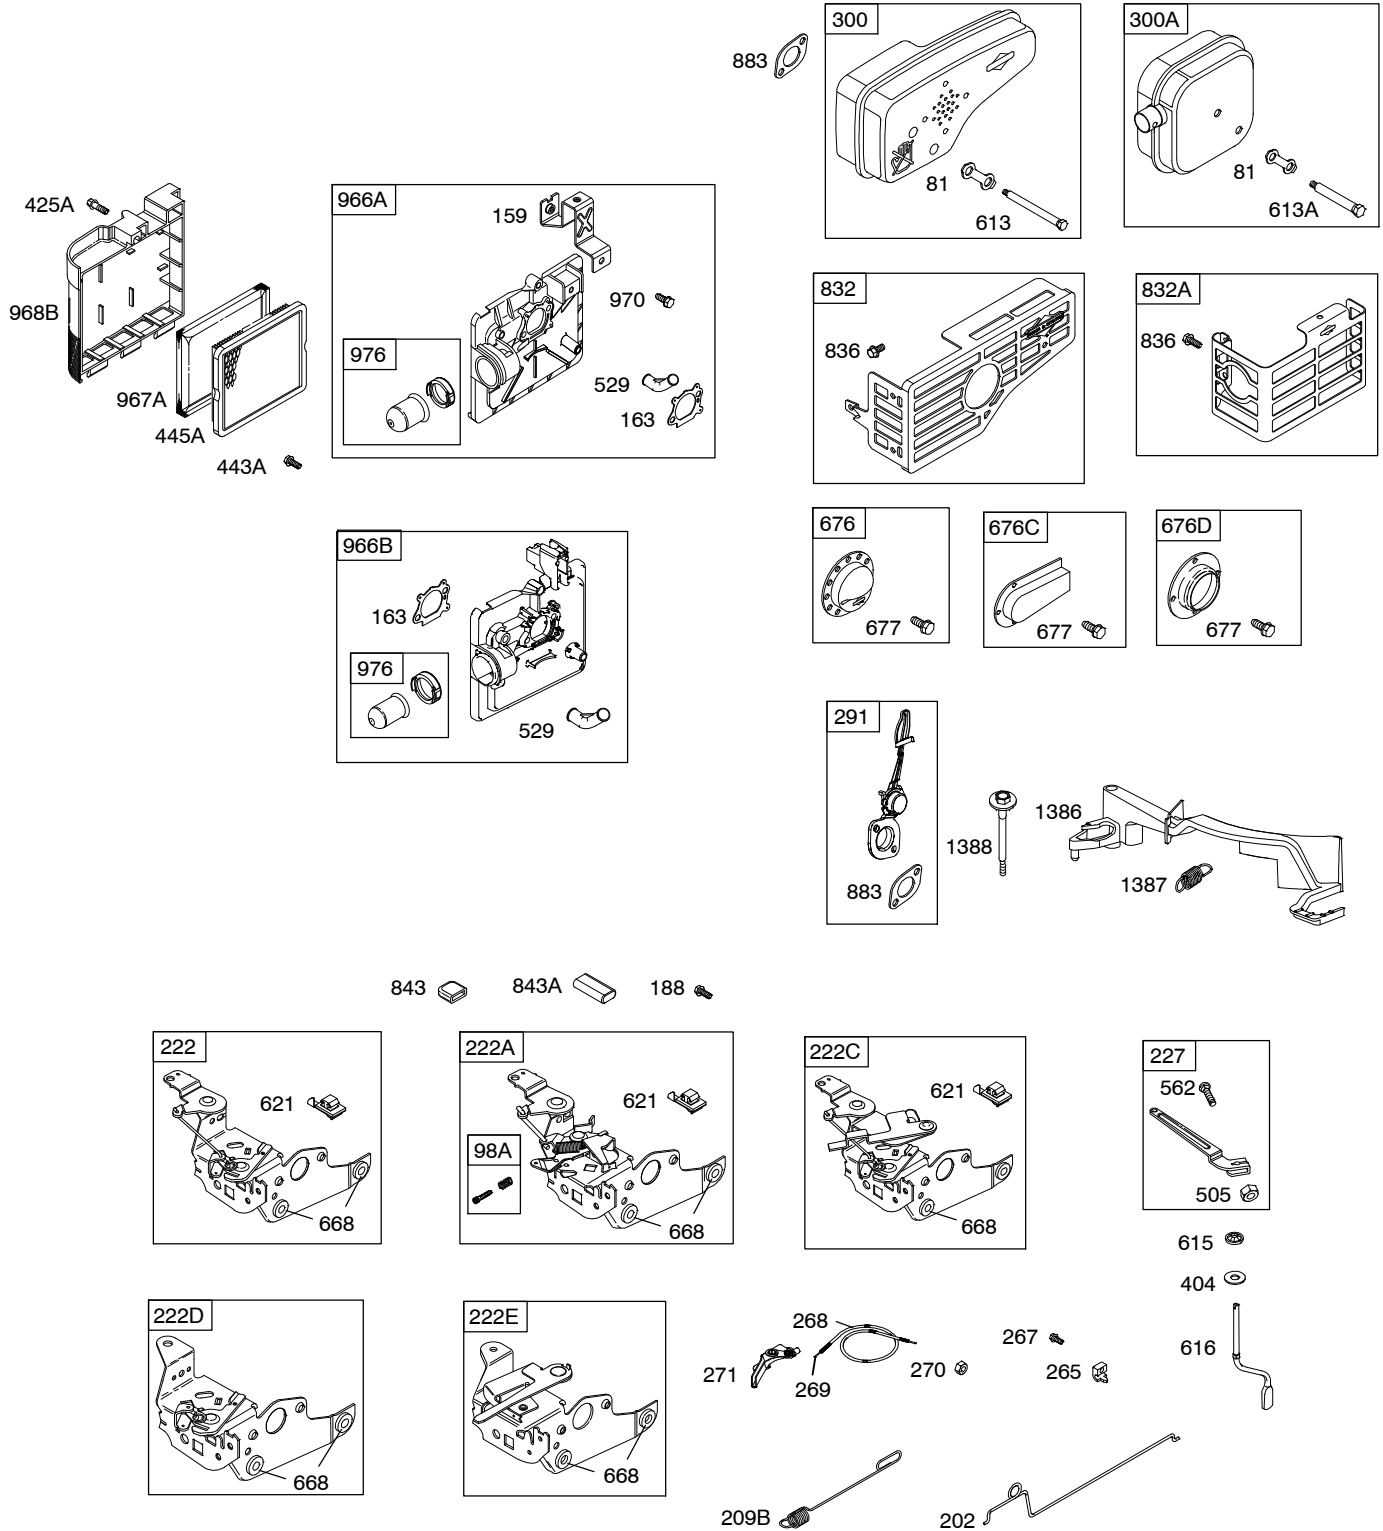


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5053-4 Assemblies include all parts shown in frames. **07/09/2008**

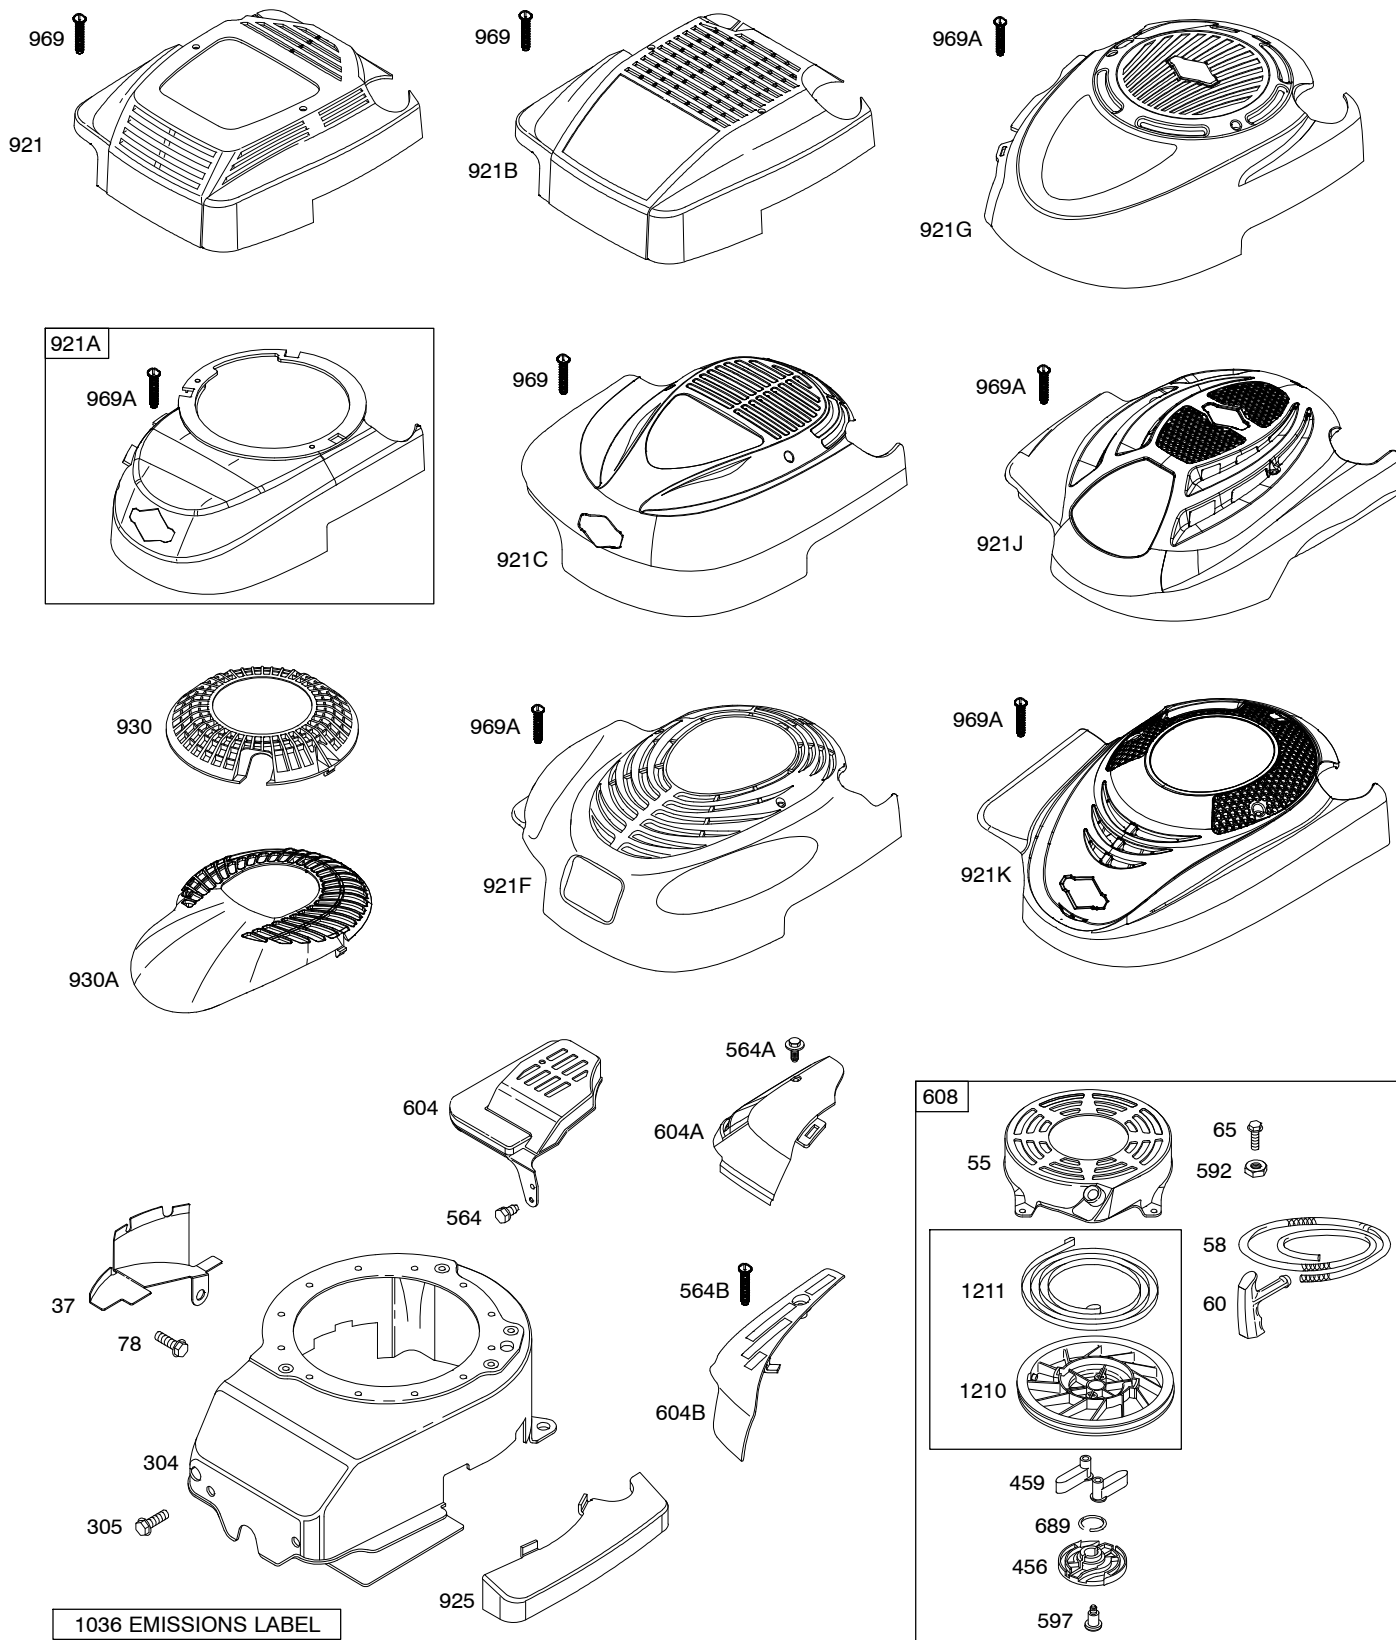

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

122K00

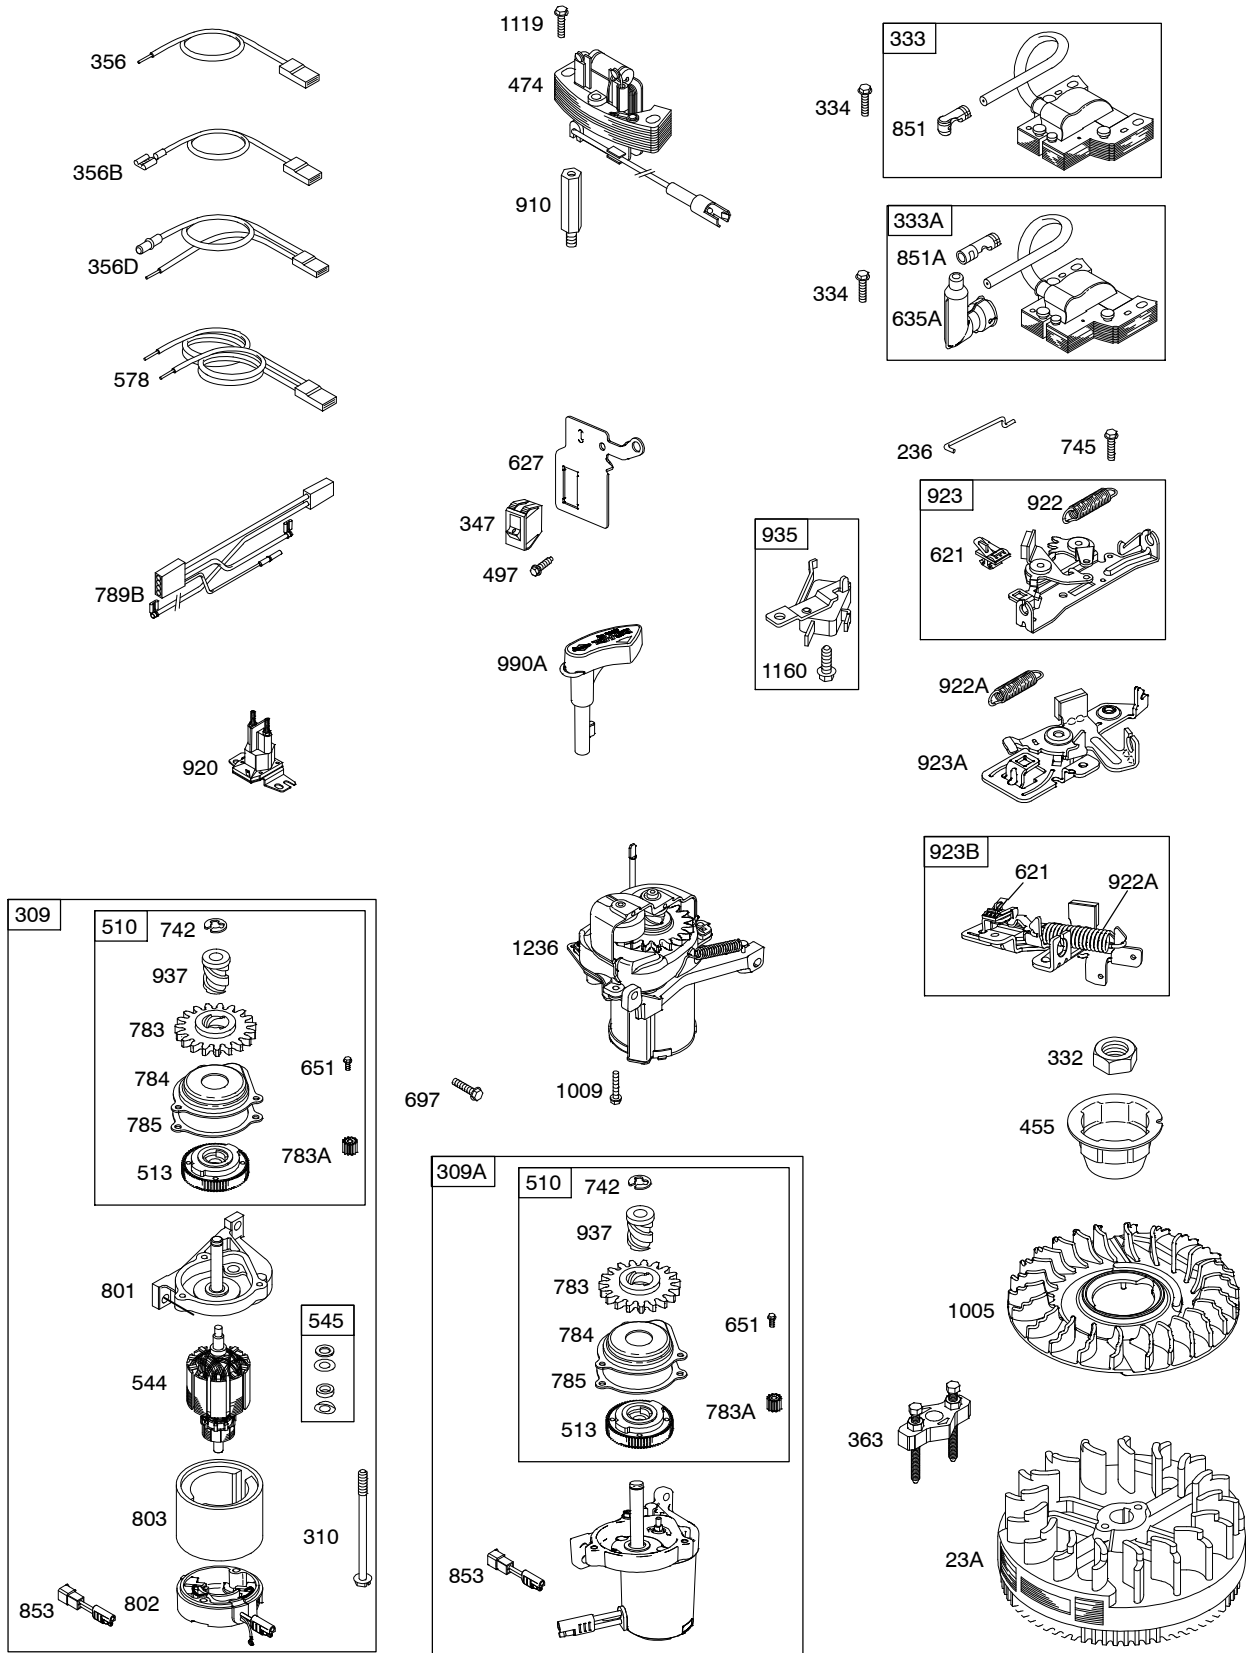

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5053-6 Assemblies include all parts shown in frames. 07/09/2008

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	697322	Cylinder Assembly	16	691451	Crankshaft	22	691092	Screw (Crankcase Cover/ Sump)
2	399269	Kit-Bushing/Seal (Magneto Side)			----- Note -----			
3	★299819S	Seal-Oil (Magneto Side)			691455 Crankshaft Used on Type No(s). 0006, 0018, 0113, 0122, 0149, 0150, 0152, 0153, 0154, 0217, 0290, 0309, 0329, 0356, 0412, 0518, 3112, 3113.	23A	691987	Flywheel
4	493279	Sump-Engine ----- Note ----- 696340 Sump-Engine Used on Type No(s). 0116. 498983 Sump-Engine Used on Type No(s). 0006, 0131, 0154, 3112, 3113. 696294 Sump-Engine Used on Type No(s). 0302.			691450 Crankshaft Used on Type No(s). 0025, 0101, 0340, 0341, 0525, 0572, 0573, 0574, 0577, 0623, 0627, 0628, 0633, 0640, 0680.			----- Note ----- 691992 Flywheel Used on Type No(s). 0006, 0114, 0115, 0126, 0129, 0131, 0132, 0134, 0135, 0137, 0138, 0139, 0141, 0154, 0158, 0169, 0217, 0356, 0412, 2349, 3112, 3113. 696291 Flywheel Used on Type No(s). 0302.
4A	493365	Sump-Engine (Auxiliary PTO)			691452 Crankshaft Used on Type No(s). 0016, 0141, 0516.	24	222698S	Key-Flywheel
5	691160	Head-Cylinder			691454 Crankshaft Used on Type No(s). 0117, 0119.	25	795429	Piston Assembly (Standard) (Used After Code Date 07090300).
7	★∅692249	Gasket-Cylinder Head			696009 Crankshaft Used on Type No(s). 0171, 0172.			----- Note -----
8	695250	Breather Assembly			691482 Crankshaft Used on Type No(s). 2329, 2334.			791097 Piston Assembly (Standard) (Used Before Code Date 07090400).
9	★∅696125	Gasket-Breather			694849 Crankshaft Used on Type No(s). 0126, 0134, 0158, 2349.			795430 Piston Assembly (.020" Oversize) (Used After Code Date 07090300).
10	691125	Screw (Breather Assembly)			692717 Crankshaft Used on Type No(s). 0131.			791326 Piston Assembly (.020" Oversize) (Used After Code Date 04102100 and Before Code Date 07040400).
11	691781	Tube-Breather			694850 Crankshaft Used on Type No(s). 0132, 0135, 0139.			697341 Piston Assembly (.020" Oversize) (Used Before Code Date 04102200).
12	★692232	Gasket-Crankcase			694478 Crankshaft Used on Type No(s). 0353.			
13	690912	Screw (Cylinder Head)						
15	691680	Plug-Oil Drain (Square Socket)						
15A	691093	Plug-Oil Drain (Hex Socket)						
			20	★399781S	Seal-Oil (PTO Side)			
			20A	★691952	Seal-Oil (PTO Side) (Auxiliary PTO)			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

122K00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
26	795431	Ring Set (Standard) (Used After Code Date 07090300). ----- Note ----- 791098 Ring Set (Standard) (Used After Code Date 04031400 and Before Code Date 07090400). 499425 Ring Set (Standard) (Used Before Code Date 04031500). 795432 Ring Set (.020" Oversize) (Used After Code Date 07090300). 791324 Ring Set (.020" Oversize) (Used After Code Date 04102100 and Before Code Date 07090400). 499427 Ring Set (.020" Oversize) (Used Before Code Date 04102200).	46	691449	Camshaft	97	493267	Shaft-Throttle (Metal) ----- Note ----- 696565 Shaft-Throttle (Plastic)
			46A	691460	Camshaft (Clockwise) Used on Type No(s). 0050. ----- Note ----- 691459 Camshaft (Counterclockwise) Used on Type No(s). 0051, 0117, 0153, 0155.	98A	493280	Kit-Idle Speed
						101	691623	Pin-Shaft (Drive Gear)
			50	497465	Manifold-Intake	104	691242	Pin-Float Hinge
			51	272199S	Gasket-Intake	108	691182	Valve-Choke
			54	691650	Screw (Intake Manifold)	108A	795935	Valve-Choke (Used After Code Date 08031200). ----- Note ----- 790844 Valve-Choke (Used Before Code Date 08031300).
			55	691421	Housing-Rewind Starter			
			58	697316	Rope-Starter (Cut To Required Length)	109	494218	Shaft-Choke
			60	281434S	Grip-Starter Rope	109A	498593	Shaft-Choke
			65	690837	Screw (Rewind Starter)	109B	795936	Shaft-Choke (Used After Code Date 08031200). ----- Note ----- 790843 Shaft-Choke (Used Before Code Date 08031300).
			78	691108	Screw (Flywheel Guard)			
			81	691740	Lock-Muffler Screw	117	498978	Jet-Main (Standard) ----- Note ----- 494870 Jet-Main (Standard) Used on Type No(s). 0515, 0516, 0518, 0525, 0560.
27	691866	Lock-Piston Pin	83	690522	Shaft-Auxiliary Drive Used on Type No(s). 0050, 0051. ----- Note ----- 690527 Shaft-Auxiliary Drive Used on Type No(s). 0153.			
28	499423	Pin-Piston (Standard)						
29	499424	Rod-Connecting (Standard)						
32	691664	Screw (Connecting Rod)						
32A	695759	Screw (Connecting Rod)				117A	498978	Jet-Main (Standard) ----- Note ----- 498981 Jet-Main (Standard) Used on Type No(s). 0006, 0126, 0129, 0131, 0132, 0134, 0135, 0137, 0138, 0139, 0141, 0154, 0158, 0169, 0217, 0353, 0356, 0412, 2349, 3112, 3113.
33	262651S	Valve-Exhaust						
34	262652S	Valve-Intake						
35	691270	Spring-Valve (Intake)						
36	691270	Spring-Valve (Exhaust)						
37	694086	Guard-Flywheel						
40	692194	Retainer-Valve	95	691636	Screw (Throttle Valve)	117B	697355	Jet-Main (Standard)
43	691997	Slinger-Governor/Oil						
45	690548	Tappet-Valve						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5053-8

Assemblies include all parts shown in frames.

07/09/2008

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
118	497466	Jet–Main (High Altitude) ----- Note ----- 497315 Jet–Main (High Altitude) Used on Type No(s). 0515, 0516, 0518, 0525, 0560.	127	●694468	Plug–Welch	209B	699056	Spring–Governor ----- Note ----- 691851 Spring– Governor Used on Type No(s). 0110, 0132, 0135, 0177, 0178. 691291 Spring– Governor Used on Type No(s). 0006, 0111, 0114, 0115, 0116, 0117, 0126, 0131, 0134, 0154, 0155, 0158, 0217, 0353, 2349, 3112. 691292 Spring– Governor Used on Type No(s). 0119, 0302, 0309, 0330, 0340, 0341. 691852 Spring– Governor Used on Type No(s). 0171, 0172. 691290 Spring– Governor Used on Type No(s). 0129, 0169, 3113. 793007 Spring– Governor Used on Type No(s). 0138, 0139. 790944 Spring– Governor Used on Type No(s). 0356, 0412.
118A	498975	Jet–Main (High Altitude) ----- Note ----- 494870 Jet–Main (High Altitude) Used on Type No(s). 0006, 0126, 0129, 0131, 0132, 0134, 0135, 0137, 0138, 0139, 0141, 0154, 0158, 0169, 0217, 0353, 0356, 0412, 2349, 3112, 3113.	130	696564	Valve–Throttle			
118B	692677	Jet–Main (High Altitude)	130A	691203	Valve–Throttle			
121	498260	Kit–Carburetor Overhaul	133	398187	Float–Carburetor			
125	498170	Carburetor (Primer System) ----- Note ----- 790821 Carburetor (Primer System) Used on Type No(s). 0515, 0516, 0518, 0525, 0560.	134	●398188	Kit–Needle/Seat			
125A	499059	Carburetor (Choke System) ----- Note ----- 790978 Carburetor (Choke System) Used on Type No(s). 0138, 0139. 792253 Carburetor (Choke System) Used on Type No(s). 0006, 0126, 0129, 0131, 0132, 0134, 0135, 0137, 0141, 0154, 0158, 0169, 0217, 0353, 0356, 0412, 2349, 3112, 3113.	137	◆693981	Gasket–Float Bowl			
125B	790845	Carburetor (Autochoke System)	146	690979	Key–Timing			
			159	691753	Bracket–Air Cleaner Primer			
			163	★◆272653	Gasket–Air Cleaner			
			187	791766	Line–Fuel (Cut to Required Length)			
			187A	791873	Line–Fuel (Molded)			
			187B	791891	Line–Fuel (Includes Filter) (Used After Code Date 05063000). ----- Note ----- 692042 Line–Fuel (Includes Filter) (Used Before Code Date 05070100).			
			187C	791875	Line–Fuel (Molded)			
			188	693399	Screw (Control Bracket)			
			190	690940	Screw (Fuel Tank)			
			202	691829	Link–Mechanical Governor			
						217	690354	Spring–Choke Return

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

⊗ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

122K00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
222	790143	Bracket-Control (Remote/Manual Friction)(Primer)	287	690940	Screw (Dipstick Tube)	305	691108	Screw (Blower Housing)
222A	692021	Bracket-Control (Remote Choke A Matic, Non Compliance)	291	790830	Thermostat	306	690450	Shield-Cylinder
222C	692150	Bracket-Control (Variable Speed) (5 Position Manual Choke)	300	692038	Muffler (Super Lo Tone)	306A	790836	Shield-Cylinder
222D	692467	Bracket-Control (Fixed Speed)			----- Note -----	307	690345	Screw (Cylinder Shield)
		----- Note -----			790828 Muffler	309	695550	Motor-Starter (Used Before Code Date 07052900).
		791128 Bracket-Control (Fixed Speed) Used on Type No(s). 0627, 0628.	300A	494343S	Muffler (Square Lo Tone)	309A	795092	Motor-Starter (Used After Code Date 07052800).
222E	692982	Bracket-Control (Manual Friction 5 Position Manual Choke)	304	695892	Housing-Blower			
227	690783	Lever-Governor Control			----- Note -----	310	692327	Bolt (Starter Motor)
231	691636	Screw (Choke Valve)			493293 Housing-Blower	332	690662	Nut (Flywheel)
236	691826	Link-Lockout			Used on Type No(s). 0015, 0016, 0018, 0025, 0050, 0051, 0060, 0113, 0117, 0119, 0122, 0155, 0171, 0172, 0340, 0515, 0516, 0518, 0525, 0560.	333	802574	Armature-Magneto
240	298090S	Filter-Fuel			493294 Housing-Blower			----- Note -----
265	690798	Clamp-Casing			Used on Type No(s). 0006, 0111, 0114, 0115, 0116, 0131, 0132, 0134, 0135, 0139, 0154, 0155, 0158, 0177, 0178, 0217, 0353, 0356, 0412, 2329, 2334, 2349, 3112, 3113.			790817 Armature-Magneto
267	691044	Screw (Casing Clamp)			696298 Housing-Blower	333A	793353	Armature-Magneto (Snap In Spark Plug Boot)
268	691025	Casing-Control Wire (Cut to Required Length)			Used on Type No(s). 0302.	334	691061	Screw (Magneto Armature)
269	691026	Wire-Control (Cut to Required Length)			790826 Housing-Blower	337	802592S	Plug-Spark (Resistor)
270	691027	Nut (Control Wire Casing)			Used on Type No(s). 0628.			----- Note -----
271	691028	Lever-Control			790983 Housing-Blower			697451 Plug-Spark (EMS)
276	◆271716	Washer-Sealing (Main Jet)			Used on Type No(s). 0627.	347	691396	Switch-Rocker
						356	692390	Wire-Stop
						356B	693010	Wire-Stop
						356D	496381	Wire-Stop
						358	497316	Gasket Set-Engine
						363	19069	Flywheel Puller
						365	691688	Screw (Carburetor)
						374	691074	Washer (Camshaft)
						383	89838S	Wrench-Spark Plug
						404	690272	Washer (Governor Crank)

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
425A	690670	Screw (Air Cleaner Cover)	601	791850	Clamp-Hose	677	690661	Screw (Muffler Deflector)
443A	692523	Screw (Air Cleaner Primer Base)	601A	691038	Clamp-Hose	684	690345	Screw (Breather Passage Cover)
445A	491588S	Filter-Air Cleaner Cartridge	604	691757	Cover-Control	689	691855	Spring-Detent
455	791960	Cup-Flywheel	604A	691344	Cover-Control	692	690572	Spring-Friction
456	692299	Plate-Pawl Friction	604B	790703	Cover-Control	697	691127	Screw (Drive Cap)
459	281505S	Plate-Ratchet	608	497680	Starter-Rewind	715	691147	Screw (Stop Shaft)
474	691991	Alternator	613	691340	Screw (Muffler)	718	690959	Pin-Locating
497	690664	Screw (Stop Switch Bracket)			----- Note ----- 790833 Screw (Muffler) Used on Type No(s). 0627, 0628.	721	690449	Stop-Shaft
505	691251	Nut (Governor Control Lever)	613A	691653	Screw (Muffler)	741	795755	Gear-Timing (Plastic)
510	795093	Drive-Starter	615	690340	Retainer-Governor Shaft			----- Note ----- 794388 Gear-Timing (Use Without Woodruff Key)
513	692358	Clutch-Drive	616	698801	Crank-Governor			(Used After Code Date 07093000).
523	499621	Dipstick	617★◆270344		Seal-O Ring (Intake Manifold)			790345 Gear-Timing (Use Without Woodruff Key)
524	★692296	Seal-Dipstick Tube	621	692310	Switch-Stop			(Used Before Code Date 07100100).
525	495265	Tube-Dipstick	627	692872	Bracket-Stop Switch			792565 Bracket-Stop Switch
529	691923	Grommet			----- Note ----- Used on Type No(s). 0126, 0131, 0134, 0158, 0356, 0412, 2329, 2334.	742	93941	Retainer-E Ring
544	690786	Armature-Starter	633	◆691321	Seal-Choke/Throttle Shaft	743	690516	Gear-Drive (Clockwise) Used on Type No(s). 0050.
545	492919	Washer Set (Starter Motor)	633A	◆693867	Seal-Choke/Throttle Shaft			----- Note ----- 691772 Gear-Drive (Counterclockwise) Used on Type No(s). 0051, 0117, 0153, 0155.
562	92613	Bolt (Governor Control Lever)	635	66538S	Boot-Spark Plug	745	691648	Screw (Brake)
564	690664	Screw (Control Cover)	635A	793351	Boot-Spark Plug (Snap On Style)	783	691918	Gear-Pinion
564A	691142	Screw (Control Cover)	651	691660	Screw (Starter Gear Cover)	783A	691269	Gear-Pinion
564B	698589	Screw (Control Cover)	668	★493823	Spacer (Includes 2)	784	795095	Cover-Starter Gear
578	398153	Wire Assembly	670	692294	Spacer-Fuel Tank			
584	697734	Cover-Breather Passage	676	396548	Deflector-Muffler			
585	★691879	Gasket-Breather Passage	676C	493871	Deflector-Muffler			
592	690800	Nut (Rewind Starter)	676D	497682	Deflector-Muffler			
597	691696	Screw (Pawl Friction Plate)						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

122K00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
785	692352	Gasket-Starter Cover	922	691831	Spring-Brake	966A	496116	Base-Air Cleaner Primer
789B	696547	Harness-Wiring	922A	692135	Spring-Brake			
		----- Note -----	923	691994	Brake	966B	792040	Base-Air Cleaner Primer
		696546 Harness-Wiring	923A	695891	Brake			
		Used on Type No(s). 0135.			----- Note -----	967A	493537S	Filter-Pre Cleaner
801	690782	Cap-Drive			695891 Brake	968B	692298	Cover-Air Cleaner
802	695267	Cap-End			(Used Before Code Date 08050100).	969	690700	Screw
803	695266	Housing-Starter			Used on Type No(s). 0101, 0112, 0290,			(Blower Housing Cover)
832	499034	Guard-Muffler			0308, 0309, 0329,	969A	691138	Screw
832A	691424	Guard-Muffler			0330, 0337, 0572,			(Blower Housing Cover)
836	690664	Screw			0573, 0574, 0577,	970	691669	Screw
		(Muffler Guard)			0623, 0628, 0633,			(Air Cleaner Primer Bracket)
842	★691031	Seal-O Ring	923B	796136	Brake	972	699392	Tank-Fuel
		(Dipstick Tube)			(Used After Code Date 08043000).			(Plastic)
843	691884	Sleeve-Lever			Used on Type No(s). 0101, 0112, 0290,	972B	699374	Tank-Fuel
		(Control Bracket)			0308, 0309, 0329,			----- Note -----
843A	691895	Sleeve-Lever			0330, 0337, 0572,			699387 Tank-Fuel
		(Choke)			0573, 0574, 0577,			(Plastic)
847	692047	Dipstick/Tube Assembly			0623, 0628, 0633,			Used on Type No(s). 0302.
					0640, 0680.	975	493640	Bowl-Float
851	493880S	Terminal-Spark Plug				976	694395	Primer-Carburetor
851A	692424	Terminal-Spark Plug				977	498261	Gasket Set-Carburetor
871	262001	Bushing-Valve Guide (Exhaust)	925	795403	Cover-Linkage	990A	695951	Key Set
		----- Note -----			(Used After Code Date 07072200).	1005	691346	Fan-Flywheel
		63709 Bushing-Valve Guide			----- Note -----	1009	696255	Screw
		(Intake)			690595 Cover-Linkage			(Starter Motor)
883	★∅691881	Gasket-Exhaust			(Used Before Code Date 07072300).	853	695268	Adapter-Wire
910	691094	Stud				868	697338	Seal-Valve
		(Alternator)				869	691155	Seat-Valve
920	691656	Solenoid-Starter	930	691919	Guard-Rewind			(Intake)
921	497233	Cover-Blower Housing			(Round)	870	690380	Seat-Valve
921A	695886	Cover-Blower Housing	930A	691345	Guard-Rewind			(Exhaust)
921B	692931	Cover-Blower Housing			(Tear Drop)	1019	494256	Kit-Label
		----- Note -----						----- Note -----
		692932 Cover-Blower Housing	935	499421	Switch-Interlock			790231 Kit-Label
		Used on Type No(s). 0132, 0135, 0139,	937	691325	Spline-Starter			(Touch N Mow)
		2329, 2334.	957A	692046	Cap-Fuel Tank			
921C	695889	Cover-Blower Housing			(Plastic)			
921F	697343	Cover-Blower Housing	957B	699985	Cap-Fuel Tank			
921G	790701	Cover-Blower Housing			(Plastic)			
921J	790036	Cover-Blower Housing						
921K	699984	Cover-Blower Housing						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1036		Label-Emissions (Available From A Briggs & Statton Authorized Dealer)	1095	498528	Gasket Set-Valve	1236	695959	Starter-Machanical (Touch N Mow)
1058	277039	Operator's Manual ----- Note ----- 277101 Operator's Manual (Touch N Mow)	1102	691255	Pilot-Guide			(Do Not Service Individual Parts, Only As A Whole)
1059	692311	Kit-Screw/Washer ----- Note ----- 696293 Kit-Screw/ Washer (Touch N Mow)	1119	692979	Screw (Alternator)	1319	794467	Label-Warning
			1160	690345	Screw (Interlock Switch)	1330	270962	Manual-Repair
			1210	498144	Pulley/Spring Assembly (Pulley)	1386	790848	Vane-Air (Autochoke System)
			1211	498144	Pulley/Spring Assembly (Spring)	1387	790849	Spring-Air Vane
						1388	790850	Screw (Air Vane)

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.