



S705 SoundPilot™

Bluetooth® Stereo Headphones and Controller

motorola.com

S705 SoundPilot

Congratulations on purchasing your new SoundPilot!

As the first Class 1 Bluetooth stereo headphones and controller on the market, the Motorola S705 SoundPilot offers music and communication in perfect harmony. Innovatively designed, your S705 empowers you to listen to and wirelessly control your favorite tunes without the worry of missing a call—all with the freedom of using your own favorite headphones.

With superior sound and power, the Motorola S705 SoundPilot is light in weight but heavy in style and functionality—so go ahead, take control, and never miss a beat or a call.

Package Contents

- S705 Bluetooth Stereo Headphones and Controller
- Motorola S231 headphones
- Detachable shirt clip
- Detachable neck strap
- Wall charger
- Carry pouch
- User's Guide (this manual)
- Quick Start Guide

Motorola, Inc.
 Consumer Advocacy Office
 1307 East Algonquin Road
 Schaumburg, IL 60196
 www.hellomoto.com
 www.hellomoto.com/Bluetoothsupport
 1-877-MOTBLU (Motorola Bluetooth® support)
 1-800-331-6456 (United States)
 1-888-390-6456 (TTY/TDD United States for hearing impaired)
 1-800-461-4575 (Canada)

The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. SoundPilot is a trademark of Motorola, Inc. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. iPod is a registered trademark of Apple Computer, Inc. registered in the U.S. and other countries. naviPlay is a trademark of TEN Technology, Inc. All other product or service names are the property of their respective owners.

© Motorola, Inc., 2006.

S705 SoundPilot 3

Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law.

Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Manual Number: 6809504A42-A

4 S705 SoundPilot

Contents

S705 SoundPilot 1
 Package Contents 2
Overview 7
Getting Started 11
 Charging Your S705 12
 Pairing Your S705 With Your Bluetooth Device(s) 15
 Wearing Your S705 22
 Connecting Your Headphones to Your S705 27
Operation 28
 Turning Your S705 On and Off 28
 Operating Your S705 32
 Listening to Music 36
 Listening to FM Radio 45
 Making and Receiving Calls 49
 Locking/Unlocking Keys 56


Contents 5

Customize 58
 Setting Language 58
 Putting S705 in Bluetooth Discoverable Mode 59
Troubleshoot 61
European Union Directives
Conformance Statement 63
Caring for the Environment by Recycling 64
Recycling Mobile Phones and Accessories 64
Safety and General Information 65
Smart Practices While Driving 68
Industry Canada Notice to Users 71
FCC Notice To Users 72
Motorola Limited Warranty for the United States and Canada 74
Product Registration 82
Export Law Assurances 83
Index 84

6 Contents

Overview

 The Motorola S705 Bluetooth Stereo Headphones and Controller allows you to both listen to music and place and receive phone calls wirelessly using your favorite headphones.

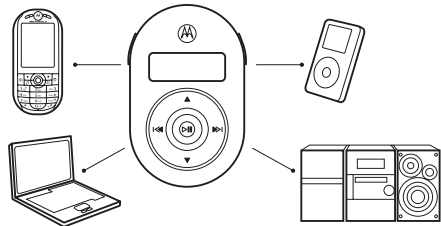

Along with making and receiving phone calls using your Bluetooth-enabled mobile phone, there are several possible scenarios for using your S705 Bluetooth Stereo Headphones and Controller with your music devices:

 
Overview **7**

Music Source

Wireless Music Experience

Home stereo

Listen to music from your home stereo.



(Requires adapter, such as the Motorola DC800 Bluetooth Home Stereo Adapter.)

PC

Listen to music from your PC.



(Requires adapter, such as the Motorola PC850 Bluetooth Stereo PC Adapter.)

8 Overview

Music Source

Wireless Music Experience

iPod®

 
Listen to music from your iPod.



(Requires adapter, such as TEN Technologies naviPlay™ Bluetooth Stereo Adapter for iPod.)

Phone

Listen to music from your phone that supports Bluetooth streaming music capabilities.



Overview **9**

To use your S705, your phone or music device should support the following Bluetooth profiles:

Profile

Description

HFP
(Handsfree Profile)

Telephony / Call management: operations related to placing/receiving phone calls

A2DP
(Advanced Audio Distribution Profile)

Stereo music streaming

 
AVRCP (Audio Video Remote Control Profile)

Remote music control (for example, ability to remotely play/pause or skip tracks)

10 Overview

Getting Started

Before you get started, take a moment to familiarize yourself with the components of your S705. Here's a quick anatomy lesson of your S705:

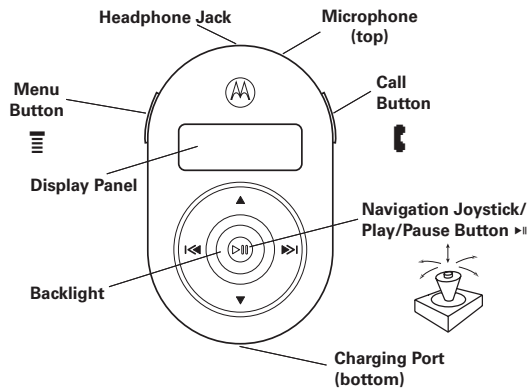

Getting Started 11

Charging Your S705

First-Time Use — Before you can use your S705, charge the self-contained battery for two hours.

Recharging — When your S705's battery meter indicates low charge (☐), your S705 battery needs recharging.

Over time, batteries gradually wear down and require longer charging times. This is normal. The more you use your S705 with your Bluetooth devices, the less standby time your battery has.



The rechargeable batteries that power your S705 must be disposed of properly and may need to be recycled. Contact your local

 
12 Getting Started

recycling center for proper disposal methods.

Warning: Never dispose of batteries in a fire because they may explode.

To charge your S705:

1 Plug the Motorola charger into your S705's charging port.

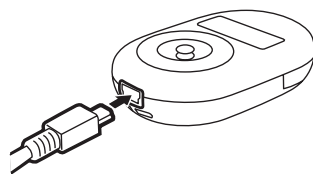

2 Plug the other end of the charger into an electrical outlet.

- When powered on, your S705's battery meter indicates charging (☐).
- When powered off, your S705's joystick backlight is on.

Getting Started 13

Once complete, when powered on, your S705's battery meter indicates full charge (☐). When powered off, the backlight turns off.

Note: Your S705 can be used while charging.

3 When charging completes (about 2 hours), remove charger from the electrical outlet, and detach charger from your S705.

Note: You can also use a Motorola Original Vehicle Power Adapter to charge your S705 battery while in your vehicle.

A fully charged S705 battery provides approximately:

- Up to 8 hours of stereo music listening and/or phone call talk time.

14 Getting Started

- Up to 75 hours of standby time.

Note: Your S705 automatically adjusts Bluetooth power output based on distance and environment to maintain connection with your device(s). The amount of Bluetooth power output used affects your S705's battery life.

Pairing Your S705 With Your Bluetooth Device(s)

You must pair (link) your S705 and your Bluetooth-enabled phone or music device before you can make/receive calls or listen to streaming music. (You can listen to FM radio without pairing.)

"Pairing" links devices equipped with Bluetooth wireless technology and

Getting Started **15**


allows the devices to remember the other device's unique ID. Once these devices are paired, they automatically connect when turned on and are within range.

Perform the following steps to pair (link) your S705 with your Bluetooth device:

Note: Your S705 is a Class 1-capable Bluetooth device. Bluetooth features and Bluetooth Class 1 power levels are not allowed for outdoor operation in France. To avoid unlawful interference with radio signals, do not use the Bluetooth features in France unless you are indoors.

Important: If you are pairing separate Bluetooth devices for handsfree calls and streaming music, it is recommended that you pair your S705 with your handsfree device (phone) first.

16 Getting Started

- 1 When turned off, press and hold the  button until the Motorola logo displays.
- 2 Place your S705 into Bluetooth discoverable (pairing) mode:
 - a If not connected to another Bluetooth device, your S705 is automatically placed into discoverable mode. You see the following:



- b If connected to another device, you must manually place your S705 into discoverable mode. To do this, see "Putting S705 in Bluetooth Discoverable Mode" on page 59.

Getting Started **17**

- 3 From your device, perform a Bluetooth device discovery/search. (Refer to your phone or music device manual for detailed instructions on accessing Bluetooth and searching for discoverable devices.)

When pairing your S705 with a Motorola phone, use the following steps to perform a device discovery from your phone:

After accessing Bluetooth:

- a Select **Look for Devices**.
The phone lists Bluetooth devices it finds.
- b Select **Motorola S705**.
- c Select **OK** or **Yes** to pair your S705 with your phone.
- d Enter the passkey: **0000**

18 Getting Started

e Select **OK**.

Note: These steps are for most Motorola phones. For other phones, see your phone's user's guide for instructions on performing a Bluetooth device discovery.

4 Verify your S705 has successfully paired with your phone as follows:

- The Phone Connected (☎) icon displays in the upper right of your S705's display when successfully paired and connected with your Bluetooth phone. A Bluetooth Handsfree Phone (HFP) connection is now established with your phone.

5 Verify your S705 has successfully paired with your music source device as follows:

- The Streaming Music Connected icon (📶) displays in the upper right corner of your S705's display when successfully paired and connected with your music source (phone or other device). A Bluetooth Streaming Music (A2DP) connection is now established with your music source device.

About Pairing and Your S705

Your S705 can store pairing information for up to eight different *Bluetooth* devices. Device IDs are stored in your S705's memory. If you try to pair more than eight devices, the oldest paired device is removed from the list. Devices that support streaming music (A2DP

Getting Started 19

 
20 Getting Started

profile) are listed via menu. This allows you to easily switch between different music sources.

When your S705 is turned on, it automatically connects to the **last** handsfree device (such as a mobile phone) **and** the last streaming music source it was **connected to**. To connect your S705 to another paired streaming music device, see "Selecting Streaming Music Source" on page 36. The last device to start a connection with your S705 becomes the "last connected" device.

Wearing Your S705

You can wear your S705 using an attached shirt clip (shown on left) or neck strap (shown on right).

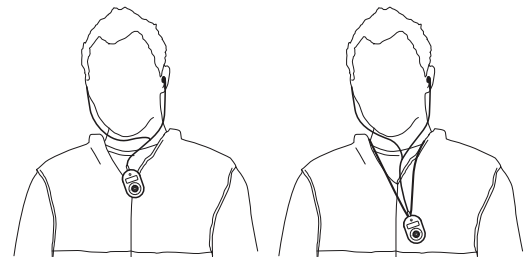

Note: For optimal microphone performance, your S705 should be worn about 8 inches from your mouth.

 
Getting Started 21

22 Getting Started

Attaching Shirt Clip to Your S705


Perform the following steps to attach the shirt clip to your S705:

- 1 Remove rubber plug from back of your S705.

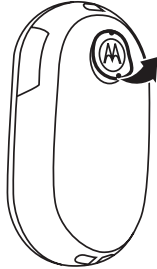


Getting Started 23

 - 2 Insert shirt clip onto the back of your S705.

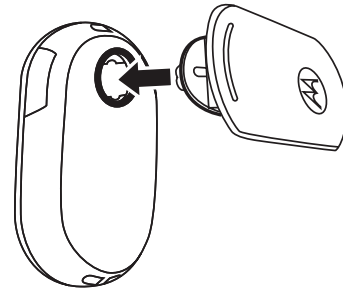

 - 3 Turn shirt clip to lock into place on your S705.

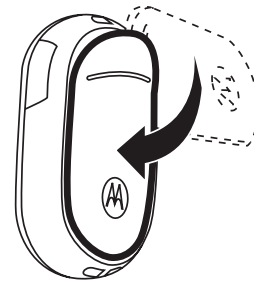


24 Getting Started

Attaching Neck Strap to Your S705

Perform the following steps to attach the neck strap to your S705:

 
- 1 Detach neck strap cord from quick release mechanism.

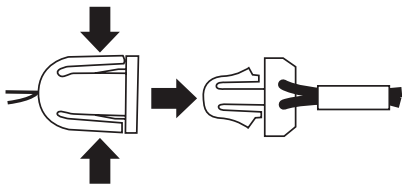


- 2 Attach quick release mechanism to your S705.

Note: The neck strap can be attached to either end of your S705. However, for optimal microphone performance, attach neck strap as shown (on end near microphone and

 headphone jack so that microphone faces up when neck strap is worn).

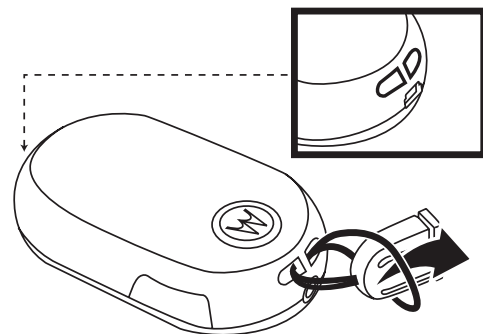

 - 3 Reattach neck strap cord to quick release mechanism.




Tip: The neck strap length is adjustable.

Getting Started 25

26 Getting Started

Connecting Your Headphones to Your S705

 
Your S705 comes with 3.5mm headphones. To utilize these or your own favorite headphones, connect them to the headphone jack.

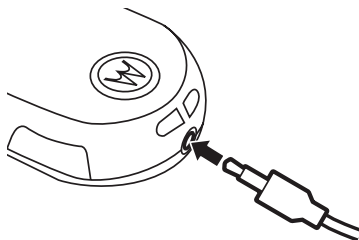

Getting Started **27**

Operation

 Turning Your S705 On and Off

To turn on or off your S705, press and hold  button for at least 3 seconds until the Motorola logo is displayed.

When turned on, your S705 automatically establishes handsfree phone and streaming music connections with the last paired Bluetooth devices (phone and/or music devices).

Note: If not connected with any Bluetooth device(s), your S705 automatically enters Bluetooth discoverable mode. See “Pairing Your

 
 
28 Operation

S705 With Your Bluetooth Device(s)” on page 15 for details on pairing your Bluetooth device(s) with your S705.

Connecting to Your Bluetooth Devices

When connection to a streaming music source is established, the Music Idle screen displays.



The Streaming Music Connected () icon displays, along with the Phone Connected () icon when a handsfree connection is also established.

For some streaming music devices, the Music Playing screen displays next. Both the Music Idle screen and Music

Operation **29**

Playing screen indicate your S705 is ready to receive streaming music. You can hear music playing on your S705 if music is playing on the device.



When only a handsfree phone connection is established (no streaming music connection), the Radio Idle screen displays.




The Phone Connected () icon displays.

From the Idle screens, the text **-Connected-** displays when there is a Bluetooth connection.



30 Operation

No Bluetooth Connection

If no Bluetooth device connections are established, your S705 remains in Bluetooth discoverable mode for 3 minutes.

During this period, you can access menus (and cancel discoverable mode) by pressing the  button. Otherwise, when the discoverable mode times out, your S705 automatically turns off.

Reestablishing Handsfree Connection

You can reestablish a handsfree connection with your phone by pressing and holding the  button a few moments until you hear a low audio tone. When reconnected, the Phone Connected () icon displays.

Operation **31**

When reconnecting while on a call, audio is transferred from your phone to your S705.

Operating Your S705

A combination of the display panel (status indicators, menus, and operational text) and controls (buttons and navigation joystick) are used to operate your S705.

 









Status Indicators

Your S705 displays graphical icons to indicate status of battery, music streaming, and Bluetooth connections.



32 Operation


The following indicators are displayed for status:


Indicator	Indicates
	Battery charge level
	Battery charge low
	Battery charging
	Phone connected (Handsfree connection)
	Streaming music connected (A2DP connection)
PLAY 	Streaming music playing
PAUSE 	Streaming music paused
STOP 	Streaming music stopped
	FM radio playing
	Keys locked

 
 

Operation **33**

Menus


Your S705 provides menus for performing certain operating and configuring tasks.

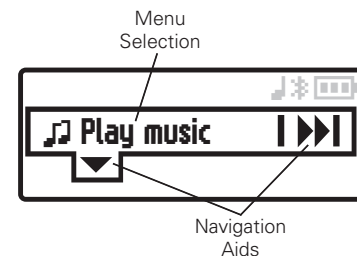

Menus are accessed by pressing the  button. Use the following guidelines for navigating the menus:

- Scroll through menus by moving up or down ( and ) with joystick.
- Make a menu selection by moving right () with joystick.

34 Operation


- Press  button in menu to step backwards (or return to exit menus from top level).

Buttons and Navigation Joystick

Several push buttons and a multi-position navigation joystick allow you to perform tasks with your S705. The actions performed by these controls depend on the screen displayed.

On most screens, a selection box indicates the most logical action to perform.



For example, pressing the  button from the above screen answers the phone.



Operation **35**

Listening to Music

Your S705 allows you to select from multiple paired Bluetooth streaming music sources to listen to music with your headphones.


Selecting Streaming Music Source

To select a Bluetooth streaming music source:


- 1 Press  button to access menus.
- 2 Move down () with joystick until you see the music source to which you want to connect. You see:

 



36 Operation

- 3 Move right () with joystick to select music source. You see:



- 4 Move right () with joystick to connect to source. If you are currently connected to another music source, you see:

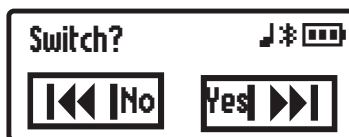


- 5 Move right () with joystick to disconnect from your currently connected music source, and connect to your newly selected

Operation **37**

music source. You see the Music Idle screen:



Note: While disconnecting a streaming music connection, current handsfree connection is also disconnected temporarily. After a few moments, the handsfree connection is reestablished automatically. You can also manually reestablish the handsfree connection by pressing and holding the  button until you hear a low audio tone.

38 Operation

Playing Streaming Music

To play music on your S705 from your selected Bluetooth streaming music source:

- start from your streaming music source,
- select **Play Music** from menus, or
- press ►|| button on joystick from Music Idle screen (shown on page 29).

Note: Not all devices support using the ►|| button on your S705 to play music.

You hear music playing and see the Music Playing screen.



Operation **39**

From the Music Playing screen, you can do the following:

Note: Not all devices support pausing and skipping between songs using your S705.

To do this...	Do this
Pause/resume music	Press ► button. When music is paused, the Music Paused (PAUSE) icon displays.
Change music volume	Move up or down (▲ and ▼) with joystick. When reaching minimum/maximum volume, you hear an audio tone.
Skip to next song	Move right (►) with joystick.

40 Operation

To do this...

Do this

Play previous song
Move left (◀◀) with joystick.

Lock/unlock keys
Press and hold ►|| button.

Note: If locked, keys unlock when on a call. When call ends, keys return to previous locked state.

Make voice dial call
Press ☎ button.
Music is paused.

Note: With some phones, voice dialing cannot be initiated while in music mode.

Operation **41**

To do this...

Do this

Redial last call
Press and hold ☎ button until you hear audio tones.

Music is paused. After a few moments, you hear ringing.

Stop music
Press ≡ button, then move right (►||) with joystick.


Music Idle screen with Music Stopped (STOP ■) icon displays.

Note: Stopping music does not disconnect the streaming music connection with your device.

42 Operation

Deleting Streaming Music Source

You can remove a paired Bluetooth music source from your S705's memory.

- 1 Press  button to access menus.
- 2 Move down (▼) with joystick until you see the music source to which you want to delete.



- 3 Move right (▶) with joystick. You see:

 


Operation **43**

- 4 Move down (▼) with joystick until you see **Delete?**



- 5 Move right (▶) with joystick to delete. You see:

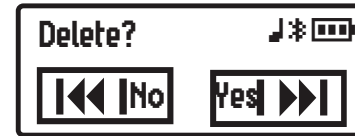

- 6 Move right (▶) with joystick to confirm delete.

44 Operation

Listening to FM Radio

 
Your S705 allows you to listen to FM radio with your headphones.

Playing FM Radio

To listen to FM radio:



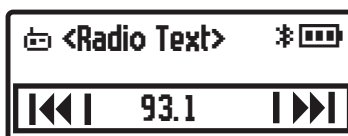


- select **FM Radio** from menus, or
- press  button from Radio Idle screen (shown on page 30).

You hear radio playing and see the Radio Playing screen. On this screen, the radio station and Radio Data System (RDS) text (when supported by radio station) displays.



 Operation **45**

From the Radio Playing screen, you can do the following:

To do this...	Do this
Mute/unmute radio	Press  button. When radio is mute, -Mute- displays.
Change radio volume	Move up or down ( and ) with joystick. Note: When reaching minimum/maximum volume, you hear an audio tone.
Seek station forward	Move and hold right () with joystick.
Seek station backward	Move and hold left () with joystick.

46 Operation

To do this...	Do this
Skip to next station	Move right (▶▶) with joystick.
Skip to previous station	Move left (◀◀) with joystick.
Lock/unlock keys	Press and hold ▶⏸ button. Note: If locked, keys unlock when on a call. When call ends, keys return to previous locked state.
Make voice dial call	Press 📞 button. Radio is muted. When call ends, radio playing is resumed.

Operation 47

phone or touching the keypad) may cause disruption when listening to FM radio. To minimize disruption, place your phone in vibrate or silent mode.

Making and Receiving Calls

Your S705 allows you to make and receive phone calls from your Bluetooth phone.

Note: Some features are phone/network dependent.

Making a Voice Dial Call

Note: To make a voice dial call, your phone must support voice dial features.

Press 📞 button and speak name of person to call. Name is repeated over headphones and phone number is

Operation 49

To do this...	Do this
Redial last call	Press and hold 📞 button until you hear audio tones. Radio is muted. After a few moments, you hear ringing. When call ends, radio playing is resumed.
Turn radio off	Press ☰ button, then move right (▶▶) with joystick.

Note: When using the FM radio, your S705 remembers the last radio station you listened to.

Note: Audio tones generated by your phone (such as when opening the

48 Operation

diald. If music/radio is playing, it is paused/muted. You see:



Once connected, the On a Call screen displays.



Making a Handset Dial Call

- 1 Dial the phone number using the phone handset. You hear touch tones over your headphones. (If music/radio is playing, it is paused/muted).

50 Operation

- 2 Press Send button on the phone. Ringing is heard over headphones. You see:



Once connected, the On a Call screen displays.



Making a Call Using Last Dialed Phone Number

 
Press and hold **C** button. If music/radio is playing, it is paused/muted. After a few moments, ringing is heard over

Operation **51**

headphones and phone number is dialed. You see:



Once connected, the On a Call screen displays.

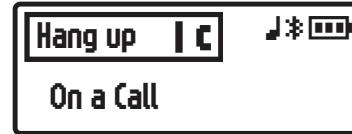

Receiving a Call

When an incoming call is active, the following displays.



52 Operation

Note: Caller ID displays phone number or contact name (depending on phone).

Answering a Call

To answer an incoming call, press **C** button. If music/radio is playing, it is paused/muted.

 
If you are currently on a call, answering a second call will place first call on hold.

Once connected, the following On a Call screen displays when one call is connected.



Operation **53**

When two calls are connected, the following On Call 2 screen displays.

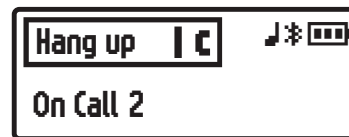

Rejecting/Ignoring a Call



To ignore an incoming call, press **≡** button.

Performing In-Call Actions


While on a call, you can do the following:

To do this...	Do this
Mute / unmute a call	Press ▶ button. When call is muted, -Mute- displays.

54 Operation

To do this...	Do this
Change the call volume	Move up or down (▲ and ▼) with joystick.
Answer a second incoming call	Press  button. First call is placed on hold.
Reject a second incoming call	Press  button.
Switch between two active calls	If first call is active, move right (▶▶) with joystick to switch to second call. If second call is active, move left (◀◀) with joystick to switch to first call.


Operation **55**

To do this...	Do this
End a call	Press  button. If music/radio was playing before call, it resumes. If two calls were connected, the other call becomes active.


Locking/Unlocking Keys

You can lock/unlock your S705's keys to avoid inadvertent key presses when playing music or listening to the radio.

56 Operation

To lock your S705's keys, press and hold  button until you see the Lock screen.



This screen displays a few seconds, then redisplay the operating screen. To unlock your S705's keys, press and hold  button again until you see a similar Unlock screen.


When keys are locked and not on a call, you can answer/ignore a call or unlock your S705. While on a call, however, keys are not locked. When the call is ended, your S705 returns to its previous state (locked or unlocked).

Operation **57**

Customize

 
This section provides instructions for customizing operations for your S705.

Setting Language

- 1 Press  key to access menus.
- 2 Move down (▼) with joystick until you see the following.




- 3 Move right (▶▶) with joystick to select.

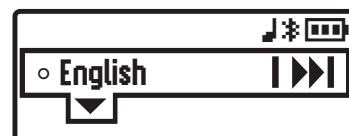

58 Customize

- 4 Move up or down (▲/ ▼) with joystick to scroll to desired language.
- 5 Move right (▶▶) with joystick to select language.

Putting S705 in Bluetooth Discoverable Mode

 
- 1 Press  key to access menus.
- 2 Move down (▼) with joystick until you see the following.



- 3 Move right (▶▶) with joystick.

Customize **59**

If S705 is currently connected to a Bluetooth device, you see:

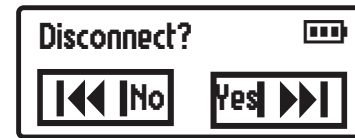

Move right (▶▶) with joystick to disconnect current Bluetooth connection. Your S705 is placed in Bluetooth discoverable mode:



Your S705 remains in Bluetooth discoverable mode for 90 seconds.

Notes: For details on pairing and connecting your S705 with Bluetooth devices, see "Pairing Your S705 With Your Bluetooth Device(s)" on page 15.

60 Customize

Troubleshoot

Problem	Solution
Streaming music frequently drops out when both handsfree and streaming music connections are active	<ol style="list-style-type: none"> 1 Place music device closer to your S705. 2 Power off, then power on your S705. 3 Disconnect the Handsfree connection from phone.

Troubleshoot **61**

Problem	Solution
S705 has unexpectedly stopped working	<p>Reset your S705 as follows:</p> <ol style="list-style-type: none"> 1 Move up ▲ and hold with joystick. 2 Plug charger into charger port. 3 Plug other end of charger into an electrical outlet. <p>Your S705 restarts.</p>

 
62 Troubleshoot

European Union Directives Conformance Statement



Hereby, Motorola declares that this product is in compliance with:

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

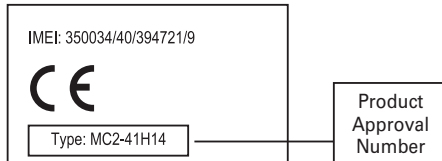

The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at www.motorola.com/rtte. To find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the Web site.

European Union Directives **63**

Caring for the Environment by Recycling



This symbol on a Motorola product means the product should not be disposed of with household waste.

Recycling Mobile Phones and Accessories

Do not dispose of mobile phones or electrical accessories, such as chargers or headsets, with your household waste. In some countries or regions, collection systems are set up to handle electrical and electronic waste items. Contact your regional authorities for more details. If collection systems aren't available, return unwanted mobile phones or electrical accessories to any Motorola Approved Service Centre in your region.

64 Caring for Environment

Safety and General Information

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION. READ THIS INFORMATION BEFORE USING YOUR DEVICE.

Approved Accessories

Use of accessories not approved by Motorola, including but not limited to batteries, antennas, and convertible covers, may cause your mobile device to exceed RF energy exposure guidelines and may void your mobile device's warranty. For a list of approved Motorola accessories, visit our Web site at: www.motorola.com.

Electromagnetic Interference/Compatibility

Note: Nearly every electronic device is susceptible to electromagnetic interference (EMI) if inadequately shielded, designed, or otherwise configured for electromagnetic compatibility.

Safety and General Information **65**

Facilities

Turn off your mobile device in any facility where posted notices instruct you to do so. These facilities may include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

Aircraft

When instructed to do so, turn off your mobile device when on board an aircraft. Any use of a mobile device must be in accordance with applicable regulations per airline crew instructions.

Medical Devices

Hearing Aids

Some mobile devices may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer or physician to discuss alternatives.





 


Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

66 Safety and General Information

Batteries and Chargers

Your battery, charger, or mobile device may contain symbols, defined as follows:

Symbol	Definition
	Important safety information follows.
	Do not dispose of your battery or mobile device in a fire.
	Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Do not throw your battery or mobile device in the trash.
	Your mobile device contains an internal lithium ion battery.
	Do not let your battery, charger, or mobile device get wet.
	Listening at full volume to music or voice through a headset may damage your hearing.

Safety and General Information **67**

- **Position your mobile device within easy reach.** Be able to access your mobile device without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.
- **Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.** Rain, sleet, snow, ice, and even heavy traffic can be hazardous.
- **Do not take notes or look up phone numbers while driving.** Jotting down a "to do" list or going through your address book takes attention away from your primary responsibility—driving safely.
- **Dial sensibly and assess the traffic; if possible, place calls when your car is not moving or before pulling into traffic.** If you must make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- **Do not engage in stressful or emotional conversations that may be distracting.** Make people you are talking with aware you are driving and suspend conversations that can divert your attention away from the road.

Smart Practices While Driving **69**

Smart Practices While Driving

Drive Safe, Call Smart SM

Check the laws and regulations on the use of mobile devices and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas. Go to www.motorola.com/callsmart for more information.

Your mobile device lets you communicate by voice and data—almost anywhere, anytime, wherever wireless service is available and safe conditions allow. When driving a car, driving is your first responsibility. If you choose to use your mobile device while driving, remember the following tips:

- **Get to know your Motorola mobile device and its features such as speed dial and redial.** If available, these features help you to place your call without taking your attention off the road.
- **When available, use a handsfree device.** If possible, add an additional layer of convenience to your mobile device with one of the many Motorola Original handsfree accessories available today.



68 Smart Practices While Driving

- **Use your mobile device to call for help.** Dial 911 or other local emergency number in the case of fire, traffic accident, or medical emergencies.*
- **Use your mobile device to help others in emergencies.** If you see an auto accident, crime in progress, or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.*
- **Call roadside assistance or a special non-emergency wireless assistance number when necessary.** If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.¹

1. Wherever wireless phone service is available.

70 Smart Practices While Driving

Industry Canada Notice to Users

Operation is subject to the following two conditions: (1) This device may not cause interference and (2) This device must accept any interference, including interference that may cause undesired operation of the device. See RSS-GEN 7.1.5.

determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Notice To Users

Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

If your mobile device or accessory has a USB connector, or is otherwise considered a computer peripheral device whereby it can be connected to a computer for purposes of transferring data, then it is considered a Class B device and the following statement applies:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be

Motorola Limited Warranty for the United States and Canada

What Does This Warranty Cover?

Subject to the exclusions contained below, Motorola, Inc. warrants its telephones, pagers, messaging devices, and consumer and professional two-way radios (excluding commercial, government or industrial radios) that operate via Family Radio Service or General Mobile Radio Service, Motorola-branded or certified accessories sold for use with these Products ("Accessories") and Motorola software contained on CD-ROMs or other tangible media and sold for use with these Products ("Software") to be free from defects in materials and workmanship under normal consumer usage for the period(s) outlined below. This limited warranty is a consumer's exclusive remedy, and applies as follows to new Motorola Products, Accessories and Software purchased by consumers in the United States or Canada, which are accompanied by this written warranty:

Products and Accessories

Products Covered	Length of Coverage
Products and Accessories as defined above, unless otherwise provided for below.	One (1) year from the date of purchase by the first consumer purchaser of the product unless otherwise provided for below.
Decorative Accessories and Cases. Decorative covers, bezels, PhoneWrap™ covers and cases.	Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.
Monaural Headsets. Ear buds and boom headsets that transmit mono sound through a wired connection.	Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.
Consumer and Professional Two-Way Radio Accessories.	Ninety (90) days from the date of purchase by the first consumer purchaser of the product.

Motorola Limited Warranty **75**

Use of non-Motorola Products and Accessories. Defects or damage that result from the use of Non-Motorola branded or certified Products, Accessories, Software or other peripheral equipment are excluded from coverage.

Unauthorized service or modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, or its authorized service centers, are excluded from coverage.

Altered products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola housings, or parts, are excluded from coverage.

Communication services. Defects, damages, or the failure of Products, Accessories or Software due to any communication service or signal you may subscribe to or use with the Products Accessories or Software is excluded from coverage.

Motorola Limited Warranty **77**

Products Covered	Length of Coverage
Products and Accessories that are Repaired or Replaced.	The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.

Exclusions

Normal wear and tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.

Abuse & misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of Motorola, are excluded from coverage.

76 Motorola Limited Warranty

Software

Products Covered	Length of Coverage
Software. Applies only to physical defects in the media that embodies the copy of the software (e.g. CD-ROM, or floppy disk).	Ninety (90) days from the date of purchase.

Exclusions

Software embodied in physical media. No warranty is made that the software will meet your requirements or will work in combination with any hardware or software applications provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.

Software NOT embodied in physical media. Software that is not embodied in physical media (e.g. software that is downloaded from the Internet), is provided "as is" and without warranty.

Who is Covered?

This warranty extends only to the first consumer purchaser, and is not transferable.

78 Motorola Limited Warranty

What Will Motorola Do?

Motorola, at its option, will at no charge repair, replace or refund the purchase price of any Products, Accessories or Software that does not conform to this warranty. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products, Accessories or parts. No data, software or applications added to your Product, Accessory or Software, including but not limited to personal contacts, games and ringer tones, will be reinstalled. To avoid losing such data, software and applications please create a back up prior to requesting service.

How to Obtain Warranty Service or Other Information

USA	Phones 1-800-331-6456 Pagers 1-800-548-9954 Two-Way Radios and Messaging Devices 1-800-353-2729
Canada	All Products 1-800-461-4575

Motorola Limited Warranty **79**

OF THE PURCHASE PRICE OF THE PRODUCT, ACCESSORY OR SOFTWARE, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, SOFTWARE OR APPLICATIONS OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS, ACCESSORIES OR SOFTWARE TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one jurisdiction to another.

Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted Motorola software such as the exclusive rights to reproduce and distribute copies of the Motorola software. Motorola software may only be copied into, used in, and redistributed with, the Products associated with such Motorola software. No other use, including without limitation disassembly of such Motorola software or exercise of the exclusive rights reserved for Motorola, is permitted.

Motorola Limited Warranty **81**

TTY	1-888-390-6456
For Accessories and Software , please call the telephone number designated above for the product with which they are used.	

You will receive instructions on how to ship the Products, Accessories or Software, at your expense, to a Motorola Authorized Repair Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider, if applicable; (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number.

What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS

80 Motorola Limited Warranty

Product Registration

Online Product Registration:

direct.motorola.com/hellomoto/Motosupport/source/registration.asp

Product registration is an important step toward enjoying your new Motorola product. Registering helps us facilitate warranty service, and permits us to contact you should your product require an update or other service. Registration is for U.S. residents only and is not required for warranty coverage.

Please retain your original dated sales receipt for your records. For warranty service of your Motorola Personal Communications Product you will need to provide a copy of your dated sales receipt to confirm warranty status.

Thank you for choosing a Motorola product.

82 Product Registration

Export Law Assurances

This product is controlled under the export regulations of the United States of America and Canada. The Governments of the United States of America and Canada may restrict the exportation or re-exportation of this product to certain destinations. For further information contact the U.S. Department of Commerce or the Canadian Department of Foreign Affairs and International Trade.

Export Law Assurances **83**

reestablishing handsfree connection
31

C

call

- adjusting volume 55
- answering 53
- answering second incoming 55
- ending 56
- making handset dial 50
- making voice dial 49
 - while listening to FM radio 47
 - while playing music 41
- muting/unmuting 54
- redialing last number 51
 - while listening to FM radio 48
 - while playing music 42
- rejecting 54
- rejecting a second incoming 55
- switching between 55

charging battery 12

Index **85**

Index

A

- Advanced Audio Distribution Profile (A2DP) 10
- answering a call 53
- answering a second incoming call 55
- attaching
 - neck strap 25
 - shirt clip 23
- Audio Video Remote Control Profile (AVRCP) 10

B

- Bluetooth
 - connecting to devices 29
 - pairing with devices 15
 - putting in discovery mode 59

84 Index

connecting headphones 27

D

- deleting music source from memory 43

E

- ending a call 56

F

- FM radio
 - adjusting volume 46
 - locking/unlocking keys while listening 47
 - making voice dial call while listening 47
 - muting and unmuting 46
 - playing 45
 - redialing last call while listening 48
 - seeking station backward 46
 - seeking station forward 46

86 Index

skipping to next station 47
skipping to previous station 47

H

Handsfree Profile (HFP) 10

I

icons (status indicators) 32

K

keys
locking and unlocking 41, 47, 56

L

locking/unlocking keys 56

M

making voice dial call 49
menus 34
music

Index **87**

adjusting volume 40
deleting music source from memory
43
locking/unlocking keys while playing
41
making voice dial call while playing
41
pausing/resuming 40
playing 39
playing previous song 41
redialing last number while playing
music 42
selecting source 36
skipping to next song 40
muting and unmuting
call 54
FM radio 46

N

neck strap 25

88 Index

O

overview 7

P

pairing with Bluetooth devices 15
pausing music 40
playing
FM radio 45
music 39

R

reestablishing handsfree phone
connection 31
rejecting a call 54
rejecting a second incoming call 55
resuming music 40

S

safety tips 68
selecting

Index **89**

FM radio station 46
music source 36
song 40
selecting display language 58
shirt clip 23
skipping to next song 40
switching between two calls 55

T

turning on/off 28

V

volume
adjusting call 55
adjusting FM radio 46
adjusting music 40

90 Index

motorola.com