


Nokia Sport Headset (HS-29 and AD-45)

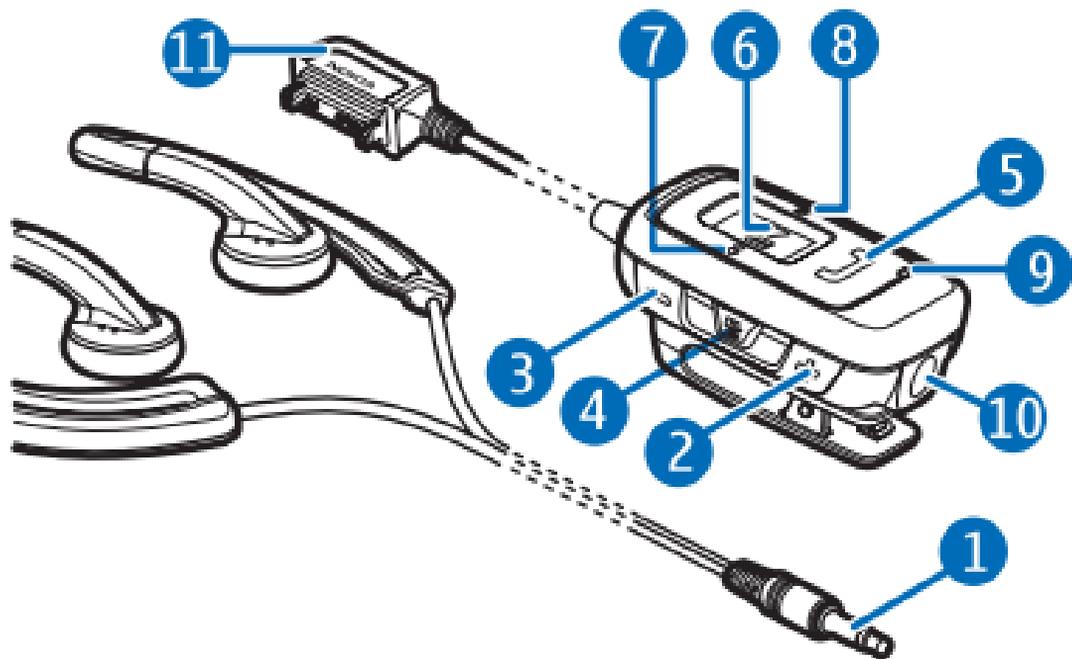

9250252/1

DECLARATION OF CONFORMITY

We, NOKIA CORPORATION declare under our sole responsibility that the products HS-29 and AD-45 are in conformity with the provisions of the following Council Directive: 1999/5/EC. A copy of the Declaration of Conformity can be found at http://www.nokia.com/phones/declaration_of_conformity/.



The crossed-out wheeled bin means that within the European Union the product must be taken to separate collection at the product end-of-life. Do not dispose of these products as unsorted municipal waste.

© 2006 Nokia. All rights reserved.

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

Nokia, Nokia Connecting People and Pop-Port are registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall Nokia be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.

The availability of particular products may vary by region. Please check with the Nokia dealer nearest to you.

Export Controls

This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.



Note: Parts of the headset are magnetic. Metallic materials may be attracted to the headset. Do not place credit cards or other magnetic storage media near the headset, because information stored on them may be erased.

Water-resistance

- You can use this device, with the supplied headphones, in the rain, but do not submerge it in water. If you use alternative headphones, the device may not be water-resistant.

- If the device or the Pop-Port connector has been exposed to sweat or salt water, wash it immediately with freshwater to avoid corrosion. The device must be carefully wiped dry.

Get started

Insert the plug of the HS-29 headphones (see part 1 on the title page) into the connector on the AD-45 control unit (10). Insert the Pop-Port™ plug (11) into the Pop-Port connector on your compatible phone. The headset is now ready for use.



Warning: When using the headset your ability to hear outside sounds may be affected. Do not use the headset where it can endanger your safety.

Adjust the earpiece volume

Use the plus and minus keys on the side of the device (2 and 3) to increase or decrease the volume.

Call handling

To make a call, use your phone in the normal way when the device is connected to your phone. During the call, speak into the microphone (9) of the device.

If your phone supports voice dialing, press and hold the call key (5), and proceed as described in the user guide of your phone.

To answer an incoming call, press the call key, or use the phone keys. To reject an incoming call, press the call key twice.

To end a call, press the call key, or use the phone keys.

Listen to music

You can use the headset to listen to music on your compatible phone.



Warning: Listen to music at a moderate level. Continuous exposure to high volume may damage your hearing.

To play a track, select it in the music player of your phone, and press the play/pause key (6). See the user guide of your phone for details.

To select the next track, press the fast forward key (7). To select the previous track, press the rewind key (8). To scroll through the tracks quickly during playback, press and hold either key.

To pause or restart the music player, press the play/pause key.

Listen to the radio

To listen to the FM radio, start the radio feature of your phone. See the user guide of your phone for details. To search for a previously saved radio channel, press the fast forward or rewind key repeatedly.

Push to talk calls

You can use the push to talk key (4) of the headset in the same way as the push to talk key on your compatible phone. For more information, see the user guide for your phone.

Care and maintenance

Your device is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you protect your warranty coverage.

- Keep all accessories and enhancements out of the reach of small children.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.

- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.

If the headset is not working properly, take it to the nearest authorized service facility for service.