


# Wireless Telephone Quick Reference Guide

## Mitel SX50/200/2000 Superset 420

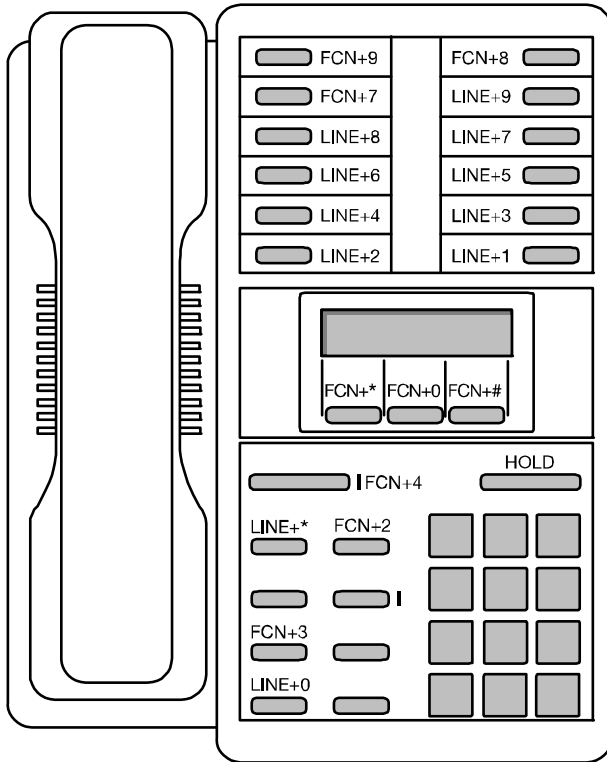


### Superset 420

The diagram above shows how the Superset 420 keypad corresponds to the Wireless Telephone.

The Wireless Telephone user will press **LINE** then **1-9** to access Line Select Keys 1-9. Press **LINE** then **\*** to access the Superkey functions.

**FCN** followed by **\*** on the Wireless Telephone is equivalent to using the left softkey, **FCN 0** equals the middle softkey, and **FCN #** equals the right softkey.

Function Key Strokes	Default Settings	Fill In Your Feature Settings
FCN + 1	MUTE	
FCN + 2	XFER/CONF	
FCN + 3	REDIAL	
FCN + 4	MSG	
FCN + 7		
FCN + 8		
FCN + 9		
FCN + *	Left Softkey	
FCN + 0	Center Softkey	
FCN + #	Right Softkey	
FCN + *	Superkey	
LINE + 0	CANCEL	

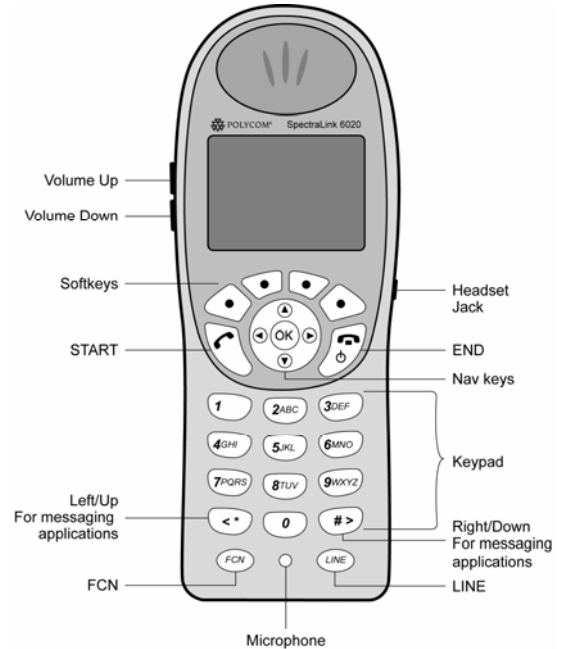

### SpectraLink 6020 Wireless Telephone

- On/Off** Press and hold **END**. Two chirps on, one chirp off
- Make a call** Press **START** to get dial tone.
- Hang up** Press **END**. Be sure to do this at the end of each call.
- Answer call** Press **START**. Line indicator comes on steady when the call is answered.
- Answer second call** Press **HOLD** to put your current call on hold, or **END** to hang up. Press **LINE** + the digit that is flashing.
- Hold** Press **HOLD**
- Take off Hold** Press **LINE** followed by the digit for the line on hold, which will be flashing.
- Mute On/Off** Press the **MUTE** softkey.
- Function** Pressing **FCN** while off hook allows you to scroll through menu screens.
- User Options** Press the **CFG** softkey while on hook to change handset settings.

For information on Battery Pack charging and setting user preferences, see the Wireless Telephone User Guide.

