




User manual / guide de l'utilisateur

RC65i

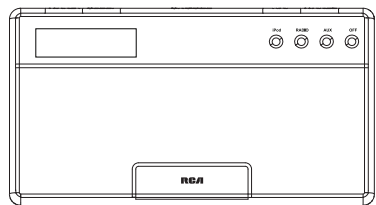

EN/F

It is important to read this user manual prior to using your new product for the first time.

For your records: In the event that service should be required, you may need the model number and the serial number.

"Made for iPod" means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards.

"Works with iPhone" means that an electronic accessory has been designed to connect specifically to iPhone and has been certified by the developer to meet Apple performance standards.

Technical information: Product: Clock Radio, Brand: RCA, Model: RC65i

Electrical consumption: Power Supply: 120V ~ 60Hz, Power Consumption: 15 Watts

iPhone is a trademark of Apple Inc.

iPod is a trademark of Apple Inc., registered in the U.S. and other countries.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

FCC information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Manufacturer/Responsible Party: Audiovox Electronics Corp., 150 Marcus Blvd., Hauppauge, NY 11788

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE. Includes 'CAUTION RISK OF ELECTRIC SHOCK' and 'DANGER' icons with instructions.

Before you begin

- Plugging in for power: Insert the plug of the unit into an AC power outlet. AC OUTLET POWER SUPPLY: 120V-60HZ.

- To install or replace the batteries: 1. Remove battery compartment door (located at the bottom of the radio) by applying thumb pressure to the tab on battery door...

Refer to the "Clock" section and follow the instructions to get the clock time shown correctly with the Auto Clock set feature.

Battery back-up operation

This clock radio is equipped with a memory holding system that can be powered with 2 "AA" batteries (included and installed).

Power failure indicator: When external DC power is interrupted (disconnected) for a short period of time, both time and alarm settings will change (unless batteries are installed).

IMPORTANT SAFETY INSTRUCTIONS: Only use attachments/accessories specified by the manufacturer. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer. When a cart is used, use caution when moving the car/appliance combination to avoid injury from tip-over.

- ADDITIONAL SAFETY INFORMATION: Main plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.

General controls

Diagrams showing Front view, Top view, and SLEEP/NAP/SNOOZE/VOL controls. Includes labels for Display, Sound source selection, Off (standby mode), AM loop antenna socket, and Universal dock for iPod.

Clock

Auto clock set: You do not have to set the clock time as a built-in automatic time set system is equipped in this clock powered by 2 AA batteries (included and installed).

- To get the clock time shown correctly: 1. Plug for power: Insert the plug of the unit into an AC power outlet.

- 2. Select daylight saving: Press and hold DST on the top of the unit to turn on/off in areas observing/not observing such time change.

WARNING: Please avoid playing with these buttons after entering the Clock/Alarm set mode.

Setting clock manually: In case the memory holding batteries are accidentally removed, set the clock manually as below:

- 1. Press SET on the top of the unit until the clock setting icon flashes on the display.

US time zones



Canadian time zones



Your clock is now set and ready for use.

iPod/iPhone

- To control the playback: During playback, press iPod to pause the playback and press again to resume.

- To charge the iPod/iPhone: You may charge the battery of your iPod/iPhone through the universal dock for iPod when the unit is turned off (standby mode) or in the AUX, Radio (FM band only) or iPod mode.

Auxiliary source

- To select auxiliary mode: 1. Connect your auxiliary source (e.g. mp3 player) to the AUX input jack on the top of the unit with an audio cable (not supplied).

- Adjust the auxiliary player to mid-range volume and adjust the master volume on the unit. Do not turn the volume of the auxiliary player too high as this may affect the sound quality.

Wake function

Set wake time

- 1. Press SET on the top of the unit until a WAKE 1 icon flashes on the display.

a wake mode. Corresponding icon lights on the front of the unit. Wake time 1 by alarm icon. Wake time 1 by iPod/iPhone icon.

- 2. Press << or >> on the top of the unit to set the wake time. The time decrements or increments follow by a faster rate when you press and hold the button.

If Waking to Alarm (A) is selected: Wake to Alarm uses GRAD-U-WAKE, a gentle increase to the maximum alarm tone volume over 30 to 45 seconds.

If Waking to RADIO (R) is selected: Select a desired wake up radio channel (refer to "Listening to the radio").

Select the wake source

- You may be woken up by the alarm, radio, or music from iPod/iPhone. 1. Set a wake time (refer to the above instructions).

2. Press WAKE 1 or WAKE 2 to select

Radio

Listening to the radio

- To turn on or off radio: 1. Press RADIO on the front of the unit to turn on the radio.

AM Antenna: For AM reception, connect the AM antenna loop to the back of the radio. Stretch out the antenna cord to its fullest length and rotate the antenna for better reception.

Station presets

- To store a station as preset: 1. Tune to a radio station.

Antenna built-in AFC

The Built-in Automatic Frequency Control (AFC) works only on FM. It helps reducing drift on FM reception and keeping the radio locked in on the FM station to which it is tuned.

iPod/iPhone

Listening to iPod/iPhone

- To connect iPod/iPhone: 1. Push the universal dock for iPod on the front of the unit to open it.

- If no iPod/iPhone is connected in the iPod mode, the unit will exit the iPod mode and turn off automatically.

Table with 2 columns: Models and Adapters. Lists models like iPhone 4 GB, 8 GB, and 16 GB and their corresponding adapters.

- For the latest iPod/iPhone models, please use the adapter provided with your iPod/iPhone.

To select iPod mode:

- Press iPod on the front of the unit to select the iPod mode.

Sleep function

In the sleep mode, the radio, iPod or AUX mode turns off automatically.

- To set the sleep time: 1. Press SLEEP repeatedly to cycle among the sleep time available (90min, 60min, 30min, 15min and OFF. 90min is the default setting).

- To listen to the auxiliary player: If an auxiliary player (e.g. mp3 player) is connected, press AUX to select AUX mode and start playback on your auxiliary player.

- To change or check the remaining time in sleep mode: Press SLEEP once to check the remaining sleep time. Press SLEEP repeatedly to select another sleep time.

- To cancel the sleep mode: If you decide to turn off the unit sooner, press SNOOZE, OFF or press SLEEP repeatedly to select "OFF".

NAP function

For catsnaps up to 2 hours without disturbing the regular alarm settings, the NAP function wakes you up after a short period of time.

- Only alarm tone is available in the NAP mode. To check the remaining NAP time: Press NAP once to show briefly the NAP time left.

- To set the NAP time: 1. Press NAP repeatedly to cycle among the NAP time available (10min, 20min, 30min, 60min, 90min, 120min and OFF. 20min is the default setting).

Display brightness

Press BRIGHTNESS to dim the display and press again to restore to the original brightness level.

Warranty information

12 Month Limited Warranty Applies to RCA Audio/Video Products

- AUDIOVOX ELECTRONICS CORP. (the Company) warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced with a reconditioned product (at the Company's option) without charge for parts and repair labor.

DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you.

PERSONAL CONTENT OR DATA ON THE RETURNED DEVICE. Product returns with factory default settings, and without any pre-loaded content which may have been installed in the originally purchased products. Consumer will be responsible for reloading data and content. Consumer will be responsible to restore any personal preference settings.

Pay any charges billed to you by the Exchange Center for service not covered by the warranty. A new or refurbished unit will be shipped to you freight prepaid.

What we will do: Provide you with a new, or at our option, a refurbished unit. The exchange unit is under warranty for the remainder of the original product's warranty period.

Audiovox Electronics Corp. Attn: Service Department. 150 Marcus Blvd. Hauppauge N.Y. 11788 1-877-833-3491