

VXI LIMITED WARRANTY

1. VXI warrants that your CP150 headset will be free from defects in material and workmanship for ninety (90) days from the date of purchase. If, during the first ninety days from the date of purchase, your CP150 headset fails to work due to a defect in material or workmanship, VXI will repair or replace the product, at its election, free of charge. Without proof of purchase, the warranty period begins on the date of manufacture.
2. The foregoing limited warranty does not cover equipment failure attributable to accident, improper operation, misuse, abuse, or any cause other than defects in the materials or workmanship of VXI's products.
3. VXI's obligations under this warranty are limited to repair or replacement (at our option) of any defective part returned to VXI, freight prepaid. Returned products require a Return Authorization that may be obtained by calling customer service at 1-800-742-8588.
4. THIS LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Some jurisdictions do not permit the exclusion of implied warranties and the foregoing exclusions may not apply to you.
5. In no event shall VXI be responsible for any other damages whatsoever, including direct, indirect, special, incidental, consequential, or other damages for breach of this or any other warranty, express or implied.
6. Products returned to VXI for in-warranty, freight prepaid and with proper Return Authorization, will be return shipped to the customer at VXI's expense.

For customer service, please call:

VXI Corporation
1-800-742-8588 or 603-742-2888

Technical support is available on our web site at: www.vxiparrott.com

vxiparrott CP150 HEADSET

For cordless or mobile phones



VXI CORPORATION
One Front Street, Rollinsford, NH 03869
603-742-2888 Toll free 1-800-742-8588
e-mail: info@vxiparrott.com website: www.vxiparrott.com

 
COMPONENTS

1. Adjustable headband
2. T-Bar
3. Receiver (Speaker)
4. Flexible microphone boom
5. Noise canceling microphone
6. 2.5mm connector
7. Rotation point




2. CHOOSE A SIDE FOR THE MICROPHONE AND ADJUST HEADBAND

Determine which side of your head you prefer to locate the microphone. The microphone rotates up and over to place the microphone on the chosen side. The speaker also rotates to adjust the cord if necessary. Slide headband in or out of the side support for best fit.

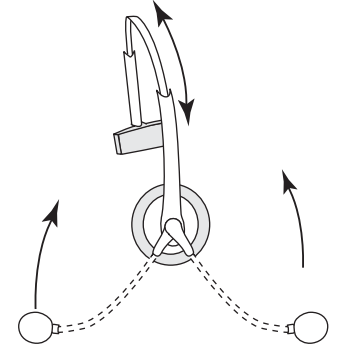

3. MICROPHONE ADJUSTMENT

 Position the microphone so it is located one finger-width from the corner of your mouth just below your bottom lip. The microphone has the word TALK or a painted dot embossed or printed on it (under the cushion). Be sure that this mark is facing your mouth.




"TALK" or a painted dot

OPERATION

1. CONNECT HEADSET TO YOUR CORDLESS OR MOBILE PHONE

For cordless or mobile phones with a compatible 2.5mm jack, insert the 2.5mm plug directly into the headset jack on the phone.

 For mobile phones requiring an adapter, insert the 2.5mm plug into the headset jack on the adapter.

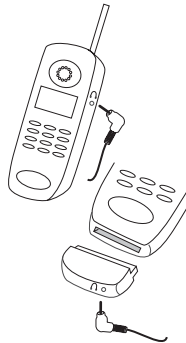

For customer assistance, please call VXi at 1-800-742-8588 or visit our website at www.vxiparrott.com.