X-Micro MP3 Player FM RADIO EARPHONE USERS MANUAL



Features:

- 1. This product can not only work as a general earphone, but as a FM auto frequency modulation radio
- 2. Can freely work on MP3/PC/CD PLAYER/Walkman and other device, used as general earphone
- 3. The radio auto frequency modulation, auto search and lock. And excellent Hi-Fi sound
- 4. Simple operation, single hand can complete operation.
- 5. Low power cost, one CR2032 standard fastener battery, can work 20 hours on discontinuity working mode

INSTRUCTIONS:

(1)Radio function:

- 1. insert the battery rightly and turn on the power switch;
- 2. Push RESET key, the radio will auto run in min frequency mode;
- 3. push SCAN key, the radio will auto search program then locked. Push SCAN again, the radio will search in higher frequency.
 - When the radio in 108MHz and have no information, you must push the RESET key and research again.
- 4. turn the power switch off, the radio turned off
- (2) General earphone function:
- 1. The 3.5mmDC jack can direct insert into Mp3/PC/CD player, walkman and other audio

output device used as a general earphone

2. When you use this radio as general earphone in MP3player, you must turn off the radio

power.

REPLACE BATTERY:

When you can't hear the most program clearly, you must replace a new CR2032 battery

1. Take the battery lid off (see illustration).

2. Take out the used battery and replace the new one.

3. Put on the battery lid

NOTICE:

1. The radio only can use one CR2032 battery.

2. If you don't use the radio, please turn off the power switch. And if you don't use in a long time,

please take out the battery.

3. This product must be away from moisture and dust to protect electronic circuit and component.

4. Quality assurance are not include non-properly operation.

SPECIFICATION:

1. working voltage:DC2V~3V

(battery:CR2032)

2. Working current:8mA~11mA

3. Working frequency:

87.5MHz~108MHz

4. Radio mode: FM

5. Tune mode: auto search

6. Volume output: Hi-Fi sound