

Enclosed you will find • (1) Wall Mount Control Double-Sided Tape / Screws (for mounting) 12V A23 Battery (installed)

The GE Smart Remote Plus advantage

Any transmitter in the GE Smart Remote Plus

product line is capable of controlling every

Θ,

Ô

Wireless Remote Transmitter

User's Manual



receiver—the ultimate in home convenience Control any number of light fixtures or appliances from up to 150ft* away by choosing the transmitter and receiver combination that best suits your needs.



IMPORTANT! These devices are NOT compatible with devices from other systems You must purchase Smart Remote Plus transmitters and receivers to ensure compatibility.



Expanding your system

The GE Smart Remote Plus devices operate on any of 8 user-settable channels. The channels are easy to set / adjust – with the simple turn of a knob. Set up your GE SmartHome™ by purchasing as many transmitters and receivers as you need. The following table is just one example of how you can configure your Smart Remote Plus system:

Area	СН	Transmitters	Receivers
Bedroom	1	Bedside - Wall Mount Control Entrance - Wall Mount Control	(2) Bedside Lamps - (2) Socket Adapters Corner Torchiere - Indoor Outlet Adapter Overhead Light Fixture - Wall Switch Entertainment System - Indoor Outlet Adapter
Living Room	2	Coffee Table - Timer/Controller Entrance - Wall Mount Control	(2) End Table Lamps - (2) Socket Adapters Overhead Light Fixture - Wall Switch Entertainment System - Indoor Outlet Adapter Christmas Tree - Indoor Outlet Adapter
	3		Window Santa - Indoor Outlet Adapter Lighted Poinsettia - Indoor Outlet Adapter
Basement	4	Entrance - Wall Mount Control	(4) Overhead Can Fixtures - (4) Socket Adapters (2) Fluorescent Fixtures - (2) Indoor Outlet Adapters
Garage	5	Entrance - Wall Mount Control	(2) Fluorescent Fixtures - (2) Outdoor Outlet Adapters Overhead Light Fixture - Wall Switch
Outdoor	6	Foyer- Wall Mount Control Car Keys - Key Chain Remote	Entry Light - Wall Switch Coach Lantern - Wall Switch
	7		Christmas Lights - Outdoor Outlet Adapter Yard Santa - Outdoor Outlet Adapter
Kitchen	8	Entrance - Wall Mount Control	Coffee Maker - Indoor Outlet Adapter

Operating Instructions

1. Find the slot labeled HOUSE CODE on the back of the unit 2. Set the HOUSE CODE to any one of the following settings:



NOTE: Make sure ALL your GE Smart Remote Plus devices have the same HOUSE CODE setting The transmitters WILL NOT control the receivers if they have different HOUSE CODE settings.

IMPORTANT! HOUSE CODES help eliminate interference (devices randomly turn on / off). If you experience interference, change the HOUSE CODE on all your GE Smart Remote Plus

3. Set the CHANNEL by using the knob on front as shown.

NOTE: If you set your Wall Mount Control to CHANNEL 1. the unit can control

IMPORTANT! A transmitter will control a receiver ONLY if they have the same HOUSE CODE and CHANNEL settings.

4. Mountina

NOTE: Mounting the Wall Mount Control on masonry or metal walls may degrade the functional range.

Tape Mountina

A. Make sure surfaces are free of dust, oil and other substances that could affect adhesion. B. Attach the double-sided tape to back of the Wall Mount Control housing. C. Press the tape firmly to the mounting surface.

A. Using a slotted screwdriver, remove the faceplate of the Wall Mount Control.

5. Use the togale button to activate the Wall Mount Control (ON/OFF operation). Make sure to press firmly and for a minimum of 1 second for best results. An indicator lights RED when a sianal is sent.

6. Using any of the receivers set to the same CHANNEL and HOUSE CODE, test the installation by using the ON and OFF buttons.

If your unit does not work properly or if you want additional assistance, please call 1-800-443-4924.

We would be happy to answer ALL of your questions. Visit us on the web at www.GESmartHome.com to download application notes, manuals and to find out more about the GE SmartHomeTM product line!

Specifications

Battery Type Use ONLY A23 (12V) Alkaline

NOTE: The functional range will decrease as the battery wears out so make sure to replace the battery every 6 months for best results.

*Functional range may be adversely affected by one or more of the following factors: weather, radio frequency interference, low transmitter battery and obstructions between the transmitter and receiver.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1. This device may not cause harmful interference, and;

2. This device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

GE is a trademark of the General Electric Company and is used under license to Jasco Products Company LLC, 311 N.W. 122nd Street. Oklahoma Citv. OK 73114. www.jascoproducts.com.

90 DAY LIMITED WARRANTY: Jasco Products Company warrants this product to be free from manufacturing defects for a period of ninety days from the original date of consumer purchase. This warranty is limited to the repair or replacement of this product only and does not extend to consequential or incidental damage to other products that may be used with this unit. This warranty is in lieu of all other warranties express or implied. Some states do not allow limitations on how long an implied warranty lasts or permit the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific rights, and you may also have other rights which vary from state to state. If unit should prove defective within the warranty period, return prepaid with dated proof of purchase to: Jasco Products Company 311 N.W. 122nd Oklahoma City. OK. 73114

transmitters and receivers to a different settina.

any receiver set to CHANNEL 1. If you set your Wall Mount Control to CHANNEL 2, the unit can control any receiver set to CHANNEL 2 ... and so on.

Screw Mounting

B. Place the detached back plate where desired and mark screw locations. C. Insert the mounting screws into the back plate holes and screw into place. D. Replace the Wall Mount Control faceplate.