

Warranty Information

Oreck Corporation warrants the Door Alarm (Model S184) free from defects in material and workmanship under normal, non-commercial use and service. Oreck will remedy any such defects if they appear within one (1) year from date of purchase. This warranty gives you specific legal rights, and you may have other rights, which vary, from state to state.


CAUTION

THE DOOR ALARM IS EXTREMELY LOUD. FOR YOUR SAFETY, NEVER PLACE THE UNIT CLOSE TO YOUR EARS. TO TEST THE ALARM, DIRECT THE UNIT AWAY FROM YOU AT ARMS LENGTH AND ACTIVATE.

DOOR ALARM

BY **ORECK**

Vibration Activated Alarm/Chime

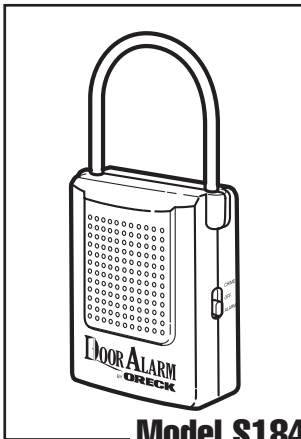

Model S184

Instruction Manual

Register your product on the web at:

WWW.ORECK.COM

OPERATION

- Hang the unit over door knob.
- Turn the unit to alarm or chime mode.
- After about 20 seconds, any vibration to the door detected by the unit will now activate the alarm or chime.

GENERAL DESCRIPTION

Your S184 Door Alarm is used to protect your home from unauthorized entry by detecting vibration to a protected door. It uses a 9 volt battery for operation.

PLEASE KEEP THIS INSTRUCTION MANUAL IN A CONVENIENT PLACE FOR FUTURE REFERENCE.

IMPORTANT

Your S184 Door Alarm can provide valuable protection for your home and property. However, this unit cannot guarantee complete protection against burglary or robbery. Therefore, Oreck will not be held liable for loss, or damages which could occur.

NOTICE TO CONSUMERS: DISCLAIMER OF LIABILITY

When utilized correctly, the "Door Alarm" can effectively increase your personal safety in your home or business. However, Oreck Corp. makes no warranties, representations or guarantees regarding: fitness for intended purpose; or its ability to act as a deterrent to robbery, burglary or other crime against your person or property. Oreck Corp. expressly denies responsibility for any losses, damages, or injuries which may result from use.