

# Quick Connection Guide Using One Touch Dial

For details on operations, refer to the Operating Instructions.


## To begin with

Turn on your Video Communication System, and check the following to ensure that connection is possible.

### When using the LAN

Is the IP address displayed?

**Note:** Connection to a remote party is impossible if neither the IP address nor ISDN telephone number is displayed.

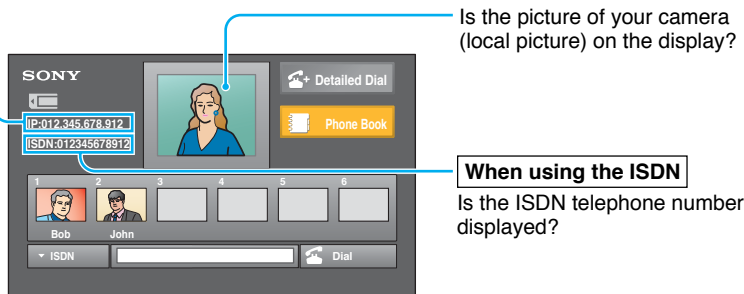

Is the picture of your camera (local picture) on the display?

### When using the ISDN

Is the ISDN telephone number displayed?

## Main indicators that appear during communication

	Controlling a remote camera
	Local microphone is cut off
	Sending a still image
	Receiving a still image
	Sending or receiving an image of a computer
	Receiving data of a whiteboard

## After checking...

## Let's connect


One Touch Dial buttons



↑/↓/←/→ (arrow) buttons

### When six or less One Touch Dials are registered


Press One Touch Dial button 1 to 6 to select the remote party.

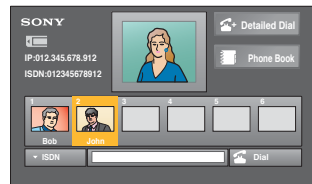


Press.

### When seven or more One Touch Dials are registered

- 1 Press the ↑, ↓, ← or → to select the group.
- 2 Press One Touch Dial button 1 to 6 to select the remote party.

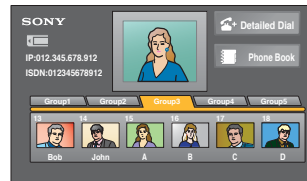


Select a group.

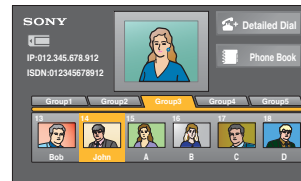

Press.

The system dials automatically, and establishes communication.

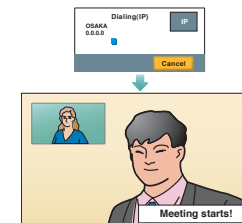

**If the remote party is not registered for One Touch Dial**  
Call a remote party manually, referring to the Operation Guide.  
**If communication cannot be established after a number of trials**  
The line registered for One Touch Dial may not be used. Consult your system administrator.

# Remote Control Guide: Operations available during communication

For details on operations, refer to the Operating Instructions.

## Ending the conference




## Presetting the camera angle

Press button 1 to 6 quickly to move the camera to the preset position. Hold down button 1 to 6 to preset the current camera position.

**Note:** If you press button 1 to 6 quickly when there is no preset setting, the camera moves to the center position.

## Selecting the displayed picture and the camera

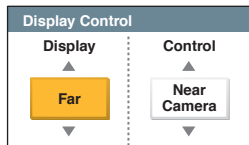


**Display:** Select the "Near" or "Far" picture to be displayed on the display.

**Control:** Select the "Near Camera" or "Far Camera" to be controlled.

## Changing the location of the window picture

Each press of PinP changes the location of the window.

Display

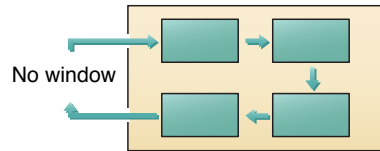


**Note:** The PinP feature is available during communication only.

## Displaying the menu available during communication

 
## Switching the picture on the display

Each press of VIDEO CONF switches the picture.



Picture of the local or remote camera

 Still image transmitted or received




DSB picture or picture received from a whiteboard

**Note:** You can switch among the available pictures only.

## Switching on/off the local microphone

 
## Monitoring the local and remote pictures simultaneously

Press PandP once to enter the PandP mode, and press it again to change the sizes of the pictures.



**Note:** The PandP feature is available during communication only.

## Adjusting the camera zoom

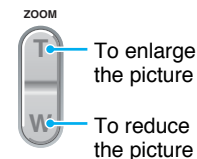

## Adjusting the sound of the remote party

