

HOME THEATRE SYSTEM

HT-DDW665

Speaker Connection

This Speaker Connection explains how to connect the DVD player/video cassette recorder, TV, speakers, and sub woofer so you can enjoy multi channel surround sound from the DVD player/video cassette recorder. For details, refer to the operating instructions supplied with the receiver.

Before you connect the speakers, check the speaker label on the rear panel of the speakers for the model name. Connect the speakers as shown in the illustration at right.

The front and center speakers and the sub woofer are magnetically shielded to allow it to be installed near a TV set. However, as the surround speakers are not magnetically shielded, we recommend that you place the surround speakers slightly further away from TV set.

