
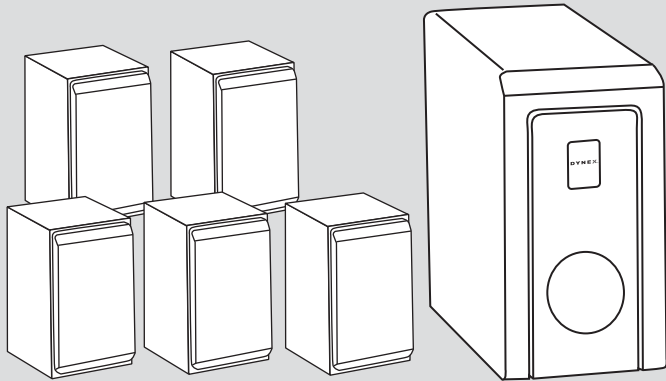
 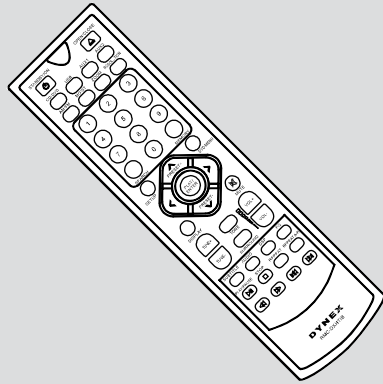


Congratulations on your purchase of a high-quality Dynex product. Your Home Theater System is designed for reliable and trouble-free performance. Use this guide for initial setup of your TV. See your *User Guide* for more information on using your Home Theater System.

### Package contents

- Home theater player
- 5 speakers: left, right, center, left surround, right surround
- Subwoofer
- RCA stereo cable
- Composite video cable
- AM and FM antennas
- Remote control with batteries
- Speaker wire
- *User Guide*
- *Quick Setup Guide*




## Setup Guide | DX-HTIB Home Theater System

### Step 1 Get to know your player


Check out the front and back of your unit to familiarize yourself with button controls and connection options.

#### FRONT

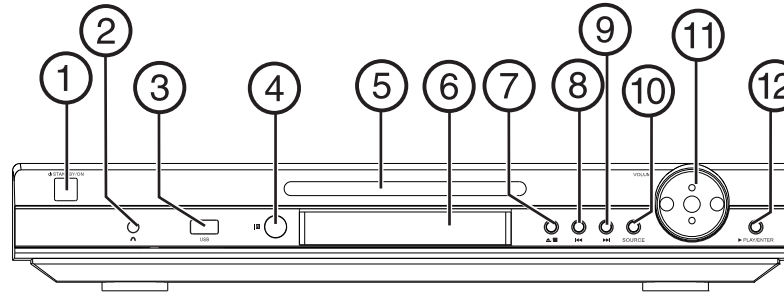

- 1 Standby/On button
- 2 Headphone jack
- 3 USB port
- 4 Remote control sensor
- 5 Disc tray
- 6 Display screen
- 7 ▲ Eject/Stop button
- 8 ◀◀(previous) button
- 9 ▶▶(next) button
- 10 Source
- 11 Volume knob
- 12 ▶ PLAY/ENTER button


#### BACK

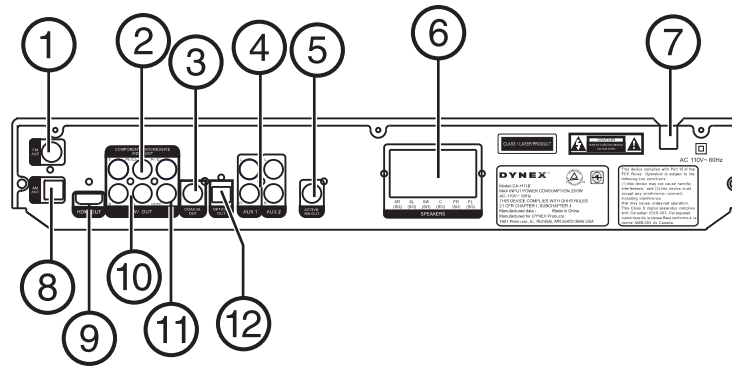

- 1 FM antenna connection
- 2 Component (Y, Pb/Cb, Pr/Cr) output video jacks
- 3 Coaxial output jack
- 4 AUX 1 and 2 (audio) input jacks
- 5 Active subwoofer output jack
- 6 5.1 channel speaker output jacks
- 7 AC power supply cord
- 8 AM antenna connection
- 9 HDMI output jack
- 10 Audio (L & R)
- 11 Video output jack
- 12 Optical output jack


### Step 2 Install remote control batteries

Remove the cover from the back of the remote control, insert batteries as indicated, then replace the cover.

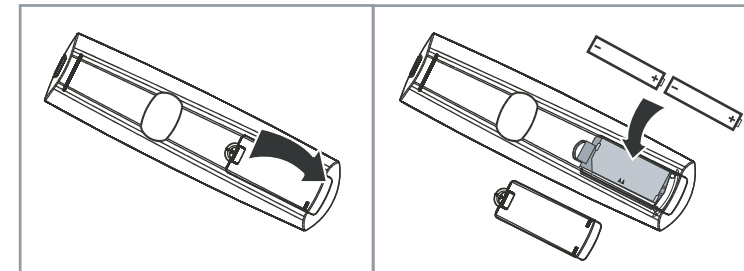

### Step 3 Connecting your system

Before connecting your system, refer to the pictures below. Each connection must be solid. Disconnect the power cables on all elements of the system until you have finished all of the connections.

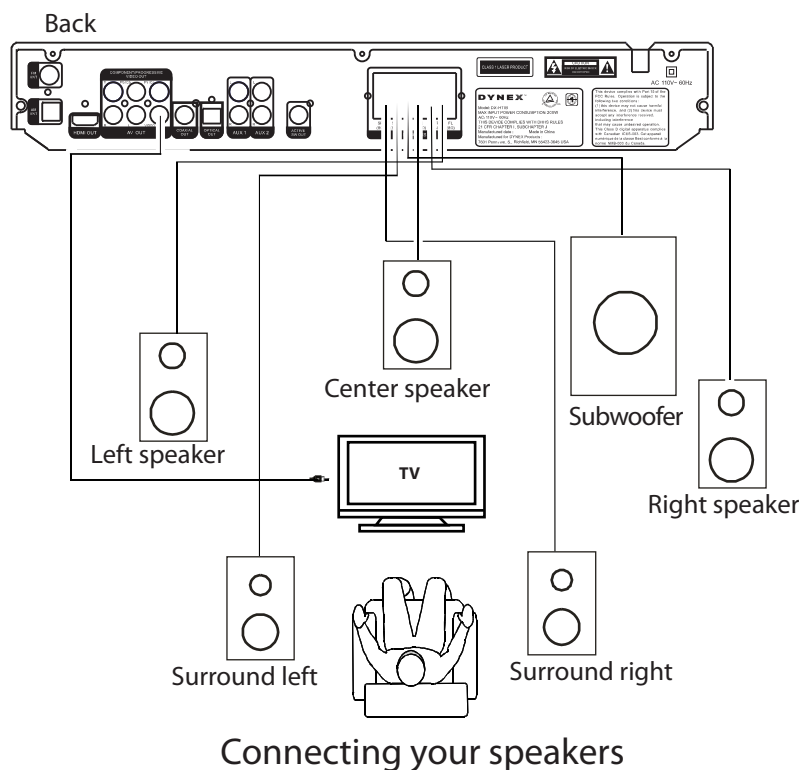

Connecting your speakers

### Step 4 Connect power

Connect the AC power cord directly to a power outlet. Press the power button.


### Step 5 Using the Setup menu

Your player has a Setup menu you can use to adjust settings.

See your **User Guide!** This comprehensive guide includes everything from basic how-to steps to more advanced features.


#### To use the Setup menu:

- 1 Press **SETUP**. The *General Setup Page* opens.
- 2 Press **◀** or **▶** to select the menu page you want, then press **PLAY/ENTER**.
- 3 Press **▲** or **▼** to select an option, then press **▶** to open the sub-menu.
- 4 Press **▲** or **▼** select an option, then press **PLAY/ENTER** to confirm your selection.
- 5 Press **◀** to go to the previous menus.
- 6 Repeat Step 2 through Step 4 to select other menu pages.

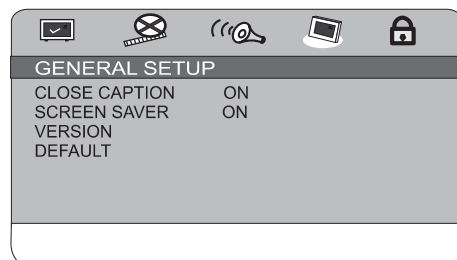


### How to connect your system


#### Best: HDMI Video connection

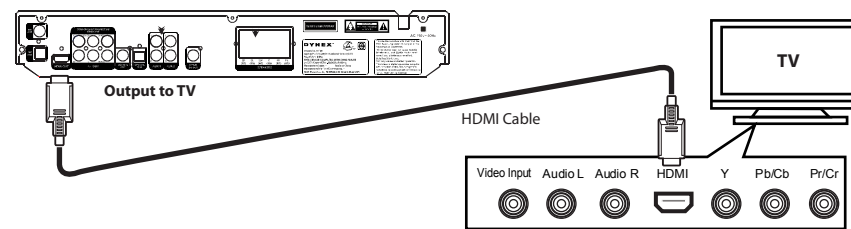

#### Better: Component video connection

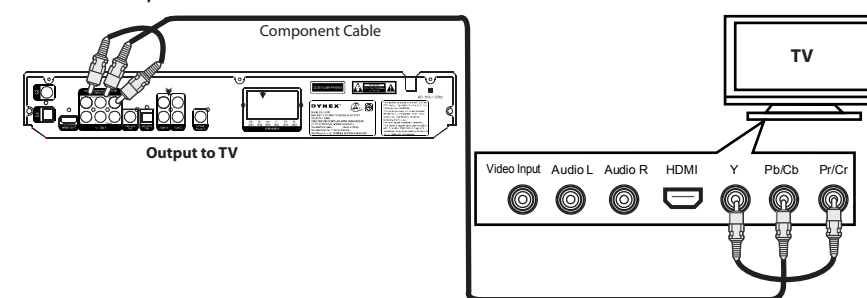

#### Good: Composite (analog) video connection

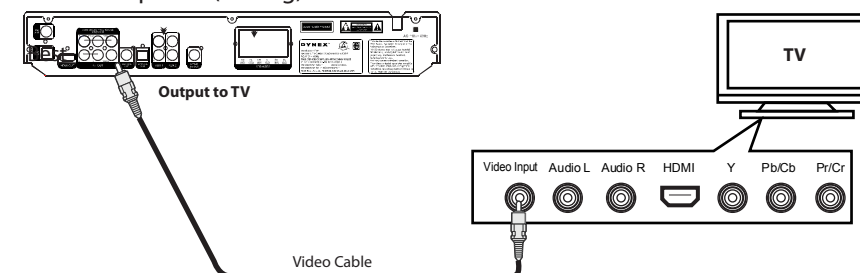

### Controlling disc playback

#### To control disc playback:

- Press the **OPEN/CLOSE ▲** button on the remote control (or the **EJECT** button on your player). The disc tray opens.
- Place a disc, label side up, in the disc tray, then close the tray. The disc starts playing automatically.
- Press **▶** to play/pause, press **■** to stop. Press **◂** to navigate in the on-screen DVD menus.

### Using the radio

- Press **STANDBY/ON** to turn on the player.
- Press **AM/FM** to switch the player to radio mode and toggle between the AM and FM bands.
- Press **TUNE+** or **TUNE-** to select a station.