


# JVC



## DVD DIGITAL THEATER SYSTEM

# TH-S11B

Consists of XV-THS11B, SP-THS11BW,  
SP-THS11BF, SP-THS11BC and SP-THS11BS

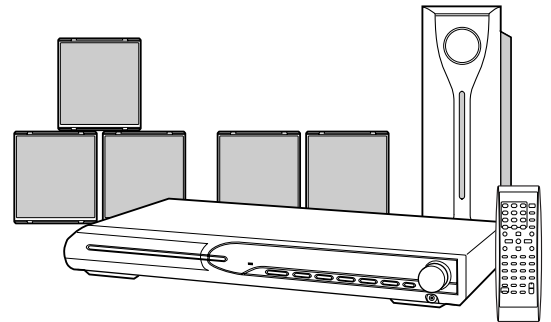

Digital Surround

*Digital Direct Progressive Scan*

## INSTRUCTIONS

### For Customer Use:

Enter below the Model No. and Serial No. which are located either on the rear, bottom or side of the cabinet. Retain this information for future reference.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

# Warnings, Cautions and Others /Mises en garde, précautions et indications diverses


	<b>CAUTION</b> RISK OF ELECTRIC SHOCK DO NOT OPEN	
<b>CAUTION:</b> TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		

 


The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

	<b>ATTENTION</b> RISQUE D'ÉLECTROCUTION NE PAS OUVRIR	
<b>ATTENTION:</b> POUR ÉVITER TOUT RISQUE D'ÉLECTROCUTION, NE PAS OUVRIR LE BOÎTIER. AUCUNE PIÈCE INTÉRIEURE N'EST À RÉGLER PAR L'UTILISATEUR. SE RÉFÉRER À UN AGENT QUALIFIÉ EN CAS DE PROBLÈME.		



Le symbole de l'éclair à l'intérieur d'un triangle équilatéral est destiné à alerter l'utilisateur sur la présence d'une "tension dangereuse" non isolée dans le boîtier du produit. Cette tension est suffisante pour provoquer l'électrocution de personnes.



Le point d'exclamation à l'intérieur d'un triangle équilatéral est destiné à alerter l'utilisateur sur la présence d'opérations d'entretien importantes au sujet desquelles des renseignements se trouvent dans le manuel d'instructions.

**WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

## CAUTION— $\phi/I$ button!

Disconnect the mains plug to shut the power off completely (the STANDBY lamp goes off). When installing the apparatus, ensure that the plug is easily accessible.

The  $\phi/I$  button in any position does not disconnect the mains line.

- When the system is on standby, the STANDBY lamp lights red.
- When the system is turned on, the STANDBY lamp goes off. The power can be remote controlled.

## ATTENTION— Touche $\phi/I$ !

Déconnectez la fiche secteur pour mettre l'appareil complètement hors tension (le témoin STANDBY s'éteint).

Lors de l'installation de l'appareil, assurez-vous que la fiche soit facilement accessible.

La touche  $\phi/I$ , dans n'importe quelle position, ne déconnecte pas le système du secteur.

- Quand le système est en attente, le témoin STANDBY est allumé en rouge.
- Quand le système est sous tension, le témoin STANDBY s'éteint.

L'alimentation peut être télécommandée.

## CAUTION

To reduce the risk of electrical shocks, fire, etc.:

1. Do not remove screws, covers or cabinet.
2. Do not expose this appliance to rain or moisture.

## ATTENTION

Afin d'éviter tout risque d'électrocution, d'incendie, etc.:

1. Ne pas enlever les vis ni les panneaux et ne pas ouvrir le coffret de l'appareil.
2. Ne pas exposer l'appareil à la pluie ni à l'humidité.

## IMPORTANT FOR LASER PRODUCTS

1. CLASS 1 LASER PRODUCT
2. **CAUTION:** Do not open the top cover or cabinet. There are no user serviceable parts inside the unit; leave all servicing to qualified service personnel.
3. **CAUTION:**  
Visible and/or invisible class II laser radiation when open.  
Do not stare into beam.
4. REPRODUCTION OF LABEL: CAUTION LABEL, PLACED INSIDE THE UNIT.

## IMPORTANT POUR LES PRODUITS LASER

1. PRODUIT LASER CLASSE 1
2. **ATTENTION:** N'ouvrez pas le couvercle supérieur ni le coffret de l'appareil. Il n'y a aucune pièce réparable par l'utilisateur à l'intérieur de l'appareil; confiez toute réparation à un personnel qualifié.
3. **ATTENTION:**  
Radiation laser de classe II visibles et/ou invisible si l'appareil est ouvert. Ne regardez pas le rayon.
4. REPRODUCTION DE L'ÉTIQUETTE: ÉTIQUETTE DE PRÉCAUTION PLACÉE L'INTERIEUR DE L'APPAREIL.

### Note to CATV system installer:

This reminder is provided to call the CATV system installer's attention to Section 820-40 of the NEC which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.



[European Union only]  
[Union européenne seulement]

### CAUTION

Excessive sound pressure from earphones or headphones can cause hearing loss.

### ATTENTION

Une pression acoustique excessive des écouteurs ou du casque d'écoute peut entraîner une perte auditive.

<b>CAUTION</b> VISIBLE AND/OR INVISIBLE CLASS II LASER RADIATION WHEN OPEN. DO NOT VIEW DIRECTLY WITH OPTICAL INSTRUMENTS. E200005-10001 (ENG)	<b>ATTENTION</b> RAYONNEMENT LASER VISIBLE ET/OU INVISIBLE DE CLASSE II. NE PAS REGARDER DIRECTEMENT AVEC DES INSTRUMENTS OPTIQUES. (FRA)	<b>AVISO</b> RADIACION LASER DE CLASE II VISIBLE Y/O INVISIBLE CUANDO ESTA ABIERTO. NO MIRAR DIRECTAMENTE CON INSTRUMENTAL OPTICO. (ESP)	<b>VARNING</b> SYNLIG OCH/ELLER OSYNLIG LASERSTRÅLNING KLASS II, NÄR DENNA ÄR ÖPPNAD. BETRAKTA EJ STRÅLEN MED OPTISKA INSTRUMENT. (SWE)	<b>注意</b> 二級レーザー光線 及び/または不可視 レーザー光線が 照射される時、 直接見ないで 光学器具で 照射光線を見ない。 (JPN)	<b>CAUTION</b> VISIBLE AND/OR INVISIBLE CLASS II LASER RADIATION WHEN OPEN. DO NOT STARE INTO BEAM. FEM 21 CPT (ENG) LV44603-003A
--	---	---	--	---	---

### For U.S.A.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

# Table of contents

---

## **Introduction ..... 2**

Notes on handling .....	2
Supplied accessories .....	2

## **About discs ..... 3**

Playable disc types .....	3
---------------------------	---

## **Index of parts and controls ..... 4**

## **Connections ..... 6**

Connecting the FM and AM antennas .....	6
Connecting the satellite (front, center, surround) speakers and the subwoofer .....	7
Speaker layout .....	8
Connecting a TV .....	8
Connecting an external component .....	8
Connecting the power cord .....	8

## **Operating the TV ..... 9**

## **Basic operations ..... 10**

Turning the system on/off .....	10
Selecting the source to play .....	11
Adjusting the volume [VOLUME] .....	11
Listening with headphones (not supplied) .....	11
Turning off the sound temporarily [MUTING] .....	11
Adjusting the brightness of the indications [DIMMER] .....	11
Sleep Timer [SLEEP] .....	12
Adjusting the output level of the front/center/surround speakers and subwoofer .....	12
Adjusting the sound .....	12
Changing the scan mode .....	12

## **Playback ..... 13**

Basic playback .....	13
One touch replay .....	15
Fast-forward/fast-reverse search .....	15
Skip to the beginning of a desired selection .....	15
Locating a desired title/group using number buttons .....	16
Selecting the desired title/playlist from the control display .....	16

## **Advanced operations ..... 17**

Using the surround mode .....	17
Using the on-screen bar .....	18
Playing from a specified position on a disc .....	20
Using the file control display .....	21
Resume playback .....	22
Selecting a view angle .....	22
Selecting the subtitle .....	23
Selecting the audio .....	23
Special picture playback .....	24
Program playback .....	25
Random playback .....	25
Repeat playback .....	26
Tray lock .....	27
Balance setting .....	27

## **Setting DVD preferences ..... 28**

Using the setup menus .....	28
Menu description .....	28

## **Tuner operations ..... 31**

Manual tuning .....	31
Preset tuning .....	32
Selecting the FM reception mode .....	32

## **References ..... 33**

Maintenance .....	33
Troubleshooting .....	33
Specifications .....	34

## Notes on handling

### ■ Important cautions

#### Installation of the system


- Select a place which is level, dry and neither too hot nor too cold; between 5°C (41°F) and 35°C (95°F).
- Leave sufficient distance between the system and the TV.
- Do not use the system in a place subject to vibration.

#### Power cord

- Do not handle the power cord with wet hands!
- A small amount of power is always consumed while the power cord is connected to the wall outlet.
- When unplugging the power cord from the wall outlet, always pull on the plug, not the power cord.

#### To prevent malfunctions of the system

- There are no user-serviceable parts inside. If anything goes wrong, unplug the power cord and consult your dealer.
- Do not insert any metallic object into the system.
- Do not use any non-standard shape disc (like a heart, flower or credit card, etc.) available on the market, because it may damage the system.
- Do not use a disc with tape, stickers, or paste on it, because it may damage the system.

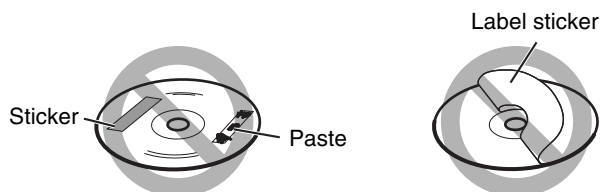

#### Note about copyright laws

Check the copyright laws in your country before recording from the discs. Recording of copyrighted material may infringe copyright laws.

#### Note about copyguard system

The discs are protected by copyguard system. When you connect the system to your VCR directly, the copyguard system activates and the picture may not be played back correctly.

### ■ Safety precautions

#### Avoid moisture, water and dust

Do not place the system in moist or dusty places.

#### Avoid high temperatures

Do not expose the system to direct sunlight and do not place it near a heating device.

#### When you are away

When away on travel or for other reasons for an extended period of time, disconnect the power cord plug from the wall outlet.

#### Do not block the vents

Blocking the vents may damage the system.

#### Care of the cabinet

When cleaning the system, use a soft cloth and follow the relevant instructions on the use of chemically-coated cloths. Do not use benzene, thinner or other organic solvents including disinfectants. These may cause deformation or discoloring.

#### If water gets inside the system

Turn the system off and disconnect the power cord plug from the wall outlet, then call the store where you made your purchase. Using the system in this condition may cause fire or electrical shock.

## Supplied accessories

Check to be sure you have all of the supplied accessories. The number in parentheses is the quantity of the pieces supplied. If anything is missing, contact your dealer immediately.

- Remote control (1)
- Batteries (2)
- FM antenna (1)
- AM loop antenna (1)
- Composite Video cord (1)

# About discs

## Playable disc types

This system has been designed to play back the following discs: DVD VIDEO, Video CD (VCD), Super Video CD (SVCD), Audio CD (CD), CD-R and CD-RW.

- This system accommodates the NTSC system, and also can play discs recorded with PAL system.
- This system can also play finalized DVD-R/-RWs recorded in DVD VIDEO format. However, some discs may not be played because of their disc characteristics or recording conditions.

### Discs you can play:

DVD VIDEO 	Audio CD 
VCD 	SVCD 

- The following discs cannot be played back: CD-I (CD-I Ready), Photo CD, SACD, etc. Playing back these discs will generate noise and damage the speakers.
- The Non-DVD side of a “DualDisc” does not comply with the “Compact Disc Digital Audio” standard. Therefore, the use of Non-DVD side of a DualDisc on this product may not be recommended.
- **On some DVD VIDEOS, VCDs or SVCDs, their actual operation may be different from what is explained in this manual. This is due to the disc programming and disc structure, not a malfunction of this system.**

DVD Logo is a trademark of DVD Format/Logo Licensing Corporation.

### Region code of DVD VIDEO

DVD VIDEO players and DVD VIDEO discs have their own Region Code numbers. This system can play back DVD VIDEO discs whose Region Code numbers include “1.”

- Example of playable DVD:



If a DVD with an improper Region Code number is loaded, “REGION CODE ERROR!” appears on the TV screen and playback cannot start.

### Notes on DVD-R, DVD-RW and DVD-RAM

- This system can also play finalized DVD-Rs or DVD-RWs recorded in DVD VIDEO format and DVD-RWs or DVD-RAMs recorded in DVD VR format.
- This system can also play DVD-Rs or DVD-RWs if MP3 and JPEG files are recorded on them with UDF Bridge format. This system does not support “multi-border” disc.

### Notes on CD-R and CD-RW

- This system can also play CD-Rs or CD-RWs if MP3 and JPEG files are recorded on them with ISO 9660 format.
- This system supports “multi-session” discs (up to 20 sessions).
- This system cannot play “packet write” discs.

Some discs may not be played back because of their disc characteristics, recording conditions, or damage or stain on them.

### For all playable files

- The system can only recognize and play files with one of the following extensions, which can be in any combination of upper and lower case:  
MP3: “.MP3”, “.mp3”  
JPEG: “.JPG”, “.JPEG”, “.jpg”, “.jpeg”
- The system recognizes up to 150 tracks (files) per group, 99 groups per disc, and the total number of the tracks (files) that the system can play is 4 000.
- Some files may not be played back normally because of their disc characteristics or recording conditions.
- MP3/JPEG discs require a longer readout time. (It differs due to the complexity of the directory/file configuration.)
- If different kinds of the file are mixed on a disc, set the FILE TYPE setting in the PICTURE menu to the appropriate setting for the data to be read (“AUDIO” or “STILL PICTURE”). (See page 29.)

### Notes on MP3 files

- Tag information (album name, artist name, and track name) can be shown on the TV. (See page 21.)
- The system can play back the MP3 files recorded at 32 kbps to 320 kbps as a bit rate, and at 16 kHz, 22.05 kHz, 24 kHz, 32 kHz, 44.1 kHz and 48 kHz as a sampling frequency.
- We recommend to record each piece of material (song) at a sample rate of 44.1 kHz and at a data transfer rate of 128 kbps.

### Notes on JPEG files


- We recommend to record a file at 640 x 480 resolution. (If a file has been recorded at a resolution of more than 640 x 480, it will take a longer time to be displayed.)
- This system can only play baseline JPEG files.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.


# Index of parts and controls

The numbers in the figures indicate the pages where the details of the parts are described.


## Front panel (center unit)

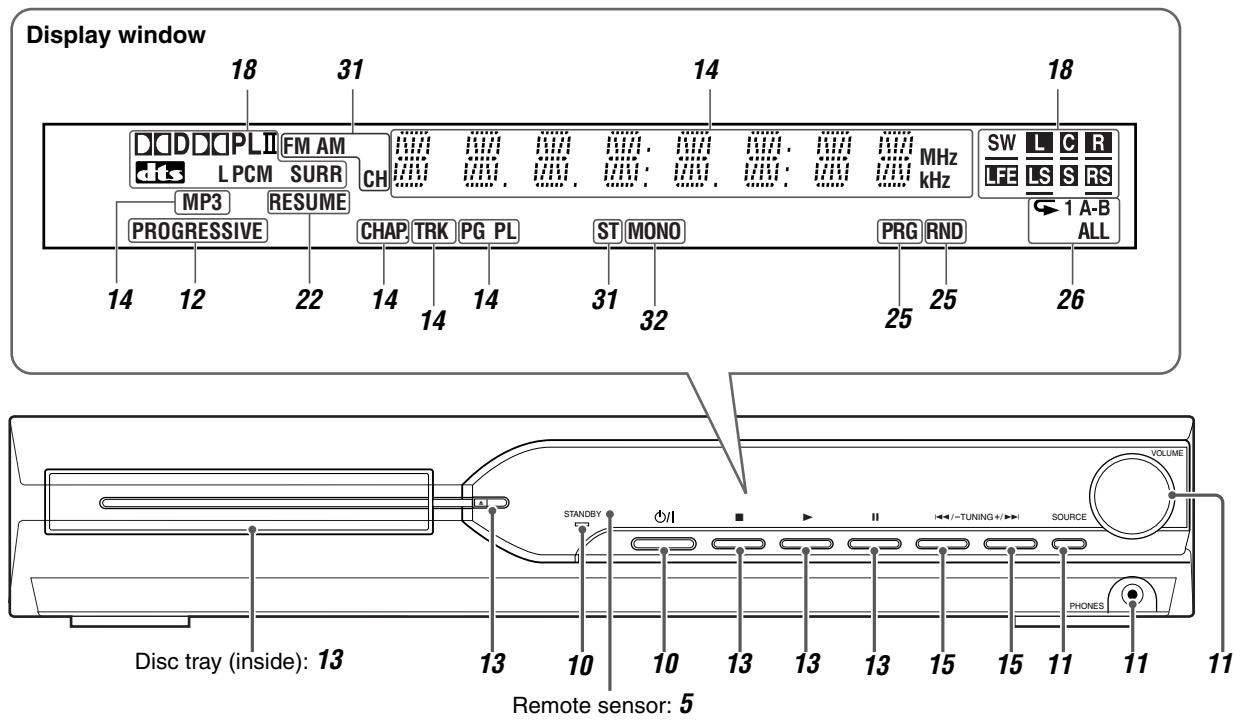


## Rear panel (center unit)

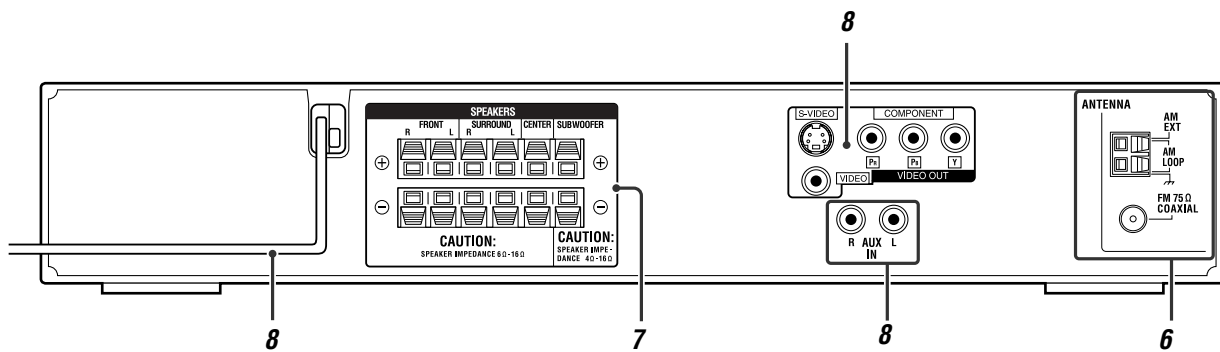

Remote control

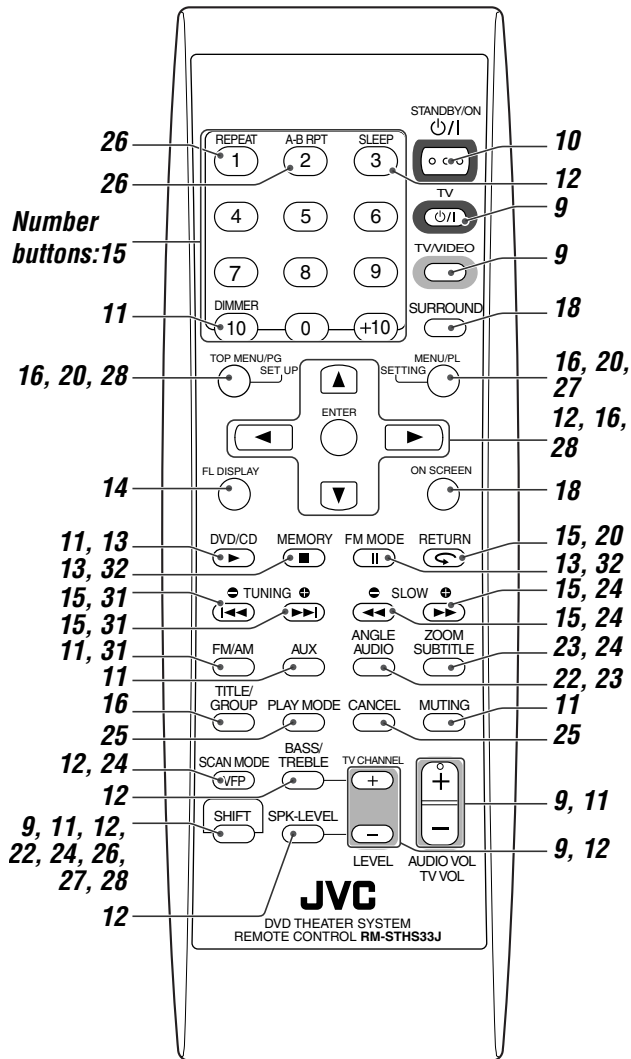

Putting batteries in the remote control

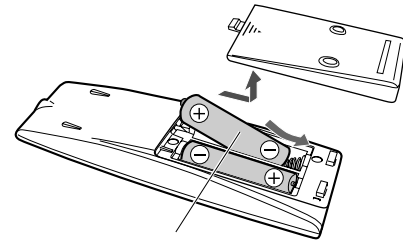

R6 (SUM-3)/AA (15F) type dry-cell batteries (supplied)

If the range or effectiveness of the remote control decreases, replace both batteries.

**CAUTION**

- Battery shall not be exposed to excessive heat such as sunshine and fire.

**Operating the system from the remote control**

Aim the remote control directly to the front panel of the center unit.


- If you operate it from a diagonal position, the operating range (approx. 5 m (16 ft)) may be shorter.
- Do not block the remote sensor.



## Connecting the FM and AM antennas

### ■ AM loop antenna


#### Setting up supplied AM loop antenna

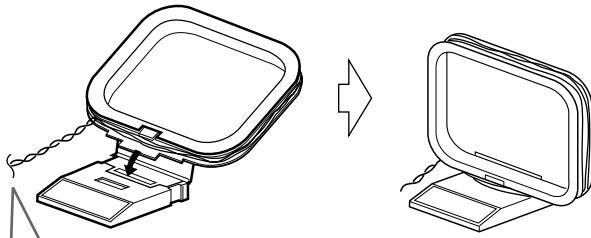


If the antenna cord is covered with the insulation coat, twist and pull the insulation coat off and remove.

#### Connecting AM loop antenna


1

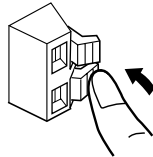

2

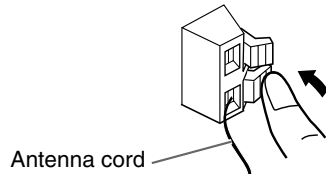

3

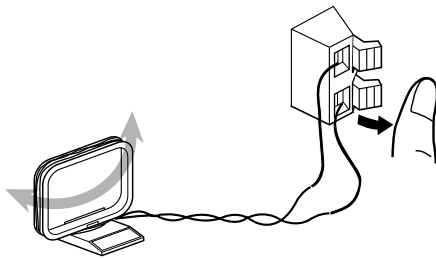


- Turn the loop antenna until you have the best reception during AM broadcast program reception.


#### NOTE

- Make sure the antenna conductors do not touch any other terminals, connecting cords and power cords. This could cause poor reception.


#### If reception is poor

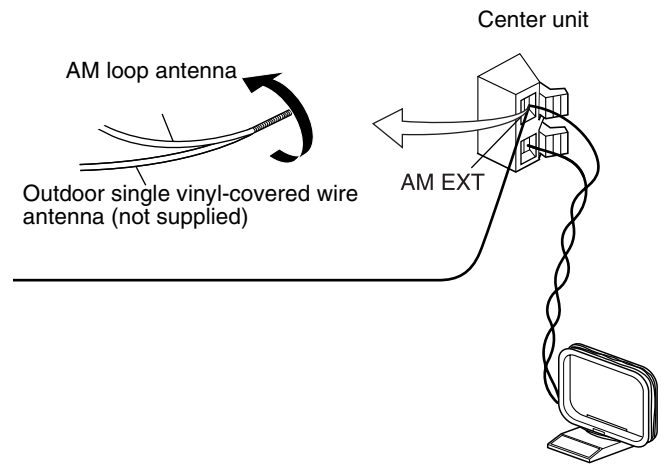

### ■ FM antenna

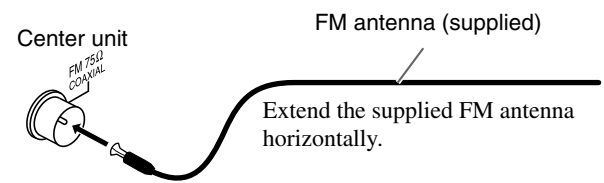


#### If reception is poor

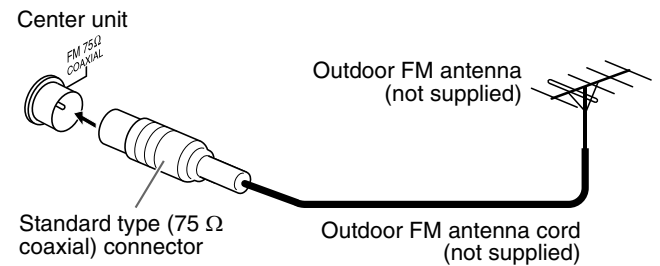

#### NOTE

- We recommend that you use coaxial cable for the FM antenna as it is well-shielded against interference.

# Connecting the satellite (front, center, surround) speakers and the subwoofer

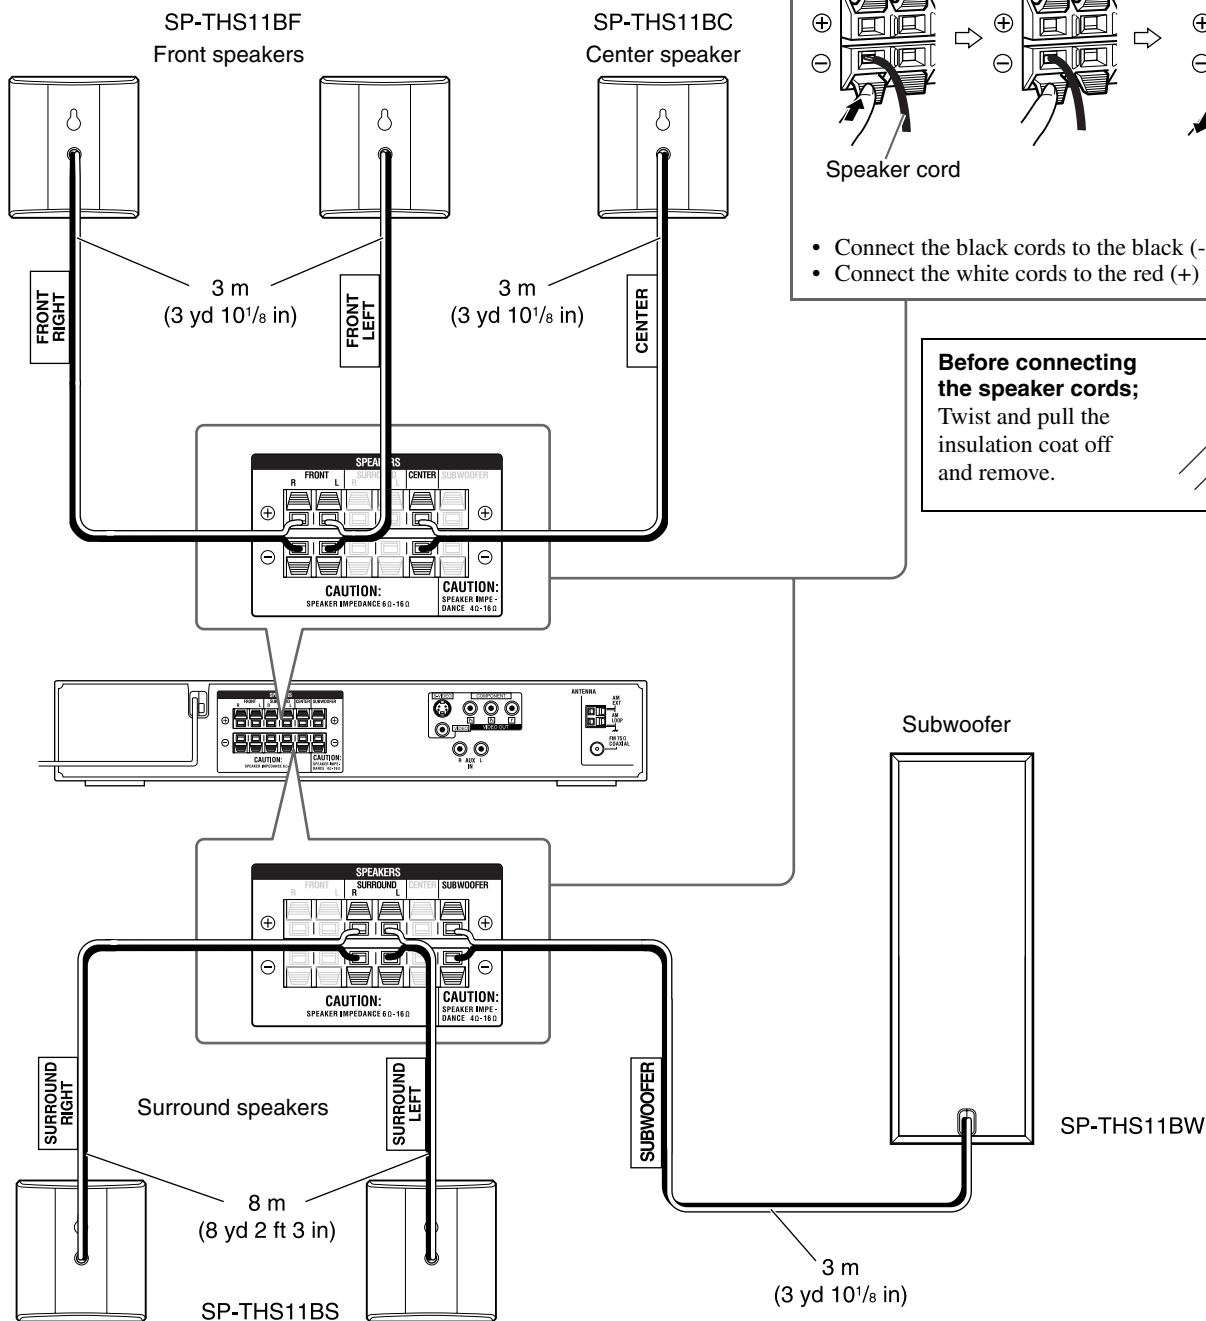


**CAUTION**

- When you connect speakers other than the supplied ones, use speakers of the same speaker impedance (SPEAKER IMPEDANCE) indicated on the rear of the center unit.
- DO NOT connect more than one speaker to one speaker terminal.

- When installing the satellite speakers on the wall;
  - Be sure to have them installed on the wall by a qualified personnel. DO NOT install the satellite speakers on the wall by yourself to avoid unexpected damage from their falling off the wall due to incorrect installation or weakness in wall structure.
  - Care must be taken in selecting a location for speaker installation on a wall. Injury to personnel or damage to equipment may result if the speakers installed interfere with daily activities.

## Speaker layout

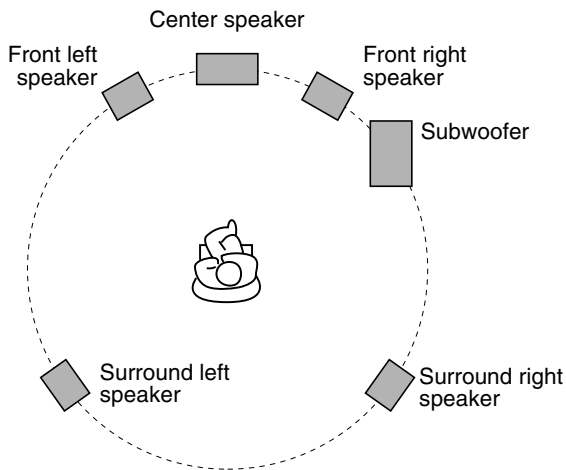


### NOTE

- Place the satellite speakers on a flat and level surface.
- The front and center speakers are magnetically shielded to avoid color distortions on TVs. However, if not installed properly, they may cause color distortions. So, pay attention to the following when installing the speakers.
  - When placing the speakers near a TV set, turn off the TV's main power switch or unplug it before installing the speakers. Then wait at least 30 minutes before turning on the TV's main power switch again.
- Some TVs may still be affected even though you have followed the above. If this happens, move the speakers away from the TV.
- The surround speakers and the subwoofer are not magnetically shielded. If it is located nearby the TV or monitor, it will probably cause color distortion on the screen. To avoid this, do not place the speaker nearby the TV or monitor.
- Be sure to place the subwoofer to the TV's right side. If you place the subwoofer to the TV's left side, keep sufficient distance between them to prevent the TV screen from appearing mottled.

## Connecting a TV

- Distortion of picture may occur when connecting the TV via a VCR, or to a TV with a built-in VCR.
- You need to set "MONITOR TYPE" in the PICTURE menu correctly according to the aspect ratio of your TV. (See page 29.)


### To connect a TV equipped with the component video input jacks

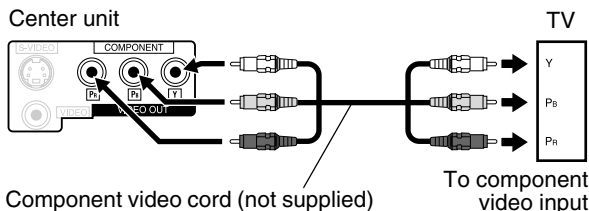

### NOTE

- If your TV supports progressive video input, you can enjoy a high quality picture by setting the progressive scan mode to active. (See page 12.)
- If the component video input jacks of your TV are of the BNC type, use a plug adapter (not supplied) to convert the pin plugs to BNC plugs.
- The video signals can be output only when you select "DVD" as the source to play. (See page 11.)

### To connect a TV equipped with the S-VIDEO and/or the composite video input jacks

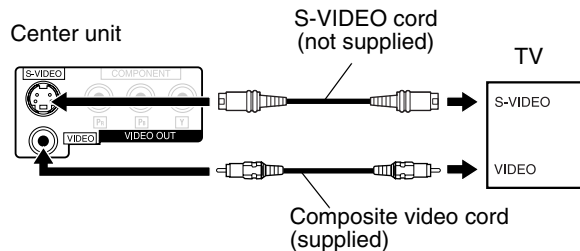


### NOTE

- Select the appropriate scan mode according to your TV. (See page 12.)

## Connecting an external component

You can enjoy the sound of an analog component.

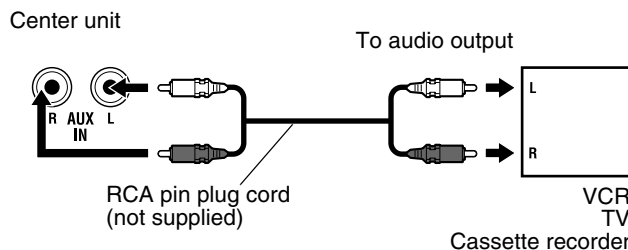


### NOTE

- If you connect a sound-enhancing device such as a graphic equalizer between the source components and this system, the sound output through this system may be distorted.
- When playing a video component such as a VCR;
  - To listen to the sound, select "AUX" as the source to play. (See page 11.)
  - To see the picture, connect the video output jack of the component to the video input jack of the TV directly, and select the correct input mode on the TV.

## Connecting the power cord

Make sure that all other connections have been completed.

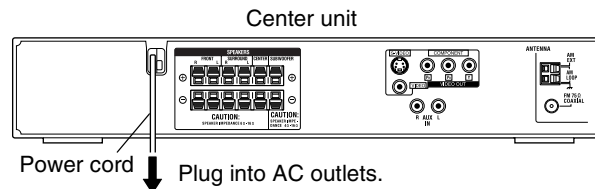

### CAUTION

- Disconnect the power cord before cleaning or moving the system.
- Do not pull on the power cord to unplug the cord. When unplugging the cord, always grasp and pull the plug so as not to damage the cord.

### NOTE

- Preset settings, such as preset stations and surround mode adjustment, may be erased in a few days in the following cases;
  - If you unplug the power cord of the center unit.
  - If a power failure occurs.

# Operating the TV


You can use the remote control to operate not only this unit but also JVC's TV.

- Refer also to the manuals supplied for the TV.
- To operate the TV, aim the remote control directly at the remote sensor on the TV.

## ■ To operate a JVC's TV

You can perform the following operations on the TV.



<b>TV <math>\phi</math>/I:</b>	Turn on or off the TV.
<b>TV VOL +/- with SHIFT pressed and held:</b>	Adjust the volume.
<b>TV/VIDEO:</b>	Set the input mode (either TV or VIDEO).
<b>CHANNEL +/- with SHIFT pressed and held:</b>	Change the channels.

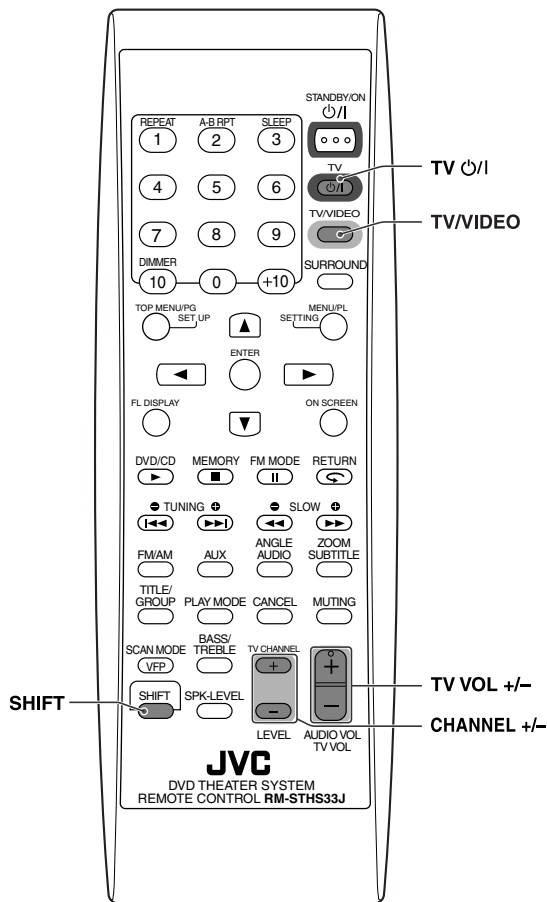

# Basic operations

The buttons on the remote control are used to explain most of the operations in this manual. You can use the buttons on the center unit same as on the remote control for operations unless otherwise noted.

The buttons described below are used on pages 10 to 12.

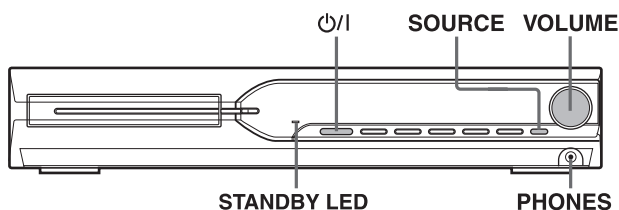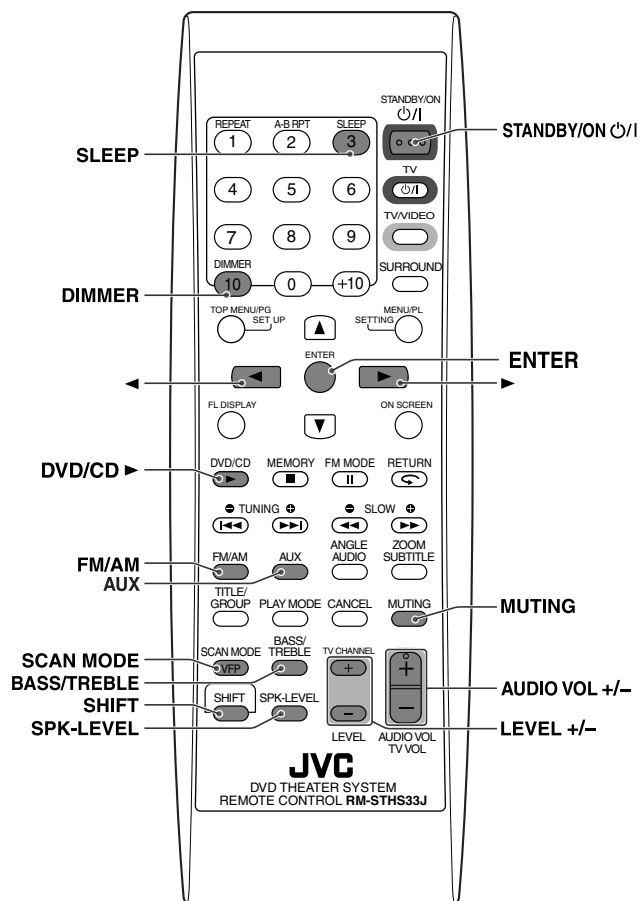

## Turning the system on/off


**On the remote control:**

Press **STANDBY/ON** .

**On the center unit:**



Press .

When DVD is selected as the source (see page 11), the following messages will appear on the TV screen.

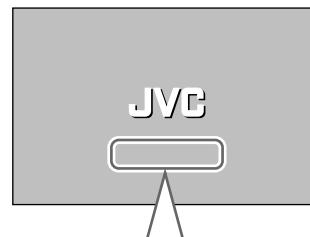

- **“OPEN”/“CLOSE”:**  
Appears when opening or closing the disc tray.
- **“NOW READING”:**  
Appears when the system is reading the disc information.
- **“REGION CODE ERROR!”:**  
Appears when the Region Code of the DVD VIDEO does not match the code the system supports. The disc cannot be played back.
- **“NO DISC”:**  
Appears when no disc is loaded.
- **“CANNOT PLAY THIS DISC”:**  
Appears when unplayable disc is loaded.

### NOTE

 - The **STANDBY** lamp goes off when the power is turned on, and the lamp lights when the power is turned off.
- A small amount of the power is consumed even when the power is turned off. This is called standby mode and the **STANDBY** lamp lights in this mode. Unplug the power cord from the AC outlet to turn the power off completely.
- You can also turn on the system by pressing the following buttons;
  -  on the center unit
  - One of the source selecting buttons on the remote control
  -  on the center unit.

## Selecting the source to play

### On the remote control:

#### Press one of the source selecting buttons (DVD/CD▶, FM/AM or AUX).

DVD/CD▶: To play back a disc (DVD VIDEO, VCD etc.). (See page 13.)

FM/AM: To tune in an FM or AM station. (See page 31.)  
Each time you press the button, the band alternates between FM and AM.

AUX: To select the external component connected to the center unit. (See page 8.)

### On the center unit:

#### Press SOURCE repeatedly until the source name you want appears on the display window.

#### NOTE

- When a source except DVD is selected, this system does not output video signals.
- It may take time to change the source.

## Adjusting the volume [VOLUME]

#### CAUTION

- Always set the volume to minimum level before starting any source. If the volume is set at its high level, the sudden blast of sound could permanently damage your hearing and/or blow out the speakers.

### On the remote control:

Press AUDIO VOL +/-.

### On the center unit:

Turn VOLUME.

## Listening with headphones (not supplied)

#### CAUTION

Be sure to turn down the volume;

- Before connecting or putting on headphones as high volume may damage both the headphones and your hearing.
- Before disconnecting headphones as high volume may be suddenly output from the speakers.

While connecting a pair of headphones to the PHONES jack on the center unit, the system automatically cancels the surround mode (see page 17) currently selected, deactivates the speakers, and activates the headphone mode. "H.PHONE" appears on the display window.

#### Headphone mode

When using the headphones, the following signals are output regardless of your speaker setting;

- For 2 channel sources, the front left and right channel signals are output from the headphones.
- Multi-channel signals are down-mixed and output from the headphones.

## Turning off the sound temporarily [MUTING]

Press MUTING.

#### To restore the sound

Perform one on the following:

- Press MUTING again.
- Press AUDIO VOL +/- (or turn VOLUME on the center unit).

## Adjusting the brightness of the indications [DIMMER]

Press DIMMER, with SHIFT pressed.

Each time you repeat the procedure, the brightness level changes.

## Sleep Timer [SLEEP]

The system turns off automatically when the specified period of time has passed.

**Press SLEEP, with SHIFT pressed.**

Each time you repeat the procedure, the shut-off time changes.

Example:



### To check the remaining time

Press SLEEP, with SHIFT pressed once.

### To change the remaining time

Press SLEEP repeatedly, with SHIFT pressed.

### To cancel

Press SLEEP repeatedly, with SHIFT pressed until "SLEEP - -" appears.

- Turning off the power also cancels the Sleep Timer.

## Adjusting the output level of the front/center/surround speakers and subwoofer

### 1 Press SPK-LEVEL to show the target speaker indication on the display window.

Each time you press the button, the indication of the speakers changes as follows:

FRONTL → FRONTR → CENTER →  
 SURR(surround) L → SURR(surround) R →  
 SUBWFR → (back to the beginning)

### 2 Press LEVEL +/- to adjust the output level from -6 to 6.

#### NOTE

- You can also make adjustments by using the setup menu shown on the TV screen. (See page 30.)
- The adjustments take effect for all sources.

## Adjusting the sound

### 1 Press BASS/TREBLE to show "BASS" or "TREBLE" on the display window.

Each time you press the button, the indication alternates between "BASS" and "TREBLE".

### 2 Press LEVEL +/- to adjust the level from -8 to 8.

#### NOTE

- The adjustments take effect for all sources.

## Changing the scan mode

The system can be accommodated to your TV's scan mode.

- To use the system in progressive mode, it is required that the center unit is connected to the TV using a component video cord (not supplied) in advance. (See page 8.)

- While DVD is selected as the source and before playback

### 1 Press and hold SCAN MODE for 2 seconds, with SHIFT pressed.

The current setting appears on the display window.

### 2 Press Cursor ►/◄ to select the desired mode.

- INTER,: Select when your TV supports the interlaced video input only.
- PROGRESS: Select when your TV equipped with component jacks supports the progressive video input.

You can get better picture quality in the order —  
 Composite video ⇒ S-video ⇒ Component video

### 3 Press ENTER while the selected mode is displayed.


When "PROGRESS" is selected, the PROGRESSIVE indicator lights on the display window.

#### NOTE



- Although the picture may be distorted when you press ENTER, this is not a malfunction of the system.

- There are some progressive TVs and High-Definition TVs that are not fully compatible with this system, resulting in an unnatural picture when playing back a DVD VIDEO in the progressive scan mode. In such a case, change the scan mode to "INTER,,". To check the compatibility of your TV, contact your local JVC customer service center.
- All JVC progressive TVs and High-Definition TVs are fully compatible with this system.

# Playback

- The mark  shows the types of discs the operation is available for.


The buttons described below are used on pages 13 to 16.

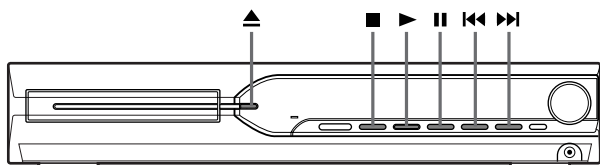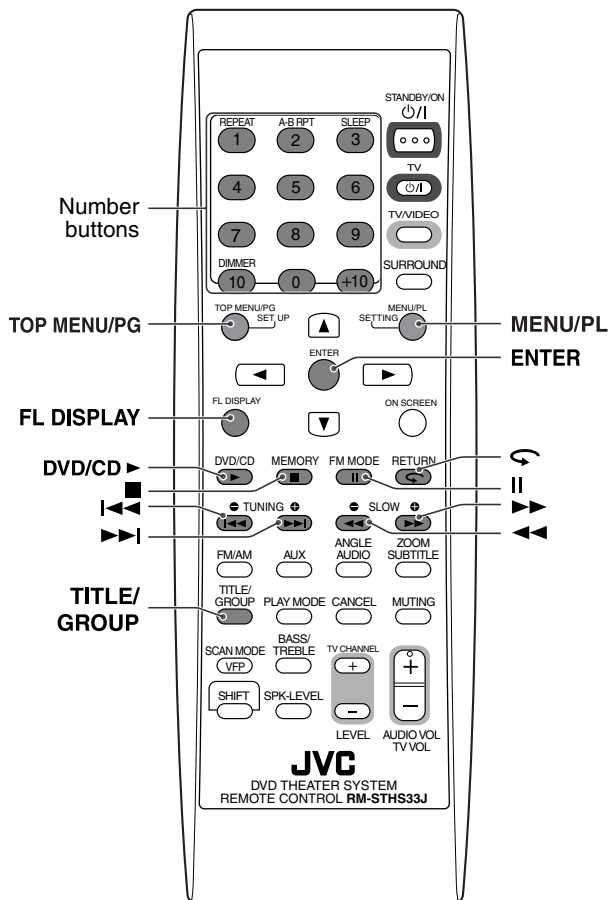

## Basic playback

### 1 Press on the center unit.



- The system turns on and the disc tray comes out.

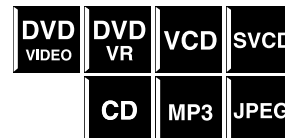

### 2 Place a disc.

Label side up

When placing an 8 cm (3 inches) disc

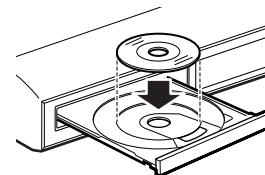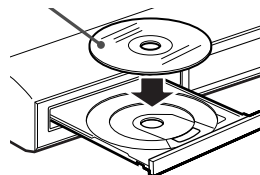

### 3 Press DVD/CD▶ (play button).

#### For MP3

The file control display (see page 21) appears on the TV screen.

#### For JPEG

 
Each file (still pictures) is shown on the TV screen for about 3 seconds (slide-show). When stopping playback, the file control display (see page 21) appears on the TV screen.

#### For DVD VR disc

Pressing TOP MENU/PG or MENU/PL shows the control display on the TV screen (see page 16).

#### ■ To pause

Press .











To return to playback, press  (play button).

#### ■ To stop

 Press .

#### ■ On-screen guide icons

During DVD VIDEO playback, the following guide icons may appear for a while on the TV screen;

- : appears at the beginning of a scene containing multi-subtitle languages.
- : appears at the beginning of a scene containing multi-audio languages.
- : appears at the beginning of a scene containing multi-angle views.
-  (Play),  (Pause),  /  (Fast forward/fast-reverse),  /  (Slow-motion forward/reverse): appears when you perform each operation.
- : the disc cannot accept an operation you have tried to do.

#### NOTE

- (For JPEG) The system cannot accept operations even though you press any buttons before the entire picture appears on the TV screen.
- If you do not want the on-screen guide icons to appear, see page 30.




■ Playback information on the display window


DVD VIDEO

Example:

When a DVD VIDEO encoded with Dolby Digital 5.1ch is played

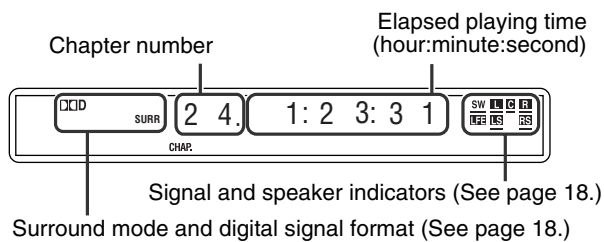


Pressing FL DISPLAY

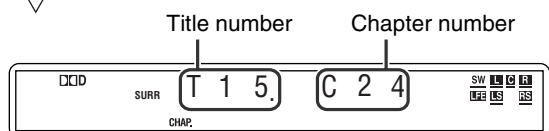


DVD VR disc

Example:

During playback on the Original program\*

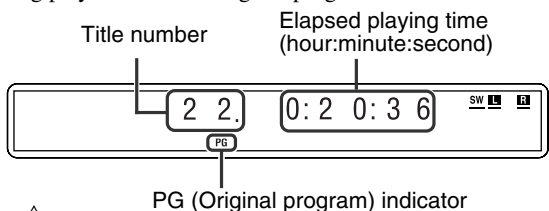


Pressing FL DISPLAY

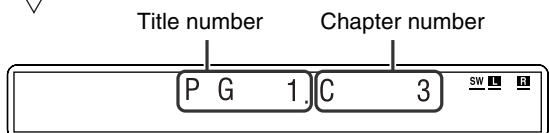


Example:

During playback on the Playlist\*

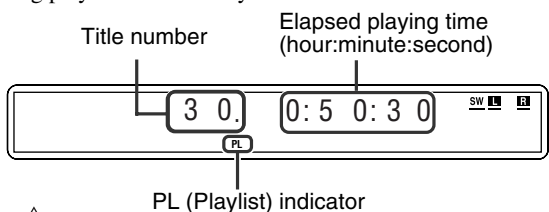

Pressing FL DISPLAY

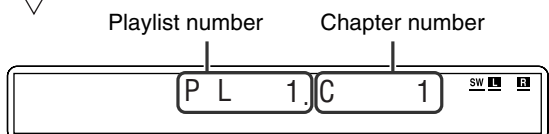


\* Pressing TOP MENU/PG or MENU/PL, you can change the play mode. (See page 16.)

VCD/SVCD/CD

Example:


When a CD is played back

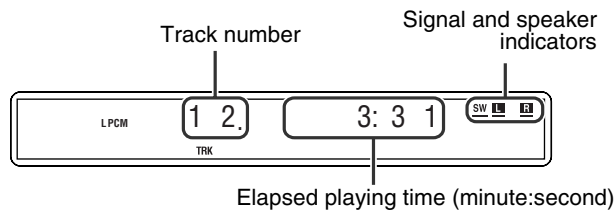


NOTE

- When a VCD or SVCD with PBC function is played, the elapsed playing time does not appear, but "PBC" appears.


MP3 file

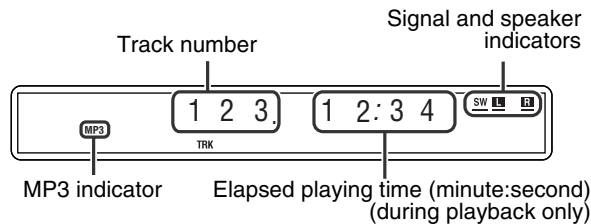


Pressing FL DISPLAY

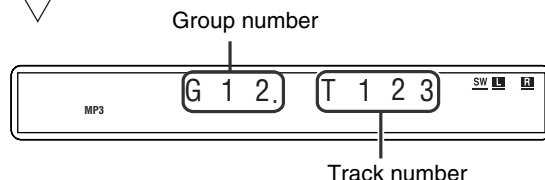

JPEG file

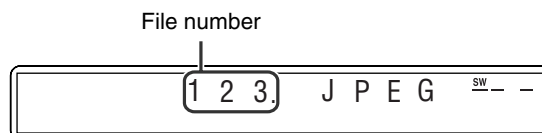

Pressing FL DISPLAY

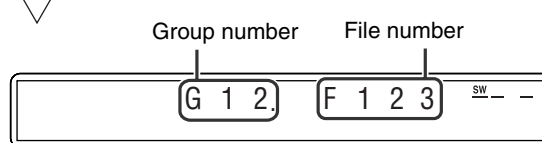

NOTE

- You can change the time information mode (except for MP3/JPEG). (See page 19.)
- You can also check the playback information on the TV screen. (See page 18.)

■ **Screen saver**

A TV screen may burn out if a static picture is displayed for a long time. To prevent this, the system automatically dims the screen if a static picture is displayed for over 5 minutes (the screen saver function).

- Pressing any button will cancel the screen saver function.
- If you do not want to use the screen saver function, see page 29.

## One touch replay

You can move back the playback position by 10 seconds from the current position.



- During playback

**On the remote control:**

Press **↶**.

**NOTE**

- This function works in the same title.
- This feature may not work for some discs.


## Fast-forward/fast-reverse search

- During playback

**On the remote control:**

Press **▶▶** or **◀◀**.

Each time you press the button, the search speed changes (x2, x5, x10, x20, x60).

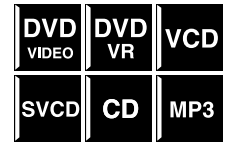

**To return to normal speed playback**

Press DVD/CD **▶** (play button).

**On the center unit:**

Press and hold **▶▶|** or **|◀◀**.


Continuously pressing **▶▶|** or **|◀◀** increases the fast-forward/reverse search speed (x5 → x20).

**NOTE**

- When a DVD VIDEO, DVD VR, VCD or SVCD is played back, no sound comes out during fast-forward/reverse search.
- When a CD is played back, sound is intermittent and low during fast-forward/reverse search.
- This feature may not work for some discs.
- For MP3, the search speed is not shown.

## Skip to the beginning of a desired selection

- Using **▶▶|** / **|◀◀** buttons

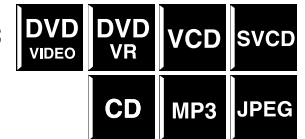

- For DVD VIDEO/DVD VR (chapter): During playback  
For VCD/SVCD (track):  
During playback without PBC function  
For CD/MP3/JPEG (track/file): During playback or while stopped

Press **▶▶|** or **|◀◀** repeatedly.

**NOTE**

- When playing back an MP3/JPEG, you can make operations using the file control display. (See page 21.)
- This feature may not work for some discs.

- Using number buttons on the remote control

- For DVD VIDEO/DVD VR (title, chapter):  
While stopped, the title number is selected.  
During playback, the chapter number is selected.  
For VCD/SVCD (track):  
During playback without PBC function  
For CD/MP3/JPEG (track/file):  
During playback or while stopped

**Press number buttons (0-10, +10) to select the desired number.**

- For details on using the number buttons, see “How to use the number buttons” below.

### How to use the number buttons

- To select 3: Press 3.
- To select 14: Press +10, then 4.
- To select 24: Press +10 twice, then 4.
- To select 40: Press +10 three times, then 10.  
Or press +10 four times, then 0.

## Locating a desired title/group using number buttons

- During playback or while stopped.

 


### 1 Press TITLE/GROUP.

“\_ \_” or “\_” is shown in the title/group display area in the display window.

Example:

During DVD VIDEO playback



### 2 While the display window shows “\_ \_” or “\_”, use number buttons (0-10, +10) to enter the desired title or group number.

The system starts playback from the first chapter/track/file of the selected title/group.

- For details on using the number buttons, see “How to use the number buttons”. (See page 15.)

#### NOTE

- This feature may not work for some discs.

## Selecting the desired title/playlist from the control display

- During playback or while stopped.

### 1 Press TOP MENU/PG or MENU/PL.



The control display is shown on the TV screen, and the system starts playback of the first title/playlist.

- The PLAY LIST is shown only when the playlist is on the DVD VR disc.

TOP MENU/PG: shows the ORIGINAL PROGRAM.

Example:

ORIGINAL PROGRAM					
No	Date	Ch	Time	Title	
1	25/04/04	4ch	19:00	JVC DVD World 2004	
2	17/05/04	8ch	10:30		
3	22/05/04	8ch	17:00	Music Festival	
4	26/05/04	L-1	13:19	children 001	
5	20/06/04	4ch	22:00		
6	25/06/04	L-1	8:23	children 002	

- \*1: Title number
- \*2: Recording date
- \*3: Recording source (TV station, the input terminal of the recording equipment etc.)
- \*4: Start time of recording
- \*5: Title of the original program/playlist (The title may not be displayed depending on the recording equipment.)
- \*6: Current title

MENU/PL: shows the PLAY LIST.

Example:

PLAY LIST					
No	Date	Chap	Length	Title	
1	25/05/04	001	1:03:16	My JVC World	
2	17/06/04	005	1:35:25		
3	20/06/04	003	0:10:23	Favorite music	
4	25/06/04	001	0:07:19	children001-002	

- \*7: Playlist number
- \*8: Creating date of playlists
- \*9: Number of chapters
- \*10: Total playing time
- \*11: Current playlist

### 2 Press ▼/▲ to select the desired title/playlist.

The system starts playback of the selected title/playlist.


To clear the control display

- Press ENTER.


#### About the play mode on a DVD VR disc

- Original program (ORIGINAL PROGRAM):  
The system can play back the original picture in the recorded order.
- Playlist (PLAY LIST):  
The system can play back the playlist edited by the recording equipment.

# Advanced operations

- The mark  shows the types of discs the operation is available for.

The buttons described below are used on pages 17 to 27.

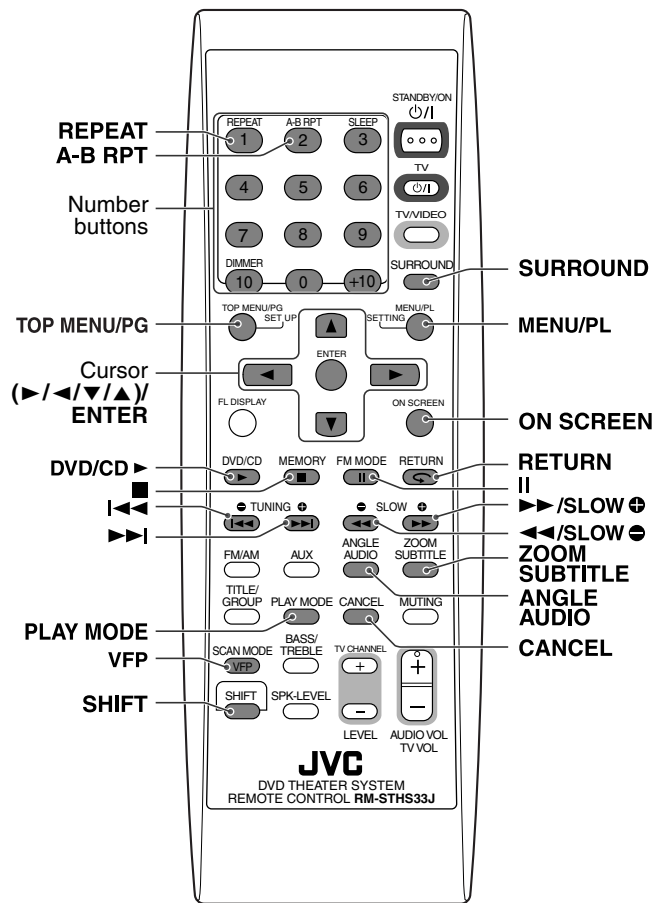

## Using the surround mode

### ■ Auto Surround (AUTO SURR)

This function automatically selects the appropriate surround mode according to the input signals. For example, a multichannel source is automatically reproduced in multichannel audio.

### ■ Dolby Surround

#### Dolby Pro Logic II\*1

Dolby Pro Logic II has a developed multichannel playback format to decode all 2 channel sources — stereo source and Dolby Surround encoded source — into a 5.1 channel.

Dolby Pro Logic II has two modes — Movie mode and Music mode:


#### • Pro Logic II Movie (MOVIE)

Suitable for reproduction of Dolby Surround encoded sources bearing the mark .


#### • Pro Logic II Music (MUSIC)

Suitable for reproduction of any 2 channel stereo music sources.

### Dolby Digital\*1

Used to reproduce multichannel soundtracks of the software encoded with Dolby Digital (.

### ■ DTS Digital Surround\*2

Used to reproduce multichannel soundtracks of the software encoded with DTS Digital Surround (.

DTS Digital Surround (DTS) is another discrete multichannel digital audio format available on CD and DVD software.

### Available Surround modes for each input signal

The √ marks show available surround modes.

Mode	Surround off	Auto Surround	Dolby Surround			DTS Digital Surround	DSP
	SURR OFF	AUTO SURR	MOVIE*3	MUSIC*3	Dolby Digital	DTS	ALL ST*3
Dolby Digital (Multichannel)	√	√	—	—	√	—	—
Dolby Digital (2 channel)	√	√	√	√	—	—	√
DTS Digital Surround (Multichannel)	√	√	—	—	—	√	—
DTS Digital Surround (2 channel)	√	√	√	√	—	—	√
Analog or Linear PCM	√	√	√	√	—	—	√


\*1 Manufactured under license from Dolby Laboratories. “Dolby”, “Pro Logic”, and the double-D symbol are trademarks of Dolby Laboratories.

\*2 “DTS” and “DTS Digital Surround” are registered trademarks of DTS, Inc.

\*3 You can select these modes by pressing SURROUND. (See page 18.)

**■ All Channel Stereo**

All Channel Stereo (ALL ST) mode can reproduce a larger stereo sound field using all the connected (and activated) speakers. All Channel Stereo can be used while reproducing 2 channel stereo source.

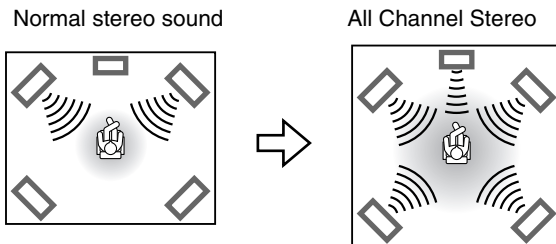

**■ Indicators on the display window**

**Digital signal format indicators**

- LPCM, SURR: Lights when Linear PCM signal comes in.
- Dolby Digital, SURR: Lights when Dolby Digital signals come in.
- DTS, SURR: Lights when DTS Digital (Surround) signals come in.
- No indication: No digital signal indicator lights when analog signals come in.

**Dolby Surround mode indicators**

Dolby Pro Logic II: Lights when Dolby Pro Logic II mode is activated.

**Source signal indicators, etc.**

Light to indicate the incoming signals.



- L**: Lights when the front left channel signal comes in.
- C**: Lights when the center channel signal comes in.
- R**: Lights when the front right channel signal comes in.
- LFE**: Lights when the LFE channel signal comes in.
- LS**: Lights when the surround left channel signal comes in.
- RS**: Lights when the surround right channel signal comes in.
- S**: Lights when the monaural surround channel signal or 2 channel Dolby Surround signal comes in.
- SW**: Always lights.

The channel with “—” shows that the corresponding speakers are reproducing the channels’ sound. If the channels’ sound decoded into 5.1 channel is reproduced, only “—” lights.

**Selecting the surround mode**

The system is set up to automatically select the optimal surround mode for input signal from digital multichannel software. When playing back 2 channel source, you can select the desired surround mode manually.

**NOTE**

- This function also takes effect for the sources other than DVD.
- For FM/AM and AUX, you can select All Channel Stereo (ALL ST) or SURR OFF.

**■ When playing back digital multichannel software (except during SURR OFF mode)**

The appropriate multichannel surround mode (Dolby Digital, DTS Digital Surround or Linear PCM) is automatically selected.

**■ When playing back 2 channel source**

You can select either mode of Dolby Pro Logic II (MOVIE/MUSIC) or the DSP (ALL ST) mode.

**Press SURROUND repeatedly to select the desired mode.**

The surround mode is turned on and the current surround mode appears on the display window.

Each time you press the button, the surround mode changes.

For details on each mode, see page 17.

**To turn off the surround mode**

**Press SURROUND repeatedly until “SURR OFF” appears on the display window.**

**Storing adjustments — auto memory**

When you turn the power off, the system memorizes the current surround mode. The memorized mode is automatically recalled when you turn the power on.

**Using the on-screen bar**

You can check disc information and you can use some functions using the on-screen bar.

**Showing the on-screen bar**

- Whenever a disc is loaded




**Press ON SCREEN.**

Each time you press the button, the on-screen bar changes as follows on the TV screen.

Example:


During DVD VIDEO playback

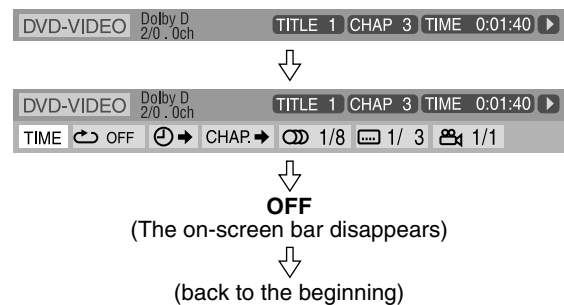


- The currently selected item shows green.

■ Contents of the on-screen bar during playback


DVD VIDEO

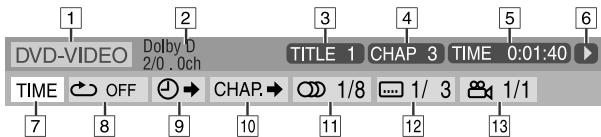


DVD VR

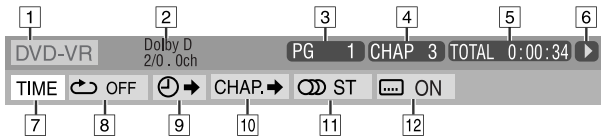

VCD

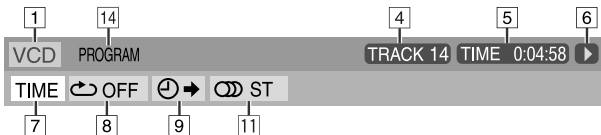

SVCD

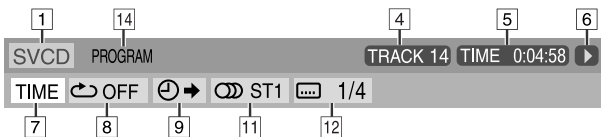

CD



- 1 Shows disc type.
- 2 Shows audio information.
- 3 Shows current title number.
- 4 Shows current chapter number (for DVD VIDEO and DVD VR) or track number (for other type of discs).
- 5 Shows time information. See “Changing the time information”.

6 Shows playback status.

- ▶: appears during playback.
- ▶▶ / ◀◀: appears during fast forward/reverse.
- ▶◀ / ◀▶: appears during playback in forward slow-motion/reverse slow-motion.
- ⏸: appears when paused.
- ⏹: appears when stopped.

7 Select this to change time information (5). See “Changing the time information”.

8 Select this for Repeat Playback. (See page 26.)

9 Select this for time search function. (See page 21.)

10 Select this for chapter search function. (See page 20.)

11 Select this to change audio language, channel, or stream. (See page 23.)

12 Select this to change subtitle language. (See page 23.)

13 Select this to change view angle. (See page 22.)

14 Shows Playback Mode status.

**PROGRAM:** appears during Program Playback. (See page 25.)

**RANDOM:** appears during Random Playback. (See page 25.)

Changing the time information

You can change the time information in the on-screen bar on the TV screen and the display window of the center unit.



■ During playback

1 Press ON SCREEN twice.

The on-screen bar appears on the TV screen.

2 Press Cursor ▶/◀ to highlight TIME .

3 Press ENTER repeatedly to select the desired information.

Example:

When elapsed playing time of disc is selected.

TOTAL 1:25:58

■ VCD/SVCD/CD

- TIME: Elapsed playing time of current track
- REM: Remaining time of current track
- TOTAL: Elapsed time of disc
- T. REM: Remaining time of disc

■ DVD VIDEO/DVD VR

- TIME: Elapsed playing time of current chapter
- REM: Remaining time of current chapter
- TOTAL: Elapsed time of Title/Program
- T. REM: Remaining time of Title/Program

4 Press ON SCREEN.

The on-screen bar disappears.

NOTE

- When playing back DVD VR, “TIME” and “REM” cannot be shown.

## Playing from a specified position on a disc

You can start playing a title, chapter or track you specify. You can also play a disc from specified time.

## Locating a desired scene from the DVD menu

DVD VIDEOS generally have their own menus which show disc contents and you can display them on the TV screen. You can locate a desired scene by using these menus.




- Whenever a DVD VIDEO is loaded

### 1 Press TOP MENU/PG or MENU/PL.

The menu appears on the TV screen.

Example:

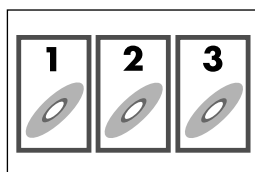

Normally, a DVD VIDEO which contains more than one title will have a "top" menu which lists the titles. Press TOP MENU/PG to show the title menu.

Some DVD VIDEO may also have a different menu which is shown by pressing MENU/PL.

See the instructions for each DVD VIDEO regarding its particular menu.

### 2 Use Cursor ►/◀/▼/▲ to select a desired item.

### 3 Press ENTER.

- With some discs, you can also select items by entering the corresponding number using number buttons.

## Locating a desired scene using a VCD/SVCD menu with PBC


A VCD or SVCD recorded with PBC has its own menus such as a list of contained songs. You can locate a specific scene by using these menus.



- During playback with PBC function

### 1 Press RETURN repeatedly, with SHIFT pressed until the menu appears on the TV screen.

Example:

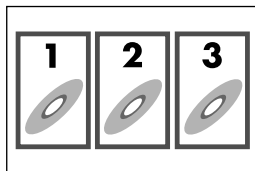

## 2 Press number buttons (1-10, +10) to select the number of the desired item.

- For details on using the number buttons, see "How to use the number buttons". (See page 15.)

### To return to the menu

Press RETURN repeatedly until the menu screen appears.

### When "NEXT" or "PREVIOUS" is shown on the TV screen:

- To go to the next page, press ►►.
- To return to the previous page, press ◀◀.

### NOTE

- If you want to play a PBC-compatible VCD/SVCD without using the PBC function, perform any of the following:
  - Start playback by pressing number buttons while stopped.
  - Press ►► repeatedly until the desired track number is displayed, then start playback by pressing ► (play button). The track number appears on the display window instead of "PBC".
- To activate the PBC function when playing a PBC-compatible VCD/SVCD without using the PBC function, perform any of the following:
  - Press TOP MENU/PG or MENU/PL.
  - Press ■ twice to stop playback, then press ► (play button).

## Locating a desired chapter using the on-screen bar

- During playback



### 1 Press ON SCREEN twice.

 
The on-screen bar appears on the TV screen.

### 2 Press Cursor ►/◀ to highlight CHAP.►.

### 3 Press ENTER.

Example:

During DVD VIDEO playback



### 4 Press number buttons (0-9) to enter the desired chapter number.

Example:

- To select 8: Press 8.
- To select 10: Press 1, then 0.
- To select 20: Press 2, then 0.
- To select 37: Press 3, then 7.

### To correct a misentry

Repeat step 4.

### 5 Press ENTER.

### 6 Press ON SCREEN.

The on-screen bar disappears.

### NOTE

- You can select up to the 99th chapter.

## Locating a desired position by specifying the time

You can locate a desired position by specifying the time from the beginning the disc (while stopped) or the current title/track (during playback).

- For DVD VIDEO/DVD VR:
  - During playback
- For VCD/SVCD:
  - While stopped or during playback without PBC function
- For CD:
  - During playback or while stopped



### ■ When specifying the elapsed playing time from the beginning of the disc

Perform the following procedure while stopped.

### ■ When specifying the elapsed playing time from the beginning of current title/track

Perform the following procedure during playback.

- 1 Press ON SCREEN twice.**  
The on-screen bar appears on the TV screen.
- 2 Press Cursor ▶/◀ to highlight ⌚→.**
- 3 Press ENTER.**



### 4 Use number buttons (0-9) to enter the time.

You can specify the elapsed playing time from the beginning of the disc (while stopped) or from the beginning of the current title/track (during playback).

Example:

To play back from a point 2 (hours): 34 (minutes): 08 (seconds) elapsed

TIME \_:\_\_:\_\_ ⇒ TIME 2:\_\_:\_\_ ⇒  
Press 2                      Press 3

TIME 2:3\_\_:\_\_ ⇒ TIME 2:34:\_\_:\_\_ ⇒  
Press 4                      Press 0

TIME 2:34:0\_ ⇒ TIME 2:34:08  
Press 8

**To cancel a misentry**  
 Press Cursor ◀ repeatedly.

- 5 Press ENTER.**
- 6 Press ON SCREEN.**  
 The on-screen bar disappears.

#### NOTE


- You can specify time in hours/minutes/seconds for DVD VIDEO/ DVD VR and in minutes/seconds for VCD/SVCD/CD.

## Using the file control display

You can search and play desired groups and tracks/files using the file control display on the TV screen.



Current group / total group number      Playback mode (PROGRAM, RANDOM, REPEAT)

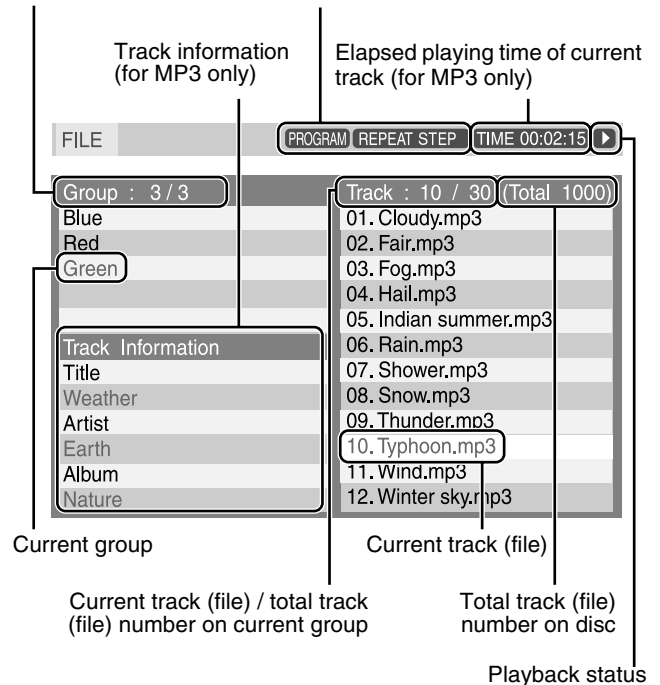

The file control display appears automatically during playback (for MP3) or while stopped.



- For MP3:  
During playback or while stopped
- For JPEG:  
While stopped

**1 Press Cursor ▶/◀/▼/▲ to select the desired group/track/file.**

- For MP3, playback starts from the selected track.
- For JPEG, proceed to perform the following operation.

**2 Press DVD/CD▶ or ENTER.**

- Track playback/slide-show starts from the selected track/file.
- When you press ENTER for JPEG, only the selected file is played back.

**To skip the file during playback**

Press ▶▶1/◀◀ or Cursor ▲/▼.

**NOTE**

- You can also check playback information on the display window. (See page 14.)
- Some group, track and file names may not be displayed correctly depending on recording conditions.
- The order of groups, tracks and files may be displayed differently from the order displayed on your personal computer.

## Resume playback

When Resume Playback is set to “ON” (see page 30) and you stop playback by the following operations, the position where playback has been stopped is stored. (“RESUME” appears on the display window.)



- Turning off the power (see page 10)
- Pressing ■ once
- Changing the source (see page 11)

**To start playback from the stored position**

(“RESUME” disappears.)

- Press ▶ (play button) on the remote control or the center unit.
- Select DVD as the source again if you changed the source.

**To clear the stored position**

Press ■ again or open the disc tray.

## Selecting a view angle

- During playback of a disc containing multi-view angles



**When using the ANGLE button:**

**1 Press ANGLE, with SHIFT pressed.**

Example:

The first view angle is selected out of 3 view angles recorded.



**2 Press ANGLE repeatedly, with SHIFT pressed or Cursor ▼/▲ to select the desired view angle.**

 
**When using the on-screen bar:**

**1 Press ON SCREEN twice.**

The on-screen bar appears on the TV screen.

**2 Press Cursor ▶/◀ to highlight 1/3.**

**3 Press ENTER.**



**4 Press Cursor ▼/▲ to select the desired view angle.**

**5 Press ENTER.**

**6 Press ON SCREEN.**

The on-screen bar disappears.

## Selecting the subtitle

- During playback of a disc containing subtitles in several languages

 


When using the **SUBTITLE** button:

### 1 Press SUBTITLE.

Example (DVD VIDEO):

“ENGLISH” is selected out of 3 subtitle languages recorded.



### 2 Press Cursor ▼/▲ to select the desired subtitle.

For DVD VR

- Pressing SUBTITLE activates the subtitles (subpictures) regardless of whether the subtitles are recorded or not. (Subpictures will not change if no subpicture is recorded.)

For SVCD

- An SVCD can contain up to four subtitles. Pressing SUBTITLE changes the subtitles regardless of whether the subtitles are recorded or not. (Subtitles will not change if no subtitle is recorded.)

#### NOTE

- Each time you press SUBTITLE, the subtitle appears and disappears alternately.

When using the on-screen bar:

### 1 Press ON SCREEN twice.

The on-screen bar appears on the TV screen.

### 2 Press Cursor ►/◀ to highlight 1/3 .

### 3 Press ENTER.



### 4 Press Cursor ▼/▲ repeatedly to select the desired subtitle.

### 5 Press ENTER.

### 6 Press ON SCREEN.

The on-screen bar disappears.

#### NOTE

- Some subtitle or audio languages are abbreviated in the pop-up window. See “The language codes list”. (See page 28.)
- Each time you press SUBTITLE, the subtitle appears and disappears alternately.

## Selecting the audio

- During playback of a disc containing audio in several languages

 


When using the **AUDIO** button:

### 1 Press AUDIO.

Example (DVD VIDEO):

“ENGLISH” is selected out of 3 audio languages recorded.



### 2 Press AUDIO repeatedly or Cursor ▼/▲ to select the desired audio.

 
When using the on-screen bar:

### 1 Press ON SCREEN twice.

The on-screen bar appears on the TV screen.

### 2 Press Cursor ►/◀ to highlight 1/3 .

### 3 Press ENTER.



### 4 Press Cursor ▼/▲ to select the desired audio.

### 5 Press ENTER.

### 6 Press ON SCREEN.

The on-screen bar disappears.

#### NOTE

- Some subtitle or audio languages are abbreviated in the pop-up window. See “The language codes list”. (See page 28.)
- “ST”, “L” and “R” is displayed when playing a DVD VR, VCD or SVCD respectively representing “stereo”, “left sound” and “right sound”.

## Special picture playback

### Frame-by-frame playback

- During playback

#### Press **II** repeatedly.

Each time you press the button, the still picture advances by one frame.

#### To return to normal playback

Press DVD/CD **▶**.



### Playing back in slow-motion

- During playback

#### 1 Press **II** at the point where you want to start playback in slow-motion form.

The system pauses playback.

#### 2 Press **SLOW** **⊕**.

- Playback in forward slow-motion starts.

For DVD VIDEO only:

- To play back in reverse slow-motion, press **SLOW** **⊖**.

Each time you press the button, the playback speed become faster.

#### To return to normal playback

Press DVD/CD **▶**.

#### NOTE

- Sound cannot be heard during slow-motion playback.

### Zooming in

- During playback or while paused

#### 1 Press **ZOOM**, with **SHIFT** pressed.

Each time you repeat the procedure, the scene magnification changes.

#### 2 While zoomed in, press **Cursor** **▶/◀/▼/▲** to move zoom-in area.

#### To return to normal playback

Press **ZOOM** repeatedly, with **SHIFT** pressed to select OFF.

#### NOTE

- The number of the magnification steps varies depending on the disc type.
- During slide-show playback of JPEG, zooming in is not available. In such a case, press **II** to pause slide-show playback, then zoom in.
- During JPEG playback, there may be a case where **Cursor** (**▶/◀/▼/▲**) does not work in step 2.

## Changing the VFP setting

The VFP (Video Fine Processor) function enables you to adjust the picture character according to the type of programming, picture tone or personal preference.



- During playback

#### 1 Press **VFP**.

The current VFP settings appear on the TV screen.

Example:

NORMAL	
GAMMA	0
BRIGHTNESS	0
CONTRAST	0
SATURATION	0
TINT	0
SHARPNESS	0

#### 2 Press **Cursor** **▶/◀** repeatedly to select the VFP mode.

- **NORMAL**: Normally select this.
- **CINEMA**: Suitable for movies.

When you select "NORMAL" or "CINEMA", press **VFP** to complete the setting.

- **USER 1** and **USER 2**:

You can adjust parameters that affect picture appearance.

#### Only when selecting "USER 1" or "USER 2" in step 2, proceed to perform the following operation;

#### 3 Press **Cursor** **▼/▲** repeatedly to select a parameter you want to adjust.

Adjust gradually and confirm picture appearance results are as preferred.

- **GAMMA**: Controls brightness of neutral tints while maintaining brightness of dark and bright portions.
- **BRIGHTNESS**: Controls screen brightness.
- **CONTRAST**: Controls screen contrast.
- **SATURATION**: Controls screen color depth.
- **TINT**: Controls screen tint.
- **SHARPNESS**: Controls screen sharpness.

Continued on next page

## 4 Press ENTER.

Example:



## 5 Press Cursor ▼/▲ to change the setting.

## 6 Press ENTER.

The current VFP settings appear again.

## 7 Repeat steps 3 to 6 to adjust other parameters.

## 8 Press VFP.

### NOTE


- Although the setting display disappears in the middle of the procedure, the setting at that time will be stored.

## Program playback

- While stopped



## 1 Press PLAY MODE repeatedly until program window appears on the TV screen.

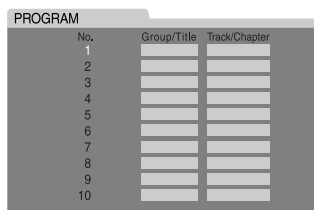

USE NUMERIC KEYS TO PROGRAM TRACKS.  
USE CANCEL TO DELETE THE PROGRAM.

## 2 Follow the instructions that appear on the TV screen to program the desired chapters/tracks.

- For details on using the number buttons, see “How to use the number buttons”. (See page 15.)
- The content’s numbers that you have to specify for programming varies depending on the disc type:
  - DVD VIDEO: Titles and chapters
  - VCD, SVCD, CD: Tracks
  - MP3: Groups and tracks
- You can specify the chapters/tracks whose number is up to 99.
- (For CD, SVCD or VCD) When the total playback time exceeds 99 minutes 59 seconds, “-:–” will appear on the display window. But, it is possible to continue programming.

### To clear the programs one by one from the last entered number

Press CANCEL repeatedly.

### To clear all programs

Press ■.

You can also clear the program by turning off the system.

## 3 Press DVD/CD▶ to start Program Playback.

If all of the programmed tracks/files have been played back, playback stops and the program window appears again. Note that program setting remains.

### To check the program contents

During playback, press ■. Playback stops and the program window appears.

### To quit the Program mode

While stopped, press PLAY MODE repeatedly until both program window and “RANDOM” disappears from the TV screen.

### NOTE

- The Resume function cannot be used with Program Playback.
- Program Playback may not work for some discs.

## Random playback

You can play titles or tracks on a disc in random order.



- While stopped

## 1 Press PLAY MODE repeatedly until “RANDOM” appears on the TV screen.

## 2 Press ▶ (play button).

After playing all titles/tracks on the disc, the system stops playback and quits the Random mode.

### To quit the Random mode

While stopped, press PLAY MODE repeatedly until both program window and “RANDOM” disappear from the TV screen.

You can also clear the Random mode by turning off the system.


### NOTE

- The same title/track will not be played back more than once during Random Playback.


# Repeat playback

## Repeating the current selection

- For DVD VIDEO/DVD VR:  
During playback
- For VCD/SVCD:  
During playback without PBC  
function or stopped
- For CD/MP3/JPEG:  
During playback or stopped

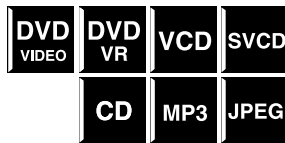

 **When using the REPEAT button:  
Press REPEAT, with SHIFT pressed.**



Repeat mode indicator

Each time you press REPEAT, the Repeat mode changes.


Display window	TV screen	Meanings
↺	↺GROUP	Repeats the current group for MP3/JPEG.
	REPEAT GROUP	
	↺TITLE	Repeats the current title for DVD VIDEO.
	↺PG	Repeats the current title for Original program for DVD VR.
↺ ALL	↺PL	Repeats the current playlist for Playlist for DVD VR.
	↺ALL	Repeats all title/tracks/files for DVD VR/VCD/SVCD/CD/MP3/JPEG.
REPEAT ALL		
↺ 1	↺TRACK, ↺STEP	Repeats the current track for VCD/SVCD/CD/MP3.
	REPEAT TRACK, REPEAT STEP	
	↺CHAP, ↺STEP	Repeats the current chapter for DVD VIDEO/DVD VR.
	REPEAT STEP	
No indication	↺OFF	Repeat mode is off. The system plays back the disc normally.

**NOTE**

 - For DVD VIDEO, REPEAT ALL may not be available depending on the disc.

**When using the on-screen bar (except for MP3/JPEG):**

- 1 Press ON SCREEN twice.**  
The on-screen bar appears on the TV screen.
- 2 Press Cursor ▶/◀ to highlight ↺ OFF.**
- 3 Press ENTER.**




- 4 Press Cursor ▼/▲ repeatedly to select the Repeat mode.**
- 5 Press ENTER.**
- 6 Press ON SCREEN.**  
The on-screen bar disappears.

**To cancel Repeat Playback**  
Select "OFF" in step 4.

## Repeating a desired part [A-B Repeat]

You can repeat playback of a desired part by specifying the beginning (point A) and ending (point B).

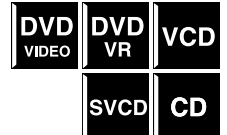

- During playback

**When using the A-B RPT button:**


- 1 Press A-B RPT, with SHIFT pressed at the beginning of the part you want to repeat (point A).**  
The repeat mode indicator "↺ A - " appears on the display window.
- 2 Press A-B RPT again, with SHIFT pressed at the end of the part you want to repeat (point B).**  
The repeat mode indicator on the display window changes to "↺ A - B" and A-B Repeat Playback starts. The selected part of the disc (between point A and B) is played repeatedly.

 


**To cancel**

Press A-B RPT, with SHIFT pressed during A-B Repeat Playback.

**When using the on-screen bar:**

- 1 Press ON SCREEN twice.**  
The on-screen bar appears on the TV screen.
- 2 Press Cursor ►/◄ to highlight**  OFF.
- 3 Press ENTER.**



- 4 Press Cursor ▼/▲ repeatedly to select “A-B”.**
- 5 Press ENTER at the beginning of the part you want to repeat (point A).**



- 6 Press ENTER at the end of the part you want to repeat (point B).**  
A-B Repeat Playback starts.

- 7 Press ON SCREEN.**  
The on-screen bar disappears.

**To cancel**

Select “OFF” in step 4, then press ENTER.

 
 
**NOTE**


- When playing back a DVD VIDEO, A-B Repeat Playback is possible only within the same title.
- “A-B” cannot be selected during Program and Random Playback.
- “A-B” cannot be selected during playback with PBC function.

## Tray lock

You can lock the tray and prohibit the unwanted disc ejection.

**On the center unit ONLY:**

While the system is on standby mode, press , with  pressed and held.

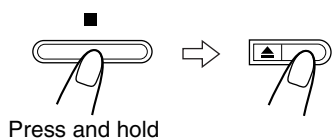

- The system turns on and “LOCKED” appears on the display window.
- If you try to eject the disc, “LOCKED” appears to indicate that the tray is locked.

**To cancel**

Carry out the same operation again.

- The system turns on and “UNLOCKED” appears on the display window.

## Balance setting

You can adjust the balance between the front left and front right speakers.

**NOTE**

- This function also takes effect for the sources other than DVD.
- Before you start operation; There is a time limit when doing the following steps. If the setting is cancelled before you finish, start from step 1 again.

- 1 Press SETTING, with SHIFT pressed.**

Example:



- 2 Press Cursor ►/◄ to make an adjustment or selection.**

Example:




The adjustment display automatically disappears a few seconds later with the current setting.

# Setting DVD preferences

## Using the setup menus

- You can change the language used in the setup menus. See “Menu description”.

### Basic operation on the setup menus

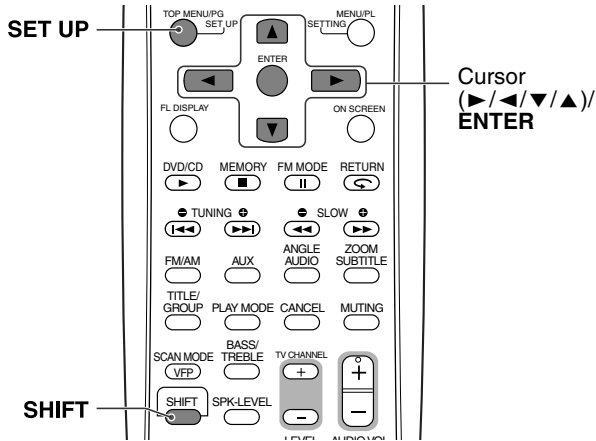

- While stopped

**1** Press **SET UP**, with **SHIFT** pressed.



**2** Follow the instructions that appear on the TV screen.

## Menu description

### A: Language menu (LANGUAGE)

#### ■ MENU LANGUAGE

Some DVDs have their own menus in multiple languages.

- Select the initial menu language\*.

#### ■ AUDIO LANGUAGE

Some DVDs have multiple audio languages.

- Select the initial audio language\*.

#### ■ SUBTITLE

Some DVDs have multiple subtitle languages.

- Select the initial subtitle language\*.

#### ■ ON SCREEN LANGUAGE

- Select the language shown on the TV screen when operating this system.

\* When the language you have selected is not recorded to a disc, the original language is automatically used as the initial language.

### NOTE

- See the following “The language codes list” for the code of each language, such as “AA”, etc.

### The language codes list

 
AA	Afar	IK	Inupiak	RN	Kirundi
AB	Abkhazian	IN	Indonesian	RO	Rumanian
AF	Afrikaans	IS	Icelandic	RU	Russian
AM	Ameharic	IW	Hebrew	RW	Kinyarwanda
AR	Arabic	JI	Yiddish	SA	Sanskrit
AS	Assamese	JW	Javanese	SD	Sindhi
AY	Aymara	KA	Georgian	SG	Sangho
AZ	Azerbaijani	KK	Kazakh	SH	Serbo-Croatian
BA	Bashkir	KL	Greenlandic	SI	Singhalese
BE	Byelorussian	KM	Cambodian	SK	Slovak
BG	Bulgarian	KN	Kannada	SL	Slovenian
BH	Bihari	KO	Korean (KOR)	SM	Samoan
BI	Bislama	KS	Kashmiri	SN	Shona
BN	Bengali, Bangla	KU	Kurdish	SO	Somali
BO	Tibetan	KY	Kirghiz	SQ	Albanian
BR	Breton	LA	Latin	SR	Serbian
CA	Catalan	LN	Lingala	SS	Siswati
CO	Corsican	LO	Laothian	ST	Sesotho
CS	Czech	LT	Lithuanian	SU	Sundanese
CY	Welsh	LV	Latvian, Lettish	SV	Swedish
DA	Danish	MG	Malagasy	SW	Swahili
DZ	Bhutani	MI	Maori	TA	Tamil
EL	Greek	MK	Macedonian	TE	Telugu
EO	Esperanto	ML	Malayalam	TG	Tajik
ET	Estonian	MN	Mongolian	TH	Thai
EU	Basque	MO	Moldavian	TI	Tigrinya
FA	Persian	MR	Marathi	TK	Turkmen
FI	Finnish	MS	Malay (MAY)	TL	Tagalog
FJ	Fiji	MT	Maltese	TN	Setswana
FO	Faroese	MY	Burmese	TO	Tonga
FY	Frisian	NA	Nauru	TR	Turkish
GA	Irish	NE	Nepali	TS	Tsonga
GD	Scots Gaelic	NL	Dutch	TT	Tatar
GL	Galician	NO	Norwegian	TW	Twi
GN	Guarani	OC	Occitan	UK	Ukrainian
GU	Gujarati	OM	(Afan) Oromo	UR	Urdu
HA	Hausa	OR	Oriya	UZ	Uzbek
HI	Hindi	PA	Panjabi	VI	Vietnamese
HR	Croatian	PL	Polish	VO	Volapuk
HU	Hungarian	PS	Pashto, Pushto	WO	Wolof
HY	Armenian	PT	Portuguese	XH	Xhosa
IA	Interlingua	QU	Quechua	YO	Yoruba
IE	Interlingue	RM	Rhaeto-Romance	ZU	Zulu

### : Picture menu (PICTURE)

#### ■ MONITOR TYPE

You can select the monitor type to match your TV when you play DVDs recorded in the picture's height/width ratio of 16:9.

- **16:9 (Wide television conversion)**  
Select this when the aspect ratio of your TV is 16:9 (wide TV).
- **4:3 LB (Letter Box conversion)**  
Select this when the aspect ratio of your TV is 4:3 (conventional TV). While viewing a wide screen picture, the black bars appear on the top and the bottom of the screen.
- **4:3 PS (Pan Scan conversion)**  
Select this when the aspect ratio of your TV is 4:3 (conventional TV). While viewing a wide screen picture, the black bars do not appear, however, the left and right edges of the pictures will not be shown on the screen.



Ex.: 16:9



Ex.: 4:3 LB



Ex.: 4:3 PS

#### NOTE

- Even if "4:3 PS" is selected, the screen size may become "4:3 LB" with some DVDs. This depends on how DVDs are recorded.

#### ■ PICTURE SOURCE

You can obtain optimal picture quality by selecting whether the content on the disc is processed by field (video source) or by frame (film source).

Normally set to "AUTO".

- **AUTO**  
Used to play a disc containing both video and film source materials.  
This system recognizes the source type (video or film) of the current disc according to the disc information.
  - If the playback picture is unclear or noisy, or the oblique lines of the picture are rough, try to change to other modes.
- **FILM**  
Suitable for playing back a film source disc.
- **VIDEO**  
Suitable for playing back a video source disc.

#### ■ SCREEN SAVER (See page 15.)

You can activate or deactivate Screen Saver function.

#### ■ FILE TYPE

When several types of files are recorded on a disc, you can select which files to play.

- **AUDIO**  
Select this to play MP3 files.
- **STILL PICTURE**  
Select this to play JPEG files.

### : Audio menu (AUDIO)

#### ■ D. RANGE COMPRESSION

(Dynamic range compression)

You can enjoy low level recorded sound clearly at night even at a low volume when listening to the sound with Dolby Digital.

- **AUTO**  
Select this when you want to enjoy surround sound with its full dynamic range (no effect applied).
- **ON**  
Select this when you want to fully apply the compression effect (useful at midnight).

#### NOTE

- When you play a multichannel Dolby Digital source with the surround mode is off, the setting of D. RANGE COMPRESSION is set to ON automatically.



## Setting DVD preferences



### Speaker setting menu (SPK. SETTING)

#### ■ Level menu (LEVEL)

##### FRONT LEFT SPEAKER/FRONT RIGHT SPEAKER/ CENTER SPEAKER/SURROUND RIGHT SPEAKER/ SURROUND LEFT SPEAKER

While monitoring the test tone, adjust the output level of the speakers.

You can adjust the output level in the -6 dB to +6 dB range.

##### TEST TONE\*


###### Outputs the test tone.

\* The test tone comes out of all of the activated speakers in the following sequence:

⇒ Front left speaker ⇒ Center speaker ⇒ Front right speaker ⇒ Surround right speaker ⇒ Surround left speaker ⇒ (back to the beginning)

#### ■ Delay menu (DELAY)

Example:

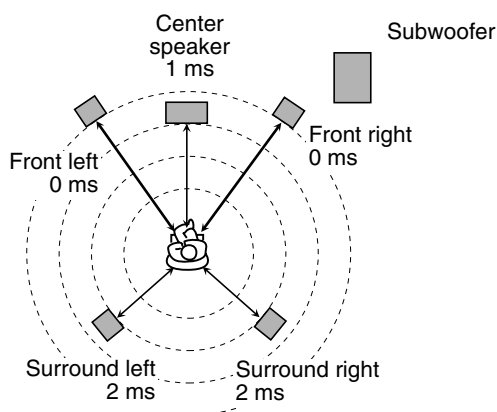

In this case, set the delay time of each speaker as follows;

- Delay time of front speakers: 0 ms
- Delay time of center speaker: 1 ms
- Delay time of surround speakers: 2 ms

##### FRONT LEFT SPEAKER/FRONT RIGHT SPEAKER/ CENTER SPEAKER/SURROUND RIGHT SPEAKER/ SURROUND LEFT SPEAKER

Adjust the distance from the listening position to the speakers.

**Within the range from 0 ms to 15 ms. (by 1 ms)**

#### ■ Subwoofer menu (SUBWOOFER)

##### LEVEL

You can set the output level of the subwoofer in the -6 dB to +6 dB range.

##### CROSS OVER

The signals below the preset frequency level will be sent to and be reproduced by the subwoofer.

Select one of the cross over frequency levels according to the bass sound quality from the front/center/surround speakers.



### Other setting menu (OTHERS)

#### ■ RESUME (See page 22.)


You can activate or deactivate Resume Playback function.

#### ■ ON SCREEN GUIDE

You can activate or deactivate the on-screen guide icons. (See page 13.)

# Tuner operations

The buttons described below are used on pages 31 and 32.

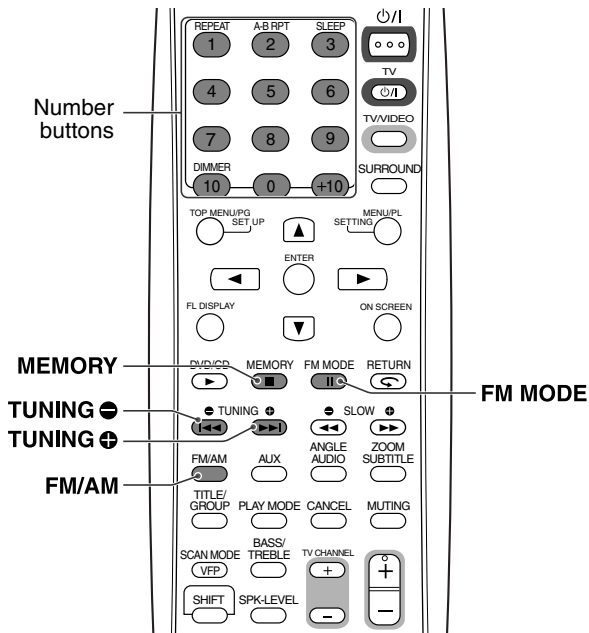


## Manual tuning

### 1 Press FM/AM repeatedly to select the band.

Example:

 When the system is tuned in to 810 kHz.



### 2 Press TUNING +/- repeatedly until you find the frequency you want.

When you hold down the button until the system starts searching for stations and then release it, the system stops searching automatically when a station of sufficient signal strength is tuned in to.

#### NOTE

- When an FM stereo program is received, the ST indicator lights on the display window.

## Preset tuning

Once a station is assigned to a channel number, the station can be quickly tuned in. You can preset 30 FM and 15 AM stations.

 
### ■ To preset the stations

#### 1 Tune in the station you want to preset.


- If you want to store the FM reception mode for an FM station, select the reception mode you want. See “Selecting the FM reception mode”.

Example:

When the system is tuned in to 103.5 MHz.



#### 2 Press MEMORY.

 


While “--” are flashing:

#### 3 Press number button(s) (1-10, +10) to select a preset number you want.

 - For details on using the number buttons, see “How to use the number buttons”. (See page 15.)

Example:

When the preset channel 1 is selected.



If the setting is cancelled before you finish, start from step 2 again.

While the selected number is flashing:

#### 4 Press MEMORY.

The selected number stops flashing.

The station is assigned to the selected preset number.

If the setting is cancelled before you finish, start from step 2 again.

#### 5 Repeat steps 1 to 4.

- Storing a new station to a used number erases the previously stored one.

### ■ To tune in to a preset station

#### 1 Press FM/AM repeatedly to select FM or AM.

#### 2 Press number button(s) (1-10, +10) to select a preset number.

- For details on using the number buttons, see “How to use the number buttons”. (See page 15.)

## Selecting the FM reception mode

When the stereo FM program currently tuned in is noisy, you can change the FM reception mode to improve the reception.

- While listening to an FM station

#### Press FM MODE.

The FM reception mode appears on the display window.

Each time you press the button, the FM reception mode changes.

##### • AUTO:

When a program is broadcast in stereo, you will hear stereo sound. (The ST indicator lights on the display window.) When in monaural, you will hear monaural sound. This mode is also useful to suppress static noise between stations.


##### • MONO:

Reception will be improved although you will lose the stereo effect. (The MONO indicator lights on the display window.) In this mode, you will hear noise until you are tuned in to a station.

## Maintenance

### ■ Handling Discs

- Remove the disc from its case by holding it at the edge while pressing the center hole lightly.
- Do not touch the shiny surface of the disc or bend the disc.
- Put the disc back in its case after use to prevent warping.
- Be careful not to scratch the surface of the disc when placing it back in its case.
- Avoid exposure to direct sunlight, temperature extremes and moisture.

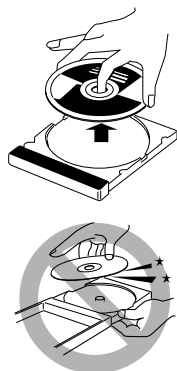

### To clean the disc

Wipe the disc with a soft cloth in a straight line from center to edge.

- **DO NOT use any solvent — such as conventional record cleaner, spray, thinner or benzine — to clean the disc.**



### ■ Cleaning the system

- Stains on the system should be wiped off with a soft cloth. If the system is heavily stained, wipe it with a cloth soaked in water diluted neutral detergent and wrung well, then wipe clean with a dry cloth.
- Since the system may deteriorate in quality, become damaged or get its paint peeled off, be careful about the following.
  - DO NOT wipe it with a hard cloth.
  - DO NOT wipe it strong.
  - DO NOT wipe it with thinner or benzine.
  - DO NOT apply any volatile substance such as insecticides to it.
  - DO NOT allow any rubber or plastic to remain in contact with it for a long time.

## Troubleshooting

PROBLEM	POSSIBLE CAUSE	SOLUTION
Power does not come on.	The power cord is not connected.	Connect the power cord correctly. (See page 8.)
The remote control does not work.	The batteries are exhausted.	Replace the batteries. (See page 5.)
	Sunlight is falling directly on the remote sensor.	Hide the remote sensor from direct sunlight.
The remote control does not work as expected.	The remote control mode is not for the desired source.	Before operation, press one of the source selecting buttons for the desired source.
No sound.	The speaker cord is not connected.	Check the connection. (See page 7.)
	An incorrect source has been selected.	Select the correct source. (See page 11.)
No picture is displayed on the TV screen.	The video cable is not connected correctly.	Connect the cable correctly. (See page 8.)
	The disc is not playable.	Use a playable disc. (See page 3.)
No picture is displayed on the TV screen, the picture is blurred, or the picture is divided into two parts.	The scan mode is set to "PROGRESS" though the center unit is connected to the TV which does not support the progressive video input.	Change the scan mode to "INTER,". (See page 12.)
Video and audio are distorted.	The disc is scratched or dirty.	Replace or clean the disc.
	A VCR is connected between the center unit and the TV.	Connect the center unit and TV directly. (See page 8.)
The picture does not fit the TV screen.	The monitor type is not set correctly.	Set "MONITOR TYPE" properly. (See page 29.)
Hard to listen to broadcast because of noise.	Antennas are disconnected.	Reconnect the antennas correctly and securely. (See page 6.)
The system suddenly turns off.	The playback level of the current source is too high.	Play back the source with lower volume level.

## Specifications

### ■ Center unit (XV-THS11B)

#### Audio section

Front/Center/Surround: 33 W per channel, RMS at 6  $\Omega$  at 1 kHz, with 10% total harmonic distortion.  
 Subwoofer: 40 W, RMS at 4  $\Omega$  at 100 Hz, with 10% total harmonic distortion.

#### Video section

Video System: NTSC  
 Horizontal Resolution: 500 lines  
 Signal-to-Noise Ratio: 64 dB  
 Video output level  
   Composite: 1.0 V(p-p)/75  $\Omega$   
   S-video-Y: 1.0 V(p-p)/75  $\Omega$   
   S-video-C: 0.286 V(p-p)/75  $\Omega$   
   Component (Interlace/Progressive):  
   Y: 1.0 V(p-p)/75  $\Omega$   
   P<sub>B</sub>/P<sub>R</sub>: 0.7 V(p-p)/75  $\Omega$

#### Tuner section

Tuning Range  
   FM: 87.5 MHz to 108.0 MHz  
   AM: 530 kHz to 1 710 kHz

#### Speaker impedance

Front/Center/Surround: 6  $\Omega$  to 16  $\Omega$   
 Subwoofer: 4  $\Omega$  to 16  $\Omega$

#### General

Power Requirements: AC 120 V  $\sim$ , 60 Hz  
 Power Consumption: 135 W (at operation)  
   1.3 W (in standby mode)  
 Dimensions (W  $\times$  H  $\times$  D):  
   360 mm  $\times$  65 mm  $\times$  370 mm  
 Mass: 5.3 kg

### ■ Front speakers (SP-THS11BF)

Type: 1-Way Bass-Reflex Type  
 (Magnetically-shielded Type)  
 Speaker: 8.0 cm cone  $\times$  1  
 Power Handling Capacity: 33 W  
 Impedance: 6  $\Omega$   
 Frequency Range: 90 Hz to 20 000 Hz  
 Sound Pressure Level: 84 dB/W·m  
 Dimensions (W  $\times$  H  $\times$  D):  
   92 mm  $\times$  101 mm  $\times$  95 mm  
 Mass: 0.58 kg each

### ■ Center speaker (SP-THS11BC)

Type: 1-Way Bass-Reflex Type  
 (Magnetically-shielded Type)  
 Speaker: 8.0 cm cone  $\times$  1  
 Power Handling Capacity: 33 W  
 Impedance: 6  $\Omega$   
 Frequency Range: 90 Hz to 20 000 Hz  
 Sound Pressure Level: 85 dB/W·m  
 Dimensions (W  $\times$  H  $\times$  D):  
   92 mm  $\times$  101 mm  $\times$  95 mm  
 Mass: 0.65 kg

### ■ Surround speakers (SP-THS11BS)

Type: 1-Way Bass-Reflex Type  
 Speaker: 8.0 cm cone  $\times$  1  
 Power Handling Capacity: 33 W  
 Impedance: 6  $\Omega$   
 Frequency Range: 90 Hz to 20 000 Hz  
 Sound Pressure Level: 82 dB/W·m  
 Dimensions (W  $\times$  H  $\times$  D):  
   92 mm  $\times$  101 mm  $\times$  95 mm  
 Mass: 0.56 kg each

### ■ Subwoofer (SP-THS11BW)

Type: 1-Way Bass-Reflex Type  
 Speaker: 15.0 cm cone  $\times$  1  
 Power Handling Capacity: 40 W  
 Impedance: 4  $\Omega$   
 Frequency Range: 40 Hz to 1 800 Hz  
 Sound Pressure Level: 84 dB/W·m  
 Dimensions (W  $\times$  H  $\times$  D):  
   129 mm  $\times$  284 mm  $\times$  337 mm  
 Mass: 3.0 kg

Designs & specifications are subject to change without notice.

# ***TO OUR VALUED CUSTOMER*** ———

THANK YOU FOR PURCHASING THIS JVC PRODUCT.  
WE WANT TO HELP YOU ACHIEVE A PERFECT EXPERIENCE.

**NEED HELP ON HOW TO HOOK UP?  
NEED ASSISTANCE ON HOW TO OPERATE?  
NEED TO LOCATE A JVC SERVICE CENTER?  
LIKE TO PURCHASE ACCESSORIES?**

**JVC<sup>®</sup> IS HERE TO HELP!**  
**TOLL FREE: 1(800)252-5722**  
**<http://www.jvc.com>**

Remember to retain your Bill of Sale for Warranty Service.

————— **Do not attempt to service the product yourself** —————

**Caution**

To prevent electrical shock, do not open the cabinet.  
There are no user serviceable parts inside.  
Please refer to qualified service personnel for repairs.

---



# LIMITED WARRANTY

USA ONLY

ONLY FOR PRODUCT PURCHASED IN U.S.A.

CONSUMER VIDEO 1-90

JVC COMPANY OF AMERICA (JVC) warrants this product and all parts thereof, except as set forth below ONLY TO THE ORIGINAL RETAIL PURCHASER to be FREE FROM DEFECTIVE MATERIALS AND WORKMANSHIP from the date of original purchase for the period shown below. ("The Warranty Period")

PARTS	<b>1 YR</b>	LABOR	<b>90 DAYS</b>
-------	-------------	-------	----------------

**THIS LIMITED WARRANTY IS VALID ONLY IN THE FIFTY (50) UNITED STATES, THE DISTRICT OF COLUMBIA AND IN THE COMMONWEALTH OF PUERTO RICO.**

### WHAT WE WILL DO:

If this product is found to be defective within the warranty period, JVC will repair or replace defective parts with new or rebuilt equivalents at no charge to the original owner. Such repair and replacement services shall be rendered by JVC during normal business hours at JVC authorized service centers. Parts used for replacement are warranted only for the remainder of the Warranty Period. All products may be brought to a JVC authorized service center on a carry-in basis. Color televisions with a screen size of 27" or greater qualify for in-home service. In such cases, a technician will come to your home and either repair the TV there or remove and return it if it cannot be repaired in your home.

### WHAT YOU MUST DO FOR WARRANTY SERVICE:

**Please do not return your product to the retailer**  
Instead, return your product to the JVC authorized service center nearest you. If shipping the product to the service center, please be sure to package it carefully, preferably in the original packaging, and include a brief description of the problem(s). Please call 1-800-252-5722 to locate the nearest JVC authorized service center. Service locations can also be obtained from our website <http://www.jvc.com>. If your product qualifies for in-home service, the service representative will require clear access to the product.

If you have any questions concerning your JVC Product, please contact our Customer Relations Department at 800-252-5722

### WHAT IS NOT COVERED:

This limited warranty provided by JVC does not cover:

1. Products which have been subject to abuse, accident, alteration, modification, tampering, negligence, misuse, faulty installation, lack of reasonable care, or if repaired or serviced by anyone other than a service facility authorized by JVC to render such service, or if affixed to any attachment not provided with the products, or if the model or serial number has been altered, tampered with, defaced or removed;
2. Initial installation, installation and removal from cabinets or mounting systems.
3. Operational adjustments covered in the Owner's Manual, normal maintenance, video and audio head cleaning;
4. Damage that occurs in shipment, due to act of God, and cosmetic damage;
5. Signal reception problems and failures due to line power surge;
6. User Removal Memory Devices/Video Pick-up Tubes/CCD Image Sensors are covered for 90days from the date of purchase;
7. Accessories;
8. Batteries (except that Rechargeable Batteries are covered for 90 days from the date of purchase);
9. Products used for commercial purposes, including, but not limited to rental.
10. Loss of data resultant from malfunction of hard drive or other data storage device.

There are no express warranties except as listed above.

THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN.

JVC SHALL NOT BE LIABLE FOR ANY LOSS OF USE OF THE PRODUCT, INCONVENIENCE, OR ANY OTHER DAMAGES, WHETHER DIRECT, INCIDENTAL OR CONSEQUENTIAL (INCLUDING, WITHOUT LIMITATION, DAMAGE TO TAPES, RECORDS OR DISCS) RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE, ARE LIMITED TO THE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion of incidental or consequential damages or limitations on how long an implied warranty lasts, so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

JVC COMPANY OF AMERICA  
 DIVISION OF JVC AMERICAS CORP.  
<http://www.jvc.com>

1700 Valley Road  
 Wayne, NJ 07470

REFURBISHED PRODUCTS CARRY A SEPARATE WARRANTY, THIS WARRANTY DOES NOT APPLY. FOR DETAIL OF REFURBISHED PRODUCT WARRANTY, PLEASE REFER TO THE REFURBISHED PRODUCT WARRANTY INFORMATION PACKAGED WITH EACH REFURBISHED PRODUCT.

**For customer use:**

Enter below the Model No. and Serial No. which is located either on the rear, bottom or side of the cabinet. Retain this information for future reference.

Model No. : \_\_\_\_\_ Serial No. : \_\_\_\_\_

Purchase date : \_\_\_\_\_ Name of dealer : \_\_\_\_\_

TH-S11B

DVD DIGITAL THEATER SYSTEM

**JVC**



EN

© 2007 Victor Company of Japan, Limited

0507YAMMDWJMM