



Instrucciones PDF

Usted puede leer las recomendaciones de la guía del usuario, la guía técnica o la guía de instalación para SAMSUNG RTS-E10. Encontrarás las respuestas a todas sus preguntas sobre la SAMSUNG RTS-E10 en el manual del usuario (información, especificaciones, consejos de seguridad, tamaño, accesorios, etc). Las instrucciones detalladas para la utilización aparecen en la Guía del usuario.

Manual de instrucciones SAMSUNG RTS-E10
Instrucciones de uso SAMSUNG RTS-E10
Manual de usuario SAMSUNG RTS-E10
Guía del usuario SAMSUNG RTS-E10
Modo de empleo SAMSUNG RTS-E10



[Tus instrucciones](#)
[SAMSUNG RTS-E10](#)

Manual de resumen:

Use of this product is for personal use only. Condensation may occur if your player or disc has been stored in cold temperatures. If transporting the player during the winter, wait approximately 2 hours until the unit has reached room temperature before using. The batteries used with this product contain chemicals that are harmful to the environment. Do not dispose of batteries in the general household trash. 4 4 contents FEATURES GB 2 3 7 2 What's included SAFETY INFORMATION 3 4 Safety Warnings Precautions GETTING STARTED 7 8 8 8 9 Before Reading the User's Manual Playable Discs Do not use the following types of disc! Copy Protection Disc Type and Characteristics DESCRIPTION 10 12 15 20 21 10 11 Front Panel Rear Panel REMOTE CONTROL 13 Tour of the Remote Control CONNECTIONS 15 17 18 19 Connecting the Speakers Connecting the Video Out to your TV Connecting Audio from External Components Connecting the FM Antenna BEFORE USING YOUR ROOM CINEMA PLAYBACK 21 22 23 25 27 33 Disc Playback MP3/WMA-CD Playback JPEG File Playback DivX Playback Using the Playback Function Playing Media Files using the USB Host Feature 5 SYSTEM SETUP 35 35 36 37 40 40 41 41 42 42 Setting the Language Setting The Audio Setting The Display Setting The Password Parental Controls Setting (Rating Level) Change Password DIVX(R) Registration Setting the DRC (Dynamic Range Compression) Setting the EQUALIZER Function 43 44 46 47 RADIO 43 Listening to Radio TROUBLESHOOTING USB HOST FEATURE SUPPORTED PRODUCTS 46 46 46 Digital Camera USB Flash Disc MP3 Player APPENDIX 47 48 Cautions on Handling and Storing Discs Specifications 6 getting started BEFORE READING THE USER'S MANUAL Make sure to check the following terms before reading the user manual. GB Icons that will be used in manual GETTING STARTED Icon Term DVD VCD Definition This involves a function available with DVD or DVD-R/DVD-RW discs that have been recorded and finalized in Video Mode. This involves a function available with VCD discs that have been recorded and finalized in Video Mode. This involves a function available with a data CD (CD-R or CD-RW). This involves a function available with CD-R/-RW discs.

This involves a function available with CD-R/-RW discs. This involves a function available with MPEG4 discs. (DVD±R/RW, CD-R or CD-RW) This involves a case where a function does not operate or settings may be cancelled. This involves tips or instructions on the page that help each function operate. B A G CD MP3 JPEG DivX Caution D M Note M In this manual, the instructions marked with "DVD (playable)" are applicable to DVD-VIDEO, DVD-AUDIO and DVD-R/-RW discs that have been recorded in Video Mode and then finalized. Where a particular DVD type is mentioned, it is indicated separately. If a DVD-R/-RW disc has not been recorded properly in DVD Video format, it will not be About the use of this user's manual 1) Be sure to be familiar with Safety Instructions before using this product. (See pages 3~4) 2) If a problem occurs, check the Troubleshooting. (See pages 44~45) Copyright ©2008 Samsung Electronics Co.

,Ltd. All rights reserved; No part or whole of this user's manual may be reproduced or copied without the prior written permission of Samsung Electronics Co.,Ltd. 7 DVD (Digital Versatile Disc) offers fantastic audio and video, thanks to Dolby Digital surround sound and MPEG-2 video compression technology. Now you can enjoy these realistic effects in the home, as if you were in a movie Cinema or concert hall. 1~6 Room Cinema Systems and the discs are coded by region. These regional codes must match in order for the disc to play. If the codes do not match, the disc will not play. The Region Number for this player is given on the rear panel of the player. (Your Room Cinema System will only play DVDs that are labeled with identical region codes.

) PLAYABLE DISCS Disc Type Mark (Logo) Recorded Signals 12 cm DVD-VIDEO VIDEO 8 cm Disc Size Max. Playing Time Approx. 240 min. (single-sided) Approx. 480 min. (doublesided) Approx. 80 min. (single-sided) Approx. 160 min. (doublesided) 74 min. 20 min. 74 min. 20 min 74 min. 20 min..



[Tus instrucciones](#)
[SAMSUNG RTS-E10](#)