American Standard ^{The} Installation ABOVE COUNTER SINK FOR USE WITH: 0660 LOFT Instructions 0670 MORNING 0680 PETAL Introduction: Thank you for selecting our products...products which have been the benchmarks of fine quality for years. To help insure that the installation process will proceed smoothly, please read these instructions carefully before you begin. Also, review the recommended tools and materials list; carefully unpack and examine your new plumbing fixture. **OBSERVE LOCAL PLUMBING AND BUILDING CODES** 730687-100 **Recommended Tools** Hacksaw Tubing Cutter Phillips Screwdriver Pipe Wrench Basin Wrench Regular Screwdriver & Materials Channel Lock Pliers Plumbers' Putty or Caulking Putty Knife Adjustable Wrench Drill Tape Measure 1A 2 Drill a clearance hole inside the Using the template provided, locate the position of the sink. Provide proper perimeter line of the template. clearance under the countertop for the fauce t supply lines, drain assembly and the structural parts of the cabinet. **NOTE:** If replacing an existing sink be certain to shut off water supply before Perimeter removing old sink. of template 1B BACKSPLASH Wall-mount faucet installations: Insure sufficient spout overhang into the sink. See manufacturer's Perimeter installation instructions and roughingof template in notes for minimum spout lengths.

Countertop faucet installations:

Using the template as a guide, locate the faucet hole on the countertop. Allow 1" minimum clearance between:

- the sink and faucet spout
- the sink and end of faucet handles
- the backsplash and faucet spout and handles

Use the faucet installation instructions for required clearances.





Cut opening around the perimeter of the template.

NOTE: For Wallmount or Countertop faucets, drill faucet holes according to manufacturer's instructions.









Before applying the sealant, place the sink temporarily into the cutout. Check for alignment and clearance. Then mark the sink *and* countertop in several places as a guide for the installation location.



After checking fit and alignment, turn sink upside down and apply a generous portion of sealant around the under side of the rim near the edge.



Connect supply line to faucet (finger tight) and carefully bend tubes to engage with the supply shut-off valves. Tighten connections at faucet and shut-off valves for secure seal.

7



Connect trap to drain assembly hand tight to check alignment. It may be necessary to cut off part of the tailpiece (area "B") or part of the horizontal leg of the

trap (area "C"). Secure joints for watertight assembly.

AMERICAN STANDARD ONE-YEAR LIMITED WARRANTY

If inspection of this American Standard plumbing product, within one year after its initial installation, confirms that it is defective in materials or workmanship, American Standard will repair or, at its option, exchange the product for a similar model.

This limited warranty **does not apply** to local building code compliance; since local building codes vary considerably, the purchaser of this product should check with a local building or plumbing contractor to insure local code compliance before installation.

This warranty **shall be void** if the product has been moved from its initial place of installation; if it has been subjected to faulty maintenance, abuse, misuse, accident or other damage; if it was not installed in accordance with American Standard's instructions; or if it has been modified in a manner inconsistent with the product as shipped by American Standard.

American Standard's option to repair or exchange the product under this warranty does not cover any labor or other costs of removal or installation, nor shall American Standard be responsible for any other incidental or consequential damages attributable to a product defect or to the repair or exchange of a defective product, all of which are expressly excluded from this warranty. (Some states or provinces do not allow the exclusion or limitation of implied warranties, so this exclusion may not apply to you.)

This warranty gives you specific legal rights. You may have other statutory rights that vary from state to state or from province to province, in which case this warranty does not affect such statutory rights.

For service under this warranty, it is suggested that a claim be made through the contractor or dealer from or through whom the product was purchased, or that a service request (including a description of the product model and of the defect) be sent to the following address:

In the United States:

American Standard Inc., P.O. Box 6820 Piscataway, New Jersey 08855 Attention: Director of Consumer Affairs

For residents of the United States, warranty information may also be obtained by calling the following toll free number: (800) 442-1902

> In Canada: American-Standard, 2480 Stanfield Rd., Mississauga, Ontario Canada L4Y 1S2

Toll Free: (800) 387-0369

In Mexico: Customer Service Manager Ideal Standard, S.A. de C.V. Via Morelos #330 Col. Santa Clara Ecatepec 55540 Edo. Mexico

Ideal

Standard

American Standard



Sadona Standard