


*American Standard*

**HERITAGE**  
AMARILIS

**HERITAGE SERIES  
DECK-MOUNTED  
KITCHEN FAUCETS**

**Installation  
Instructions**

**6270 SERIES  
6279 SERIES  
6272 SERIES  
6273 SERIES  
6274 SERIES  
6275 SERIES**

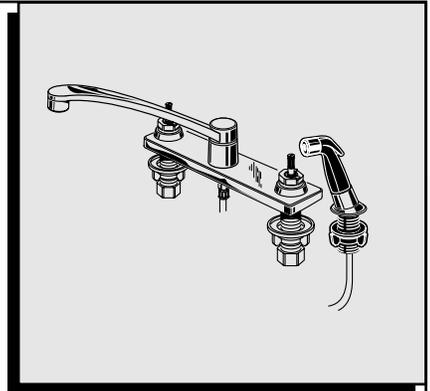


Certified to comply with ANSI A112.18.1M  
U.S. Patent No. 5,819,789


*Thank you for selecting American-Standard...the benchmark of fine quality for over 100 years.*

*To ensure that your installation proceeds smoothly—please read these instructions carefully before you begin.*


34794B M

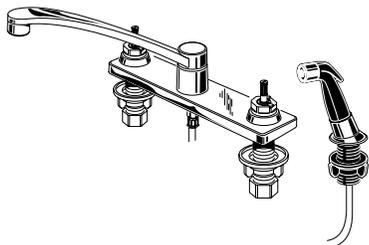


**6279 SERIES  
6270 SERIES**—LESS SPRAY

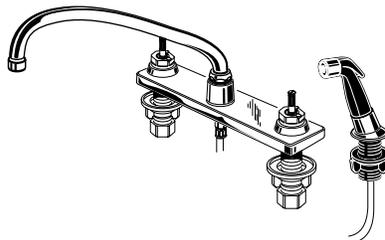

**6272 SERIES  
6273 SERIES**—LESS SPRAY

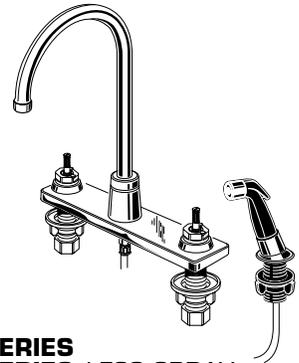

**6274 SERIES  
6275 SERIES**—LESS SPRAY

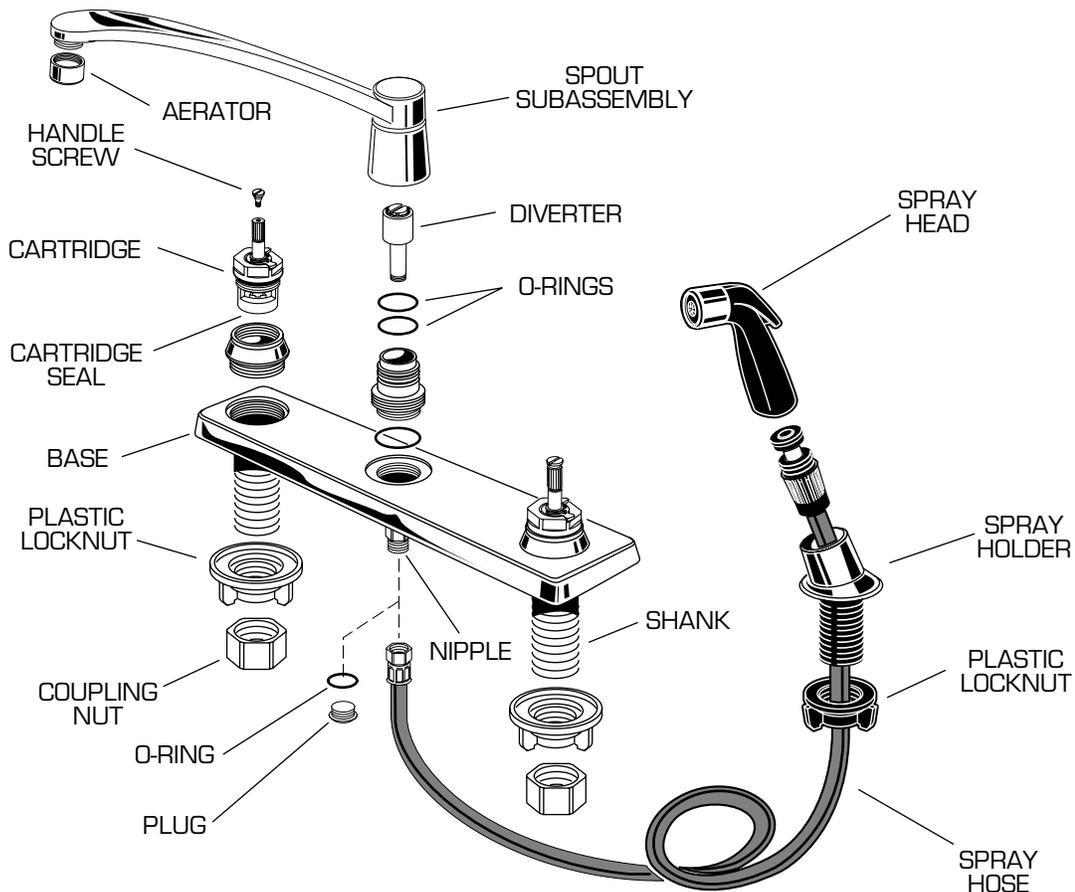


# 1

## CAUTION

Turn off hot and cold water supplies before beginning.

### FAUCET INSTALLATION

- Apply a bead of putty around the bottom inside edge of the faucet BASE.
- Press faucet into place on SINK.
- From underneath the SINK assemble the PLASTIC LOCKNUT to the shank and tighten. You do not need a tool to tighten the LOCKNUT.
- Connect the HOT water supply line to the left side of the faucet and the COLD water supply line to the right side with the appropriate connectors. Use THREAD SEALANT.

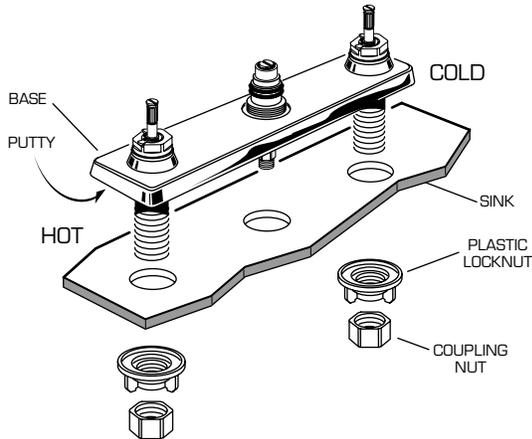


# 2

## HAND SPRAY INSTALLATION

### FOR MODEL 6279 ONLY:


- Place SPRAY HOLDER into separate hole of SINK.
- Assemble PLASTIC LOCKNUT onto SHANK of SPRAY HOLDER and tighten.
- Feed SPRAY HOSE through SPRAY HOLDER and attach COUPLING NUT of HOSE to NIPPLE of VALVE CENTER. Tighten COUPLING NUT firmly.
- Make certain that SPACER WASHER and RUBBER WASHER are attached to SPRAY HOSE and thread SPRAY HEAD to NUT.

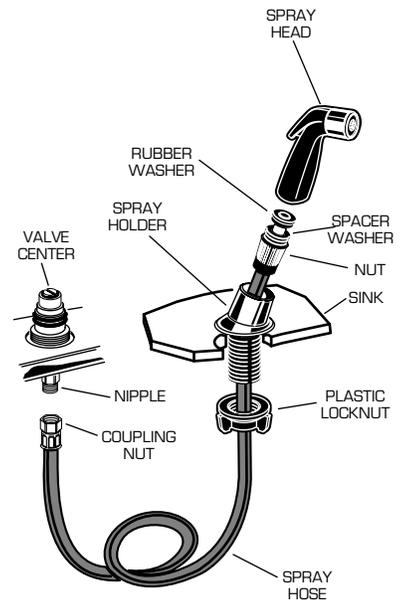

# 3

## SPOUT INSTALLATION

- Check that both O-RINGS are properly seated on the valve center.
- FOR MODELS WITH HAND SPRAY: Check that the DIVERTER PLUG is free and can move up and down.
- Apply the grease provided liberally to the O-RINGS.
  - Push the SPOUT SUBASSEMBLY on to the VALVE CENTER and tighten the SPOUT NUT until snug on valve body.

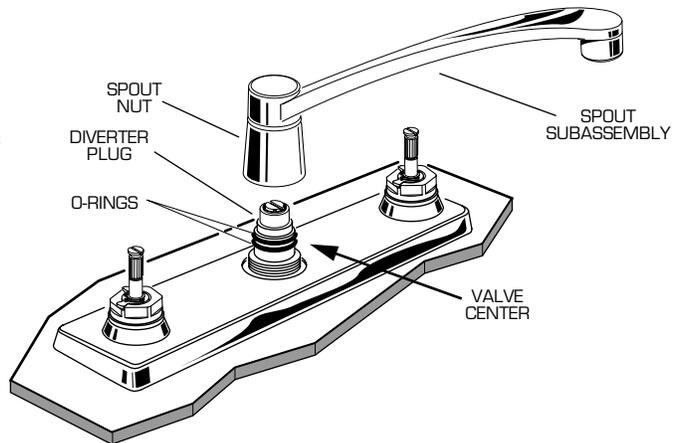

# 4


## TEST INSTALLED FAUCET

- Remove AERATOR.
- With handle in OFF position, turn on water supplies and check all connections for leaks.
- Operate both handles to flush water lines thoroughly. Check spout mounting and hose connections for leaks.
- Turn handles into OFF position and replace AERATOR.


# 5

## SERVICE

- To change direction of handle rotation, proceed as follows:
  - Turn valve to OFF position.
  - Remove INSERT and HANDLE SCREW.
  - Slip HANDLE with ADAPTER off.
  - Remove SPRING CLIP.
  - Lift STOP WASHER, turn 90° and replace.
  - Replace SPRING CLIP.
  - Replace ADAPTER, HANDLE, SCREW, and INSERT.
- AERATOR may accumulate dirt causing distorted and reduced water flow. Remove AERATOR and rinse clean.

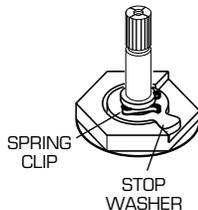

- If spout drips, operate handles several times from OFF to ON position. Do not force - handles turn only 90°.
- Plastic SCREEN in CARTRIDGE may accumulate dirt causing reduced water flow. To clean, first turn off hot and cold water supplies, then:
  - Remove INSERT and HANDLE SCREW.
  - Slip HANDLE with ADAPTER off.
  - Unscrew CARTRIDGE with wrench.
  - Thoroughly rinse plastic SCREEN at base of CARTRIDGE.
  - Replace CARTRIDGE until flange is tight against valve body.
  - Turn valves OFF.
  - Replace ADAPTER, HANDLE, SCREW, and INSERT.

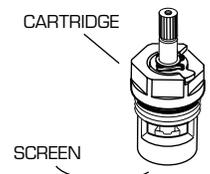

### HOTLINE FOR HELP

For toll-free information and answers to your questions, call:

1 (800) 223-0068

Weekdays 8:00 a.m. to 7:00 p.m. Eastern Time

Saturdays 8:00 a.m. to 4:00 p.m. Eastern Time

IN CANADA 1-800-387-0369 (TORONTO 1-416-536-5609)

Product names listed herein are trademarks of American Standard Inc.  
©American Standard Inc. 1999

34794B M