

INSTALLATION INSTRUCTIONS

For Two-Piece Toilets with *s m a r t v a l v e*™ 2000

Repertoire 2266/2280
Heritage 2176
Antiquity 2262/2264

Ellisse 2184
Infinity 2316/2319
Cascada 2321/2323

Cadet 2798/2898
Reminiscence 2311
Cadet Specifier 2783/2883

Thank you for selecting American Standard - the benchmark of fine quality for over 100 years. To ensure this product is installed properly, please read these instructions carefully before you begin. (Certain installations may require professional help.) Also be sure your installation conforms to local codes.

⚠ CAUTION: PRODUCT IS FRAGILE. TO AVOID BREAKAGE AND POSSIBLE INJURY HANDLE WITH CARE!

NOTE: Pictures may not exactly define contour of china and components.

RECOMMENDED TOOLS AND MATERIALS

Putty Knife	Regular Screwdriver	Adjustable Wrench	Sealant	Tape Measure
Hacksaw	Wax Ring/Gasket	Flexible Supply Tube	Closet Bolts	Carpenters Level

1 REMOVE OLD TOILET

- Close toilet supply valve and flush tank completely. Towel or sponge remaining water from tank and bowl.
- Disconnect and remove supply line. NOTE: *If replacing valve, first shut off main water supply!*
- Remove old mounting hardware, remove toilet and plug floor waste opening to prevent escaping sewer gases.
- Remove closet bolts from flange and clean away old wax, putty, etc. from base area.


NOTE: Mounting surface must be clean and level **before** new toilet is installed!

2


ROUGHING-IN DIMENSIONS:

NOTE: Distance from wall to closet flange centerline must be as listed below:

For 4110 Tanks: A = 254mm (10")
For 4114 Tanks: A = 356mm (14")
For all other Tanks: A = 305mm (12")

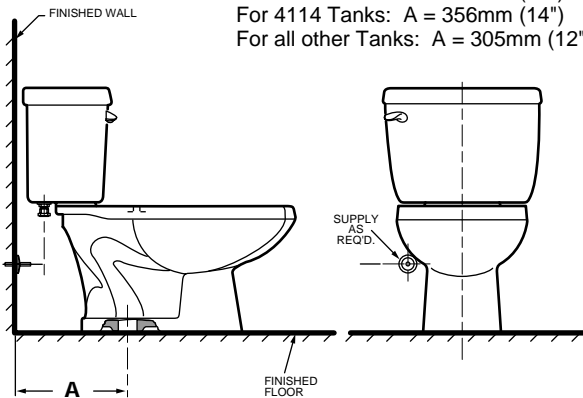


3

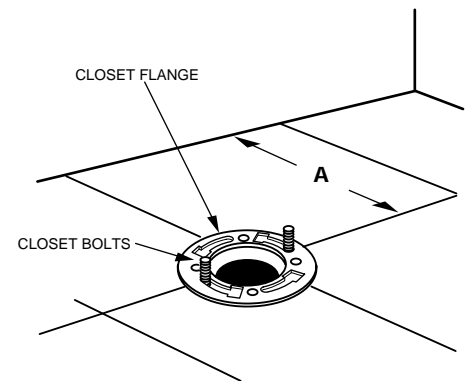

INSTALL CLOSET BOLTS

Install closet bolts in flange channel, turn 90°, and slide into place 6" (152 mm) apart and parallel to wall.


4

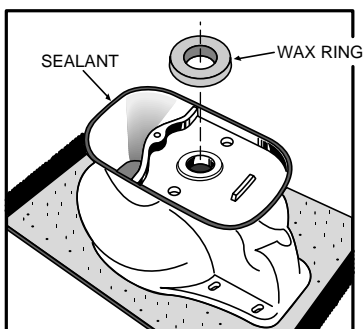

INSTALL WAX SEAL

Invert toilet on floor (cushion to prevent damage), and install wax ring evenly around waste flange (horn), with tapered end of ring facing toilet. Apply a thin bead of sealant around toilet base.

5

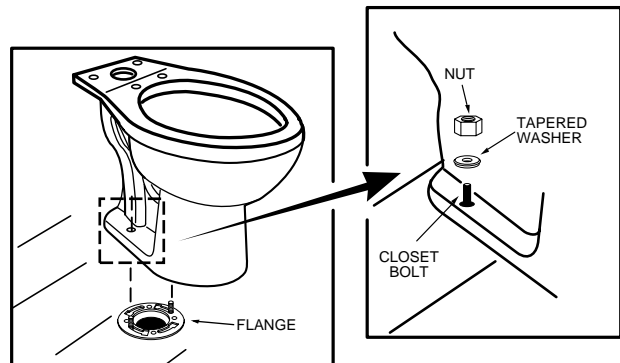

POSITION TOILET ON FLANGE

- Unplug floor waste opening and install toilet on closet flange so bolts project through mounting holes.
- Loosely install retainer washers and nuts. Side of washers marked "THIS SIDE UP" must face up!

American Standard


Ideal Standard

Incesa Standard

Sadona Standard

Cedelca

Saniwares

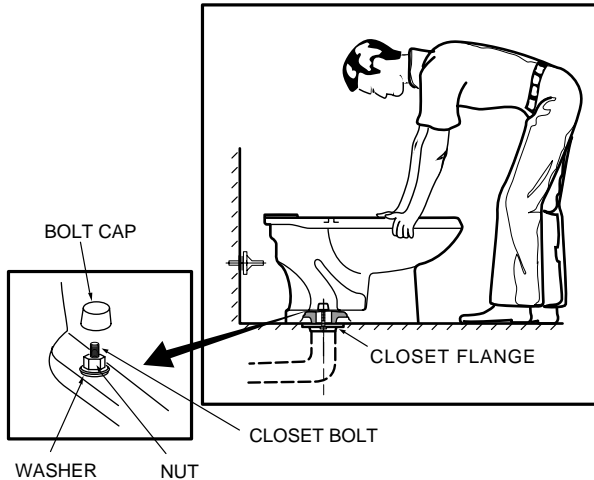6**INSTALL TOILET**

- a. Position toilet squarely to wall and, with a rocking motion, press bowl down fully on wax ring and flange. Alternately tighten nuts until toilet is firmly seated on floor.




CAUTION:
DO NOT OVERTIGHTEN NUTS
OR BASE MAY BE DAMAGED!

- b. Install caps on washers. (If necessary, cut bolt height to size before installing caps.)
- c. Smooth off the bead of sealant around base. Remove excess sealant.

7a

For Tanks/Bowls using Speed Connect System (Tank mounting bolts pre-installed).

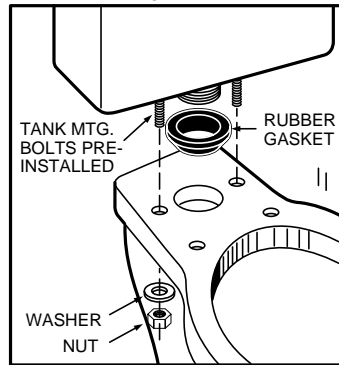**INSTALL TANK**


- a. Install large rubber gasket over threaded outlet on bottom of tank and lower tank onto bowl so that tapered end of gasket fits evenly into bowl water inlet opening, and tank mounting bolts go through mounting holes. Secure with metal washers and nuts.
- b. With tank parallel to wall, alternately tighten nuts until tank is snugged down evenly against bowl surface.



CAUTION:
DO NOT OVERTIGHTEN NUTS MORE
THAN REQUIRED FOR A SNUG FIT!

7b

For all other Tanks/Bowls

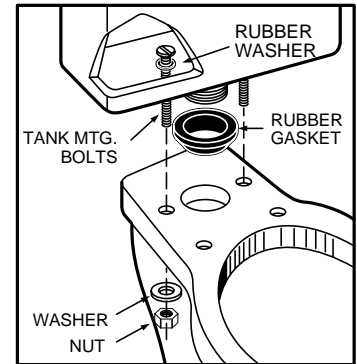**INSTALL TANK**


- a. Install large rubber gasket over threaded outlet on bottom of tank and lower tank onto bowl so that tapered end of gasket fits evenly into bowl water inlet opening.
- b. Insert tank mounting bolts and rubber washers from inside tank, through mounting holes, and secure with metal washers and nuts.
- c. With tank parallel to wall, alternately tighten nuts until tank is snugged down evenly against bowl surface.




CAUTION:
DO NOT OVERTIGHTEN NUTS MORE
THAN REQUIRED FOR A SNUG FIT!

8

INSTALL TOILET SEAT Install toilet seat in accordance with manufacturer's directions.

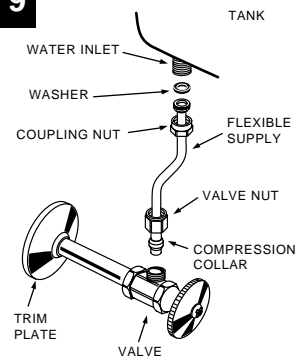9**CONNECT WATER SUPPLY**

- a. Connect water supply line between shutoff valve and tank water inlet fitting. Tighten coupling nuts securely. Check that refill tube is inserted into overflow tube.
- b. Turn on supply valve and allow tank to fill until water rises to shutoff position.
- c. Check for leakage at fittings, tighten or correct as needed.

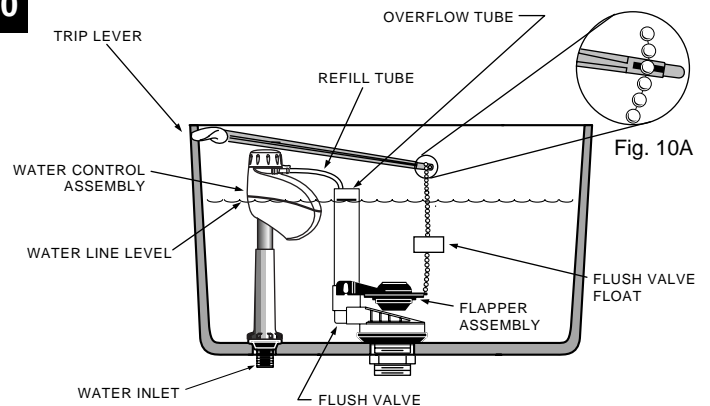
10**ADJUSTMENTS**

- a. Adjust water level. Water level should be adjusted to level indicated on tank by adjusting valve height.
- b. If bowl fails to siphon, an adjustment may be required with the lift chain. Simply remove the bead chain from the retainment clip (see Fig. 10A) and take up slack on the chain, and reinsert on lift rod. Make sure the chain is not too taut.

See Step 11 for valve height adjustment method

TOILET REQUIRES THAT THE TANK REFILLS IN NO LESS THAN ONE MINUTE. ADJUST WATER SUPPLY VALVE (FIG. 9) ACCORDINGLY.


11 ADJUST VALVE HEIGHT

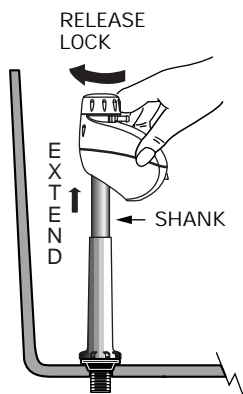

To change water level, shut off water supply valve, flush toilet, twist valve body clockwise to release lock and extend shank accordingly.

12

Before turning water on, confirm valve is in locked position when valve is parallel to back of toilet tank.

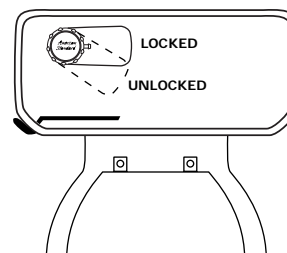

13 CARE AND CLEANING

When cleaning your toilet, wash it with mild, soapy water, rinse thoroughly with clear water and dry with a soft cloth. Avoid detergents, disinfectants, or cleaning products in aerosol cans. NEVER use abrasive scouring powders or abrasive pads on your toilet seat. Some bathroom chemicals and cosmetics may damage the seat's finish.

⚠ WARNING: Do not use in-tank cleaners. Products containing chlorine (calcium hypochlorite) can seriously damage fittings in the tank. This damage can cause leakage and property damage.
American Standard shall not be responsible or liable for any tank fitting damage caused by the use of cleaners containing chlorine (calcium hypochlorite).

REPAIR PARTS LIST

Repair parts are determined by toilet tank number which can be found marked inside tank.

NOTE: "XXX" represents color or trim finish options. Specify when ordering.


PART NO.	DESCRIPTION	TANK NUMBER								
		4075 ELLISSE	4065 INFINITY	4057 CASCADE	4111 REMINISCENCE	4074 HERITAGE	4110 CADET	4094 ANTIQUITY	4095 REPERTOIRE	4112/4114 CADET
047242-XXX0A	TRIP LEVER	✓		✓						
047192-XXX0A	TRIP LEVER		✓				✓			✓
730283-XXX0A	TRIP LEVER					✓				
730288-XXX0A	TRIP LEVER				✓			✓	✓	
738172-XXX0A	RIGHT HAND TRIP LEVER	✓								
738170-XXX0A	RIGHT HAND TRIP LEVER			✓						
738171-XXX0A	RIGHT HAND TRIP LEVER		✓							
034783-XXX0A	BOLT CAP KIT (INCL TWO COVERS & WASHERS)	✓	✓	✓	✓		✓	✓	✓	✓
047227-XXX0A	BOLT CAP KIT (INCL TWO COVERS & WASHERS)					✓				
3198.000	SMART VALVE 2000	✓	✓	✓	✓	✓	✓	✓	✓	✓
738181-0070A	FLUSH VALVE	✓				✓		✓	✓	
738138-0070A	FLUSH VALVE		✓	✓	✓		✓			✓
047141-0070A	COUPLING KIT, BOWL-TO-TANK	✓								
047188-0070A	COUPLING KIT, BOWL-TO-TANK		✓	✓	✓					
047158-0070A	COUPLING KIT, BOWL-TO-TANK							✓	✓	
730172-0070A	COUPLING KIT, BOWL-TO-TANK						✓			✓
738258-0070A	FLAPPER ASSEMBLY	✓				✓		✓	✓	
738159-0070A	FLAPPER ASSEMBLY		✓	✓	✓					
738397-0070A	FLAPPER ASSEMBLY						✓			
738407-0070A	FLAPPER ASSEMBLY									✓

TROUBLESHOOTING GUIDE


PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Does not flush	a. Water supply valve closed.	a. Open valve and allow water to fill tank.
	b. Supply line blocked.	b. Shut off water supply, disconnect supply line, and inspect all gaskets and washers. Reassemble.
	c. Flush valve chain too loose or disconnected.	c. Readjust chain length as required.
	d. Sand or debris lodged in water control.	d. Shut off water supply. Remove cap and clean per Fig. 12.
Poor or sluggish flush	a. Bowl water level too low.	a. Check that refill tube is connected to water control and inserted into tank overflow without being kinked or damaged.
	b. Supply valve partly closed.	b. Open supply valve fully. Be sure that proper supply tube size is used.
	c. Partially clogged trapway and/or drain pipe and/or vent.	c. Remove obstruction. Consult a plumber if necessary.
	d. Supply pressure too low.	d. Normal supply pressure must be at least 20 psi.
Toilet leaks	a. Poor supply line connection.	a. Review Step 9 of installation procedure.
	b. Poor bowl to tank/floor connection.	b. Review Step 4 through 7 of installation procedure.
Toilet does not shut off	a. Flush valve chain too tight, holding flush valve open.	a. Readjust chain length as needed.
	b. Flush valve seat and/or flapper worn or deformed.	b. Replace flapper/flush valve assembly, as needed.
	c. Sand or debris lodged in water control.	c. Shut off water supply. Remove cap and clean per Fig. 12.

Fig. 12

REMOVE →




VALVE TOP CAP

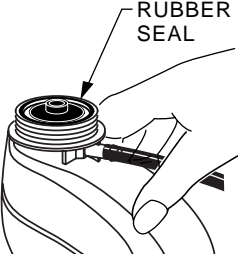


RUBBER SEAL

- Turn off water SUPPLY VALVE and flush toilet. Remove VALVE TOP CAP turning counterclockwise while holding valve body.
- Inspect RUBBER SEAL and remove debris.
- Replacement RUBBER SEAL model number 8298.000B is available.

■ Rinse with water.



- Replace VALVE TOP CAP by hand tightening in clockwise direction while holding valve body. **Do not over tighten.**
- Confirm Smart Valve is in locked position before turning on water supply.
- Check operation of toilet.

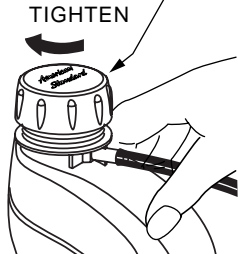

VALVE TOP CAP

TIGHTEN →

AMERICAN-STANDARD ONE-YEAR LIMITED WARRANTY

If inspection of this American-Standard plumbing product, within one year after its initial purchase, confirms that it is defective in materials or workmanship, American-Standard will repair or, at its option, exchange the product for a similar model.

This warranty **does not apply** to local building code compliance. Since local building codes vary considerably, the purchaser of this product should check with a local building or plumbing contractor to insure local code compliance before installation.

This warranty **shall be void** if the product has been moved from its initial place of installation; if it has been subjected to faulty maintenance, abuse, misuse, accident or other damage; if it was not installed in accordance with American-Standard's instructions; or if it has been modified in a manner inconsistent with the product as shipped by American-Standard.

American-Standard's option to repair or exchange the product under this warranty does not cover any labor or other costs of removal or installation, **nor shall American-Standard be responsible for any other incidental or consequential damages attributable to a product defect or to the repair or exchange of a defective product, all of which are expressly excluded from this warranty.** (Some states or provinces do not allow the exclusion or limitation of implied warranties, so this exclusion may not apply to you.)

This warranty gives you specific legal rights. You may have other statutory rights that vary from state to state or from province to province, in which case this warranty does not affect such statutory rights.

For service under this warranty, it is suggested that a claim be made through the contractor or dealer from or through whom the product was purchased, or that a service request (including a description of the product model and of the defect) be sent to the following address:

In the United States:
 American Standard Inc.,
 P.O. Box 6820
 Piscataway, New Jersey 08855
 Attention: Director of Consumer Affairs

In Canada:
 American-Standard,
 1401 Dupont Street,
 Toronto, Ontario
 Canada M6H 2B1
 Toll Free: (800) 387-0369
 Toronto Area: (416) 536-5609

In Mexico:
 Customer Service Manager
 Ideal Standard, S.A. de C.V.
 Via Morelos #330
 Col. Santa Clara
 Ecatepec 55540 Edo. Mexico

For residents of the United States, warranty information may also be obtained by calling the following toll free number: (800) 223-0068