

INSTALL POP-UP DRAIN

- Remove CLEAR PLASTIC COVER (1). Remove CARDBOARD SPACER (2) from under DRAIN POP-UP (3). Fig. A.
- Drop DRAIN BODY (4) through sink drain hole. Make sure WHITE FOAM GASKET (5) is under flange of DRAIN BODY (4). Fig. B.


Note: No plumber's putty or caulk is required.


The CABLE ATTACHMENT POINT (6) must face towards the rear of the SINK. Fig. B.


3 INSTALL BLACK GASKET

Install BLACK CONE GASKET (1) onto DRAIN BODY (2) from below.

Note: The flat side of the BLACK CONE GASKET **(1)** must face down.

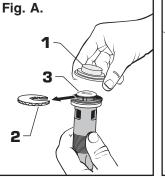

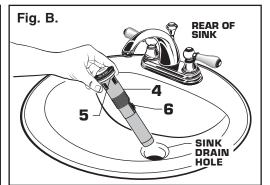

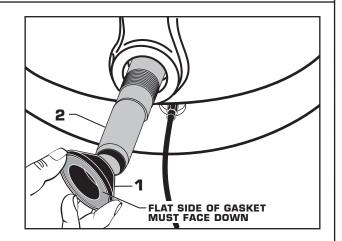


INSTALL GRAY LOCKNUT

Install GRAY LOCKNUT (1) onto DRAIN BODY (2) from below SINK. Fig. A.


Note: The flat side of the GRAY LOCKNUT **(1)** must face up.


Tighten firmly by hand. No tools are required. Check DRAIN FLANGE in SINK to ensure that WHITE FOAM GASKET (3) is fully compressed and not visible. Fig. B.

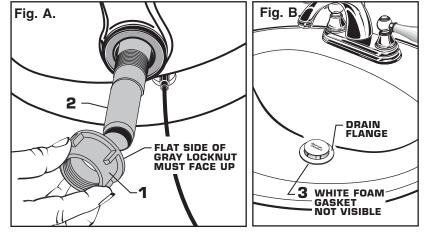

POP-UP KNOB

POP-UP KNOB (1) must be fully down.

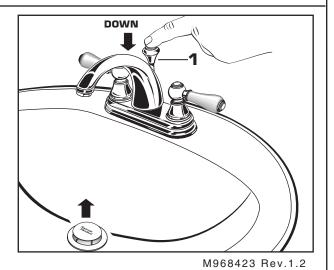

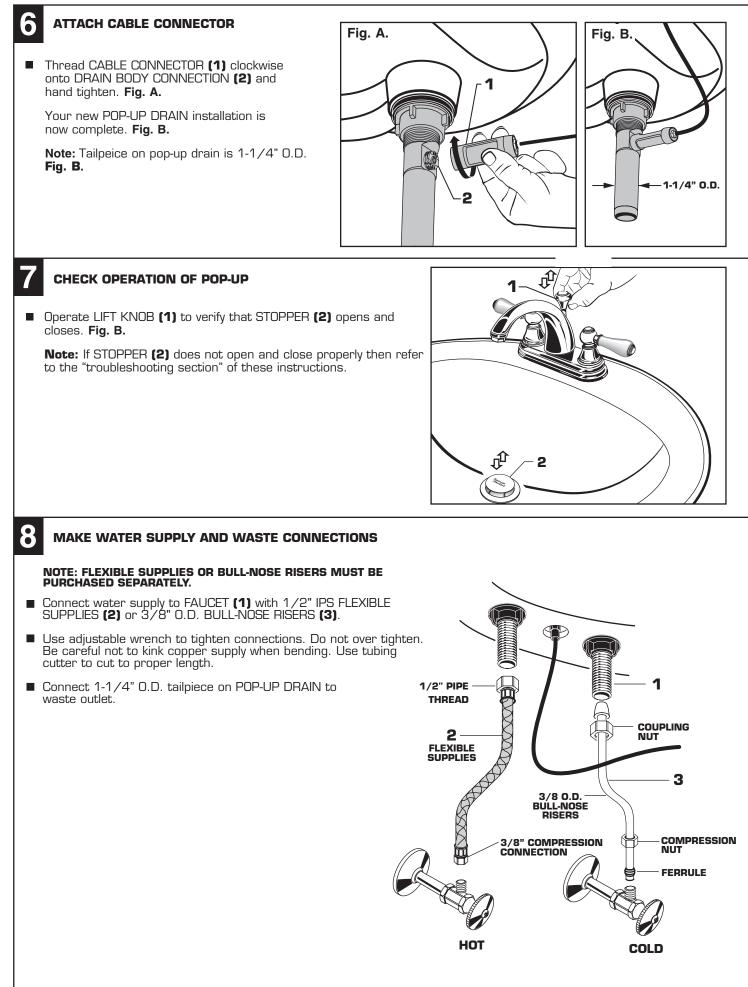


TEST INSTALLED FITTING

- With HANDLES (1) in OFF position, turn on WATER
 SUPPLIES (2) and check all connections for leaks.
- Remove AERATOR (3).
- Operate both HANDLES (1) to flush water lines thoroughly.
- Replace AERATOR (3).

CHECK DRAIN CONNECTIONS

- Operate POP-UP KNOB (4) and fill lavatory with water. Check that DRAIN STOPPER (5) makes a good seal and retains water in SINK. If DRAIN STOPPER (5) does not seal properly, please refer to Troubleshooting section in these instructions.
- Release POP-UP KNOB (4) down and check all drain connections and "P" trap for leaks. Tighten if necessary.

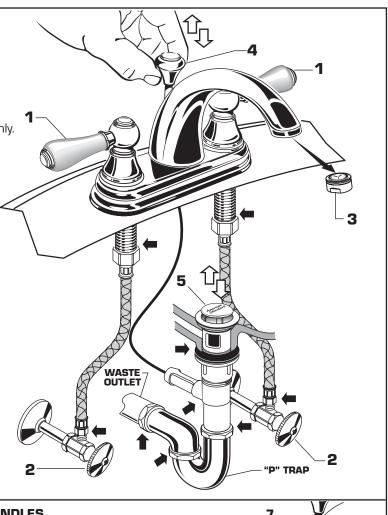

6

Pull out INDEX CAP (1) and remove HANDLE SCREW (2), HANDLE (3) and ADAPTER (4).

female teeth on HANDLE (3).

Push ADAPTER **(4)** on VALVE STEM **(5)**. Find correct position of HANDLE **(3)** by adjusting male teeth on ADAPTER **(4)** to

Replace HANDLE SCREW (2) and push

ALIGN HANDLES

in INDEX CAP (1).

O INSTALLATION OF OPTIONAL METAL LEVER HANDLES (Supplied with Faucet)

- Thread PORCELIAN LEVER HANDLE (2) counter-clockwise and remove INDEX BUTTON with MOUNTING ROD ASSEMBLY (1), HANDLE COLLAR (4) and O-RING (5).
- Insert MOUNTING ROD ASSEMBLY (1) into METAL HANDLE (3), HANDLE COLLAR (4) and O-RING (5).
- Thread HANDLE ASSEMBLY (6) into ball of HANDLE BASE (7). Apply pressure to the MOUNTING ROD ASSEMBLY (1) while turning the HANDLE COLLAR (4), in order to tighten firmly.

STOP

SERVICE

- WASHER
 To change direction of handle rotation, proceed as follows:
 - Turn valve to OFF position.
 - Pull out INDEX CAP and remove HANDLE SCREW.
 - Remove SPRING CLIP.
 - Lift STOP WASHER, turn 90° and replace.
 - Replace SPRING CLIP.
 - Replace ADAPTER, HANDLE, SCREW, and INDEX CAP.
- AERATOR may accumulate dirt causing distorted and reduced water flow. Remove AERATOR and rinse clean.
- If spout drips, operate handles several times from OFF to ON position. Do not force - handles turn only 90°.

CARE INSTRUCTIONS:

DO: SIMPLY RINSE THE PRODUCT CLEAN WITH CLEAR WATER. DRY WITH A SOFT COTTON FLANNEL CLOTH.

SPRING

CLIP

DO NOT: DO NOT CLEAN THE PRODUCT WITH SOAPS, ACID, POLISH, ABRASIVES, HARSH CLEANERS, OR A CLOTH WITH A COARSE SURFACE.

- 1

3

5


2

Speed Connect[™] Drain Troubleshooting Guide

- If sink does not hold water even though Stopper is in the "down" position: • Follow CABLE ADJUSTMENT PROCEDURE.
- If Stopper does not raise up fully or sink drains too slowly: • Follow CABLE ADJUSTMENT PROCEDURE.
- If you need to remove the Stopper: • Follow STOPPER REMOVAL PROCEDURE.
- If you would like the ability to remove your Stopper simply by lifting it out of the drain: • Follow STOPPER INSTALLATION PROCEDURE for **"Unlocked" mode**.


CABLE ADJUSTMENT PROCEDURE

- Disconnect the Cable from the Drain by threading the Cable Connector (1) counter-clockwise. Fig. A.
- Look at the area on the Drain Body where the Cable was attached and locate the component labeled as "Cam" in the illustration. Fig. B.
- Use a small screwdriver to rotate the Cam in the clockwise direction as far as it will go. At this point the Stopper should be in the UP position. Fig. B, C.
- Push DOWN on the Lift-Knob to make sure it is fully down. **Fig. C.**
- Re-attach the Cable to the Drain Body Connection (2) by threading the Cable Connector (1) clockwise onto the Drain Body Connection (2) and hand-tighten. Fig. A.

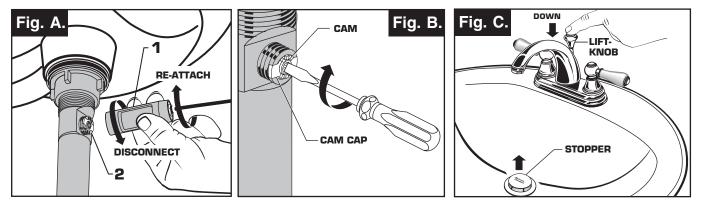

STOPPER REMOVAL PROCEDURE

- Disconnect the Cable from the Drain by threading the Cable Connector (1) counter-clockwise. Fig. A.
- Look at the area on the Drain Body where the Cable was attached and locate the component labeled as "Cam" and "Cam Cap" in the illustration. Fig. B.
- Use fingers or small screwdriver under either side of the Cam Cap to pry it out from the Drain. **Fig. D.**
- Remove the Cam by pulling it straight out while wiggling gently to loosen the Rubber Seal. Fig. E.
- The Stopper can now be removed by lifting it out of the Drain. Fig. F.

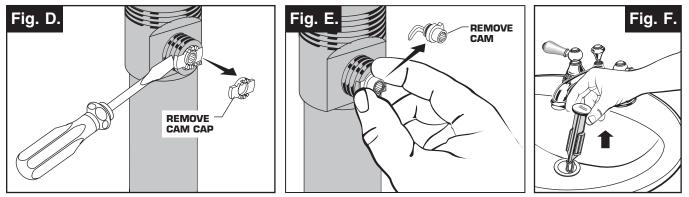

M968423 Rev.1.2

STOPPER INSTALLATION PROCEDURE


The Stopper can be installed two ways, "Locked" Mode (Stopper cannot be removed) or "Unlock" Mode (Stopper is removable).

Locked Mode:


- Look at the Plastic Loop at the bottom of the Stopper and notice that the Loop is on one side of the Stopper. Fig. G.
- To install the stopper in "Locked" mode, insert the Stopper into the Drain so that the Plastic Loop is facing toward the rear of the Sink and the American Standard logo is facing front. Rotate Stopper slightly if necessary so that the Stopper slides all the way down. Fig. G.
- Re-install the Cam into the Drain, rotating the Cam if necessary to make sure it is fully inserted. Fig. J.
- Re-install the Cam Cap, making sure the guide teeth are facing outward. If the Cam Cap does not "snap" into place, then rotate the Cam to make sure it is fully inserted. Fig. K.
- Re-attach Cable. See "CABLE ADJUSTMENT PROCEDURE" in Troubling Shooting Guide to complete installation. Stopper will be in "Locked" mode and not be removable.

Unlocked Mode:


- Look at the Plastic Loop at the bottom of the Stopper and notice that the Loop is on one side of the Stopper. Fig. H.
- To install the stopper in "Unlocked" mode, insert the Stopper into the Drain so that the Plastic Loop is facing toward the front of the Sink and the American Standard logo is facing rear. Rotate Stopper slightly if necessary so that the Stopper slides all the way down. Fig. H.
- Re-install the Cam into the Drain, rotating the Cam if necessary to make sure it is fully inserted. Fig. J.
- Re-install the Cam Cap, making sure the guide teeth are facing outward. If the Cam Cap does not "snap" into place, then rotate the Cam to make sure it is fully inserted. Fig. K.
- Re-attach Cable. See "CABLE ADJUSTMENT PROCEDURE" in "Troublingshooting Guide" to complete installation. Stopper will be in "Unlocked" mode and removable.

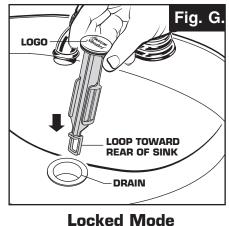


(Vandal Proof)

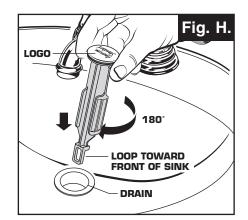

Unlocked Mode

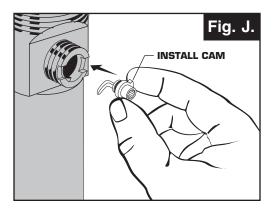

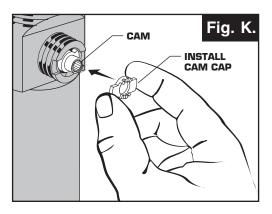

TIPS FOR REMOVING YOUR OLD DRAIN:

Most existing drains can be removed quickly and easily with only a pair of channellock pliers or a wrench. However, there may be situations where it is difficult to remove your old drain or determine how the drain is disassembled. Depending upon the existing Drain in your sink, it is either removed from above or below the sink. The illustrations below show some typical drain installations and how they are disassembled from the sink.

The following tips can help with some of the more common challenges in drain removal:

- Loosen nuts on P-Trap using channel locks. Suggest spraying nuts with spray lubricant to loosen any corrosion or debris that may have built up. Remove P-Trap half from Tailpiece. Use bucket to catch any residual water in P-trap.
- Unthread Pivot Rod Nut from Drain Body and remove. Pull Stopper out from Drain Body.

For Drains that are removed from below Sink:

Loosen Mounting Nut as far down as it will go. Push Drain Body up into Sink and unthread Metal Flange from Drain Body. Remove Drain Body from below sink.

For Drains that are removed from above Sink:

- Unthread Tailpiece from Drain Body.
- Loosen and remove Mounting Nut and Gasket on Drain Body using channel locks. Suggest spraying nut with spray lubricant to loosen any corrosion or debris that may have built up. Push Drain Body up into the Sink and remove.

Note: If Drain body rotates while loosening Mounting Nut, insert a screw driver into overflow hole to prevent Drain Body from rotating while Mounting Nut is removed.

