


Remote Ballast Mounting Instructions
Ballast Dimensions for Remote
Mounting of Compact Fluorescent
Ballasts

Warning: Before starting any work ensure that all sources of power are turned off. All work must meet local/national codes and be performed by a certified electrician. **Do not** mount fixtures vertically.

Remote ballast mounting is not outdoor rated. All remote ballasts must be mounted indoor, unless special ordered.
(Mounting screws and wire connection box not included)

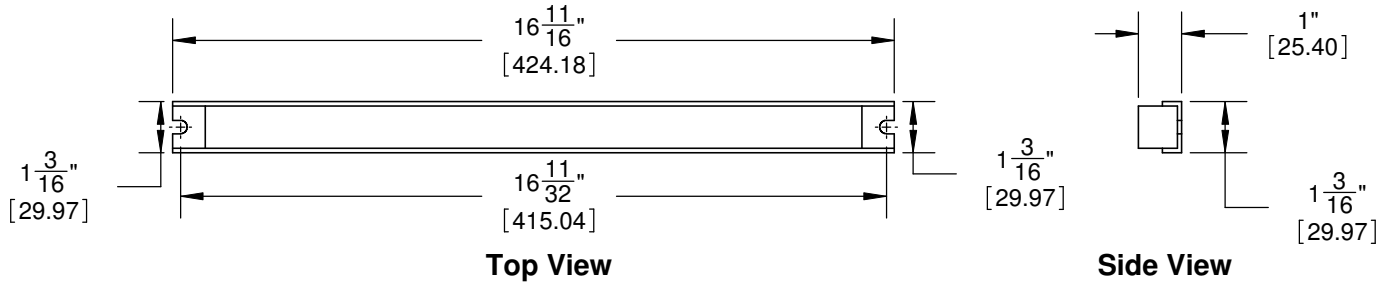

Attention:

Maximum remote distance for an electronic ballast depends upon the ballast manufacturer and may require use of special low capacitance wire, separate conduit runs for lead wires, or other special installation requirements. See ballast manufacturer's installation instructions or contact the factory for remote mounting distance and installation requirements.

Lamp Description	# of Lamps	Wattage	Voltage	Remote Ballast Distance
Twin tube	1	36W	UNV	20ft.
Twin tube	1	36W	347V	20ft.
Twin tube	1	50W	UNV	20ft.
Twin tube	1	50W	347V	20ft.
Twin tube	1	55W	UNV	20ft.
Twin tube	1	55W	347V	20ft.

Lamp Description	# of Lamps	Wattage	Voltage	Remote Ballast Distance
Twin tube	2	36W	UNV	20ft.
Twin tube	2	36W	347V	20ft.
Twin tube	2	50W	UNV	20ft.
Twin tube	2	50W	347V	20ft.
Twin tube	2	55W	UNV	20ft.
Twin tube	2	55W	347V	20ft.