


Removing and Sealing Ametrix Fixture Doors

Specific details such as fixture and pendant style may differ, however the mounting configurations are universal.

Warning: Before starting any work ensure that all sources of power are turned off. All work must meet local/national codes and be performed by a certified electrician. **Do not** mount fixtures vertically.


To Remove Fixture Door

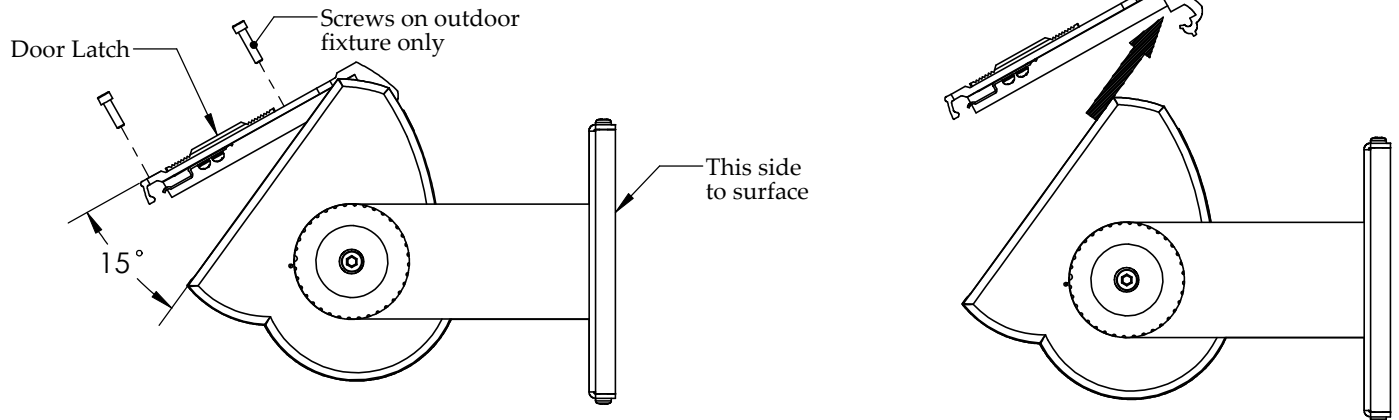


1. If fixture is indoor, slide door latches to open.
2. If fixture is outdoor, remove screws and slide door latches to open.
3. After releasing door, hold door at approximately a fifteen degree angle and push door away from fixture.

Torque Sequence

2 & 3ft Fixtures

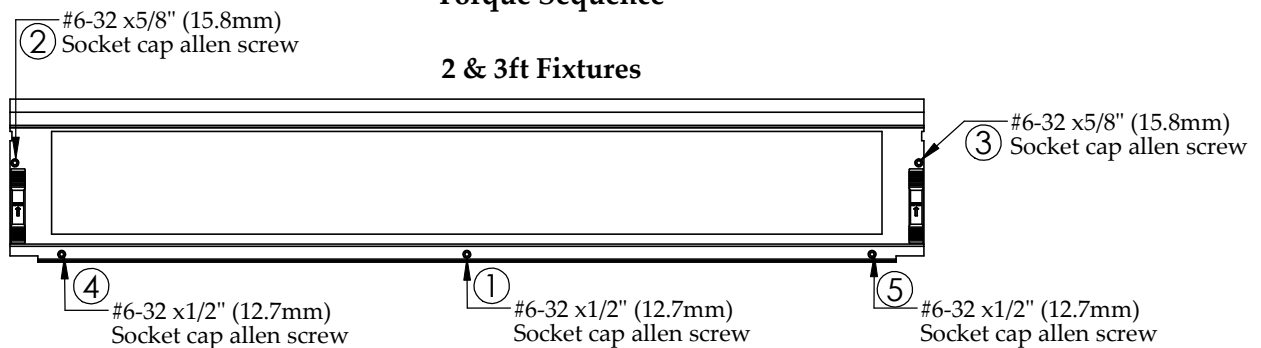

4ft Fixtures

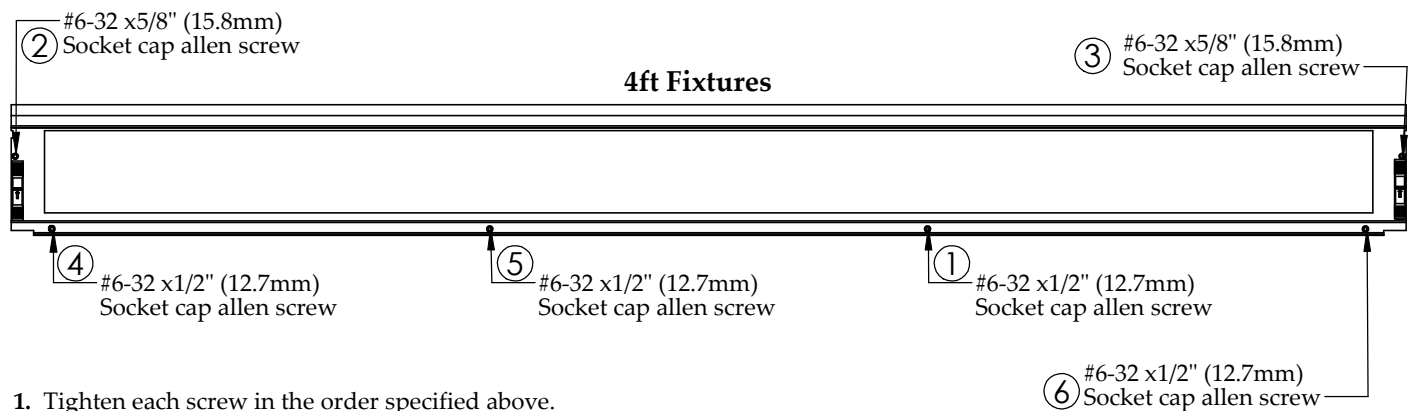

1. Tighten each screw in the order specified above.
2. Using torque Allen driver, and beginning with screw 1, tighten screw to **5 inch pounds** of torque.
3. Next, tighten screw 2 to **5 inch pounds** of torque.
4. Continue through all screws, following above sequence, tightening each screw to **5 inch pounds** of torque.
5. Repeat sequence tightening all screws to a final **10 inch pounds** of torque.