

WelchAllyn®
IMAGETEAM™ 3800
Hand Held Linear Imager



User's Guide

Disclaimer

Welch Allyn® Data Collection, Inc. reserves the right to make changes in specifications and other information contained in this document without prior notice, and the reader should in all cases consult Welch Allyn Data Collection, Inc. to determine whether any such changes have been made. The information in this publication does not represent a commitment on the part of Welch Allyn Data Collection, Inc.

Welch Allyn Data Collection, Inc. shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from the furnishing, performance, or use of this material.

This document contains proprietary information which is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated into another language without the prior written consent of Welch Allyn Data Collection, Incorporated.

© 1999 Welch Allyn, Inc. All rights reserved.

Welch Allyn Data Collection, Inc Web Address:
<http://dcd.welchallyn.com>

Table of Contents

Section 1 Getting Started

<i>Section</i>	<i>Page</i>
About This Manual	1-1
Connecting the Scanner When Powered by Host (Keyboard Wedge)	1-2
Plug and Play	1-3
USB	1-8
Serial Wedge	1-8

Section 2 Terminal Interfaces

<i>Section</i>	<i>Page</i>
Keyboard Wedge Connection	2-1
Terminal ID	2-2
Supported Terminals Chart	2-3
Keyboard Country	2-4
Keyboard Style	2-5
Keyboard Modifiers	2-6
Serial Port Connection	2-8
Baud Rate	2-9
RS-232 Word Length: Data Bits, Stop Bits, and Parity	2-10
RS-232 Handshaking	2-12
Wand Emulation Connection	2-13
Wand Emulation Transmission Rate	2-14
Wand Emulation Polarity	2-15
Wand Emulation Idle	2-15
PDF417 Wand Emulation	2-16
Data Block Size	2-16
Delay Between Blocks	2-17
Overall Checksum	2-17
Wake Up Pulse	2-18

Section 3 Output

<i>Section</i>	<i>Page</i>
Scan Rate	3-1
Beeper Volume	3-1
Beeper Tone	3-2
Scan Voting	3-2
Reduce Quiet Zone	3-2
Reread Delay	3-3
Good Read Delay	3-3
Trigger Mode	3-4

Section 4 Data Editing

<i>Section</i>	<i>Page</i>
Points to Keep In Mind	4-1
To Add a Prefix or Suffix	4-2
To Clear One or All Prefixes or Suffixes	4-2
To Add a Carriage Return Suffix to all Symbologies .	4-3
Prefix Selections	4-4
Suffix Selections	4-4
Function Code Transmit	4-6
Intercharacter Delay	4-7
User Specified Intercharacter Delay	4-8
Interfunction Delay	4-9
Intermessage Delay	4-9

Section 5 Data Formatting

<i>Section</i>	<i>Page</i>
Data Format Editor Introduction	5-1
Data Format Editor Commands	5-2
Data Format Editor	5-4
Data Formatter	5-5
Alternate Data Formats	5-6

Section 6 Secondary Interface

<i>Section</i>	<i>Page</i>
Secondary Interface	6-1
Secondary Code 39 Wand Emulation	6-1
Secondary RS-232 Connection	6-1
Secondary Non Decoded Output Laser Emulation ..	6-2
Non Decoded Output Laser Emulation	
Transmission Rate	6-2
Non Decoded Output Laser Emulation Polarity	6-2
Non Decoded Laser Emulation Idle	6-3
Disabling the Secondary Interface	6-3
Secondary Trigger Mode	6-4

Section 7 Symbologies

<i>Section</i>	<i>Page</i>
Introduction	7-1
Industrial Symbology Selections	
Codabar	7-2
Code 39	7-6
Interleaved 2 of 5	7-11
Code 93	7-13
Code 2 of 5	7-14
IATA Code 2 of 5	7-15
Matrix 2 of 5	7-16
Code 11	7-17
Code 128	7-19
Telepen	7-21
Retail Symbology Selections	
UPC A	7-23
UPC E	7-26
EAN/JAN 13	7-29
EAN/JAN 8	7-31
MSI	7-33
Plessey	7-35
China Post Code	7-36
PDF417 Symbology Selections	
Show GLI Blocks	7-38
Scan Diagnostics	7-38

Section 8 Cloning	
Cloning Procedure	8-1
Section 9 Visual Menu	
<i>Section</i>	<i>Page</i>
Visual Menu Operations	9-1
Temporary Visual Menu Configuration	9-1
Installing Visual Menu from the Web	9-2
Section 10 Interface Keys	
<i>Section</i>	<i>Page</i>
Keyboard Function Relationships	10-1
Supported Interface Keys	10-3
Section 11 – Utility Codes	
<i>Section</i>	<i>Page</i>
To Add Test Code I.D. Prefix to All Symbologies	11-1
Show Software Revision	11-1
Show Data Format	11-1
Section 12 Defaults	
<i>Section</i>	<i>Page</i>
Resetting the Factory Settings	12-1
Section 13 Specifications	
<i>Section</i>	<i>Page</i>
Product Specifications	13-1
Standard Cable Pinouts	13-5
Section 14 Specifications	
Scan Maps	14-2
Section 15 Customer Support	
<i>Section</i>	<i>Page</i>
Obtaining Factory Service in the United States	15-1
Obtaining Factory Service in Europe	15-1
Obtaining Factory Service in Asia	15-2
Technical Support	15-2
Limited Warranty	15-3
Agency Compliance Statements	
Programming Chart	
Sample Bar Codes	

Section 1 *Getting Started*

The IMAGETEAM™ 3800 is a high performance linear imaging scanner from Welch Allyn Data Collection, Inc. The IT3800 marks a new performance level for hand held scanners. Linear imaging technology is defined by a bright and sharply focused aiming line, high resolution imaging, and fast reading speed. The IT3800 is comfortable to hold, easy to use, rugged, and excellent for all general scanning applications.

About This Manual

This User's Guide provides installation and programming instructions for the IMAGETEAM 3800. Product specifications, dimensions, warranty, and customer support information are also included.


Welch Allyn bar code scanners are factory programmed for the most common terminal and communications settings. If you need to change these settings, programming is accomplished by scanning the bar codes in this Guide.

An asterisk (*) next to an option indicates the default.


Connecting the Scanner When Powered by Host (Keyboard Wedge)

A scanner can be connected between the keyboard and PC as a “keyboard wedge,” plugged into the serial port, or connected to a portable data terminal in wand emulation or non decoded output mode. The following is an example of a keyboard wedge connection:

1. Turn off power to the terminal/computer.
2. Disconnect the keyboard cable from the back of the terminal/computer, as shown below.

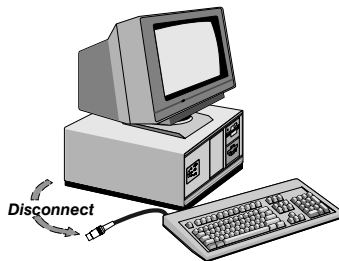

3. Connect the appropriate interface cable to the scanner and to the terminal/computer.

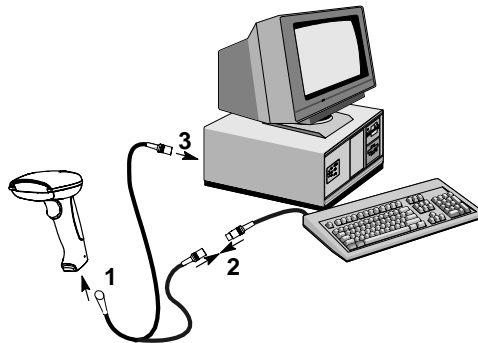

4. Turn the terminal/computer power back on. The scanner will beep twice.
5. Verify the scanner operation by scanning a bar code from the back cover of this manual. The scanner will beep once.

The scanner is now connected and ready to communicate with your terminal/PC. You must program the scanner for your interface before bar code data can be transmitted to your terminal/PC. If you are using the scanner as a keyboard wedge, turn to page 2–1. If the scanner is connected via a serial port, turn to page 2–8. If this is a wand emulation application, turn to page 2–13, and for a non decoded output connection, turn to page 6–2.

Plug and Play

Plug and Play bar codes provide instant scanner set up for commonly used interfaces.

Note: After you scan one of the codes, power cycle the host terminal to have the interface in effect

The most common interface is Keyboard Wedge. The following Keyboard Wedge bar code also programs a carriage return (CR) and line feed (LF) suffix.



Keyboard Wedge Interface for IBM PC
AT and Compatibles
(Default)

The following Plug and Play bar code for **IBM XT and Compatibles** also programs a carriage return (CR) and line feed (LF) suffix.



IBM XT and Compatibles

The following Plug and Play bar code for **IBM PS-2 and Compatibles** also programs a carriage return (CR) and line feed (LF) suffix.



IBM PS-2 and Compatibles

Use **Non Decoded Output Laser Emulation** when connecting to a secondary terminal with integral decoding. This also sets the transmission rate to 36 scans per second and the polarity to white high.



Non Decoded Output
Laser Emulation

For most laptops, scanning the **Laptop Direct Connect** bar code allows operation of the integral keyboard. The following Laptop Direct Connect bar code also programs a carriage return (CR) and line feed (LF) suffix.



Laptop Direct Connect

The RS-232 Interface bar code is used when connecting to the serial port of a PC or terminal. The following RS-232 Interface bar code also programs the parameters:

<u>Option</u>	<u>Setting</u>
Baud Rate	9600 bps
Parity	Even
Data Format	7 data bits, parity bit, 1 stop bit (8 bit data)



RS-232 Interface

In Wand Emulation mode, the scanner decodes the bar code then sends data in the same format as a wand scanner. The **Same Code** format transmits UPC, EAN, Code 128 and Interleaved 2 of 5 bar codes without any changes, but converts all other symbologies to Code 39.



Wand Emulation Same Code

The following Wand Emulation bar code sets the interface to Wand Emulation mode and translates bar code data as Code 39 symbology. It also programs the Transmission Rate to 25 inches per second, and Output Polarity to black high.



Wand Emulation (Code 39 Format)

Note for the 3800PDF model: When the 3800PDF interface is set to wand emulation, all PDF417 bar code data is transmitted as Code 128. Data from other symbologies follow the rules described above.

IBM 4683 Ports 5B, 9B, and 17 Interface

Note: The following Retail "Plug and Play" codes are for use with the 3800LR-11 model only.

Scan one of the following "Plug and Play" codes to program the IT3800 for IBM 4683 Port 5B, 9B, or 17.

Note: After you scan one of the codes, power cycle the cash register to have the interface in effect



IBM 4683 Port 5B Interface



IBM 4683 Port 9B HHBCR-1 Interface



IBM 4683 Port 9B HHBCR-2 Interface



IBM 4683 Port 17 Interface

Each bar code above also programs the following suffixes for each symbology:

<u>Symbology</u>	<u>Suffix</u>	<u>Symbology</u>	<u>Suffix</u>
EAN 8	0C	Code 39	00 0A 0B
EAN 13	16	I 2 OF 5	00 0D 0B
UPC A	0D	Code 128	00 18 0B
UPC E	0A		

OCIA Interface

Scan one of the following “Plug and Play” codes to program the IT3800 for Generic OCIA, NCR OCIA Short Format (8 bit), NCR OCIA Long Format (9 bit), and Nixdorf OCIA.

Note: After you scan one of the codes, power cycle the cash register to have the interface in effect



Generic OCIA Interface

The Generic OCIA bar code also programs the following prefixes for each symbology:

<u>Symbology</u>	<u>Prefix</u>	<u>Symbology</u>	<u>Prefix</u>
EAN 8	06 06	UPC A	01
EAN 13	06	UPC E	05

NCR OCIA Short Format (8 Bit) Interface



NCR OCIA Short Format (8 Bit) Interface

The NCR OCIA Short Format (8 Bit) bar code also programs the following prefixes for each symbology:

<u>Symbology</u>	<u>Prefix</u>	<u>Symbology</u>	<u>Prefix</u>
EAN 8	0F 0F	UPC A	0A
EAN 13	0F	UPC E	0E

NCR OCIA Long Format (9 Bit) Interface



NCR OCIA Long Format (9 Bit) Interface

The NCR OCIA Long Format (9 Bit) bar code also programs the following prefixes for each symbology:

<u>Symbology</u>	<u>Prefix</u>	<u>Symbology</u>	<u>Prefix</u>
EAN 8	46 46	Code 39	42 31
EAN 13	46	I 2 of 5	42 32
UPC A	41	Code 128	42 33
UPC E	45		

Nixdorf OCIA Interface



Nixdorf OCIA Interface

The Nixdorf OCIA bar code also programs the following prefixes for each symbology:

<u>Symbology</u>	<u>Prefix</u>
EAN/UPC with Addenda	44 4B
Code 39	44 49
I 2 of 5	44 48
2 of 5	44 47
Code 128	44 4A

USB

The IT3800 uses a USB converter to simulate a USB keyboard. Data flows into applications as if entered from the keyboard. The USB converter is compatible with Apple I-MAC Series and Windows® 98 and later PCs. Use cable set 42206062-01 to make the USB port connection.

To set up the USB communications, find the terminal ID in the Supported Terminal Chart and follow the instructions on page 2-2. The PC and scanner automatically connect. Communications start immediately.

Serial Wedge

The IT3800 uses TTL signal levels to wedge into an RS-232 serial network. Use IT3800 serial wedge cables only to prevent damage to the scanner. Refer to the serial interface programming (pages 2-9 to 2-12) to set the baud rate and communications protocol.

To set up the serial wedge terminal ID, find the terminal ID in the Supported Terminal Chart and follow the instructions on page 2-2. Set the port to which you want the scanned data to transmit. Port 1 corresponds to P1 on the output cable and Port 2 corresponds to P2 on the output cable. Choosing Both sends scanned data to P1 and P2. *Default = P1.*



* P1



P2



Both P1 and P2

Section 2 Terminal Interfaces

Keyboard Wedge Connection

IMAGETEAM 3800 scanners are factory programmed for a keyboard wedge interface to an IBM PC AT with a USA keyboard. If this is your interface and you do not need to modify the settings, skip to Section 3 – Output.

If you have a different terminal and/or you want to make any keyboard wedge changes, scan the bar code below.



IBM PC AT and Compatibles
with CR, LF suffix

Terminal ID

If your interface is not a standard PC AT, refer to the Supported Terminals Chart on page 2–3 and locate the Terminal ID number for your PC. Scan the **Terminal ID** bar code below, then scan the numeric bar code(s) on the inside back cover of this manual to program the scanner for your terminal ID. Scan **Save** to save your selection.

For example, an IBM PS/2 terminal has a Terminal ID of 002. You would scan the **Terminal ID** bar code, then **0, 0, 2** from the inside back cover, then **Save**. If you make an error while scanning the digits (before scanning Save), scan the **Discard** code on the back cover, scan the **Terminal ID** bar code, scan the digits, and the Save code again.



Terminal ID



Save

Note: *After you scan one of the codes, power cycle the host terminal to have the interface in effect*

Supported Terminals Chart

Terminal	Model(s)	Terminal ID
Apple Mac	Mac Classic, SE SE30, II (All)	049**
Apple Mac Powerbook	5300 Series (Portable PC)	049**
DEC	VT510, 520, 525 (PC style)	005
DEC	VT510, 520, 525 (DEC style LK411)	104
Esprit	200, 400	005
Heath Zenith	PC, AT	090
HP	Vectra	003
HP Vectra	AT	023
IBM	XT	001
IBM	PS/2 25, 30, 77DX2	002
IBM	AT, PS/2 30–286, 50, 55SX, 60, 70, 70–061, 70–121, 80	003*
IBM 102 key	3161,3162, 3163, 3191, 3192, 3194, 3196, 3197, 3471, 3472, 3476, 3477	006
IBM 122 key	3191, 3192, 3471, 3472	007
IBM 122 key	3196, 3197, 3476, 3477 3486, 3482, 3488	008
IBM 122 key	3180	024
IBM 122 key	3180 data entry keyboard	114
IBM DOS/V 106 key	PC & Workstation	102
IBM Thinkpad	360 CSE, 340, 750	097
IBM Thinkpad		106
IBM Thinkpad	365, 755CV	003
I/O 122 key	2676D, 2677C, 2677D	008
ITT	9271	007
Lee Data	IIS	007
NEC	98XX Series	103
Olivetti	M19, M200	001
Olivetti	M240, M250, M290, M380, P500	003
RS232 TTL		000
Serial Wedge		050
Silicon Graphics	Indy, IndigoII	005

* = Default

** = Applies to all –12 models only.

Supported Terminals Chart, continued

Terminal	Model(s)	Terminal ID
Telex 88 key	078, 078A, 79, 80, 191, 196, 1191,1192, 1471, 1472, 1476, 1477, 1483	025
Telex 88 key	Data Entry Keyboard	112
Telex 102 key	078, 078A, 79, 80, 191, 196, 1191,1192, 1471, 1472, 1476, 1477, 1483	045
Telex 122 key	078, 078A, 79, 80, 191, 196, 1191,1192, 1471, 1472, 1476, 1477, 1482, 1483	046
TTL Serial Wedge		050
USB		124
Wand Emulation		061

Keyboard Country

Scan the **Program Keyboard Country** bar code below, then scan the numeric bar code(s) from the inside back cover, then the **Save** bar code to program the keyboard for your country. As a general rule, the following characters are not supported by the scanner for countries other than the United States:

@ | \$ # { } [] = / ' \ < > ~



Program Keyboard Country

Country Code	Scan	Country Code	Scan
Belgium	1	Italy	5
Denmark	8	Norway	9
Finland	2	Spain	10
France	3	Switzerland	6
Germany/Austria ...	4	USA (Default)	0
Great Britain	7		



Save

Keyboard Style

This programs keyboard styles, such as Caps Lock and Shift Lock. *Default = Regular.*

Regular is used when you normally have the Caps Lock key off.



* Regular

Caps Lock is used when you normally have the Caps Lock key on.



Caps Lock

Shift Lock is used when you normally have the Shift Lock key on. (Not common to U.S. keyboards.)



Shift Lock

Automatic Caps Lock is used if you change the Caps Lock key on and off. The software tracks and reflects if you have Caps Lock on or off (AT and PS/2 only). This selection can only be used with systems that have an LED which notes the Caps Lock status.



Automatic Caps Lock

Emulate External Keyboard should be scanned if you do not have an external keyboard (IBM AT or equivalent). To connect the scanner to a laptop, it may be necessary to use the Automatic Direct Connect selection on page 2-7 in conjunction with the bar code below.



Emulate External Keyboard

Keyboard Modifiers

This modifies special keyboard features, such as CTRL+ ASCII codes and Turbo Mode.

Control + ASCII Mode On – The scanner sends key combinations for ASCII control characters for values 00–1F. Refer to page 10–1 for CTRL+ ASCII Values. *Default = Off*



Control + ASCII Mode On



* Control + ASCII Mode Off

Turbo Mode – The scanner sends characters to an IBM AT terminal faster. (For use with IBM AT only.) If the terminal drops characters, do not use Turbo Mode. *Default = Off*



Turbo Mode On



* Turbo Mode Off

Numeric Keypad Mode – Sends numeric characters as if entered from a numeric keypad. *Default = Off*



Numeric Keypad Mode On



* Numeric Keypad Mode Off

Automatic Direct Connect – Use this selection if you are using a laptop whose keyboard is disabled when you plug in the scanner. This selection can also be used if you have an IBM AT style terminal and the system is dropping characters. *Default = Off*



Automatic Direct Connect Mode On



* Automatic Direct Connect Mode Off


Serial Port Connection

All communication parameters between the scanner and terminal must match for correct data transfer through the serial port using RS-232 protocol. Scan the RS-232 Interface bar code to program the scanner for an RS-232 installation.




RS-232 Interface

1. Turn off power to the terminal/computer.
2. Connect the appropriate interface cable to the scanner, as shown below.

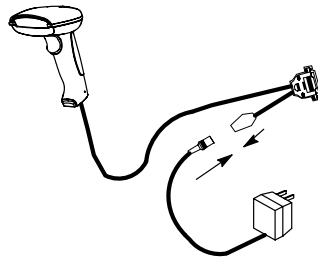

Note: For the scanner to work properly, you must have the correct cable for your type of terminal/computer.

3. Plug the serial connector into the serial port on the back of your computer/terminal, as shown below. Tighten the two screws to secure the connector to the port.

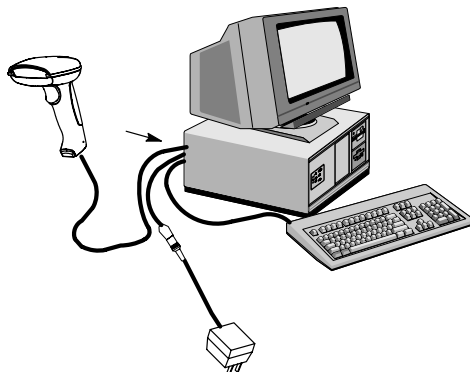

4. Plug the power pack into a power source.
5. Once the scanner has been fully connected, power up the terminal/computer.

Baud Rate

Baud Rate sends the data from the scanner to the terminal at the specified rate. The host terminal must be set for the same baud rate as the scanner.
Default = 9600.



300



600



1200



2400



4800



* 9600



19200



38400

RS-232 Word Length: Data Bits, Stop Bits, and Parity

Data Bits sets the word length at 7 or 8 bits of data per character. If an application requires only ASCII Hex characters 0 through 7F decimal (text, digits, and punctuation), select 7 data bits. For applications which require use of the full ASCII set, select 8 data bits per character. *Default = 7.*

Stop Bits sets the stop bits at 1 or 2. *Default = 1.*

Parity provides a means of checking character bit patterns for validity. *Default = Even.*



* 7 Data, 1 Stop, Parity Even



7 Data, 1 Stop, Parity None



7 Data, 1 Stop, Parity Odd



7 Data, 1 Stop, Parity Mark



7 Data, 1 Stop, Parity Space



7 Data, 2 Stop, Parity Even



7 Data, 2 Stop, Parity None



7 Data, 2 Stop, Parity Odd

***RS-232 Word Length: Data Bits, Stop Bits, and Parity
(continued)***



7 Data, 2 Stop, Parity Mark



7 Data, 2 Stop, Parity Space



8 Data, 1 Stop, Parity Even



8 Data, 1 Stop, Parity None



8 Data, 1 Stop, Parity Odd



8 Data, 1 Stop, Parity Mark



8 Data, 1 Stop, Parity Space

RS-232 Handshaking

RS-232 handshaking is a set of rules concerning the exchange of data between serially communicating devices. *Default = RTS/CTS, XON/XOFF and ACK/NAK Off*



RTS/CTS On



* RTS/CTS Off



XON/XOFF On



* XON/XOFF Off



ACK/NAK On



* ACK/NAK Off

Wand Emulation Connection

In Wand Emulation mode, the scanner decodes the bar code then sends data in the same format as a wand scanner. The Code 39 Format converts all symbologies to Code 39. The Same Code Format transmits UPC, EAN, Code 128 and Interleaved 2 of 5 without any changes, but converts all other symbologies to Code 39. These codes set the transmission rate to 25 inches per second and the output polarity to black, high. *Default = Code 39 Format.*



* Code 39 Format



Same Code Format

Note for the 3800PDF model: When the 3800PDF interface is set to wand emulation, all PDF417 bar code data is transmitted as Code 128. Data from other symbologies follow the rules described above.

Wand Emulation Transmission Rate

The Transmission Rate is limited by the terminal's ability to receive data without dropping characters. *Default = 25 inches/second.*



10



* 25



40



80



120



150



200

Wand Emulation Polarity

The Polarity can be sent as standard with black bars high, or reversed with white bars high. *Default = Black High.*



* Black High



White High

Wand Emulation Idle

The idle describes the state of the scanner when no data is being transmitted. When in Wand Emulation mode, you must set the scanner's idle state to match the idle state for the device to which the scanner is connected. *Default = Idle High.*



* Idle High



Idle Low

PDF417 Wand Emulation

Note: The following Wand Emulation functions are for use with the 3800PDF-12 scanner only.

Data Block Size

This transmits the PDF417 data in smaller blocks to prevent buffer overflow.
Default = 60.



20



40



* 60



80

Delay Between Blocks

This sets the delay time between data blocks. *Default = 50ms.*



5ms



* 50ms



150ms



500ms

Overall Checksum

When this option is turned on, a computed check character is added at the end of the entire message. The check character is the character which when Exclusive-ORed with every preceding character of the message yields a result of 0x00 (00H). *Default = Off.*



On



* Off

Wake Up Pulse

This provides a “wake up” pulse on the sync line from the scanner to a portable terminal. This feature extends battery life of the portable terminal by waking up the terminal only when data is ready to be sent. Bar code data follows the wake up pulse after a 0.2 second delay. *Default = Off.*



On



* Off

Section 3

Output

Scan Rate

Adjusting the scan rate changes the current draw when scanning. The slower the scan rate, the lower the current draw. (The standby current remains the same.) *Default = 270 s/s.*

Note: The chart below applies to the –12 models only.

<u>Scan Speed</u>	<u>Standby</u>	<u>Scanning</u>
270 s/s	125 mA	275 mA
135 s/s	125 mA	180 mA
67 s/s	125 mA	150 mA



* 270 s/s



135 s/s



67 s/s

Beeper Volume

Default = High.



* High



Medium



Low



Off

Beeper Tone

Default = Normal.



* Normal Beep



Short Bip

Scan Voting

This sets the number of times the same bar code has to be read before it is transmitted to the terminal. **Normal** uses the default values listed for the symbologies in the Default Charts in Section 10. **High** doubles the votes used below the threshold. *Default = Voting Normal.*



* Voting Normal



Voting High

Reduce Quiet Zone

Reducing the quiet zone requirements below AIM guidelines makes it possible to read off-spec bar codes. This feature is effective with all symbologies. *Default = Don't Reduce Quiet Zone.*



* Don't Reduce Quiet Zone



Reduce Quiet Zone

Reread Delay

This sets the time period before the scanner can read the *same* bar code a second time. Setting a reread delay protects against accidental rereads of the same bar code. Longer delays are effective in minimizing accidental rereads at POS (point of sale). Use shorter delays in applications where repetitive bar code scanning is required. *Default = Short.*

Reread Delay only works when in automatic trigger mode (see page 3–4).



* Short



Medium



Long



Extra Long

Good Read Delay

This sets the minimum amount of time before the scanner can read another bar code. *Default = No Delay.*



* No Delay



Short Delay



Medium Delay



Long Delay

Trigger Mode

Default = Manual Trigger

Manual Trigger: You must press the scanner trigger to scan. When not scanning, idle power is maintained.



* Manual Trigger

Manual Trigger, Low Power: The scanner “sleeps,” using only 5 microamps, until the trigger is pulled. When the trigger is pulled, the scanner wakes up and operates at reduced power until there is no triggering for the time set with the Low Power Time Out bar code. There is a short delay in operation when the scanner is first triggered, but there is no delay when operating in low power mode.



Manual Trigger, Low Power

Note: Manual Trigger, Low Power cannot be used with keyboard wedge applications.

Low Power Time Out: Scan the Low Power Time Out bar code to change the time out duration. Then scan the time out duration (from 0–300 seconds) from the inside back cover, and **Save**. *Default = 2 minutes.*

Note: If you make an error while scanning the digits (before scanning Save), scan **Discard** on the back cover, scan the **Lower Power Time Out** bar code, scan the correct digits, then **Save** again.



Low Power Time Out

Automatic Trigger: The scanner scans continuously at full power.



Automatic Trigger

Presentation Mode: The LEDs are off until a bar code is presented to the scanner. Then the LEDs turn on automatically to read the code. Presentation Mode uses normal office or store ambient light to detect the bar codes.




Presentation Mode

Section 4

Data Editing

When a bar code is scanned, additional information is sent to the host computer along with the bar code data. This group of bar code data and additional, user-defined data is called a "message string." The selections in this section are used to build the user-defined data into the message string.

Prefix and Suffix characters are data characters that can be sent before and after scanned data. You can specify if they should be sent with all symbologies, or only with specific symbologies. The following illustration shows the breakdown of a message string:

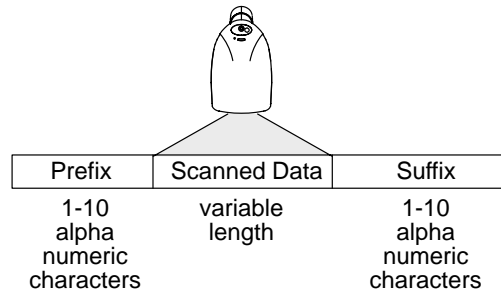

Points to Keep In Mind

- It is not necessary to build a message string. The selections in this chapter are only used if you wish to alter the default settings. *Default prefix = None. Default suffix = None.*
- A prefix or suffix may be added or cleared from one symbology or all symbologies.
- You can add any prefix or suffix from the ASCII chart (pg. 4–5), plus Code I.D. and Aim I.D.
- You can string together several entries for several symbologies at one time.
- Enter prefixes and suffixes in the order in which you want them to appear on the output.

To Add a Prefix or Suffix:

- STEP 1.** Scan the **Add Prefix** or **Add Suffix** symbol (pg. 4–4).
- STEP 2.** Determine the 2 digit Hex value from the Symbology Chart (pg. 4–5) for the symbology to which you want to apply the prefix or suffix.
- STEP 3.** Scan the 2 hex digits from the Programming Chart inside the back cover or scan **9, 9** for all symbologies.
- STEP 4.** Determine the hex value from the Decimal to Hex to ASCII Conversion Chart (pg. 4–5) for the prefix or suffix you wish to enter.
- STEP 5.** Scan the 2 digit hex value from the Programming Chart inside the back cover.

Note: Repeat Steps 4 and 5 for every prefix or suffix character.

Note: To add the Code I.D., scan **5, C, 8, 0**.
To add AIM I.D., scan **5, C, 8, 1**.
To add a backslash (\), scan **5, C, 5, C**.
- STEP 6.** Scan **Save** to exit and save, or scan **Discard** to exit without saving.

Repeat Steps 1–6 to add a prefix or suffix for another symbology.

Example: Add a Suffix to a specific symbology

To send a CR (carriage return) Suffix for UPC only:

- STEP 1.** Scan **Add Suffix**.
- STEP 2.** Determine the 2 digit hex value from the Symbology Chart (pg. 4–5) for UPC.
- STEP 3.** Scan **6, 3** from the Programming Chart (inside back cover).
- STEP 4.** Determine the hex value from the Decimal to Hex to ASCII Conversion Chart (pg. 4–5) for the CR (carriage return).
- STEP 5.** Scan **0, D** from the Programming Chart (inside back cover).
- STEP 6.** Scan **Save**, or scan **Discard** to exit without saving.

To Clear One or All Prefixes or Suffixes:

You can clear a single prefix or suffix, or clear all prefixes/suffixes for a symbology. When you Clear One Prefix (Suffix), the specific character you select is deleted from the symbology you want. When you Clear All Prefixes (Suffixes), all the prefixes or suffixes for a symbology are deleted.

- STEP 1.** Scan the **Clear One Prefix** or **Clear One Suffix** symbol.
- STEP 2.** Determine the 2 digit Hex value from the Symbology Chart (pg. 4–5) for the symbology from which you want to clear the prefix or suffix.
- STEP 3.** Scan the 2 digit hex value from the Programming Chart inside the back cover or scan **9, 9** for all symbologies.

Your change is automatically saved.

To Add a Carriage Return Suffix to all Symbologies

Scan the following bar code if you wish to add a Carriage Return Suffix to all symbologies at once. This action first clears all current suffixes, then programs a carriage return suffix for all symbologies.



Add CR Suffix
All Symbologies

Prefix Selections



Add Prefix



Clear One Prefix



Clear All Prefixes

Suffix Selections



Add Suffix



Clear One Suffix



Clear All Suffixes



Save



Discard

Symbology Chart							
Symbology	Code ID	AIM ID	Hex Value	Symbology	Code ID	AIM ID	Hex Value
Codabar	a]F0	61	Plessey	n]P0	6E
Code 39	b]A0	62	IATA Code 2 of 5	f]R0	66
Code 39 PARAF	w]X0	77	Code 11	h]H0	68
UPC	c]E0	63	Code 128	j]C0	6A
EAN/JAN	d]E0	64	Telepen	t]B0	74
Interleaved 2 of 5	e]I0	65	Matrix 2 of 5	m]X0	6D
Code 93	i]G0	89	China Postal	q]X0	71
Code 2 of 5	f]S0	66	PDF417	r]L0	72
MSI	g]M0	67	All Symbologies †			99

† Prefix/Suffix entries for specific symbologies override the All Symbologies selection. The All Symbologies selection is for Prefix/Suffix programming only.

Decimal to Hex to ASCII Conversion Chart											
DEC	Hex	ASCII	DEC	Hex	ASCII	DEC	Hex	ASCII	DEC	Hex	ASCII
0	00	NUL	32	20	SP	64	40	@	96	60	'
1	01	SOH	33	21	!	65	41	A	97	61	a
2	02	STX	34	22	"	66	42	B	98	62	b
3	03	ETX	35	23	#	67	43	C	99	63	c
4	04	EOT	36	24	\$	68	44	D	100	64	d
5	05	ENQ	37	25	%	69	45	E	101	65	e
6	06	ACK	38	26	&	70	46	F	102	66	f
7	07	BEL	39	27	'	71	47	G	103	67	g
8	08	BS	40	28	(72	48	H	104	68	h
9	09	HT	41	29)	73	49	I	105	69	i
10	0A	LF	42	2A	*	74	4A	J	106	6A	j
11	0B	VT	43	2B	+	75	4B	K	107	6B	k
12	0C	FF	44	2C	,	76	4C	L	108	6C	l
13	0D	CR	45	2D	-	77	4D	M	109	6D	m
14	0E	SO	46	2E	.	78	4E	N	110	6E	n
15	0F	SI	47	2F	/	79	4F	O	111	6F	o
16	10	DLE	48	30	0	80	50	P	112	70	p
17	11	DC1	49	31	1	81	51	Q	113	71	q
18	12	DC2	50	32	2	82	52	R	114	72	r
19	13	DC3	51	33	3	83	53	S	115	73	s
20	14	DC4	52	34	4	84	54	T	116	74	t
21	15	NAK	53	35	5	85	55	U	117	75	u
22	16	SYN	54	36	6	86	56	V	118	76	v
23	17	ETB	55	37	7	87	57	W	119	77	w
24	18	CAN	56	38	8	88	58	X	120	78	x
25	19	EM	57	39	9	89	59	Y	121	79	y
26	1A	SUB	58	3A	:	90	5A	Z	122	7A	z
27	1B	ESC	59	3B	;	91	5B	[123	7B	{
28	1C	FS	60	3C	<	92	5C	\	124	7C	
29	1D	GS	61	3D	=	93	5D]	125	7D	}
30	1E	RS	62	3E	>	94	5E	^	126	7E	~
31	1F	US	63	3F	?	95	5F	_	127	7F	DEL

Function Code Transmit

When this selection is enabled and function codes are contained within the scanned data, the scanner transmits the function code to the terminal. Charts of these function codes are provided in Section 10, Supported Interface Keys. When the scanner is in keyboard wedge mode, the scan code is converted to a key code before it is transmitted.



* Enable



Disable


Some terminals drop information (characters) if data comes through too quickly. Intercharacter, interfunction, and intermessage delays slow the transmission of data, which increases data integrity.

Each delay is composed of a 5 millisecond step. You can program up to 99 steps (of 5 ms each).

Intercharacter Delay

This is a delay of up to 495 milliseconds (in multiples of 5) placed between the transmission of each character of scanned data. You can program up to 99 steps (of 5 ms each). Scan the Intercharacter Delay bar code below, then scan the number of steps, and the **SAVE** bar code from the inside back cover.

Note: If you make an error while scanning the digits (before scanning Save), scan **Discard** on the back cover, scan the Intercharacter Delay bar code, scan the correct digits, and **Save** again.

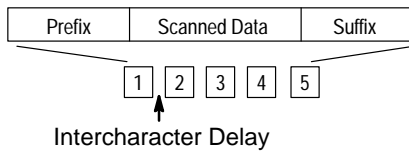

Intercharacter Delay

To remove this delay, scan the Intercharacter Delay bar code, then set the number of steps to 00. Scan the **SAVE** bar code from the inside back cover.

User Specified Intercharacter Delay

This is a delay of up to 495 milliseconds (in multiples of 5) placed after the transmission of a particular character of scanned data. You can program up to 99 steps (of 5 ms each) to follow the character you specify. Scan the Delay Length bar code below, then the number of steps for the delay, and the **SAVE** bar code from the inside back cover.

Next, scan the Character to Trigger Delay bar code, then the 2 digit hex value for the ASCII character that will trigger the delay (refer to the Decimal to Hex to ASCII conversion chart on page 4-5).

Note: If you make an error while scanning the digits (before scanning Save), scan **Discard** on the back cover, scan the Character to Trigger Delay bar code, scan the correct digits, and **Save** again.



Delay Length




Character to Trigger Delay

To remove this delay, scan the Delay Length bar code, and set the number of steps to 00. Scan the **SAVE** bar code from the inside back cover.

Interfunction Delay

This is a delay of up to 495 milliseconds (in multiples of 5) placed between the transmission of each segment of the message string. You can program up to 99 steps (of 5 ms each). Scan the Interfunction Delay bar code below, then scan the number of steps, and the **SAVE** bar code from the inside back cover.

Note: If you make an error while scanning the digits (before scanning Save), scan **Discard** on the back cover, scan the Interfunction Delay bar code, scan the correct digits, and **Save** again.

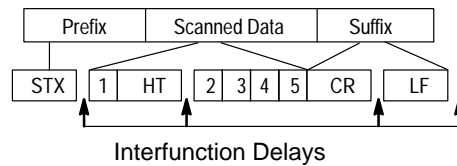


Interfunction Delay

To remove this delay, scan the Interfunction Delay bar code, then set the number of steps to 00. Scan the **SAVE** bar code from the inside back cover.

Intermessage Delay

This is a delay of up to 495 milliseconds (in multiples of 5) placed between each scan transmission. You can program up to 99 steps (of 5 ms each). Scan the Intermesssage Delay bar code below, then scan the number of steps, and the **SAVE** bar code from the inside back cover.

 Note: If you make an error while scanning the digits (before scanning Save), scan **Discard** on the back cover, scan the Intermesssage Delay bar code, scan the correct digits, and **Save** again.



Intermesssage Delay

To remove this delay, scan the Intermesssage Delay bar code, then set the number of steps to 00. Scan the **SAVE** bar code from the inside back cover.



Section 5 ***Data Formatting***

Data Format Editor Introduction

The Data Format Editor selections are used to edit scanned data. For example, you can use the Data Format Editor to insert characters at certain points in bar code data as it is scanned.

It is not necessary to use the Data Format Editor. A set of defaults for the data format is already programmed in the scanner. The selections in the following pages are used only if you wish to alter the default settings. *Default Data Format setting = none.*

If you have changed data format settings, and wish to clear all formats and return to the defaults, scan the **Default Data Format** code.

To Add a Data Format

STEP 1. Scan the **Enter Data Format** symbol (pg. 5-4).

STEP 2. Primary/Alternate Format

Determine if this will be your primary data format, or one of 3 alternate formats. (Alternate formats allow you "single shot" capability to scan one bar code using a different data format. After the one bar code has been read, the scanner reverts to the primary data format. See page 5-6.) If you are programming the primary format, scan **0**. If you are programming an alternate format, scan **1**, **2**, or **3**, depending on the alternate format you are programming.

STEP 3. Terminal Type

Refer to the Supported Terminals Chart (page 2-3) and locate the Terminal ID number for your PC. Scan three numeric bar codes on the inside back cover to program the scanner for your terminal ID (you must enter **3** digits). For example, scan **0 0 3** for an AT wedge.

Note: The wildcard for all terminal types is 099.

STEP 4. Code I.D.

On pg. 4-5, find the symbology to which you want to apply the data format. Locate the Hex value for that symbology and scan the 2 digit hex value from the Programming Chart.

STEP 5. Length

Specify what length (up to 9999 characters) of data will be acceptable for this symbology. Scan the four digit data length from the Programming Chart. (Note: 50 characters is entered as 0050. 9999 is a universal number, indicating all lengths.)

STEP 6. Editor Commands

Refer to the Format Editor Commands Chart (page 5-2). Scan the symbols that represent the command you want to enter. 94 alphanumeric characters may be entered for each symbology data format.

STEP 7. Scan **Save** to save your entries.

Other Programming Selections

- **Clear One Data Format**
This deletes one data format for one symbology. If you are clearing the primary format, scan **0**. If you are clearing an alternate format, scan **1**, **2**, or **3**, depending on the alternate format you are clearing. Scan the Terminal Type (refer to the Supported Terminals Chart on page 2–3), Code I.D. and the length of the format you want to delete. That length data format for that symbology is deleted and all other formats are unaffected.
- **Save**
This exits, saving any Data Format changes.
- **Discard**
This exits without saving any Data Format changes.

Data Format Editor Commands

Send Commands

- F1 Send all characters followed by “xx” key or function code, starting from current cursor position. **Syntax = F1xx** (xx stands for the hex value for an ASCII code, see Decimal to Hex to ASCII Conversion chart, page 4–5.)
- F2 Send “nn” characters followed by “xx” key or function code, starting from current cursor position. **Syntax = F2nnxx** (nn stands for the numeric value (00-99) for the number of characters and xx stands for the hex value for an ASCII code. See Decimal to Hex to ASCII Conversion chart, page 4–5.)
- F3 Send up to but not including “ss” character (Search and Send) starting from current cursor position, leaving cursor pointing to “ss” character followed by “xx” key or function code. **Syntax = F3ssxx** (ss and xx both stand for the hex values for ASCII codes, see Decimal to Hex to ASCII Conversion chart, page 4–5.)
- F4 Send “xx” character “nn” times (Insert) leaving cursor in current cursor position. **Syntax = F4xxnn** (xx stands for the hex value for an ASCII code, see Decimal to Hex to ASCII Conversion chart, page 4–5, and nn is the numeric value (00-99) for the number of times it should be sent.)
- E9 Send all but the last “nn” characters, starting from the current cursor position. **Syntax = E9nn** (nn is the numeric value (00-99) for the number of characters that will not be sent at the end of the message.)

Move Commands

- F5 Move the cursor ahead “nn” characters from current cursor position. **Syntax = F5nn** (nn stands for the numeric value (00-99) for the number of characters the cursor should be moved ahead.)
- F6 Move the cursor back “nn” characters from current cursor position. **Syntax = F6nn** (nn stands for the numeric value (00-99) for the number of characters the cursor should be moved back.)
- F7 Move the cursor to the beginning of the data string. **Syntax = F7.**
- EA Move the cursor to the end of the data string. **Syntax = EA**

Search Commands

- F8 Search ahead for “xx” character from current cursor position, leaving cursor pointing to “xx” character. **Syntax = F8xx** (xx stands for the hex value for an ASCII code, see Decimal to Hex to ASCII Conversion chart, page 4–5.)
- F9 Search back for “xx” character from current cursor position, leaving cursor pointing to “xx” character. **Syntax = F9xx** (xx stands for the hex value for an ASCII code, see Decimal to Hex to ASCII Conversion chart, page 4–5.)
- E6 Search ahead for the first non “xx” character from the current cursor position, leaving cursor pointing to non “xx” character. **Syntax = E6xx** (xx stands for the hex value for an ASCII code, see Decimal to Hex to ASCII Conversion chart, page 4–5.)
- E7 Search back for the first non “xx” character from the current cursor position, leaving cursor pointing to non “xx” character. **Syntax = E7xx** (xx stands for the hex value for an ASCII code, see Decimal to Hex to ASCII Conversion chart, page 4–5.)

Miscellaneous Commands

- FB Suppress all occurrences of up to 15 different characters, starting at the current cursor position, as the cursor is advanced by other commands. When the FC command is encountered, the suppress function is terminated. The cursor is not moved by the FB command. **Syntax = FBnnxxyy . .zz** where nn is a count of the number suppress characters in the list and xxyy .. zz is the list of characters to be suppressed. (xx stands for the hex value for an ASCII code, see Decimal to Hex to ASCII Conversion chart, page 4–5.)
- FC Disable suppress filter and clear all suppressed characters. **Syntax = FC.**
- E4 Replaces up to 15 characters in the data string with user specified characters. Replacement continues until the E5 command is encountered. **Syntax = E4nnxx₁xx₂yy₁yy₂...zz₁zz₂** where nn is the total count of both characters to be replaced plus replacement characters; xx₁ defines characters to be replaced and xx₂ defines replacement characters, continuing through zz₁ and zz₂.
- E5 Terminates character replacement. **Syntax = E5.**
- FE Compare character in current cursor position to the character “xx.” If characters are equal, increment cursor. If characters are not equal, no format match. **Syntax = FExx** (xx stands for the hex value for an ASCII code, see Decimal to Hex to ASCII Conversion chart, page 4–5.)
- EC Check to make sure there is an ASCII number at the current cursor position. If character is not numeric, format is aborted. **Syntax = EC.**
- ED Check to make sure there is a non-numeric ASCII character at the current cursor position. If character is numeric, format is aborted. **Syntax = ED.**

Data Format Editor



Enter Data Format



Default Data Format



Clear One Data Format



Clear All Data Formats



Save



Discard

Data Formatter

When Data Formatter is turned off, the bar code data is output to the host as read (including prefixes and suffixes). Choose one of the following options.
Default = Data Formatter On.



* Data Formatter On,
but Not Required



Data Formatter Off

When Data Formatter is required, all input data must conform to an edited format or the scanner does not transmit the input data to the host device.



Data Format On, Format Required

Alternate Data Formats

Alternate formats allow you “single shot” capability to scan one bar code using a different data format than your primary format. When data formats are programmed (see page 5-1), you must input whether you are programming the primary format, or an alternate format numbered 1, 2, or 3.

An alternate format is initiated by scanning one of the 3 alternate format bar codes below. The scanner will scan the next bar code, formatting the data with the selected alternate format, then revert immediately to the primary format.



Alternate Data Format 1



Alternate Data Format 2



Alternate Data Format 3

Section 6 Secondary Interface

Secondary Interface

By switching interface cables, the IT3800 scanner can communicate with a portable data terminal (secondary interface), in addition to the host terminal (primary interface).

The secondary interface can be programmed at any time.

Secondary Code 39 Wand Emulation

In Wand Emulation mode, the scanner decodes the bar code then sends data in the same format as a wand scanner. The Code 39 Format converts all symbologies to Code 39. The Same Code Format transmits UPC, EAN, Code 128 and Interleaved 2 of 5 without any changes, but converts all other symbologies to Code 39. These codes set the transmission rate to 25 inches per second and the output polarity to black, high. *Default = Code 39 Format.*



* Wand Emulation
Code 39 Format



Wand Emulation
Same Code Format

Note for the 3800PDF model: When the 3800PDF interface is set to wand emulation, all PDF417 bar code data is transmitted as Code 128. Data from other symbologies follow the rules described above.

Secondary RS-232 Connection

All communication parameters between the scanner and terminal must match for correct data transfer through the serial port using RS-232 protocol.

RS-232 programmable selections are used by both the primary and secondary interfaces. Changing an RS-232 parameter (e.g., baud rate or parity), while in primary or secondary mode will affect both interfaces.



RS-232 Interface

Secondary Non Decoded Output Laser Emulation

Use this selection when connecting to a secondary terminal with integral decoding. This also sets the transmission rate to 36 scans per second and the polarity to white high.



Non Decoded Output

Non Decoded Output Laser Emulation Transmission Rate

The Transmission Rate is limited by the terminal's ability to receive data without dropping characters. *Default = 36 scans/second.*



* 36



100

Non Decoded Output Laser Emulation Polarity

The Polarity can be sent as standard with white bars high, or reversed with black bars high. *Default = White High.*



* White High



Black High

Non Decoded Laser Emulation Idle

The idle describes the state of the scanner when no data is being transmitted. When in Non Decoded mode, you must set the scanner's idle state to match the idle state for the device to which the scanner is connected. *Default = High.*



Low



* High

Disabling the Secondary Interface

You can temporarily disable the secondary interface, but still retain the secondary interface settings in the scanner's memory by scanning the Disable bar code below. To re-enable the secondary interface, scan the Enable bar code. *Default = Disable.*



* Disable



Enable

Secondary Trigger Mode

Manual Trigger: You must press the scanner trigger to scan. When not scanning, idle power is maintained. *Default = Manual Trigger.*



* Manual Trigger

Automatic Trigger: The scanner scans continuously at full power.



Automatic Trigger

Manual Trigger, Low Power: The scanner “sleeps,” using only 5 microamps, until the trigger is pulled. When the trigger is pulled, the scanner wakes up and operates at reduced power until there is no triggering for the time set with the Low Power Time Out bar code. There is a short delay in operation when the scanner is first triggered, but there is no delay when operating in low power mode.

Low Power Time Out: Scan the Low Power Time Out bar code to change the time out duration. Then scan the time out duration (from 0–300 seconds) from the inside back cover and **Save**. *Default = 2 minutes.*

Note: If you make an error while scanning the digits (before scanning Save), scan **Discard** on the back cover, scan the Low Power Time Out bar code, scan the correct digits, and **Save** again.



Manual Trigger, Low Power



Low Power Time Out

Note: The Secondary Manual Trigger, Lower Power option is not available on the 3800LR–11 in Secondary Non–Decoded Out Laser Emulation Mode.

Section 7

Symbologies

Introduction

Use this section to program the scanner for Industrial, Retail, and PDF417 Symbology selections.

This programming section contains the following menu selections:

- Codabar
- Code 39
- Interleaved 2 of 5
- Code 93
- Code 2 of 5
- IATA Code 2 of 5
- Matrix 2 of 5
- Code 11
- Code 128
- Telepen
- UPC
- EAN/JAN
- MSI
- Plessey
- China Postal Code
- PDF417

Industrial Symbology Selections

Codabar

<Default All Codabar Settings>



Codabar



* On

Off



Start / Stop Characters

Start/Stop characters identify the leading and trailing ends of the bar code. You may either transmit, or not transmit Start/Stop characters. *Default = Don't Transmit.*



Transmit

* Don't Transmit



Industrial Symbology Selections

Codabar, *continued*

Check Character

Codabar check characters are created using different “modulos.” You can program the scanner to read only Codabar bar codes with Modulo 16 check characters. *Default = No Check Character.*

No Check Character indicates that the scanner reads and transmits bar code data with or without a check character.

When Check Character is set to Validate and Transmit, the scanner will only read Codabar bar codes printed with a check character, and will transmit this character at the end of the scanned data.

When Check Character is set to Validate, but Don't Transmit, the unit will only read Codabar bar codes printed **with** a check character, but will not transmit the check character with the scanned data.



* No Check Character

Validate Modulo 16, but
Don't Transmit



Validate Modulo 16 and Transmit

Industrial Symbology Selections

Codabar, *continued*

Concatenation

Codabar supports symbol concatenation. When you **Enable** concatenation, the scanner looks for a Codabar symbol having a “D” start character, adjacent to a symbol having a “D” stop character. In this case the two messages are concatenated into one with the “D” characters omitted. *Default = On.*



Select **Require** to prevent the scanner from decoding a lone Codabar symbol.

Concatenation



* On

Off



Require

Industrial Symbology Selections

Codabar, *continued*

Message Length

The message length selection is used to set the valid reading length of the bar code. You may wish to set the same value for minimum and maximum length to force the scanner to read fixed length bar code data. This helps reduce the chances of a misread.

EXAMPLE: Decode only those bar codes with a count of 9–20 characters.
Min. length = 09 Max. length = 20

EXAMPLE: Decode only those bar codes with a count of 15 characters.
Min. length = 15 Max. length = 15

For a value other than the minimum and maximum message length defaults, scan the bar codes below and then scan the 2–digit value and Save bar codes on the Programming Chart inside back cover. Minimum and Maximum Lengths = 2–60.

Note: If you make an error while scanning the digits (before scanning Save), scan **Discard** on the back cover, scan the **Minimum** or **Maximum** bar code, scan the correct digits, and **Save** again.



Minimum (Default =4)



Maximum (Default =60)

Industrial Symbology Selections

Code 39

<Default All Code 39 Settings>



Code 39



* On

Off



Start / Stop Characters

Start/Stop characters identify the leading and trailing ends of the bar code. You may either transmit, or not transmit Start/Stop characters. *Default = Don't Transmit.*



Transmit

* Don't Transmit



Industrial Symbology Selections

Code 39, continued

Check Character

No Check Character indicates that the scanner reads and transmits bar code data with or without a check character.

When Check Character is set to Validate, but Don't Transmit, the unit will only read Code 39 bar codes printed **with** a check character, but will not transmit the check character with the scanned data.

When Check Character is set to Validate and Transmit, the scanner will only read Code 39 bar codes printed with a check character, and will transmit this character at the end of the scanned data. *Default = No Check Character.*



* No Check Character

Validate, but Don't Transmit



Validate and Transmit

Code 39, *continued*

Message Length

The message length selection is used to set the valid reading length of the bar code. You may wish to set the same value for minimum and maximum length to force the scanner to read fixed length bar code data. This helps reduce the chances of a misread.

EXAMPLE: Decode only those bar codes with a count of 9–20 characters.
Min. length = 09 Max. length = 20

EXAMPLE: Decode only those bar codes with a count of 15 characters.
Min. length = 15 Max. length = 15

For a value other than the minimum and maximum message length defaults, scan the bar codes below and then scan the 2–digit value and Save bar codes on the Programming Chart inside back cover. Minimum and Maximum Lengths = 0–48.

Note: If you make an error while scanning the digits (before scanning Save), scan **Discard** on the back cover, scan the **Minimum** or **Maximum** bar code, scan the correct digits, and **Save** again.



Minimum (Default =0)



Maximum (Default =48)

Industrial Symbology Selections

Code 39, continued

Code 39 Append

This function allows the scanner to append the data from several Code 39 bar codes together before transmitting them to the host computer. When this function is enabled, the scanner stores those Code 39 bar codes that start with a space (excluding the start and stop symbols), and does not immediately transmit the data. The scanner stores the data in the order in which the bar codes are read, deleting the first space from each. The scanner transmits the appended data when it reads a Code 39 bar code that starts with a character other than a space. *Default = Off.*



On

* Off



Base 32

Base 32 is a form of the Code 39 symbology used by Italian pharmacies. This is also known as PARAF.



On

* Off



Industrial Symbology Selections

Code 39, continued

Full ASCII

If Full ASCII Code 39 decoding is enabled, certain character pairs within the bar code symbol will be interpreted as a single character. For example: \$V will be decoded as the ASCII character SYN, and /C will be decoded as the ASCII character #. *Default = On.*

FULL ASCII Code 39 CHART															
NUL	%U	DLE	\$P	SP	SPACE	0	0	@	%V	P	P	'	%W	p	+P
SOH	\$A	DC1	\$Q	!	/A	1	1	A	A	Q	Q	a	+A	q	+Q
STX	\$B	DC2	\$R	"	/B	2	2	B	B	R	R	b	+B	r	+R
ETX	\$C	DC3	\$S	#	/C	3	3	C	C	S	S	c	+C	s	+S
EOT	\$D	DC4	\$T	\$	/D	4	4	D	D	T	T	d	+D	t	+T
ENQ	\$E	NAK	\$U	%	/E	5	5	E	E	U	U	e	+E	u	+U
ACK	\$F	SYN	\$V	&	/F	6	6	F	F	V	V	f	+F	v	+V
BEL	\$G	ETB	\$W	'	/G	7	7	G	G	W	W	g	+G	w	+W
BS	\$H	CAN	\$X	(/H	8	8	H	H	X	X	h	+H	x	+X
HT	\$I	EM	\$Y)	/I	9	9	I	I	Y	Y	i	+I	y	+Y
LF	\$J	SUB	\$Z	*	/J	:	/Z	J	J	Z	Z	j	+J	z	+Z
VT	\$K	ESC	%A	+	/K	;	%F	K	K	[%K	k	+K	{	%P
FF	\$L	FS	%B	,	/L	<	%G	L	L	\	%L	l	+L		%Q
CR	\$M	GS	%C	-	/M	=	%H	M	M]	%M	m	+M	}	%R
SO	\$N	RS	%D	.	/N	>	%I	N	N	^	%N	n	+N	~	%S
SI	\$O	US	%E	/	/O	?	%J	O	O	_	%O	o	+O	DEL	%T

Character pairs /M and /N decode as a minus sign and period respectively. Character pairs /P through /Y decode as 0 through 9.



* On

Off



Industrial Symbology Selections

Interleaved 2 of 5

<Default All Interleaved 2 of 5 Settings>



Interleaved 2 of 5



* On

Off



Check Digit

No Check Digit indicates that the scanner reads and transmits bar code data with or without a check digit.

When Check Digit is set to Validate, but Don't Transmit, the unit will only read Interleaved 2 of 5 bar codes printed **with** a check digit, but will not transmit the check digit with the scanned data.

When Check Digit is set to Validate and Transmit, the scanner will only read Interleaved 2 of 5 bar codes printed with a check digit, and will transmit this digit at the end of the scanned data. *Default = No Check Digit.*



* No Check Digit

Validate, but Don't Transmit



Validate and Transmit

Interleaved 2 of 5, *continued*

Message Length

The message length selection is used to set the valid reading length of the bar code. You may wish to set the same value for minimum and maximum length to force the scanner to read fixed length bar code data. This helps reduce the chances of a misread.

EXAMPLE: Decode only those bar codes with a count of 9–20 characters.
Min. length = 09 Max. length = 20

EXAMPLE: Decode only those bar codes with a count of 15 characters.
Min. length = 15 Max. length = 15

For a value other than the minimum and maximum message length defaults, scan the bar codes below and then scan the 2–digit value and Save bar codes on the Programming Chart inside back cover. Minimum and Maximum Lengths = 2–80.

Note: If you make an error while scanning the digits (before scanning Save), scan **Discard** on the back cover, scan the **Minimum** or **Maximum** bar code, scan the correct digits, and **Save** again.



Minimum (Default =4)



Strict Decoding

When Strict Decoding is used, the scanner only reads bar codes that are close to spec. This reduces the number of misreads, but also reduces the tolerance for bar codes that are slightly out of spec.



On



Industrial Symbology Selections

Code 93

<Default All Code 93 Settings>



Code 93



* On

Off



Message Length

The message length selection is used to set the valid reading length of the bar code. You may wish to set the same value for minimum and maximum length to force the scanner to read fixed length bar code data. This helps reduce the chances of a misread.

EXAMPLE: Decode only those bar codes with a count of 9–20 characters.
Min. length = 09 Max. length = 20

EXAMPLE: Decode only those bar codes with a count of 15 characters.
Min. length = 15 Max. length = 15

For a value other than the minimum and maximum message length defaults, scan the bar codes below and then scan the 2–digit value and Save bar codes on the Programming Chart inside back cover. Minimum and Maximum Lengths = 0–80.

Note: If you make an error while scanning the digits (before scanning Save), scan **Discard** on the back cover, scan the **Minimum** or **Maximum** bar code, scan the correct digits, and **Save** again.



Minimum (Default = 0)

Maximum (Default = 80)



Industrial Symbology Selections

Code 2 of 5

<Default All Code 2 of 5 Settings>



2 of 5



* On

Off



Message Length

The message length selection is used to set the valid reading length of the bar code. You may wish to set the same value for minimum and maximum length to force the scanner to read fixed length bar code data. This helps reduce the chances of a misread.

EXAMPLE: Decode only those bar codes with a count of 9–20 characters.
Min. length = 09 Max. length = 20

EXAMPLE: Decode only those bar codes with a count of 15 characters.
Min. length = 15 Max. length = 15

For a value other than the minimum and maximum message length defaults, scan the bar codes below and then scan the 2–digit value and Save bar codes on the Programming Chart inside back cover. Minimum and Maximum Lengths = 1–48.

Note: If you make an error while scanning the digits (before scanning Save), scan **Discard** on the back cover, scan the **Minimum** or **Maximum** bar code, scan the correct digits, and **Save** again.



Minimum (Default =4)

Maximum (Default =48)



Industrial Symbology Selections

IATA Code 2 of 5

<Default All Code IATA 2 of 5 Settings>



IATA 2 of 5



* On

Off



Message Length

The message length selection is used to set the valid reading length of the bar code. You may wish to set the same value for minimum and maximum length to force the scanner to read fixed length bar code data. This helps reduce the chances of a misread.

EXAMPLE: Decode only those bar codes with a count of 9–20 characters.
Min. length = 09 Max. length = 20

EXAMPLE: Decode only those bar codes with a count of 15 characters.
Min. length = 15 Max. length = 15

For a value other than the minimum and maximum message length defaults, scan the bar codes below and then scan the 2–digit value and Save bar codes on the Programming Chart inside back cover. Minimum and Maximum Lengths = 1–48.

Note: If you make an error while scanning the digits (before scanning Save), scan **Discard** on the back cover, scan the **Minimum** or **Maximum** bar code, scan the correct digits, and **Save** again.



Minimum (Default =4)

Maximum (Default =48)



Industrial Symbology Selections

Matrix 2 of 5

<Default All Matrix 2 of 5 Settings>



Matrix 2 of 5



* On

Off



Message Length

The message length selection is used to set the valid reading length of the bar code. You may wish to set the same value for minimum and maximum length to force the scanner to read fixed length bar code data. This helps reduce the chances of a misread.

EXAMPLE: Decode only those bar codes with a count of 9–20 characters.
Min. length = 09 Max. length = 20

EXAMPLE: Decode only those bar codes with a count of 15 characters.
Min. length = 15 Max. length = 15

For a value other than the minimum and maximum message length defaults, scan the bar codes below and then scan the 2–digit value and Save bar codes on the Programming Chart inside back cover. Minimum and Maximum Lengths = 1–80.

Note: If you make an error while scanning the digits (before scanning Save), scan **Discard** on the back cover, scan the **Minimum** or **Maximum** bar code, scan the correct digits, and **Save** again.



Minimum (Default =4)

Maximum (Default =80)



Industrial Symbology Selections

Code 11

<Default All Code 11 Settings>



Code 11



* On

Off



Check Digits Required

This option sets whether 1 or 2 check digits are required with Code 11 bar codes. *Default = Two Check Digits.*



One Check Digit

* Two Check Digits



Code 11, *continued*

Message Length

The message length selection is used to set the valid reading length of the bar code. You may wish to set the same value for minimum and maximum length to force the scanner to read fixed length bar code data. This helps reduce the chances of a misread.

EXAMPLE: Decode only those bar codes with a count of 9–20 characters.
Min. length = 09 Max. length = 20

EXAMPLE: Decode only those bar codes with a count of 15 characters.
Min. length = 15 Max. length = 15

For a value other than the minimum and maximum message length defaults, scan the bar codes below and then scan the 2–digit value and Save bar codes on the Programming Chart inside back cover. Minimum and Maximum Lengths = 1–80.

Note: If you make an error while scanning the digits (before scanning Save), scan **Discard** on the back cover, scan the **Minimum** or **Maximum** bar code, scan the correct digits, and **Save** again.



Minimum (Default =4)



Industrial Symbology Selections

Code 128

<Default All Code 128 Settings>



Code 128



* On

Off



Function Character Transmit

If function characters are turned off, function codes are not sent with bar code data. Refer to Hex ASCII Conversion Chart on page 4–5 for function codes.
Default =Off.



On

* Off



<GS> Substitution

When enabled, the scanner substitutes a <GS> for Function Character 1 when decoding EAN 128. *Default =Off.*



On

* Off



Industrial Symbology Selections

Code 128, continued

Message Length

The message length selection is used to set the valid reading length of the bar code. You may wish to set the same value for minimum and maximum length to force the scanner to read fixed length bar code data. This helps reduce the chances of a misread.

EXAMPLE: Decode only those bar codes with a count of 9–20 characters.
Min. length = 09 Max. length = 20

EXAMPLE: Decode only those bar codes with a count of 15 characters.
Min. length = 15 Max. length = 15

For a value other than the minimum and maximum message length defaults, scan the bar codes below and then scan the 2–digit value and Save bar codes on the Programming Chart inside back cover. Minimum and Maximum Lengths = 0–90.

Note: If you make an error while scanning the digits (before scanning Save), scan **Discard** on the back cover, scan the **Minimum** or **Maximum** bar code, scan the correct digits, and **Save** again.



Minimum (Default =0)

Maximum (Default =80)



Industrial Symbology Selections

Telepen

<Default All Telepen Settings>



Telepen



* On

Off



Telepen Output

Using AIM Telepen Output, the scanner reads symbols with start/stop pattern 1 and decodes them as standard full ASCII (start/stop pattern 1). When Original Telepen Output is selected, the scanner reads symbols with start/stop pattern 1 and decodes them as compressed numeric with optional full ASCII (start/stop pattern 2). *Default = AIM Telepen Output.*



* AIM Telepen Output



Original Telepen Output

Telepen, *continued*

Message Length

The message length selection is used to set the valid reading length of the bar code. You may wish to set the same value for minimum and maximum length to force the scanner to read fixed length bar code data. This helps reduce the chances of a misread.

EXAMPLE: Decode only those bar codes with a count of 9–20 characters.
Min. length = 09 Max. length = 20

EXAMPLE: Decode only those bar codes with a count of 15 characters.
Min. length = 15 Max. length = 15

For a value other than the minimum and maximum message length defaults, scan the bar codes below and then scan the 2–digit value and Save bar codes on the Programming Chart inside back cover. Minimum and Maximum Lengths = 1–60.

Note: If you make an error while scanning the digits (before scanning Save), scan **Discard** on the back cover, scan the **Minimum** or **Maximum** bar code, scan the correct digits, and **Save** again.



Minimum (Default = 1)



Retail Symbology Selections

UPC A

<Default All UPC A Settings>



UPC A



* On

Off



Check Digit

This selection allows you to specify whether the check digit should be transmitted at the end of the scanned data or not. *Default = On.*



* On

Off



Number System

The numeric system digit of a UPC symbol is normally transmitted, but the unit can be programmed so it will not transmit it. *Default = On.*



* On

Off



Retail Symbology Selections

UPC A, *continued*

Addenda

This selection adds 2 or 5 digits to the end of all scanned UPC A data.
Default = Off for both 2-Digit and 5-Digit Addenda.

2-Digit Addenda



On

* Off



5-Digit Addenda



On

* Off



Retail Symbology Selections

UPC A, *continued*

Addenda Required

When Addenda Required is set to on, the scanner will only read UPC A bar codes that have addenda. *Default = Off.*

Addenda Required



On

* Off



Addenda Separator

When this feature is on, there is a space between the data from the bar code and the data from the addenda. When turned off, there is no space. *Default = On.*



* On

Off



Strict Decoding

When Strict Decoding is used, the scanner only reads bar codes that are close to spec. This reduces the number of misreads, but also reduces the tolerance for bar codes that are slightly out of spec.



On

* Off



Retail Symbology Selections

UPC E

<Default All UPC E Settings>



Most UPC bar codes lead with the 0 number system. For these codes, use the UPC E0 selection. If you need to read codes that lead with the 1 number system, use the UPC E1 selection. *Default = On (UPC E0) and Off (UPC E1).*

UPC E0



* On

Off



UPC E1



On

* Off



UPC E Expand

UPC E Expand expands the UPC E code to the 12 digit, UPC A format. *Default = Off.*



On

* Off



Retail Symbology Selections

UPC E, *continued*

Check Digit

Check Digit specifies whether the check digit should be transmitted at the end of the scanned data or not. *Default = On.*



* On

Off



Number System

The numeric system digit of a UPC symbol is normally transmitted, but the unit can be programmed so it will not transmit it. *Default = On.*



* On

Off



Addenda

This selection adds 2 or 5 digits to the end of all scanned UPC E data. *Default = Off for both 2-Digit and 5-Digit Addenda.*

2-Digit Addenda



On

* Off



5-Digit Addenda



On

* Off



Retail Symbology Selections

UPC E, *continued*

Addenda Required

When Addenda Required is set to on, the scanner will only read UPC E bar codes that have addenda. *Default = Off.*



On

* Off



Addenda Separator

When this feature is on, there is a space between the data from the bar code and the data from the addenda. When turned off, there is no space. *Default = On.*



* On

Off



Retail Symbology Selections

EAN/JAN 13

<Default All EAN/JAN 13 Settings>



EAN/JAN 13



* On

Off



Check Digit

This selection allows you to specify whether the check digit should be transmitted at the end of the scanned data or not. *Default = On.*



* On

Off



Addenda

This selection adds 2 or 5 digits to the end of all scanned EAN/JAN 13 data. *Default = Off for both 2-Digit and 5-Digit Addenda.*

2-Digit Addenda



On

* Off



Retail Symbolgy Selections

EAN/JAN 13, *continued*

5-Digit Addenda



On

* Off



Addenda Required

When Addenda Required is set to on, the scanner will only read EAN/JAN 13 bar codes that have addenda. *Default = Off.*



On

* Off



Addenda Separator

When this feature is on, there is a space between the data from the bar code and the data from the addenda. When turned off, there is no space. *Default = On.*



* On

Off



ISBN Enable

This symbology allows the scanner to read ISBN codes on books. *Default = Off.*



On

* Off



Retail Symbology Selections

EAN/JAN 8

<Default All EAN/JAN 8 Settings>



EAN/JAN 8



* On

Off



Check Digit

This selection allows you to specify whether the check digit should be transmitted at the end of the scanned data or not. *Default = On.*



* On

Off



Addenda

This selection adds 2 or 5 digits to the end of all scanned EAN/JAN 13 data. *Default = Off for both 2-Digit and 5-Digit Addenda.*

2-Digit Addenda



On

* Off



Retail Symbology Selections

EAN/JAN 8, *continued*

5-Digit Addenda



On

* Off



Addenda Required

When Addenda Required is set to on, the scanner will only read EAN/JAN 13 bar codes that have addenda. *Default = Off.*

Addenda Required



On

* Off



Addenda Separator

Default = On.



* On

Off



Retail Symbology Selections

MSI

<Default All MSI Settings>



MSI



On

* Off



Check Character

Different types of check characters are used with MSI bar codes. You can program the scanner to read only MSI bar codes with Type 10 or Type 11 check characters. *Default = Validate Type 10, but Don't Transmit.*

When Check Character is set to Validate and Transmit, the scanner will only read MSI bar codes printed with the specified type check character, and will transmit this character at the end of the scanned data.

When Check Character is set to Validate, but Don't Transmit, the unit will only read MSI bar codes printed **with** the specified type check character, but will not transmit the check character with the scanned data.



* Validate Type 10, but Don't
Transmit

Validate Type 10 and Transmit



Validate Type 11, but
Don't Transmit

Validate Type 11 and Transmit



Retail Symbology Selections

MSI, continued

Message Length

The message length selection is used to set the valid reading length of the bar code. You may wish to set the same value for minimum and maximum length to force the scanner to read fixed length bar code data. This helps reduce the chances of a misread.

EXAMPLE: Decode only those bar codes with a count of 9–20 characters.
Min. length = 09 Max. length = 20

EXAMPLE: Decode only those bar codes with a count of 15 characters.
Min. length = 15 Max. length = 15

For a value other than the minimum and maximum message length defaults, scan the bar codes below and then scan the 2–digit value and Save bar codes on the Programming Chart inside back cover. Minimum and Maximum Lengths = 4–48.

Note: If you make an error while scanning the digits (before scanning Save), scan **Discard** on the back cover, scan the **Minimum** or **Maximum** bar code, scan the correct digits, and **Save** again.



Minimum (Default =4)

Maximum (Default =48)



Retail Symbology Selections

Plessey

<Default All Plessey Settings>



Plessey



On

* Off



Message Length

The message length selection is used to set the valid reading length of the bar code. You may wish to set the same value for minimum and maximum length to force the scanner to read fixed length bar code data. This helps reduce the chances of a misread.

EXAMPLE: Decode only those bar codes with a count of 9–20 characters.
Min. length = 09 Max. length = 20

EXAMPLE: Decode only those bar codes with a count of 15 characters.
Min. length = 15 Max. length = 15

For a value other than the minimum and maximum message length defaults, scan the bar codes below and then scan the 2–digit value and Save bar codes on the Programming Chart inside back cover. Minimum and Maximum Lengths = 4–48.

Note: If you make an error while scanning the digits (before scanning Save), scan **Discard** on the back cover, scan the **Minimum** or **Maximum** bar code, scan the correct digits, and **Save** again.



Minimum (Default =4)

Maximum (Default =48)



Retail Symbology Selections

China Post Code

<Default All China Post Code Settings>



China Post Code



On

* Off



Message Length

The message length selection is used to set the valid reading length of the bar code. You may wish to set the same value for minimum and maximum length to force the scanner to read fixed length bar code data. This helps reduce the chances of a misread.

EXAMPLE: Decode only those bar codes with a count of 9–20 characters.
Min. length = 09 Max. length = 20

EXAMPLE: Decode only those bar codes with a count of 15 characters.
Min. length = 15 Max. length = 15

For a value other than the minimum and maximum message length defaults, scan the bar codes below and then scan the 2–digit value and Save bar codes on the Programming Chart inside back cover. Minimum and Maximum Lengths = 0–80.

Note: If you make an error while scanning the digits (before scanning Save), scan **Discard** on the back cover, scan the **Minimum** or **Maximum** bar code, scan the correct digits, and **Save** again.



Minimum (Default =4)

Maximum (Default =80)



PDF417 Symbology Selections

Note: The following Symbology selections are for use with the 3800PDF-12 scanner only.

PDF417

<Default All PDF417 Settings>



PDF417



* On

Off



Message Length

The message length selection is used to set the valid reading length of the bar code. You may wish to set the same value for minimum and maximum length to force the scanner to read fixed length bar code data. This helps reduce the chances of a misread.

EXAMPLE: Decode only those bar codes with a count of 9–20 characters.
Min. length = 09 Max. length = 20

EXAMPLE: Decode only those bar codes with a count of 15 characters.
Min. length = 15 Max. length = 15

For a value other than the minimum and maximum message length defaults, scan the bar codes below and then scan the 2–digit value and Save bar codes on the Programming Chart inside back cover. Minimum and Maximum Lengths = 1–2750.

Note: If you make an error while scanning the digits (before scanning Save), scan **Discard** on the back cover, scan the **Minimum** or **Maximum** bar code, scan the correct digits, and **Save** again.



Minimum (Default = 1)

Maximum (Default = 2750)



PDF417 Symbology Selections

Note: The following Symbology selections are for use with the 3800PDF-12 scanner only.

Show GLI Blocks

Turning Show GLI Blocks on causes GLI commands to be issued where located within their encoded data sequences. When on, the “\” is used as an escape character and natural occurrences of “\” in data are replaced by “\\”.
Default = Off.



On

* Off



Scan Diagnostics

When Scan Diagnostics is turned on, the scanner sends a report instead of the decoded message. Your terminal displays the diagnostic information first, then the data from the scanned code. *Default = Off.*



On

* Off



The following list shows the information that appears for the PDF417 symbology.

Note: The higher the percentage of unused error correction (UEC), the easier it should be to read each code.

PDF 417: x rows, x cols, xx data & xx chks (ECL = x), EUC = xxx%

Rows = Number of rows

Cols = Number of columns

Data = Number of data words

Chks = Number of check words

ECL = Error Correction Level

UEC = Unused Error Correction

Section 8

Cloning

The cloning procedure reprograms the software in the “destination” scanner’s memory with software from the “source” scanner. Before using this procedure, determine which scanner will be the source (the scanner containing the desired software). The IMAGETEAM 3800 supports cloning and can act as the source device. The software in the destination scanner will be updated from the source scanner. The destination scanner device must be the same model as the source.

Procedure:

1. Use the cloning cable (42204559–01) to connect the two scanners for cloning.
2. Connect the destination scanner to one of the 10 pin modular connectors on the cloning cable.
3. Connect the source scanner (containing the new or updated software) to the remaining 10 pin modular connector on the cloning cable.
4. Connect the power supply to the 4 pin mini–DIN connector located on the cloning cable or the scanner cable.
5. Make sure both units are on, and then scan the “Clone Destination” bar code with the destination scanner.



Clone Destination Bar Code

6. Scan the Clone Source bar code below with the source scanner. The scanner’s “Good Read” LED begins blinking periodically indicating cloning is in process.



Clone Source Bar Code

7. When cloning is complete, the destination scanner will double beep. This procedure takes approximately two minutes.
8. Disconnect the destination scanner from the cloning cable.
9. To clone another scanner, repeat steps 1 through 8.

Caution: DO NOT scan the “source” bar code unless you are going to clone a scanner. If you mistakenly scan this bar code, reset the scanner by turning the power off and back on to regain normal operation.



Section 9

Visual Menu

Visual Menu Introduction

Visual Menu provides the ability to configure a scanning device by connecting the scanner to the com port of a PC. Visual Menu allows you to download upgrades to a scanner's firmware, change programmed parameters, and create and print programming bar codes. Using Visual Menu, you can even set up the configuration for a scanner which is not attached to your PC. This enables one expert user to establish the configuration settings for all the devices your company uses, then save these configuration files for others. A configuration file can be e-mailed or, if you prefer, an expert user can create a bar code (or series of bar codes) which contains all the customized programming parameters, and mail or fax the bar code(s) to any location. Users in other locations can scan the bar code(s) to load in the customized parameters.

To communicate with a scanner, Visual Menu requires that the PC have at least one available serial communication port and an RS-232 cable to connect the port to the device. A power supply, which plugs into the cable, is also required.

Visual Menu Operations

The Visual Menu program performs the following operations:

- Displays all configuration data, and saves the information to a file on your PC.
- Configures the device to meet your specific requirements. Visual Menu has all the programming parameters which are available via programming bar codes in this User's Guide.
- Creates and prints a clone bar code which contains the program and configuration data from one device. This bar code can then be used to program additional devices with the same parameters.
- Selects a device from a list, then performs offline or online file configuration for that device.

Temporary Visual Menu Configuration

For quick download communication configuration, scan the **Visual Menu** bar code to temporarily configure the scanner for Visual Menu settings.



Visual Menu

Installing Visual Menu from the Web

1. Access the Welch Allyn Data Collection, Inc. web site at <http://dcd.welchallyn.com>.
2. Click on the **Support** button, then click on the **Software Download** button.
3. When prompted, enter the user name: **pumpkin** and the password: **pie**
4. Locate the listing for **Visual Menu**. Click on the yellow **Download** button.
5. When prompted, select **Save File**, and save the files to the **c:\windows\temp** directory.
6. Once you have finished downloading the file, exit the web site.
7. Using Explorer, go to the **c:\windows\temp** file.
8. Double click on the **Visualmenu.exe** file. Follow the screen prompts to install the Visual Menu program.
9. To start Visual Menu, from the Start Menu click on **Programs, Visual Menu, Visual Menu**.

Note: If you wish, you can create a shortcut to the Visual Menu executable on your desktop.

Section 10

Interface Keys

Keyboard Function Relationships

The following Keyboard Function Code, Hex/ASCII Value, and Full ASCII "CTRL" + "CTRL"+ relationships apply to all terminals that can be used with the scanner.

Function Code	HEX/ASCII Value	Full ASCII "CTRL" +
NUL	00	2
SOH	01	A
STX	02	B
ETX	03	C
EOT	04	D
ENQ	05	E
ACK	06	F
BEL	07	G
BS	08	H
HT	09	I
LF	0A	J
VT	0B	K
FF	0C	L
CR	0D	M
SO	0E	N
SI	0F	O
DLE	10	P
DC1	11	Q
DC2	12	R
DC3	13	S
DC4	14	T
NAK	15	U
SYN	16	V
ETB	17	W
CAN	18	X
EM	19	Y
SUB	1A	Z
ESC	1B	[
FS	1C	\
GS	1D]
RS	1E	6
US	1F	-

The last five characters in the Full ASCII "CTRL"+ column ([\] 6 -), apply to US only. The following chart indicates the equivalents of these five characters for different countries.

Country	[\]	6	-
United States	[\]	6	-
Belgium	[<]	6	-
Scandinavia	8	<	9	6	-
France	^	8	\$	6	=
Germany		Ã	+	6	-
Italy		\	+	6	-
Swiss		<	..	6	-
United Kingdom	[']	6	-
Denmark	8	\	9	6	-
Norway	8	\	9	6	-
Spain	[\]	6	-

Supported Interface Keys

<i>Supported Interface Keys</i>		IBM AT/XT and PS/2 Compatibles, WYSE PC/AT	IBM XTs and Compatibles	IBM, DDC, Memorex Telex, Harris*
NUL	00	Reserved	Reserved	Reserved
SOH	01	Enter (KP)	CR/Enter	Enter
STX	02	Cap Lock	Caps Lock	F11
ETX	03	ALT make	Reserved	F12
EOT	04	ALT break	Reserved	F13
ENQ	05	CTRL make	Reserved	F14
ACK	06	CTRL break	Reserved	F15
BEL	07	CR/Enter	CR/Enter	New Line
BS	08	Reserved	Reserved	F16
HT	09	Tab	Tab	F17
LF	0A	Reserved	Reserved	F18
VT	0B	Tab	Tab	Tab/Field Forward
FF	0C	Delete	Delete	Delete
CR	0D	CR/Enter	CR/Enter	Field Exit/New Line
SO	0E	Insert	Insert	Insert
SI	0F	Escape	Escape	F19
DLE	10	F11	Reserved	Error Reset
DC1	11	Home	Home	Home
DC2	12	Print	Print	F20
DC3	13	Back Space	Back Space	Back Space
DC4	14	Back Tab	Back Tab	Backfield/Back Tab
NAK	15	F12	Reserved	F21
SYN	16	F1	F1	F1
ETB	17	F2	F2	F2
CAN	18	F3	F3	F3
EM	19	F4	F4	F4
SUB	1A	F5	F5	F5
ESC	1B	F6	F6	F6
FS	1C	F7	F7	F7
GS	1D	F8	F8	F8
RS	1E	F9	F9	F9
US	1F	F10	F10	F10

* IBM 3191/92, 3471/72, 3196/97, 3476/77, Telex (all models)

Supported Interface Keys

Supported Interface Keys		IBM, Memorex Telex (102)*	Memorex Telex (88)**
NUL	00	Reserved	Reserved
SOH	01	Enter	Enter
STX	02	F11	PF10
ETX	03	F12	PF11
EOT	04	F13	PF12
ENQ	05	F14	Reserved
ACK	06	F15	Reserved
BEL	07	New Line	New Line
BS	08	F16	Field Forward
HT	09	F17	Field Forward
LF	0A	F18	Reserved
VT	0B	Tab/Field Forward	Field Forward
FF	0C	Delete	Delete
CR	0D	Field Exit	New Line
SO	0E	Insert	Insert
SI	0F	Clear	Erase
DLE	10	Error Reset	Error Reset
DC1	11	Home	Reserved
DC2	12	Print	Print
DC3	13	Back Space	Back Space
DC4	14	Back Tab	Back Field
NAK	15	F19	Reserved
SYN	16	F1	PF1
ETB	17	F2	PF2
CAN	18	F3	PF3
EM	19	F4	PF4
SUB	1A	F5	PF5
ESC	1B	F6	PF6
FS	1C	F7	PF7
GS	1D	F8	PF8
RS	1E	F9	PF9
US	1F	F10	Home

* IBM 3196/97, 3476/77, 3191/92, 3471/72, Memorex Telex (all models) with 102 key keyboards

** Memorex Telex with 88 key keyboards

Supported Interface Keys

Supported Interface Keys	Esprit 200, 400 ANSI	Esprit 200, 400 ASCII	Esprit 200, 400 PC
NUL	00	Reserved	Reserved
SOH	01	New Line	New Line
STX	02	N/A	N/A
ETX	03	N/A	N/A
EOT	04	N/A	N/A
ENQ	05	N/A	N/A
ACK	06	N/A	N/A
BEL	07	New Line	New Line
BS	08	N/A	N/A
HT	09	Tab	Tab
LF	0A	N/A	N/A
VT	0B	Tab	Tab
FF	0C	N/A	Delete
CR	0D	New Line	New Line
SO	0E	N/A	Insert
SI	0F	Escape	Escape
DLE	10	F11	F11
DC1	11	Insert	Home
DC2	12	F13	Print
DC3	13	Back Space	Back Space
DC4	14	Back Tab	Back Tab
NAK	15	F12	F12
SYN	16	F1	F1
ETB	17	F2	F2
CAN	18	F3	F3
EM	19	F4	F4
SUB	1A	F5	F5
ESC	1B	F6	F6
FS	1C	F7	F7
GS	1D	F8	F8
RS	1E	F9	F9
US	1F	F10	F10



Section 11

Utilities

To Add a Test Code I.D. Prefix to All Symbologies

This selection allows you to turn on transmission of a Code I.D. before the decoded symbology. (See the Symbology Chart on page 4–5 for the single character code that identifies each symbology.) This action first clears all current prefixes, then programs a Code I.D. prefix for all symbologies. This is a temporary setting that will be removed when the unit is power cycled.



Add Code I.D. Prefix to
All Symbologies

Show Software Revision

Scan the bar code below to output the current software revision.



Show Revision

Show Data Format

Scan the bar code below to show current data format settings.



Data Format Settings



Section 12

Defaults

Resetting the Factory Settings

If you aren't sure what programming options are in your scanner, or you've changed some options and want the factory settings restored, scan the **Factory Default Settings** bar code below.



Factory Default Settings

The following chart lists the factory default settings (indicated by an asterisk (*) on the programming pages).

<u>Parameter</u>	<u>Default</u>	<u>Page</u>
Terminal I.D.	003	2-2
Keyboard Country	USA	2-4
Keyboard Style	Regular	2-5
Keyboard Modifiers	Control+ASCII Off	2-6
	Turbo Off	2-6
	Numeric Keypad Off	2-6
	Auto Direct Connect Off	2-7
RS-232 Selections		
Baud Rate	9600 bps	2-9
RS-232 Word Length Data Bits, Stop Bits, and Parity	7 Data 1 Stop Even Parity	2-10
RS-232 Handshaking	RTS/CTS off XON/XOFF off ACK/NAK off	2-12
Wand Emulation Selections		
Wand Emulation Connection	Code 39 Format	2-13
Wand Emulation Transmission Rate	25 inches/second	2-14
Wand Emulation Polarity	Black High	2-15
Wand Emulation Idle	High	2-15

<u>Parameter</u>	<u>Default</u>	<u>Page</u>
<i>PDF417 Wand Emulation Selections</i>		
Data Block Size	60	2-16
Data Between Blocks	50ms	2-17
Overall Checksum	Off	2-17
Wake Up Pulse	Off	2-18
<i>Output Selections</i>		
Scan Rate	270 scans/second	3-1
Beeper Volume	High	3-1
Beeper Tone	Normal	3-2
Scan Voting	Voting Normal	3-2
Quiet Zone	Don't Reduce	3-2
Reread Delay	Short	3-3
Good Read Delay	No Delay	3-3
Trigger Mode	Manual	3-4
<i>Data Editing Selections</i>		
Prefix	None	4-1
Suffix	None	4-1
Function Code Transmit	Enable	4-6
<i>Data Formatter Selections</i>		
Data Formatter	On/None	5-5
<i>Secondary Interface Selections</i>		
Code 39 Wand Emulation	Code 39 Format	6-1
Non Decoded Output Laser Emulation Transmission Rate	36 inches/second	6-2
Non Decoded Output Laser Emulation Polarity	White High	6-2
Non Decoded Laser Emulation Idle	High	6-3
Disabling the Secondary Interface	Disabled	6-3
Secondary Trigger Mode	Manual Trigger, Low Power Timeout 2 minutes	6-4
<i>Codabar Selections</i>		
Codabar	On	7-2
Start/Stop	Don't Transmit	7-2
Check Character	Not Required	7-3
Concatenation	On	7-4
Message Length	Min 4, Max 60	7-5
Voting Threshold	10	
Votes At or Above Threshold	2	
Votes Below Threshold	4	

<u>Parameter</u>	<u>Default</u>	<u>Page</u>
Code 39 Selections		
Code 39	On	7-6
Start/Stop	Don't Transmit	7-6
Check Character	Not Required	7-7
Message Length	Min 0, Max 48	7-8
Code 39 Append	Off	7-9
Base 32	Off	7-9
Full ASCII	On	7-10
Voting Threshold	10	
Votes At or Above Threshold	2	
Votes Below Threshold	4	
Interleaved 2 of 5 Selections		
Interleaved 2 of 5	On	7-11
Check Digit	Not Required	7-11
Message Length	Min 4, Max 80	7-12
Strict Decoding	Off	7-12
Voting Threshold	10	
Votes At or Above Threshold	3	
Votes Below Threshold	5	
Code 93 Selections		
Code 93	On	7-13
Message Length	Min 0, Max 80	7-13
Voting Threshold	10	
Votes At or Above Threshold	2	
Votes Below Threshold	4	
Code 2 of 5 Selections		
Code 2 of 5	On	7-14
Message Length	Min 4, Max 48	7-14
Voting Threshold	10	
Votes At or Above Threshold	3	
Votes Below Threshold	5	
IATA Code 2 of 5 Selections		
IATA Code 2 of 5	On	7-15
Message Length	Min 4, Max 48	7-15
Voting Threshold	10	
Votes At or Above Threshold	3	
Votes Below Threshold	5	

<u>Parameter</u>	<u>Default</u>	<u>Page</u>
Matrix 2 of 5 Selections		
Matrix 2 of 5	On	7-16
Message Length	Min 4, Max 80	7-16
Voting Threshold	10	
Votes At or Above Threshold	3	
Votes Below Threshold	5	
Code 11 Selections		
Code 11	On	7-17
Check Digits Required	2	7-17
Message Length	Min 4, Max 80	7-18
Voting Threshold	10	
Votes At or Above Threshold	2	
Votes Below Threshold	4	
Code 128 Selections		
Code 128	On	7-19
Function Character Transmit	Off	7-19
<GS> Substitution	Off	7-19
Message Length	Min 0, Max 80	7-20
Voting Threshold	10	
Votes At or Above Threshold	2	
Votes Below Threshold	4	
Telepen Selections		
Telepen	On	7-21
Telepen Output	AIM Telepen	7-21
Message Length	Min 1, Max 60	7-22
UPC A		
UPC A	On	7-23
Check Digit	On	7-23
Number System	On	7-23
2-Digit Addenda	Off	7-24
5-Digit Addenda	Off	7-24
Addenda Required	Off	7-25
Addenda Separator	On	7-25
Strict Decoding	Off	7-25
Votes Required	2	

<u>Parameter</u>	<u>Default</u>	<u>Page</u>
<i>UPC E</i>		
UPC E0	On	7-26
UPC E1	Off	7-26
UPC E Expand	Off	7-26
Check Digit	On	7-27
Number System	On	7-27
2-Digit Addenda	Off	7-27
5-Digit Addenda	Off	7-27
Addenda Required	Off	7-28
Addenda Separator	On	7-28
Votes Required	2	
<i>EAN/JAN 13</i>		
EAN/JAN 13	On	7-29
Check Digit	On	7-29
2-Digit Addenda	Off	7-29
5-Digit Addenda	Off	7-30
Addenda Required	Off	7-30
Addenda Separator	On	7-30
ISBN Enable	Off	7-30
Votes Required	2	
<i>EAN/JAN 8</i>		
EAN/JAN 8	On	7-31
Check Digit	On	7-31
2-Digit Addenda	Off	7-31
5-Digit Addenda	Off	7-32
Addenda Required	Off	7-32
Addenda Separator	On	7-32
Votes Required	2	
<i>MSI Selections</i>		
MSI	Off	7-33
Check Character	Validate Type 10, but Don't Transmit	7-33
Message Length	Min 4, Max 48	7-34
Voting Threshold	10	
Votes At or Above Threshold	3	
Votes Below Threshold	5	

<u>Parameter</u>	<u>Default</u>	<u>Page</u>
<i>Plessey Selections</i>		
Plessey	Off	7-35
Message Length	Min 4, Max 48	7-35
Voting Threshold	10	
Votes At or Above Threshold	2	
Votes Below Threshold	4	
<i>China Post Code</i>		
China Post Code	Off	7-36
Message Length	Min 4, Max 80	7-36
Voting Threshold	10	
Votes At or Above Threshold	3	
Votes Below Threshold	5	
<i>PDF417 Symbology Selections</i>		
PDF417	On	7-37
Message Length	Min 1, Max 2750	7-37
Show GLI Blocks	Off	7-38
Scan Diagnostics	Off	7-38

Section 13

Specifications

Product Specifications

Dimensions

Height 6.0 inches (15.2 cm)
Length 5.3 inches (13.5 cm)
Weight 6.3 ounces (179.2 g)
Width 3.1 inches (7.9 cm)

Light Source 630 nm visible red LED

Scan Rate Programmable to 270 scans per second

Skew Angle ± 30 degrees

Pitch Angle ± 15 degrees

Horizontal Velocity 5 inches (12.7 cm) per second

Minimum Reflectance

Difference 30% – LR/HD, 40% – PDF

Decode Rate 270 decodes per second

Power Requirements 5VDC $\pm 10\%$ at scanner

Current Draw (–12 models)

@270 s/s 275 mA Scanning; 125 mA Standby;
5 microA Low Power; 300 mA In-Rush

Temperature Ranges

Operating 32° F to +122° F (0° C to +50° C)
Storage –40° F to +140° F (–36° C to +60° C)

Humidity 0 to 95% non-condensing

Mechanical Shock Operational after 25 drops from 5 feet
(1.53 m) to concrete

Vibration Withstands 5G peak from 20 to 300 Hz

ESD Sensitivity 15 kV to any external surface

Agency Compliance FCC Class B, CE EMC Class B, CE Low
Voltage Directive, EN60825–1,
IEC60825-1 LED Safety: Class 1, UL, cUL,
TÜV Certified to EN60950, C–Tic.

 
Standard Cable Pinouts

Laser Output only (Laser Compatible Bar Image)

Conventional laser data format is provided at the modular connector in the scanner handle.


Interface cables are terminated with a 10 pin modular plug (P1) and a 9 pin Type D (squeeze to release) connector (P2) that is compatible with all Welch Allyn Data Collection, Inc. terminals. See chart below.

P1




10 Pin Modular Plug

P1 connects to the scanner handle.

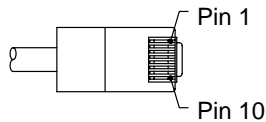


P2

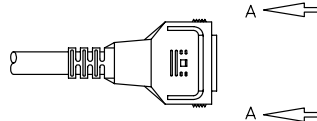

9 Pin Type D Female

P2 connects to your terminal.

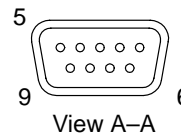

P1	Signal	Function	P2	
9	SOS	Start of Scan	1	
6	Data	Digital Bar Code Data Output	2	
1	Good Read	Turn on Good Read LED or Beeper	3	
7	+5VDC	5 Volt Power Connection ♦	9	
2	Trigger	Trigger Signal to Decoder	5	
3	Enable	Laser Enable	6	
4	Ground	Supply Ground	7	
	N/C	Braid	Cord Shield	8
			N/C ♦	4

♦ Pins 4 and 9 are populated depending on power supply voltage option.


Note: Some decoders may have +12V on pins 4 or 9. **Connect to +5VDC ONLY!**

Standard Cable Pinouts

Keyboard Wedge

Decoded output data format provided at 10 pin RJ41 modular connector (in scanner handle). See chart below.

10 Pin RJ41 Modular Connector

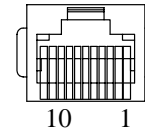


P1	Signal	Function
2	N/C	Cord Shield
3	Prog 1	
4	Ground	Supply Ground
5	Tclock	Terminal Clock
6	Tdata	Terminal Data
7	+5VDC	5 Volt Power Connection
8	Kdata	Keyboard Data
9	Kclock	Keyboard Clock

Standard Cable Pinouts

Wand Emulation


Conventional wand data format provided at 10 pin RJ41 modular connector (in scanner handle). See chart below.

 P1




10 Pin Modular Plug

P1 connects to the scanner handle.

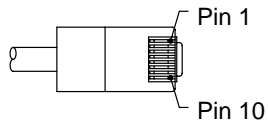


P2

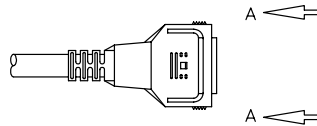

9 Pin Type D Female

P2 connects to your terminal.

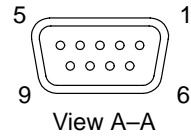


P1	Signal	Function	P2
2	N/C	Cord Shield	8
3	Prog 1	Tied to 5 Volt Power	
4	Ground	Supply Ground	7
6	Barcode	Bar Code Data Output	2
7	+5VDC	5 Volt Power Connection	4

Standard Cable Pinouts (Primary Interface Cables)

3800LR-12

Decoded output data format provided at 10 pin RJ41 modular connector (in scanner handle). See chart below.

10 Pin RJ41 Modular Connector

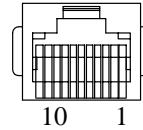

P1	Signal	Function
2	Braid	Cord Shield
3	Prog	Tied to 5 Volt Power
4	Ground	Supply Ground
5	RXD	Receive Data – Serial Data to Scanner
6	TXD	Transmit Data – Serial Data from Scanner
7	+5VDC	5 Volt Power Connection
8	RTS	Request to Send Data
9	CTS	Clear to Send Data




Section 14


Scan Maps

Scan Maps

IT3800LR-11 reading good quality linear bar codes

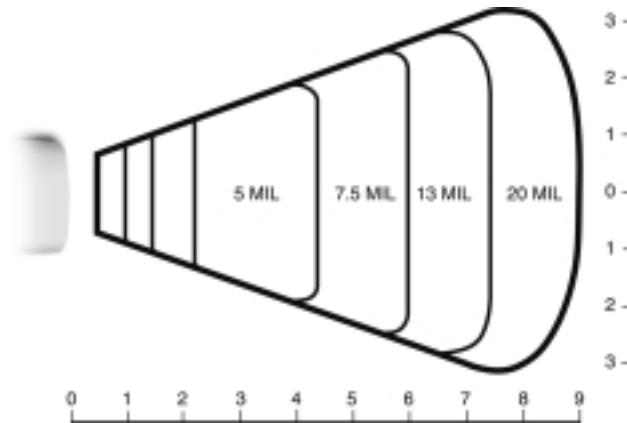


IT3800LR-12 reading good quality linear bar codes

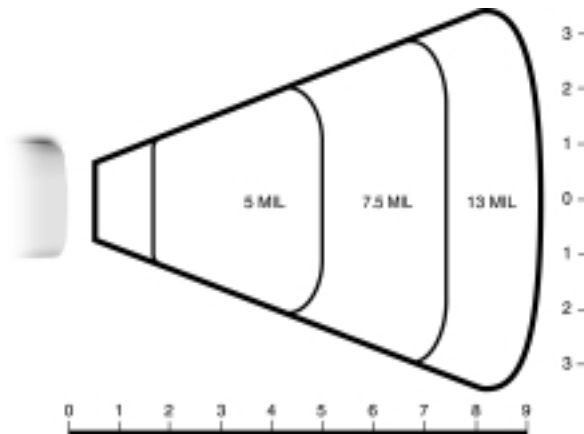


Scan Maps, *continued*

IT3800VHD-12 reading good quality linear bar codes

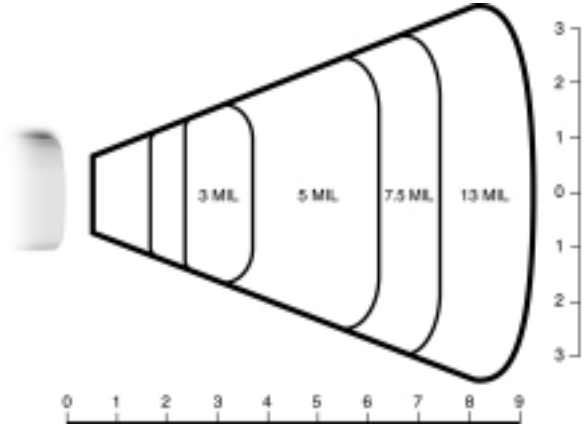


IT3800PDF-12 reading good quality, 3:1 aspect ratio PDF417 bar codes

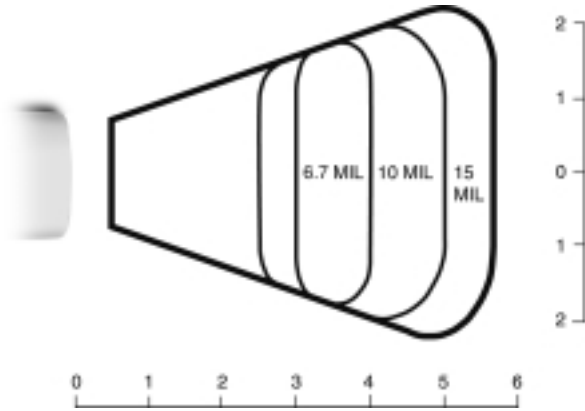

Scan Maps, *continued*

IT3800PDF-12 reading good quality linear bar codes

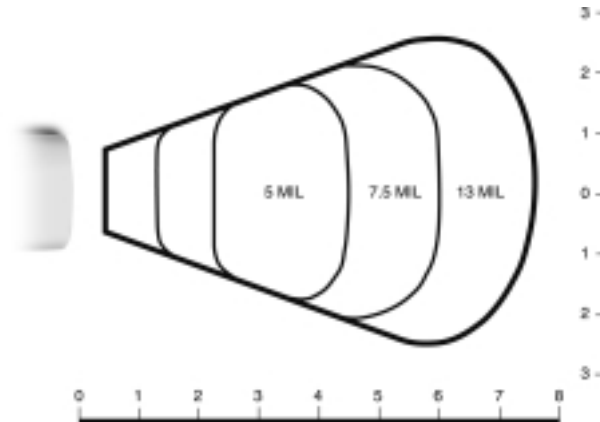



Section 15 Customer Support

Obtaining Factory Service in the United States

Welch Allyn Data Collection, Inc. provides service for all its products through a service center located at its manufacturing facilities in Skaneateles, New York. To obtain warranty or non-warranty service, return the unit to Welch Allyn (postage paid) with a copy of the dated purchase record attached.

Please contact the Welch Allyn Data Collection, Inc. Product Service Department at the address/telephone number listed below to obtain a Return Material Authorization number (RMA #).

Welch Allyn Data Collection, Inc.

Product Service Department
4619 Jordan Road
P.O. Box 187
Skaneateles Falls, New York 13153-0187

Product Service Department
Telephone: (315) 685-4278 or 685-4360
Fax: (315) 685-4156

Obtaining Factory Service in Europe

For service in Europe, please contact your Welch Allyn representative (at appropriate address below) or your local distributor.

European/UK Office

Welch Allyn UK Ltd.

Dallam Court
Dallam Lane
Warrington
Cheshire WA2 7LT
United Kingdom

Telephone: Int+44 1 925 240055
or Int+353-1 216 0070
Fax: Int+44 1925 631280
or Int+353-1295-6353

Obtaining Factory Service in Asia

For service in Asia, please contact your Welch Allyn representative (at address below) or your local distributor.

Welch Allyn, Hong Kong Office

10/F Tung Sun Commercial Centre
194–200 Lockhart Road
Wanchai, Hong Kong

Telephone: Int+852–2511–3050 or 2511–3132
Fax: Int+852–2511–3557

Technical Support

If you need assistance installing or troubleshooting your scanner, please call your Distributor or the nearest Welch Allyn technical support office.

North America:

Telephone: (315) 685–2476 (8am to 6pm EST)
Fax: (315) 685-4960
E-Mail: dcd_techsupt@mail.welchallyn.com

Europe:

United Kingdom
Telephone: Int+44 1925 240055
Ireland
Telephone: Int+353–1216–0070

Asia:

Telephone: Int+852–2511–3050 or 2511–3132

Limited Warranty

Welch Allyn Data Collection, Inc., hereby warrants its products to be functional and free from manufacturing defects at the time of delivery. Welch Allyn Data Collection, Inc. further warrants that it will replace or repair, at its option, any unit that fails to perform according to Welch Allyn's published specifications during a period of five (5) years from the time of shipment by Welch Allyn Data Collection, Inc. to the user at the time it is purchased from any of Welch Allyn Data Collection, Inc.'s Authorized Distributors. Any attempt on the part of the user to disassemble or service the equipment shall void the warranty.

The warranty does not apply to product which have been damaged by improper handling, shipping, or misuse. The warranty does not apply, if, in the sole opinion of Welch Allyn Data Collection, Inc., the unit has been damaged by accident, misuse, neglect, improper shipping and handling. Since the unit is sensitive to static, the responsibility to protect it from static damage is solely that of the user. The warranty is valid only if the unit or scanner has not been tampered with or serviced by any party unauthorized by Welch Allyn Data Collection, Inc. as a repair facility.

THE WARRANTIES SET FORTH HEREIN ARE IN LIEU OF ANY AND ALL OTHER WARRANTIES EXPRESSED OR IMPLIED INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE BUYER ACKNOWLEDGES THAT NO OTHER REPRESENTATIONS WERE MADE OR RELIED UPON WITH RESPECT TO THE QUALITY AND FUNCTION OF THE BOARD AND SCANNER HEREIN SOLD.

In no event shall Welch Allyn Data Collection, Inc. or its resellers be liable for any loss, inconvenience or damage whether direct, incidental, consequential or otherwise, and whether caused by negligence or other fault resulting from the breach of any express warranty except as set forth herein. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or country to country.



Agency Compliance Statements

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Class B Compliance Statement

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio or television technician for help.

Caution: Any changes or modifications made to this device that are not expressly approved by Welch Allyn Data Collection, Inc. may void the user's authority to operate the equipment.

Note: To maintain compliance with FCC Rules and Regulations, cables connected to this device must be *shielded* cables, in which the cable shield wire(s) have been grounded (tied) to the connector shell.

Canadian Notice

This equipment does not exceed the Class B limits for radio noise emissions as described in the Radio Interference Regulations of the Canadian Department of Communications.

Le present appareil numerique n'emet pas de bruits radioelectriques depassant les limites applicables aux appareils numeriques de la classe B prescrites dans le Reglement sur le brouillage radioelectrique edicte par le ministere des Communications du Canada.



The CE mark on the product indicates that the system has been tested to and conforms with the provisions noted within the 89/336/EEC Electromagnetic Compatibility Directive and the 73/23/EEC Low Voltage Directive.

For further information, please contact:

Welch Allyn Ltd.
1st Floor
Dallam Court Dallam Lane
Warrington, Cheshire WA2 7LT
United Kingdom

Welch Allyn Data Collection, Inc. shall not be liable for use of our product with equipment (i.e., power supplies, personal computers, etc.) that is not CE marked and does not comply with the Low Voltage Directive.

UL and cUL Statement

UL listed UL1950 and CSA 22.2 No.950. cUL listed UL1950 and CSA 22.2 No 950.

LED Safety Statement

This device has been tested in accordance with EN60825–1 LED safety, and has been certified to be under the limits of a Class 1 LED device.

TÜV Statement

TÜV or GS marked to EN60950 and EN60825–1.

C–TIC Statement

Conforms to AS/NZS 3548.

Patents

The IMAGETEAM 3800 product is covered by the following U.S. Patents: 5,831,254, 5,900,613, 5,932,862. Other U.S. and foreign patents pending.



Programming Chart



0



1



2



3



4



5



6



7



8



9

Programming Chart



A



B



C



D



E



F



Save



Discard

Sample Bar Codes

Code 39



TEST-SHEET

Matrix 2 of 5




6543210

Code 128




CODE 128

 Codabar




0013557900

EAN 13

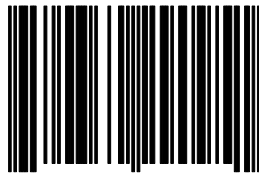

9 780330 290951

 Code 93



123456-9\$

Interleaved 2 of 5




1234567890

Code 2 of 5



123456

UPC A with 5 digit addenda

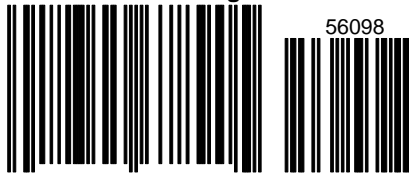

0 12345 67890 5

56098

PDF417



Car Registration

WelchAllyn®

Data Collection, Inc.
4619 Jordan Road
P.O. Box 187

Skaneateles Falls, New York 13153-0187