INSTALLATION INSTRUCTIONS FOR L1763, L2771, AND **L2740 LAMPHOLDERS**

FOR USE WITH HALO TRACK SYSTEMS ONLY

TO ADJUST HALO-2 SERIES LAMPHOLDER

Halo-2 Lampholders can be used with Halo Miniature or Halo-2 Power-Trac systems. An adjustable contact allows you to select the circuit position. Use a narrow blade screwdriver, as shown, to adjust the contact. Lift or lower the contact until it touches the plastic stop of the contact assembly. For circuit #1 move contact to the down position. For circuit #2 move contact to the up position. (Figure 1)



When using Halo-2 Lampholder with the Miniature Power-Trac System (L650, L651, L652, L653) adjustable contact must be in #1 (DOWN) position. (Figure 2)

TO USE HALO-2 LAMPHOLDER WITH HALO-2 POWER TRAC

When using Halo-2 Lampholder with the Halo-2 Power-Trac System (L640, L641, L642, L643) adjust the contact position of each lampholder to the desired circuit—circuit #1 (DOWN) or to circuit #2 (UP). (Figure 2,3)

TO INSTALL LAMPHOLDER


Hold lampholder by the mounting adapter. Insert contact head into Halo Power-Trac. Twist mounting adapter approximately 1/4 turn (90°) until mounting sleeve tab locks into Power-Trac opening. (Figure 4)

NOTE

Forcing mounting adapter in wrong direction may damage the contact assembly! If mounting adapter will not turn easily, twist adapter in opposite direction. Polarity line on adapter must align with polarity line on Power-Trac for proper installation. (Figure 5)

TO REMOVE LAMPHOLDER

Pull down on mounting adapter sleeve until tab is free of Power-Trac channel opening. Twist mounting adapter 1/4 turn (90°) until contact head is free and remove lampholder from track. (Figure 6)

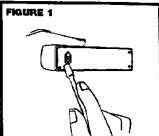





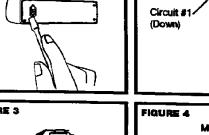


FIGURE 2

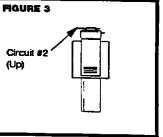

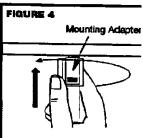

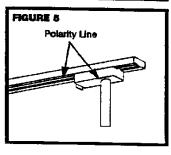

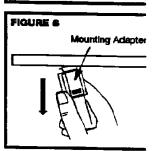



RELAMPING INSTRUCTIONS FOR L1763, L2771 AND L2740 LAMPHOLDERS

WARNING	Before working on Power-Trac fixture be sure to turn off AC power or remove fixture from Trac.
STEP 1	Allow unit to cool and then remove from Trac. (Figure 1)
STEP 2	Remove face plate assembly by pulling away from housing. (Figure 2)
STEP 3	Unplug lamp by pulling straight out. DO NOT TWIST. Refer to retermp label on fixture for proper lamp. Do not touch the MR16 bulb inside lamp reflector. (Figure 3)
STEP 4	Place lamp back in socket.
STEP 5	Accepts L200 Accessory Baffle to reduce glare and spill light. To install Accessory Baffle, slide lens out from under springs, drop baffle in place and replace lens. (Figure 4)
CAUTION	Oo not operate unit without lens in place.



Dimming

Olimning quartz halogen tamps (e.g. MR16) may reduce lamp life.

Low voltage lampholders with solid-state or magnetic transformers require proper dimming equipment. An improper dimmer may cause damage to the transformer and shorten lamp life. Consult factory for dimmer recommendations.

Some sound may be emitted by the transformer and/or the dimmer in the dimmed mode.

Installation

Low voltage lampholders should not be installed in such a marmer as to entrap excessive ambient heat around the foture (such as enclosed display windows, showcases, alcoves, recessed coves, etc.).

l smne

Some 12V MR16 lamps are not compatible with Halo Power-Trac tempholders

Consult your local Halo representative for further information on dimming, installation or tamp compatibility.

