

## Human Touch **iJoy-100 Replacing the Remote Control**

Initiator: MG

Replaces: 07/22/2003

Revision date: 08/03/2003

Title: **Replacement of the iJoy 100 Remote with Cable**

Purpose: To provide end users with the procedure for replacement of the iJoy-100 Remote Controller AND Cable assembly.

Tools/Parts Required: Phillips Screwdriver, diagonal cutters  
Requires PN **iJoy Remote Assembly complete with Cable**

Procedure:

- 1) Turn off and unplug your iJoy
- 2) As an option, you can carefully tip your unit onto its Right Side (the side opposite the AC cord). This will make it easier to access the assembly and side cover.
- 3) Locate The Side Panel Assembly. This is the plate that both the AC cord and remote cord enter. This assembly also incorporates the ON/OFF switch.
- 4) You will need to either remove the SN/Model information label from the Side Panel Assembly, or locate the single screw hole covered by the label. You can find the hole by feeling the sticker for a depression. Using the Phillips Screwdriver, gently poke a hole to access the screw. See photo for screw location.
- 5) Remove all Three (3) screws securing the Side Panel Assembly to the chair frame.
- 6) Carefully lower the Side Panel Assembly. Caution: The Side Panel Assembly remains connected via cables to the chair.
- 7) Locate the white *11-pin* plug attaching the Remote Control to the Chair. Carefully disconnect.
- 8) Locate the four (4) screws securing the Remote Cable Clamp. Remove the four screws, noting the position of the clamp and the Remote Cable Strain Relief.
- 9) Slide the Controller Cable out of its holder. Slide the new Controller and cable into position.
- 10) Slide the Remote Cable Clamp back into position. Ensure the tab on the cable clamp aligns with the insert slot in the cable/cable strain relief.
- 11) Reinsert the four (4) screws removed in step 8.
- 12) Reinstall the side panel assembly with the three screws removed in step 5.
- 13) Plug the iJoy back into the wall outlet, and turn the Main Power Switch on.
- 14) Test the chair for proper operation.

Title: **Replacement of the iJoy 100 Remote with Cable**

