

Sun Odyssey 40.3



NAR

performance by NEXUS NETWORK

System Suggestion



SILVA
Get out there™

Left Cockpit




Companionway



Nav Station



Nav Station

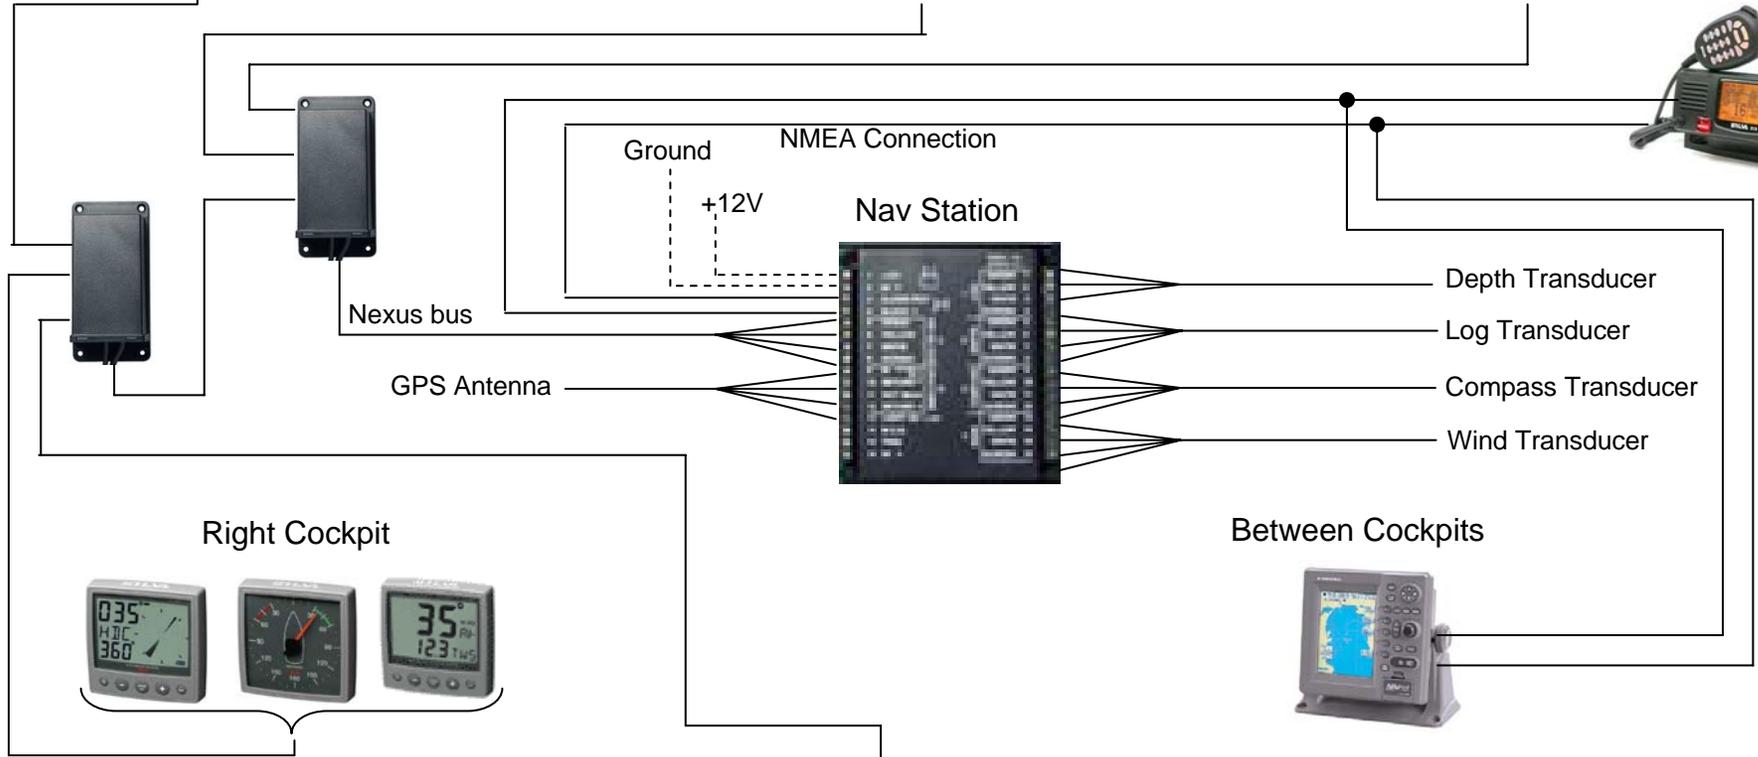

Right Cockpit




Between Cockpits



Ground +12V

Stern

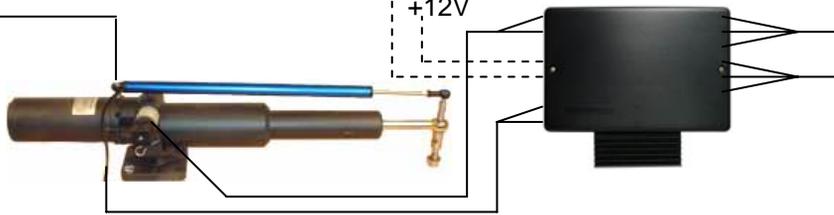

Note: If chart plotter shall send out NMEA to the server, the GPS antenna must be connected directly to the back of the GPS Navigator instrument located by the Nav Station. A second wire must then be drawn from the chart plotter to the servers NMEA In.

