Instructions for Installation of Arco™ 4531, 4532, 4533, 4551, and 4552 Series Fixtures.

Read and understand these instructions before installing fixture.

This fixture is intended for installation in accordance with the National Electrical Code and local or Federal code specifications. *To prevent electric shock, turn off electricity at fuse box before proceeding.*Retain these instructions for maintenance reference.

NOTE:

This instruction sheet covers both compact fluorescent and incandescent fixtures. Although illustration shows compact fluorescent, the incandescent version assembles and installs in the same manner.

NOTE:


The **Backplate** is provided with (3) **Auxiliary Mounting Knockout Holes** (4531, 4532, 4551, and 4552 series fixtures) for direct
mounting to wall surfaces. These can be used for added security or
where direct **Outlet Box** mounting is not available. To remove plug
in **Knockout Holes**, follow steps 1 through 3 below.
For 4533 series fixtures, (4) **Auxiliary Mounting Knockout Holes**are provided for direct mounting to wall surfaces (no plugs to
remove). It is recommended that **Auxiliary Mounting Holes** be
used on 4532, 4533 and 4552 series fixtures.

The **Backplate** can be mounted horizontally of vertically. See Fig 1 below for proper orientation for type of **Lens Assembly** and desired position.

 Position blunt ended punch or awl in center of **Knockout** hole and firmly hit with hammer to punch plug through. Repeat for remaining **Knockouts** (Fig. 1).

Caution: Always wear eye protection (safety goggles) when removing **Auxiliary Mounting Knock-Outs**.

- Position Backplate in desired position over Outlet Box and mark location of (4) Auxiliary Holes on wall surface.
- Determine the appropriate mounting hardware required for type of wall material fixture is being mounted to (i.e. toggle bolts or molly screws for plaster or gysum board walls, wood screws, etc.)
- Thread Crossbar Mounting Screws into Crossbar as shown in Fig. 1.
- Using appropriate slots in Crossbar, secure Crossbar to Outlet Box using Outlet Box Screws (provided with Outlet Box).
- 6. While supporting Backplate make connections: black fixture lead or fixture without tracer marks to hot (black) supply lead; white fixture lead or fixture lead with tracer markers to neutral (white) supply lead. Un-insulated wire is a ground wire and must be connected to grounding terminals or ground lead inside Outlet Box. Use Wire Nuts (local hardware item). Push connections back into Outlet Box.

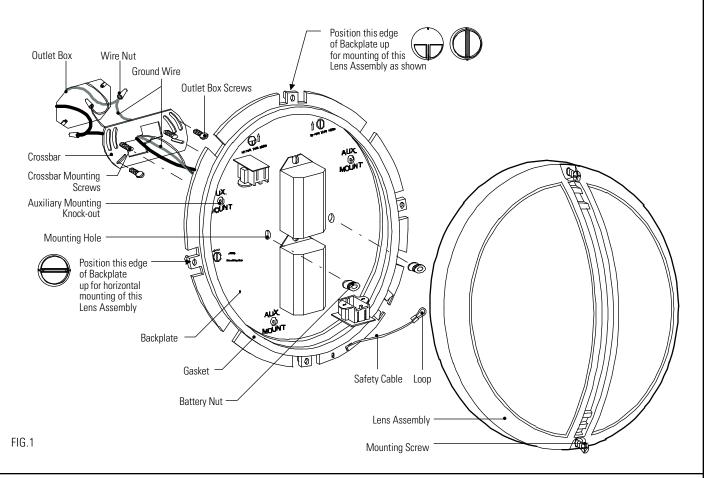




Instructions for Installation of Arco[™] 4531, 4532, 4533, 4551, and 4552 Series Fixtures.

- Position Backplate over Crossbar allowing Crossbar Mounting Screws to come through Holes in Backplate. Secure Backplate in position by installing (2) Battery Nuts over Crossbar Mounting Screws and tighten.
- 8. If using **Auxiliary Mounting Knockout**, install the appropriate hardware determined in step 3.
- Position Screw through Loop in Safety Cable and thread Screw into Mounting Boss on inside of Lens Assembly (Fig. 2).
- 10. Install recommended lamp(s).
- 11. Position Lens Assembly over Backplate making certain the Safety Cable does not interfere with the Gasket (fig. 1).
- Secure Lens Assembly in place by tightening the (2) Mounting Screws on the face of Lens Assembly.

CAUTION: Maximum wattage as marked on fixture must not be exceeded.

WARNING—(Risk of Fire) most dwellings built before 1985 have supply wire rated for 60° C. Consult a qualified electrician before installing.

CAUTION: For wet locations, in accordance with Underwriters Laboratories requirements, a line of caulking compound such as acrylic latex or silicone must be placed around the perimeter of Backplate to seal water away from the outlet box and back openings.

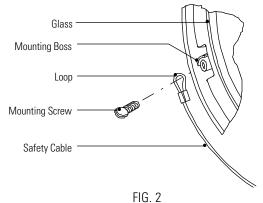

Inside Lens Assembly