Instrucciones de manejo

Bedienungsanleitung Gebruiksaanwijzing

Istruzione per l'uso

Manual de utilização

GR Οdηγίες χρήσεως

Kullanım talimatları

Veiledning

S Bruksanvisning

Käyttööhie

Instrukcja obsługi

 
Mávod k použití

 
Uživateľská príručka

 
Használati utasítás

Инструкции по использованию









D)) Battery charging		times:
	Battery	Battery	Approx.

Battery	Approx.
capacity (mAh)	charging time
2600 mAh	10 ½ hrs
2300 mAh	9 ½ hrs
1800 mAh	7 ¼ hrs
1600 mAh	6 ½ hrs
700 mAh	6 ½ hrs
170 mAh	12 ¾ hrs
	capacity (mAh) 2600 mAh 2300 mAh 1800 mAh 1600 mAh 700 mAh

Additional information (including warranty conditions) available at our website:

www.philips.com/support

Specifications subject to change without notice. All dimensions shown are approximate.



Important Safety Instructions:

Save these instructions - this manual contains important safety and operating instructions for this charger. Before using your charger read all instructions and cautionary markings on the charger, the batteries to be charged and the products that use the batteries.

- Use to charge Ni-MH batteries only. Do not charge Alkaline, Zinc Carbon, Lithium or any other type of battery not specified on the charger. Other types of batteries might burst or leak causing personal injury.
- For proper battery insertion, please observe pole indications (+/-). See fig. A.
- · Do not dispose of in fire, short circuit or open. · Charge new batteries before using.
- · Never alter the plug.
- Do not operate the charger if it has been subjected to shock or if it is damaged.
- . Do not disassemble the charger.
- To avoid risk of electric shock, unplug the charger from the electrical outlet before cleaning or when not in use.
- This battery charger is for indoor use only. Do not expose the charger to rain or excessive moisture. Keep the charger away from dust and dirt, which can cause
- premature wear of parts or harm its normal operation.
- . Never use the charger as a power source for any electrical equipment.
- Do not incinerate, disassemble or short circuit batteries since they may burst or release
- . This charger is not intended for use by young children or infirm persons without
- Do not operate the charger if the plug is damaged.
- . Do not charge AAA and AA batteries in the same slot.
- · Do not charge damaged or leaking batteries.

- · Wipe the charger with a damp cloth occasionally without harsh chemicals, cleaning solvents or strong detergents.
- Charger and batteries must be disposed of separately. Inform yourself about the separate collection system for electrical and electronic products.

Operating instructions

General charging guidelines

- · At the same time you can charge 2 or 4 AA/AAA batteries or one or two 9V batteries at the same time. · For long battery life, only charge empty batteries.
- When charging, ambient temperature should be between 0°C and 40°C (32°F and 104°F).
- . You can charge batteries with different capacity (mAh) and size (AA/AAA) at the same
- . Make sure batteries in each pair of slots (1/2 and/or 3/4) are identical (same capacity,

Note: it is normal for the unit and the batteries to become warm while charging.

Charging batteries

- 1 Insert batteries in the charger. See fig. A.
- 2 Plug the charger into a household electric outlet. See fig. B.
 - > When charging batteries, the red LED indicator(s) will remain lit until the charging is stopped manually. See fig. C.
- > The battery charger will go into trickle charge mode after charging for 11 hours. 3 When finished, unplug the charger from the power source and remove the batteries.
 - See fig. C. Always unplug between charges!

Battery charging times: See fig. D.