

INSTALLATION OF LOUVER ACCESSORY FOR MR-16 FIXTURES

INSTRUCTION SHEET NO.

IS:7472

0487

NOTE: This accessory is intended for specific Lightolier MR-16 fixtures only; see catalog for complete listing.

1. Disconnect power and allow lamp to cool before installing LOUVER accessory.
2. Remove lamp assembly, referencing the specific fixture instructions for lamping and relamping.
3. Remove the LAMP and GLASS LAMP GUARD.
4. Place the LOUVER into the lamp assembly (Figs.1,2,3).
Note: when used with ribbed type lamp assemblies, place the louver so that it seats in the assembly, flush with the RIBS (Figs. 4,5,6).
5. Replace the GLASS LAMP GUARD and LAMP.

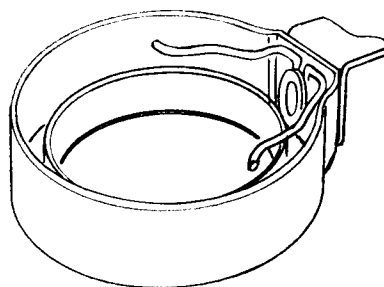


FIG. 1
(FIXT. 6286,6287)

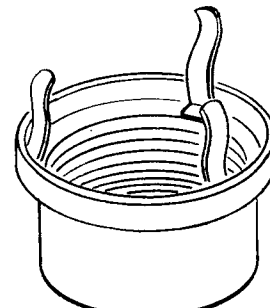


FIG. 2
(FIXT. 6298,6299)

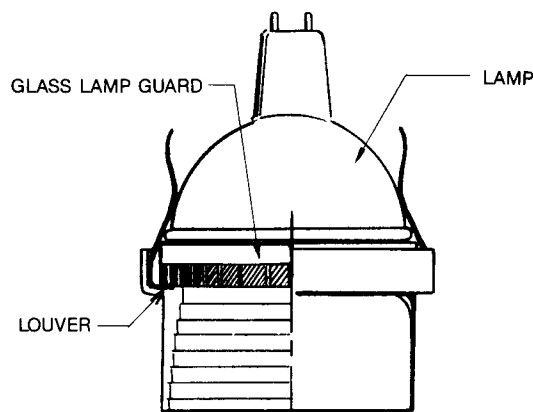


FIG. 3

WARNING
LAMP MANUFACTURERS REQUIRE A GLASS LAMP GUARD BE IN PLACE BEFORE ENERGIZING LAMP AND THAT GREAT CARE SHOULD BE TAKEN THAT LAMP IS FULLY COOLED BEFORE RELAMPING.

6. Replace lamp assembly as instructed on individual fixture instruction sheet.

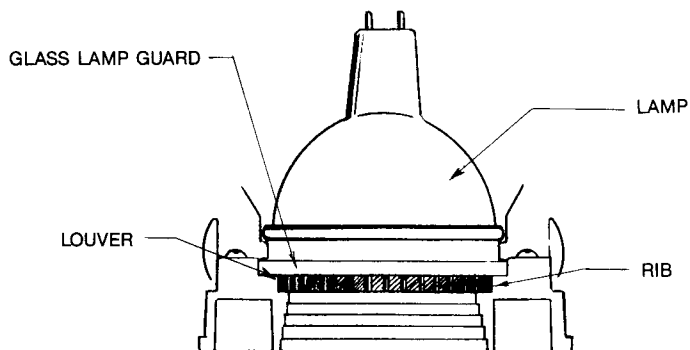


FIG. 6

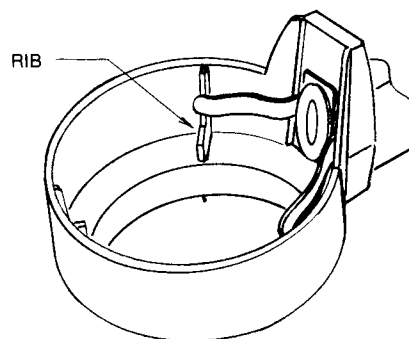


FIG. 4
(FIXT. 6296,6297)

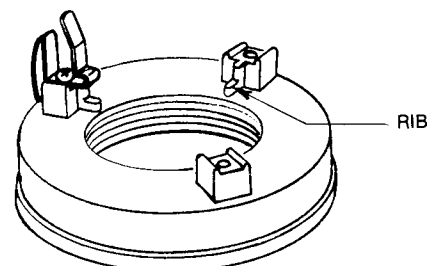


FIG. 5
(FIXT. 6420,6421)

***NOTE:** For fixtures 6420, 6421, it is necessary to loosen two springs to insert louver.