

INSTRUCTIONS FOR WALLWASHER ACCESSORY FOR LIGHTOLIER FIXTURES 6280, 6281, 6284 & 6285

NOTE: This accessory is designed only for LIGHTOLIER fixtures 6280, 6281, 6284 & 6285

To install the WALLWASHER ACCESSORY, line up the two SLOTS in the accessory with the fixture and push on until the RETAINING SPRING catches over the FIXTURE RING.

To remove, lift the RETAINING SPRING and pull off.

